

# Neat Pad 10 Pro

NF-J1



neat.

User manual

# Neat Pad 10 Pro

## Touch interface device



Neat Pad 10 Pro is a streamlined touchscreen device with two distinctive functions. You can use it as a meeting controller for our Neat Bar and Neat Board devices, or as a scheduling display for room availability.

Neat Pad 10 Pro comes with everything you need to get quickly up and running, including cables and a choice of mounting options.

### In the box

- Neat Pad 10 Pro
- Multi bracket
- Cable lock
- 2 mm hex key
- Ethernet cable (9.84 ft / 3 m)
- Warranty book

### Optional Neat accessories

 
 
- Ethernet cable: 16.4 ft (5 m)
- PoE power injector\*

\*If using an alternative PoE power source, it must be compliant with the IEEE 802.3 af/at/bt PoE standard

# Mounting options

## Cable lock (included)



Two screws hold the cable lock firmly in place and secure the Ethernet cable

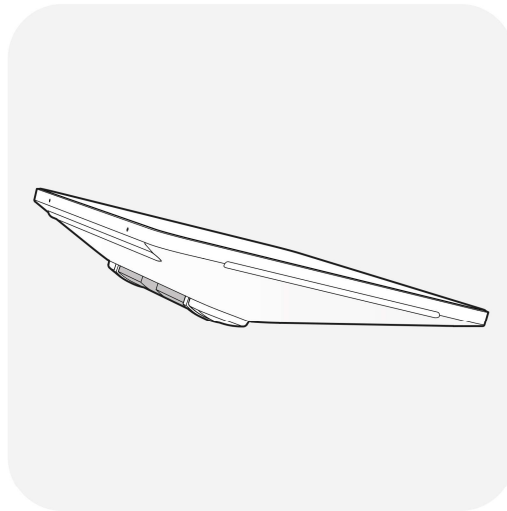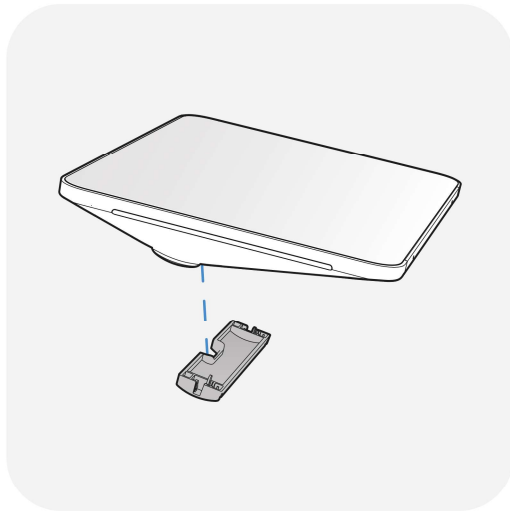

## Multi bracket (included)

Offers elevated screen angle on the table and doubles as a wall mount bracket
  
### Wall mount

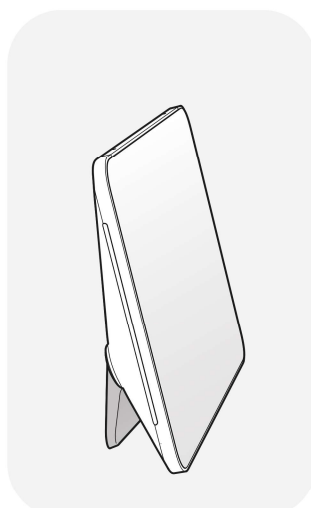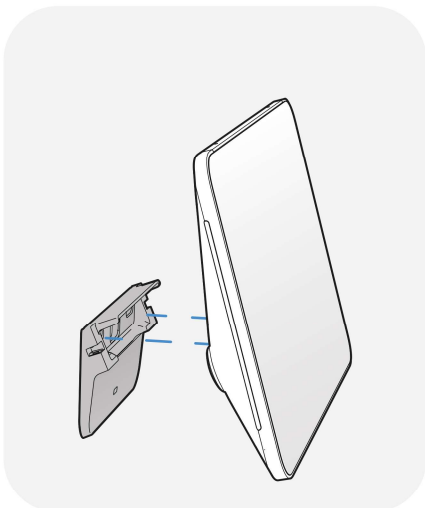


### Table stand




# Mounting options
 
## Side mount (sold separately)

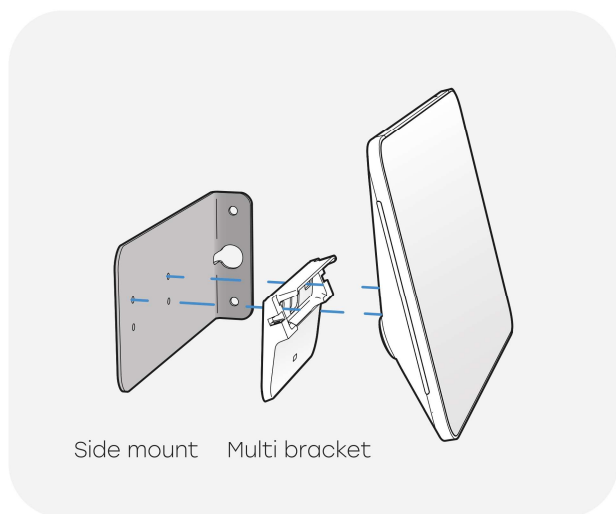

## Glass mount (sold separately)

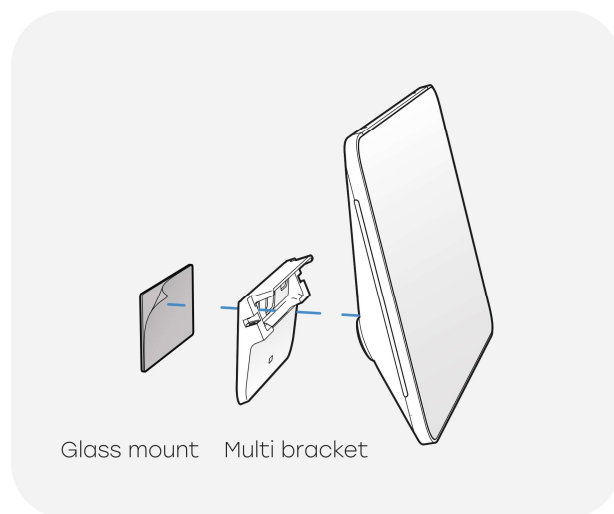 



Screws for mounting to the wall are not included. Mounting on a wall should only be performed by qualified personnel in line with applicable facility and state regulations. The wall and the mounting equipment must safely withstand the load of the product.

# Size and weight
  
## Neat Pad 10 Pro

Width: 9.5 in (242 mm)  
Height: 6.3 in (161 mm)


Depth: 1.9 in (48 mm)  
Weight: 1.87 lb (850 g)

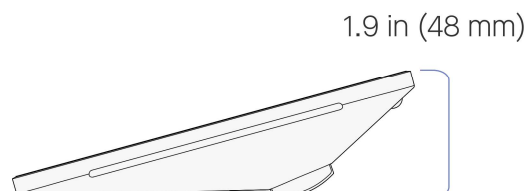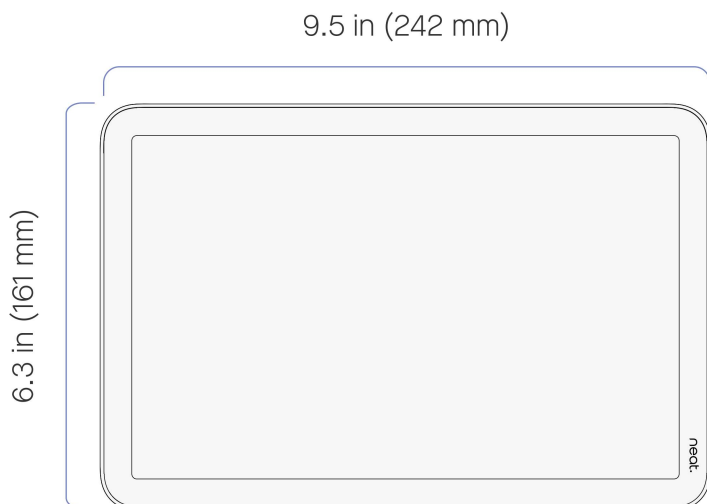

# Setup and connectivity

## Setup

 Use the provided cables to set up Neat Pad 10 Pro. Connect the cables according to the illustration. Cables marked — are included. Cables marked ---- are optional and not required for basic use of the system.

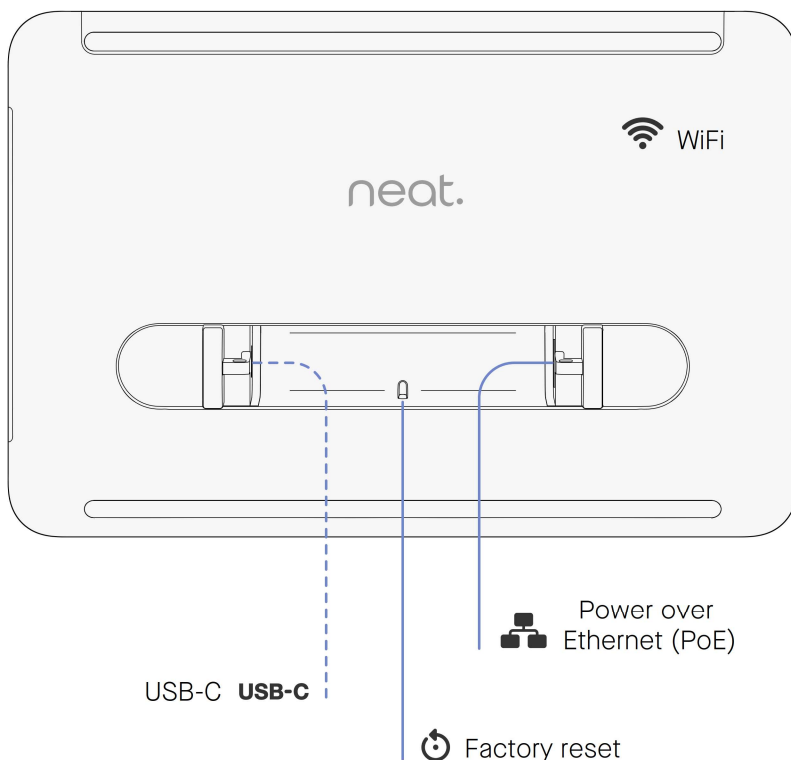

## Requirements for a complete setup:

PoE network or and PoE power injector

## Networking and ports

WiFi

USB-C (for debug only)

Ethernet (PoE)

Neat Pad PoE – power supply (optional)

## Environmental Requirements

Ambient operating temperature:

32–95° F (0–35°C)

Storage temperature: -4–140°F (-20–60°C)

Relative humidity: 10–90%

## Additional Product Information

[neat.no/TBD](https://neat.no/TBD)

Neat Pad 10 Pro – User Manual 01

Trademark: NEAT