





Product Introduction

Front View:

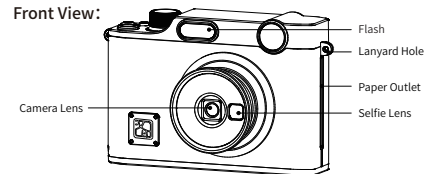

Rear View:

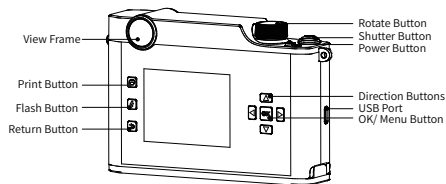


Accessories




* Note: The items in the package are actually based on the order.

Product Introduction

Bottom View:

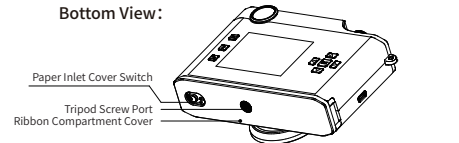

Inner:

 


Product Parameters

Product Name	Portable Photo Printer , Instant Print camera
Printer Model	HCP-2TS24E
Dimensions	151*97*63mm
Weight	Bare Printer 410g
Print Method	Thermal Dye Sublimation
Print Size	54*86mm
Print Resolution	300dpi
Battery Capacity	1150mA , 860mAh
Charging Interface	5V / 2A,type-C Interface
Operating Temperature	5°C~35°C

Consumable Installation Instructions


01

 Open the paper inlet cover
As shown, dial the paper inlet cover switch and open the cover.




02

 Take out a consumable, put it into the compartment according to the direction shown below, place your finger in the "push" position and press it into place until it makes a "click" sound.



03

 Close the consumable compartment.



- ⚠ 1. The photo paper is susceptible to moisture, please use it as soon as possible after opening.
2. This device only supports official photo paper that comes with the ribbon, please do not replace it by yourself.
3. Avoid excessive direct sunlight and low temperature.
4. If the consumable is damaged or deformed by external force, please do not insert it into the device by force.

Printing Instructions



1 Pull the power button until the screen lights up, then release and the printer turns on.

Take a picture or select a picture according to personal preferences, then select edit and click the print button to print.

APP Download



Scan the QR code to download the "HeyPhoto" APP
1. Open the APP and click "Add device";
2. Search "Z3-XXXX" and click to connect.

In the app, select the photos you want to print.
You can also edit the photos as needed before printing.



- ⚠ 1. After the first connection, you just need to click the print icon for subsequent use, the printer will be automatically connected and print.
2. Do not exit the APP during the printing process, this may cause printing failure.
3. APP page may change with the version, please refer to the actual interface.

Function Button Operation Instructions

Icon	Function Button	State
	Power Button	Turn on/off the printer
	Shutter Button	Short press the shutter button to shoot
	Rotates Button	Rotate the selection of the corresponding filters, a total of 8 files.
	Print Button	Short press the print button to start printing the photo
	Up and Down Buttons	•Up and down •Toggle screen proportions
	left and Right Buttons	•Left and right •Switch puzzle shooting during the photography process
	OK/ Menu Button	•OK •View mode, short press menu button to enter the native menu. •Photo view mode, short press menu button to enter the photo settings menu.
	Return Button	•Return to previous menu •Switch to viewfinder or album mode.
	Flash Button	Short press the flash button to turn flash on/off

- Tips: 1. Press any key to open the screen while resting.
2. When the printer can not be shut down under unusual circumstances, you can use the paper clip to press the “Reset” button to force the device to shut down.

Precautions


1. The best working temperature of the printer is 5°C~35°C. If the ambient temperature is too high, the printing quality may be affected;
2. Please use official ribbon and photo paper to ensure print quality;
3. Avoid disassembling the ribbon and photo paper by yourself. If the glossy surface of the photo paper is polluted, the printing quality will be affected;
4. Do not pull out the consumable forcibly during printing, this may damage the printer;
5. When not in use for a long time, close the consumable compartment to keep things like dust out;
6. After printing multiple photos in a row, the device may activate overtemperature protection, which is normal, and the current task will continue to be printed after cooling;
7. Do not perform any operations while the device is turning on.

Operating Environment

1. Place the printer on a desktop or other flat, stable surface;
2. Please make sure that there is more than 10 cm space in the paper outlet of the printer.

Battery Charging

1. When the battery power is low, please charge it by the equipped USB cable in time. If you continue printing, it may power off automatically.
2. Plug one end of the USB cable into the printer’ s port, and connect the other end to the power adapter. After connecting, the printer enters a charging state, at which point printing will interrupt the charging state.
3. The charging time is about 90-120 minutes, the screen can be lit up to see the charging status.

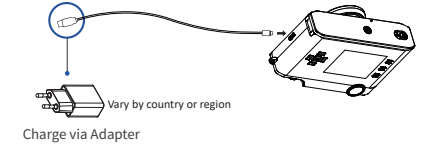

- ⚠** 1. The printer can be charged via computer or adapter with USB cable. Please note that the adapter is not equipped with the printer. Users who use power adapters for charging should purchase and use power adapters that are certified for safety and meet the requirements of the standard.
2. Users are prohibited from disassembling the machine by themselves, if replacing the wrong model of battery will be at risk of explosion. Please be sure to dispose of the used battery according to the instructions.
3. When the printer is low power, please charge it for a period of time before using it, so as to avoid interrupting printing due to insufficient power during use.
- WARNING:** Operating this device may cause radio interference in a residential environment.

RF exposure statement

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2AUTE-2TS24E



PORTABLE PHOTO PRINTER

Made for iPhone 14 Plus, iPhone 14 Pro Max, iPhone 15, iPhone 14 Pro, iPhone 14, iPhone 13 Pro Max, iPhone 7 Plus, iPhone SE, iPhone 6s, iPhone 11, iPhone XS, iPhone X, iPhone 8, iPhone 7, iPhone 6s Plus, iPhone 6 Plus, iPhone SE (3rd generation), iPhone 13 Pro, iPhone 13, iPhone 13 mini, iPhone 12 Pro, iPhone 12 mini, iPhone 11 Pro Max, iPhone 12, iPhone 12 Pro Max, iPhone SE (2nd generation), iPhone 11 Pro, iPhone XS Max, iPhone XR, iPhone 8 Plus, iPhone 5s, iPhone 6, iPad mini (A17 Pro), iPad Pro 11-inch (M4), iPad Air 11-inch (M2), iPad Pro 11-inch (4th generation), iPad Pro 13-inch (M4), iPad Air 13-inch (M2), iPad Pro 12.9-inch (6th generation), iPad (10th generation), iPad (9th generation), iPad Air (5th generation), iPad mini (6th generation), iPad Pro 11-inch (3rd generation), iPad Air (4th generation), iPad Pro 12.9-inch (5th generation), iPad (8th generation), iPad Pro 11-inch (2nd generation), iPod touch (6th generation), iPad (5th generation), iPod touch (7th generation), iPad (6th generation), iPad mini 2, iPad Air, iPad Air (3rd generation), iPad Pro 9.7-inch, iPad Pro 10.5-inch, iPad Pro 11-inch, iPad Pro 12.9-inch (4th generation), iPad Pro 12.9-inch (3rd generation), iPad Air 2, iPad mini (5th generation), iPad mini 3, iPad (7th generation), iPhone 16, iPhone 16 Pro, iPhone 16 Plus, iPhone 16 Pro Max, iPhone 15 Pro Max, iPhone 15 Pro, iPhone 15 Plus Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Apple, iPad, iPad Air, iPad Pro and iPhone are trademarks of Apple Inc, registered in the U.S. and other countries Apple, iPad, iPad Air, iPad Pro and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. The trademark "iPhone" is used in Japan with a license from Aliphone K.K.



Xiamen Hanin Co.,Ltd.
Web: www.hpvt.com
E-mail: support@hpvt.com