





## Product Introduction


Front View:

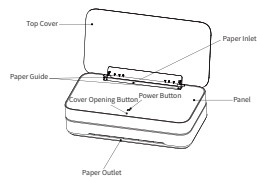


Rear View:

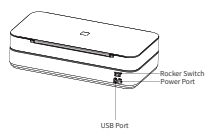

Inside View:

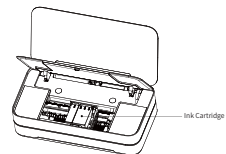


## Accessories

 

## Power On


### 01 Connecting Power

 Insert the power cord into the power socket on the back of the printer, and keep the rocker switch in the "I" position.



### 02 Power On

Long press the power button for 3 seconds to power on the printer.

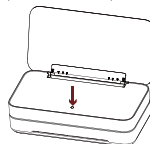


▲ Long press the power button for 3 seconds can power off the printer.

## Installing Ink Cartridges


### 01 Open the top cover and then open the panel

Open the top cover in the power on state, then press the cover opening button in the middle of the panel before lifting the panel upward.

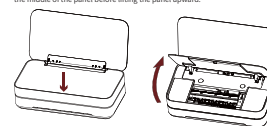

### 02 Remove the ink cartridge protective cover

 
Remove the protective cover from the ink cartridge.



## Installing Ink Cartridges


### 03 Remove the dust-proof cover

Before installing the ink cartridge, remove the dust-proof cover.

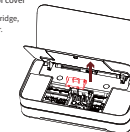

### 04 Insert ink cartridge

Insert the ink cartridge into the ink cart, ensuring that the lower protrusion is inserted into the slot. The left side is a black ink cartridge, and the right side is a color ink cartridge.

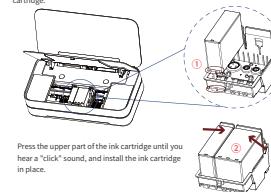


Press the upper part of the ink cartridge until you hear a "click" sound, and install the ink cartridge in place.

## Installing Ink Cartridges

### 05 Close the panel


Flip the panel down and press down until you hear a "snap" sound.

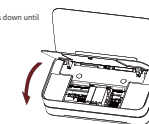

## Putting in the Paper

### 01 Put in the paper

Put in the paper as shown, up to 50 sheets of paper can be placed at once. Adjust the paper width as needed.

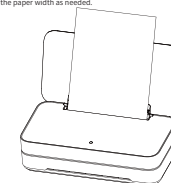

Printing Wirelessly from Mobile Phone

- 01 Download the APP
- Scan the QR code or search "HerePrint" in APP store to download the "HerePrint" APP.




- 02 Connect to printer via Wi-Fi
- Connect the mobile phone to Wi-Fi hotspot;
  - Open "HerePrint" App, tap "+" in the top right corner of Home to add the device;
  - Select your printer and tap the add button;
  - Enter the Wi-Fi password and tap to connect;
  - Waiting for the connection result.



- 03 Printing via LAN
- The printer is on and connected to the same Wi-Fi hotspot as mobile phone;
  - In "HerePrint" App, select the file to print, enter "Preview" and confirm the parameters, then your mobile phone can send data to the printer via LAN.
- 04 Cloud remote printing
- The printer is on and the connected Wi-Fi hotspot can access the Internet;
  - Even when the printer is not around you, you can still choose the file to print via "HerePrint" App. After entering the print preview, send the data to the printer through remote printing.

Printing from Windows PC

- Connect one side of the USB cable to the PC and the other side to the printer;
- Turn on the printer;
- Download the driver program from HPRT website and install it in the PC;
- Add the printer to the PC and print the documents from PC after establishing the connection.

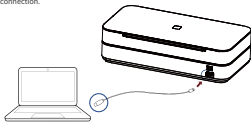

Maintenance

- When there are ghosting, uneven lines, or skewed fonts in the printed content, please select Print Quality Optimization in the APP while the printer is in standby mode and calibrate the printer according to the prompts.
- If calibrating the print head does not solve the problem, please select the deep cleaning print head function.
- To ensure printing quality and prevent print head blockage, please keep the adapter powered on and the rocker switch in the "—" position to facilitate automatic maintenance of the printer.
- The printer will first install ink cartridges and regularly perform maintenance processes, which will consume a small amount of ink.

Precautions

- The best operating temperature is 5°C-35°C, if the environmental temperature is too low or too high, the print quality may be affected.
- Please do not use the unofficial adapter or ribbon to ensure the print quality.
- Do not pull out paper by force during printing, or else it may damage the printer.
- Avoid using printed paper with wrinkles, moisture, or raised edges.
- There may be a small amount of ink marks inside the new printer compartment purchased by the user, which is due to the pre-factory printing test of the entire machine and not caused by secondary sales.

LED Indicator and Buzzer Definitions

| Error Status                       |                         |                     |
|------------------------------------|-------------------------|---------------------|
| Status                             | LED Indicator           | Buzzer              |
| Print head temperature is too high | Red LED flashes rapidly | "beep-beep-beep..." |
| Out of ink cartridges              | Red LED flashes slowly  | "beep-beep-beep..." |
| Out of paper                       | Red LED flashes slowly  | "beep-beep-beep..." |
| Cutter jam                         | Red LED flashes rapidly | "beep-beep-beep..." |
| Rfid error                         | Red LED flashes slowly  | ---                 |
| Printer cover is not closed        | Red LED is lighting     | ---                 |

\*Buzzer sounds for 5 seconds and then stops

| Printer Status   |                                             |
|------------------|---------------------------------------------|
| Status           | LED Indicator                               |
| Power on process | Red, green and blue LED flashes alternately |
| Power-off        | Light off                                   |
| Printing         | White LED flashes slowly                    |
| Firmware update  | Red, green and blue LED flashes alternately |

| Printer Status          |                           |
|-------------------------|---------------------------|
| Status                  | LED Indicator             |
| Bluetooth connecting    | Blue LED flashes rapidly  |
| In Wi-Fi connection     | White LED is lighting     |
| Wi-Fi data receiving    | White LED flashes rapidly |
| In USB connection       | Green LED is lighting     |
| USB data receiving      | Green LED flashes rapidly |
| No connection currently | Blue LED is lighting      |

Product Specifications

Product Name: Ink Jet Printer  
Product Model: V1  
Input: DC 24V

Product Size: 375\*194.5\*101mm  
Net Weight: about 2350g (excluding accessories)  
Wireless Connection: Wi-Fi

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The product, accessories, user interface, and other illustrations in the manual are schematic diagrams for reference only. Due to product updates and upgrades, there may be slight differences between the actual product and the schematic diagram. Please refer to the actual product for accuracy. If you need further information related to the product, you can contact the official customer service of Hanin.