


Quick Start Guide

TP806

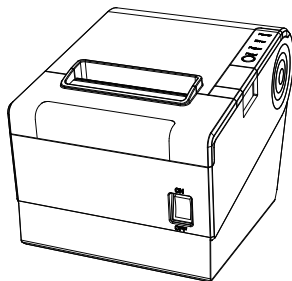

Xiamen Hanin Co.,Ltd .




ADD: No.96, Rongyuan Road, Tong'an District, Xiamen, China 361100

TEL: 400-766-7666

FAX: 400-766-7666

WEB: www.hpert.com

Appearance

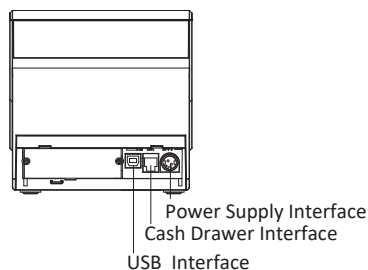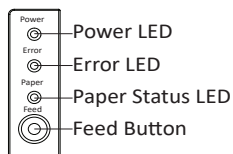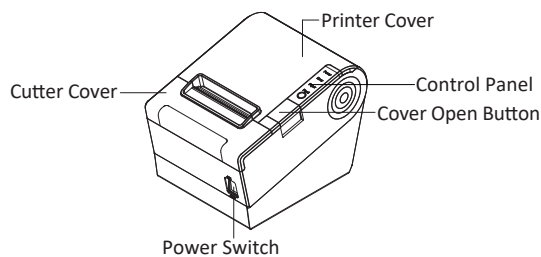

Note: The Bluetooth function is provided by the optional wireless module.

Packing List

■Standard Accessories



 
Printer




Quick Start Guide



Roll Paper



Power Adapter

 


Power Cord




USB Cable

 ■Optional Accessories




Serial Cable

 

Waterproof Cover



 Cable Cover




Wall Mounting

**Note: The power adapter and power cord vary by local or region.
The packing materials are actually dependent on the order.**


Paper Loading

1. Press the cover open button to open the printer cover.

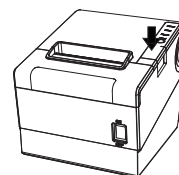


2. Remove the used roll paper core, if any.

3. In the correct direction of the roll paper, install the roll paper.

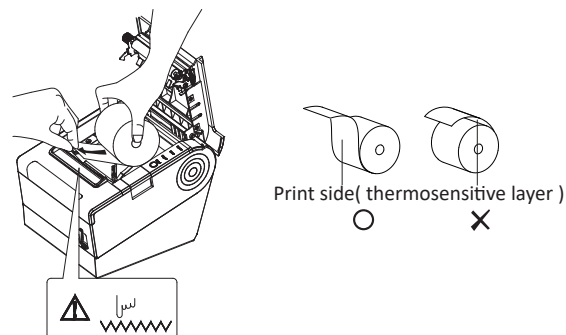


4. Pull out some roll paper, and close the printer cover.

5. Tear off the roll paper.

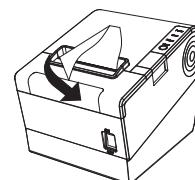

Connect the Power Supply

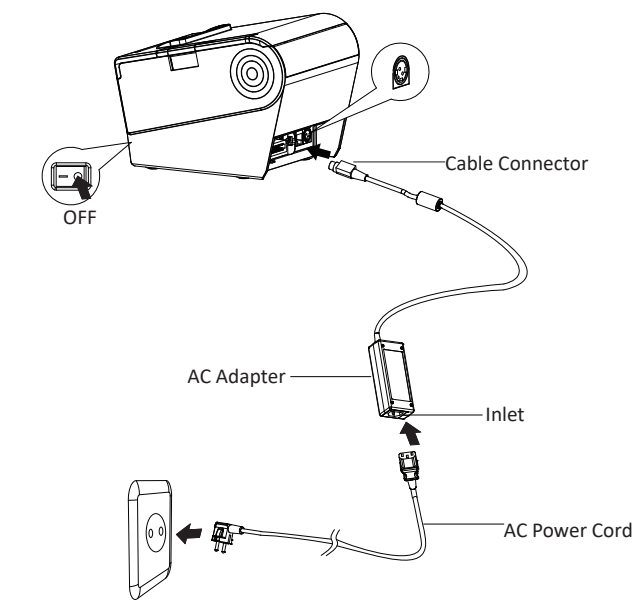

1. Turn off the printer power.
2. Plug in the cable connector of the AC adapter to the power connector at the rear of the printer.
3. Connect the AC power cord to the inlet of AC adapter, and insert the AC power cord plug into a suitable wall outlet.

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Bluetooth Setting

Before using Bluetooth printing, it is necessary to pair with the main device, and the pairing process is initiated by the main device.

The pairing method is as follows:

1. Turn on Bluetooth on your main device and power on the printer.
2. Search on the Bluetooth interface of the main device and select the corresponding device model.

Default name: BT Printer-xxxx (xxxx is the last four digits of MAC address)

Default password:none

Note: Enter 0000 or 1234 if a PiN code is required.

3. Complete pairing.

Note: This setting is only available for models with Bluetooth.

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user’s authority to operate the equipment.

FCC Radiation Exposure Statement

This equipment complied with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.