 


Product Introduction



Accessory List



AC Adapter x 1



Paper Tray x 1



Micro USB Cable x 1

Power On and Connection

- Connect the power cord

Insert the power cord into the power interface on the back of the printer.



- Power on

Hold down the power button to turn on the printer. The yellow LED indicator is lighting, which indicates the printer is waiting for connection.



- Download app

Scan the QR code below, or search "Myphoto" in Google Play or App Store, to download the app, and follow the guide "New 366".

 


02

Loading the Photo Paper


- Open the cover of paper tray

First, open the outer cover (1), then the inner cover (2).



- Load the photo paper with glossy side face up

 Load the photo paper with glossy side face up. Arrange the paper or change multi-function, do not touch the glossy side, except for the non-printable area.



- Close the inner cover of paper tray



04

Loading the Paper Tray

- Open the paper tray compartment cover

 


- Make sure the outer cover of paper tray is open



- Load the paper tray to the printer

Please make sure to fully insert the paper tray into the compartment. If slides about 2cm into the compartment.



05

Replacing the Ribbon

- Open the ribbon compartment cover



- To remove the used ribbon, move the lock upward that it will be ejected automatically



- Load the new ribbon and make it click into place, then close the ribbon compartment cover



06

Tip:

All the drawings of products and accessories in the user guide are for reference only. Due to the updating and upgrading of the products, there may be some differences between the actual products and the drawings. For more product information, please contact 366® Customer Service.

iDPRT Photo Printer

Product Name: Photo Printer
Product Model: Zowa 366
Input: 24VDC/2A
Weight: About 1.5kg
Dimension: 180×133×28mm
Operating Temperature: 5°C-35°C
Storage Temperature: 0°C-40°C, RH 10%-90%
Wi-Fi Connection: 802.11b/g/n/2.4GHz

Manufacturer: Shenzhen Haini Electronic Technology Co., Ltd.
Address: No. 96, Bingshan Road, Tong'an District, Kunming, China, 651100
Official Web: www.idprt.com
Customer Service: Email: 366@idprt.com
After Service Web: <https://idprt-lab.service.vip>



After Service

Note: ① Only for camera that support PictBridge connection.
② Purchase a ribbon Paper Set separately.

03

Instructions for Button Operation

- When the printer is powered on, hold down the power button for 3 seconds, the yellow LED indicator is lighting.
- Turn off the printer: hold down the power button for 3 seconds and then release it, the LED indicator will be off.
- Reset of mode in power-on status, hold down the power button until the blue LED indicator is lighting, then release the power button, the printer will start the factory configuration; after resetting, the LED indicator will turn white.

Instruction for LED Indicator

LED indicator	Status
Yellow lighting	The system is starting
White lighting	The printer is ready (the LED is always on)
Green lighting	The printer is in the power-on status (the LED is always on)
White and blue	Ribbon has been cut
Red lighting	Ribbon is abnormal
Red and blue	Page number or ribbon is jammed
Red and blue flash	Printer over temperature
Yellow and blue flash	Firmware is updating

Working Position

- Please place the printer on the desk or other flat and stable surfaces.
- Leave some space (at least 10cm) behind the printer for paper out when printing.

Printing Wirelessly from Smartphones (AP Mode)

- Make sure the printer's LED indicator is lighting before the start of the time.
- When the printer is powered on, click "Ap" on the bottom of the printer.
- Click "Next".
- When the printer is in the printing status, click the printer icon on the top right corner; shown "Connect via printer hotspot", and click the Bluetooth searching until it shows "Zebra 186CXXXX" and click to connect (XXXX is last four digits of Bluetooth MAC address showed on the bottom of the printer).
- After connecting, the printer will start to print the photos.

Printing Wirelessly from Smartphones (STA Mode)

- Make sure the printer's LED indicator is lighting before the start of the time.
- When the printer is powered on, click "Station" select the images to print and then click "Next".
- Adjust the images in print preview and click the printer icon on the top right corner; shown "Connect via printer hotspot", and click to connect (XXXX is last four digits of Bluetooth MAC address showed on the bottom of the printer).
- Enter the password of Wi-Fi hotspot, click "Configure Wi-Fi" and the green LED indicator is lighting, the printer will start to print the photos.
- After connecting, the green LED indicator is lighting, and the printer will start to print the photos.

Note: The above instructions take photo album printing for example, for GMS, AR and Credentials printing, please experience on your own according to the guide of App.

Printing via USB from a Computer

- Connect the USB cable to your computer and the other end to the Micro USB port on the back of the printer.
- Turn on the printer.
- Download the printer driver from IDPRT website or the QR code below and install it, as you could be helped.
- After connecting, you can print the photos from the computer.



Or visit: <http://www.idprt.com/Driver>

Precautions

- The best operating temperature is 15°C-45°C. If the environmental temperature is too high, the print quality may be affected.
- Please do not use the unoriginal adaptor color risk and photo paper to ensure the print quality.
- Do not touch the front of the printer, the film of color ink and the glossy side of photo paper in case of fingerprints that may affect the print quality.
- During printing, the area around the thermal print head is very hot. Do not touch it, as you could be burned.
- Do not touch the photo paper by force during printing, or else it may damage the printer.
- Please remove the paper tray when it is not used for a long time, and clean the covers of the printer and the paper tray to avoid dust entering.

Disclaimer

Thanks you for purchasing our product. By using this product, you hereby signify that you have read, understood and agree to abide by the terms and conditions herein. The user should observe safe and lawful practices including, but not limited to, those set forth in this document. Our company therefore holds no liability for damages or losses of any kind, including but not limited to the loss of profits, income or data due to the violation of explicit or implied warranties or conditions mentioned in this user manual. The user agrees to indemnify and hold our company harmless from any and all claims, damages and expenses with this user manual or intentional misconduct on the part of this user.

Except for the scope prohibited by the applicable laws, the company is not responsible for any damages or losses of any kind, including but not limited to the loss of profits, income or data due to the violation of explicit or implied warranties or conditions mentioned in this user manual. Information in this user manual is for informational purposes only. It is subject to change without prior notice, due to the manufacturer's continuous development program. This document supersedes and replaces all information supplied prior to the publication hereof.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not properly installed and used, may cause harmful interference to radio communications.

However, it is important to note that the actual interference may vary. The user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and the receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Caution: Changes to the antenna or other connections may void the user's authority to operate this equipment. The equipment should be installed and operated with FCC Part 15B restrictions in mind. The equipment should be installed and operated with minimum distance between 20cm from the radiator. Your body (use only the supplied antenna).

FCC ID: 2AUTE-ZMA396



After Download
Go to: <http://www.idprt.com/Driver>
Customer Service Email 1: help@idprt.com
Customer Service Email 2: china@idprt.com

IDPRT Photo Printer Quick Start Guide

Zevo 1966

Please read the guide carefully, before using the product, and keep it handy.