



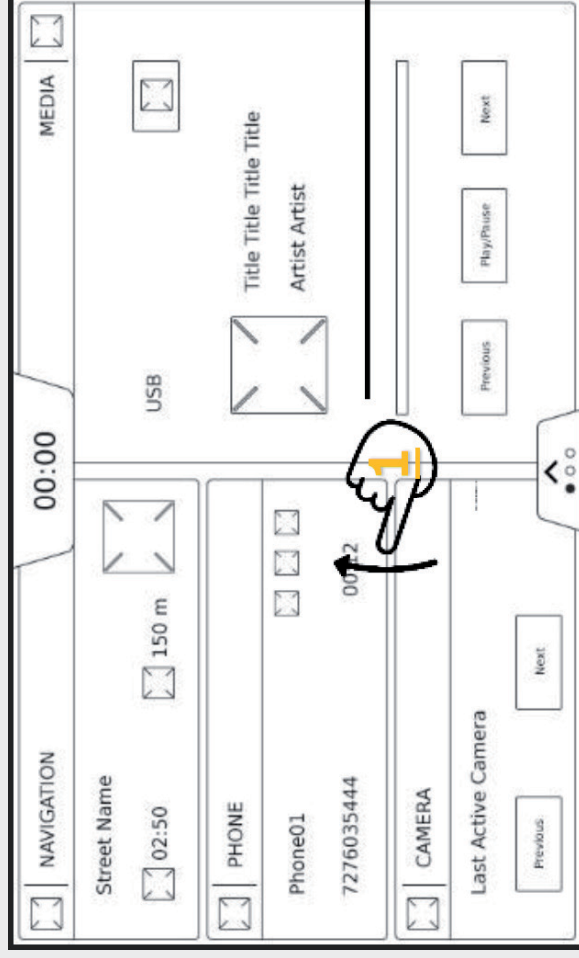

Center CM-C 19

en Operating instructions

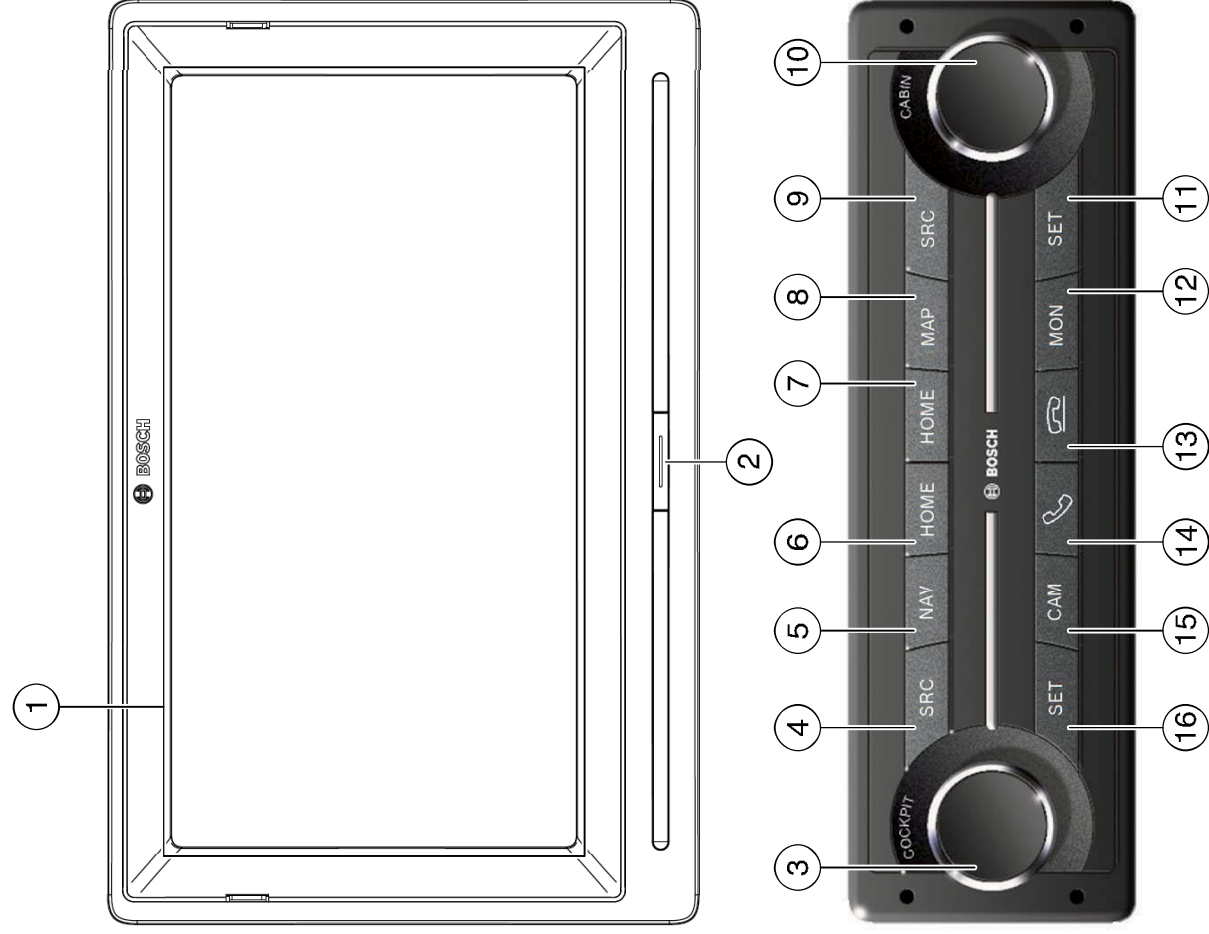

For cockpit area:

- 1 Display
- 2 On/off button
Switch the device on/off
- 3 Cockpit volume control
Turn: Adjust cockpit volume
Push: Mute/unmute the cockpit audio source
- 4 **SRC** button
Select cockpit source
- 5 **NAV** button
Start the navigation system, switch between map view and the *Destination* menu or, while a route guidance is active, the *Route* menu.
- 6 **HOME** button
Open the cockpit home menu
- 13 button
Open the call lists
When receiving an incoming call: Reject call
- button
Open the call lists
When receiving an incoming call: Answer call
- 15 **CAM** button
Show current camera image on the display
- 16 **SET** button
Open the cockpit settings menu

For the **passenger area**:

- ⑦ **HOME** button
Open the home menu for the passenger area
- ⑧ **MAP** button
Display/hide the map view of the navigation system in the passenger area
- ⑨ **SRC** button
Select the source for the passenger area
- ⑩ Passenger area volume control
Turn: Adjust the volume for the passenger area
Push: Mute/unmute the audio source of the passenger area
- ⑪ **SET** button
Open the settings menu for the passenger area
- ⑫ **MON** button
Switch on/off the monitors of the passenger area

Contents

1	Regulatory information	8			
3	Symbols used in this document..	9			
4	Important information.....	9			
4.1	Cleaning information.....	10			
5	Operation.....	11			
5.1	Touchscreen controls.....	11			
5.1.1	Tapping	11			
5.1.2	Swiping	11			
5.1.3	Zooming the map view	11			
5.1.4	Scrolling the visible map area.....	11			
5.2	Switching the device on/off	12			
5.3	Adjusting the volume.....	12			
5.3.1	Increasing/decreasing the volume ..	12			
5.3.2	Muting the device.....	12			
5.4	Home menu for cockpit and passenger area.....	12			
5.4.1	Home menu for the cockpit.....	12			
5.4.2	Home menu for the passenger area	12			
5.4.3	Switch between the home menus...	13			
5.4.4	Direct selection of functions in the home menu	13			
5.4.5	System functions in the home menu	15			
5.5	The displays of the main operating modes.....	15			
5.5.1	Radio listening and playing media...	15			
5.5.2	Telephone.....	16			
5.5.3	Navigation	16			
5.5.4	Smartphone integration.....	16			
5.5.5	Switching between the displays of the main operating modes.....	16			
5.6	Sound settings	16			
5.6.1	Adjusting the bass and treble	17			
5.6.2	Adjusting the balance.....	17			
5.6.3	Adjusting the fader.....	17			
5.6.4	Selecting an equalizer preset.....	17			
5.6.5	Adjusting the speed dependent volume.....	17			
5.6.6	Volume adjustment for the AUX source	18			
5.6.7	Volume adjustment for an external DVD source	18			
5.6.8	System beep – on/off.....	18			
5.7	Setting the time and date	18			
5.7.1	Selecting the date format	18			
5.7.2	Selecting the time format	19			
5.7.3	Setting the time via GPS	19			
5.7.4	Setting the time manually	19			
5.8	Further system settings.....	20			
5.8.1	Adjusting the display brightness	20			
5.8.2	Setting the language	20			
5.8.3	Selecting the system of measurement	21			
5.8.4	Displaying information about open-source software	21			
5.8.5	Reset to the factory settings.....	21			
5.9	Connecting/inserting external devices and data storage devices	21			
5.9.1	General information	21			
5.9.2	SD card	22			
5.9.3	USB storage device/Apple.....	23			
5.9.4	AUX audio source	23			
5.9.5	Enabling the external DVD input	24			
5.9.6	Connecting a device via Bluetooth®.....	24			
5.9.7	Connecting a smartphone via smartphone integration	26			

6	FM/AM radio mode	27	7	DAB radio mode.....	30	8	Playing media	33
6.1	Listening to the radio.....	27	7.1	Listening to DAB.....	30	8.1	Selecting a media source.....	33
6.2	The tuner display.....	27	7.2	The DAB display	31	8.2	Calling up the audio/video display.....	34
6.3	Calling up the tuner display	28	7.3	Calling up the DAB display	31	8.3	Audio playback.....	34
6.4	RDS	28	7.4	DAB features	31	8.3.1	The audio display	34
6.4.1	AF mode – on/off	28	7.5	DAB service list.....	31	8.3.2	Pausing playback.....	34
6.4.2	Regional mode – on/off.....	28	7.6	Selecting services	31	8.3.3	Skipping to the next/previous title..	34
6.5	Selecting the waveband/memory bank	28	7.7	Storing services	31	8.3.4	Selecting titles in the media browser.....	34
6.6	Tuning stations.....	29	7.7.1	Storing services manually	31	8.3.5	Fast forward/rewind.....	34
6.6.1	Tuning stations manually.....	29	7.7.2	Storing services automatically	31	8.3.6	Skipping forwards/backwards in the current title.....	35
6.6.2	Starting seek tuning.....	29	7.8	Listening to a stored service.....	32	8.3.7	Repeating a title.....	35
6.6.3	Station list.....	29	7.9	Listening to a service's secondary audio channel	32	8.3.8	Shuffle function.....	35
6.6.4	Scanning receivable stations.....	29	7.10	Preselecting programme types ...	32	8.4	Video playback	35
6.7	Storing stations.....	29	7.11	Displaying DAB extra information.....	32	8.4.1	The video display	35
6.8	Listening to a stored station	29	7.12	DAB service following	33	8.4.2	Pausing playback.....	35
6.9	Radio-text display – on/off.....	29	7.13	DAB-FM switching.....	33	8.4.3	Skipping to the next/previous title..	36
6.10	Traffic announcement.....	29				8.4.4	Selecting titles in the media browser.....	36
6.10.1	Traffic announcement priority – on/off	30				8.4.5	Fast forward/rewind.....	36
6.10.2	Cancelling a playing traffic announcement	30				8.4.6	Skipping forwards/backwards in the current title.....	36
						8.4.7	Full-screen mode – on/off.....	36
						8.5	Media browser	36
						8.5.1	The browser display	36
						8.5.2	Selecting titles	37
						8.5.3	Closing the browser without selecting a title.....	37

9	Navigation.....	37		
9.1	Starting navigation.....	38		
9.2	Entering a destination.....	38		
9.2.1	Opening the Destinations menu.....	38		
9.2.2	Entering an address.....	38		
9.2.3	Selecting a point of interest.....	40		
9.2.4	Entering coordinates.....	41		
9.2.5	Selecting one of the previous destinations or a destination stored as a favourite.....	41		
9.3	Location details view	41		
9.3.1	Areas of the location details view ...	42		
9.3.2	Options in the location details view.....	42		
9.4	Storing the home address.....	43		
9.5	Entering a waypoint	43		
9.6	Changing the destination while route guidance is active	43		
9.7	Map view and map options	43		
9.7.1	Opening the map view	43		
9.7.2	The map view during an active route guidance session	43		
9.7.3	Repeating the current navigation announcement	44		
9.7.4	Changing the map scale.....	44		
9.7.5	Changing the map view mode.....	44		
9.7.6	Displaying TMC messages.....	44		
9.7.7	Changing the displayed section of the map.....	45		
9.7.8	Selecting a destination or waypoint from the map	45		
9.7.9	Viewing details of a location on the map	45		
9.7.10	Selecting a point of interest from the map.....	45		
9.8	Route guidance settings in the Route menu.....	45		
9.8.1	Opening the Route menu	45		
9.8.2	Cancelling route guidance.....	46		
9.8.3	Muting navigation announcements ..	46		
9.8.4	Displaying destination information ..	46		
9.8.5	Displaying the route list	46		
9.8.6	Displaying the list of waypoints	46		
9.8.7	Searching for a point of interest on the route or near the destination....	46		
9.8.8	Blocking route sections.....	46		
9.9	Specifying guidance and map settings	47		
9.9.1	Opening the guidance and map settings	47		
9.9.2	Displaying points of interest on the map.....	47		
9.9.3	Selecting the map orientation.....	47		
9.9.4	3D map view – on/off.....	48		
9.9.5	Enabling automatic zoom.....	48		
9.9.6	Lane guidance – on/off	49		
9.9.7	Voice guidance – on/off	49		
9.9.8	Visual driving recommendations in other operating modes– on/off.....	49		
9.9.9	Acoustical traffic information.....	49		
9.10	Specifying custom route options ..	50		
9.10.1	Opening the route options	50		
9.10.2	Selecting the basic type of route	50		
9.10.3	Activating dynamic route guidance with TMC.....	50		
9.10.4	Avoiding certain types of road and transport.....	51		
9.11	Displaying information on the current position	51		
9.12	Your own points of interest.....	51		
9.12.1	Data format	52		
9.12.2	Loading your own points of interest onto the device	52		
9.12.3	Point of interest warnings displayed during the journey – on/off	52		
9.12.4	Deleting your own points of interest from the device.....	53		
9.13	Enabling the keyboard lock while driving.....	54		
9.14	Selecting the geo coordinate format	54		
9.15	Updating the map data	54		
9.16	Retrofitting the navigation function.....	55		

10 Telephone	55
10.1 Starting phone mode	55
10.1.1 Opening the phone menu.....	55
10.2 Answering/rejecting a call	56
10.2.1 Answering a call	56
10.2.2 Rejecting a call.....	56
10.3 During the current call	56
10.3.1 Ending the call	56
10.3.2 Muting the call	56
10.3.3 Switching the call to the mobile phone.....	56
10.4 Dialling a number.....	57
10.5 Calling a contact from the phone book.....	57
10.6 Calling an entry in the call list....	57
10.6.1 Tone dial feature (DTMF)	57
10.7 Second call.....	57
10.7.1 A second incoming call	57
10.7.2 Switching between two calls	57
10.8 SMS text messages	58
10.8.1 Reading an incoming text message.....	58
10.8.2 Incoming text message display – on/off	58
10.9 Activating the voice control system of the connected mobile phone.....	58
10.10 Further settings.....	59
10.10.1 Ringtone of the mobile phone.....	59
10.10.2 Phone-book sort order	59

11 Smartphone integration	59
11.1 Calling up the smartphone display.....	60
11.2 Selecting a particular application on a smartphone	60
12 Rear-view camera	61
12.1 Picture settings for the rear-view camera	61
12.1.1 Guide lines – on/off	61
12.1.2 Adjusting the picture brightness and contrast.....	62
13 Voice control.....	62
13.1 Voice control – start/stop	62
13.2 How voice control works.....	63
13.2.1 The main menu.....	63
13.2.2 Saying voice commands	63
13.2.3 Opening the menu for an operating mode.....	63
13.2.4 Selecting from a list.....	63
13.3 Help for voice control.....	64

14 Points of interest – symbol overview.....	64
15 HD Radio troubleshooting.....	66
16 Technical data.....	67

1 Regulatory informa-

For Europe

Hereby, Robert Bosch Car Multimedia GmbH declares that the radio equipment type Center CM-C 19 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: www.bosch-professional-systems.com

► Frequency band

2400 – 2480 MHz

► Radiated power (EIRP)

► Hints/Restrictions

- Internal antenna:
Internal antenna not accessible by user.
- Any change of the user will violate the legal approval of this product.

For United States of America

Model name: Center CM-C 19

This device complies with Part 15 of the FCC Rules and with RSS-GEN of Industry Canada. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and

- (2) this device must accept any interference received, including interference that may cause undesired operation.

ment not expressly approved by Robert Bosch GmbH may void the FCC authorization to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC

Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

For Canada

Model name: Center CM-C 19

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

For Mexico

IFT/IFETEL: TBD

Marca: Bosch

Modelo: Center CM-C 19

La operacion de este equipo esta sujeta a las siguientes dos condiciones:

- (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y
- (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operacion no deseada.

3 Symbols used in this document

Symbols linked with text within a grey box are warnings and always indicate an immediate or potential hazard to the user and/or other persons and/or damage of objects:

**Safety notice**

- ▶ Immediate danger that could cause serious personal injury or death.
- ▶ Potentially dangerous situation that could cause serious personal injury or death.
- ▶ Potentially dangerous situation that could cause personal injury or damage to property.

**Important note:**

Warns of a potentially hazardous situation in which the device or any other object in the vicinity could be damaged.

In addition to these warnings, the following symbols are also used:

**Note:**

Additional details for the application and further useful information.

Single-step procedure – instructions for a procedure that can be completed in just one step.

- ▶ Bulleted list.

Italic letters like *Balance* indicate such elements as the name of a menu or menu item.

Bold letters like **Language** indicate a button or menu item that you can tap in order to access a function or to display further options.

4 Important information

Before using the device, please read these instructions carefully and familiarise yourself with the device. Keep these instructions in your vehicle for later reference.

Intended use

The Center CM-C 19 must be installed in a 1-DIN compartment in the dashboard of a coach. The operating voltage of the device is 12 V. The device must not be operated in any other environment or in an intended environment that is compromised e.g. by damage or malfunction.

**Road safety**

- ▶ Operating the device is only permitted when the driving and traffic situation allow you to do so. Before starting to use the device, make sure that you, your passengers and other road users are not put in danger, hindered or inconvenienced. **The road traffic regulations apply at all times.**
- ▶ The device has to be used so that the vehicle can be driven safely at all times. If in doubt, stop your vehicle and operate the device while the vehicle is stationary.

- ▶ You must always be able to hear police, fire service and ambulance sirens in good time from inside your vehicle. For this reason, when using your device, make sure the volume is set at a level that is appropriate **for the particular driving and traffic situation.**
- ▶ The usage of the navigation system does not absolve the driver of the responsibility of a correct and vigilant attitude. The relevant traffic regulations must always be followed. If a navigation instruction contradicts traffic regulations, the **traffic regulations always apply.**
- ▶ The route guidance provided by the device may not be completely accurate. Ensure that all driving manoeuvres are legal and safe in order to avoid accidents.

Risk of electrical shock or fire

If you disassemble the device, it might result in electrical shock or fire. Do not open the device.

Malfunctions

Do not use the device if you notice any malfunctions such as a frozen screen or poor audio quality. Continued use of a

malfunctioning system may result in accidents, fire or electrical shock.



Important note:

In standby mode, the device may drain the battery when the vehicle's engine is not running.

For further details on this, please read the section entitled "Switching the device on/off" (page 12).

- ▶ Only use appropriate connecting cables and external devices in regard to safety, electromagnetic compatibility and grade of shielding.
- ▶ The device must not come into contact with hot or burning objects (e.g. cigarettes).



Note:

Some pixels in the display are darker or brighter than others. This condition is an inherent characteristic of liquid crystal displays, and it is not a malfunction.

4.1 Cleaning

- ▶ To clean the device, never use hard or sharp objects that could damage the protective pane or housing.
- ▶ Do not use aggressive cleaning agents, such as thinners, benzine, abrasive cleaners,

spray cleaners, acidic or alkaline solutions, or wax.

- ▶ Do not spray any liquids onto the device.
- ▶ To clean the housing and protective pane / display, moisten a soft cloth with tepid water and wipe off the dirt. Make sure that no liquid enters the inside of the display. Afterwards, wipe the cleaned surface with a clean, dry cloth.



Note:

Dust on the display may impair the functioning of the touchscreen. If the device detects that the display is dirty, a corresponding notification will appear. In this case, clean the display to ensure reliable functioning of the touchscreen.