


Product Overview

• S10 Lite is a multifunctional wireless gaming controller designed specifically for the Nintendo Switch 2. It supports core features including gyroscope (motion control), wake-up, one-touch in-game voice access, vibration feedback, and more.

The controller is compatible with Switch 2, PC, Android, and iOS devices.

Button Layout

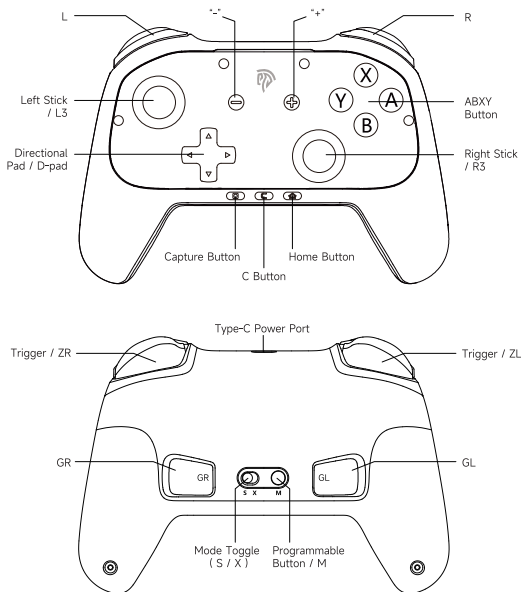

Connection Instructions

Connecting to Switch

First-Time Connection (Switch 2):

- Slide the **Mode Toggle** to the "S" mode.
- Press and hold the **Home** button for 5 seconds to power on.
- The controller's LED will flash (indicating pairing).
- On the Switch, navigate to **Controllers > Change Grip/Order** to enter pairing mode.
- When the LED becomes steady with a short vibration to confirm pairing.

Reconnection:

Keep the Mode Toggle under "S" mode, and short-press the **Home** button to reconnect your Switch.

【Additional Notes (S Mode)】

- Short press **Home** button: One-key wake-up.
 - Short press "C" button: Quick access to in-game voice chat (specific scenarios).
 - Short press **Capture** button: Quick capture.
-

Connecting To PC / Mobile Phone

First-Time Connection (Wired on PC):

- Slide the **Mode Toggle** to the "X" mode.
- Connect the controller to PC via Type-C cable.
- When the LED becomes steady with a short vibration to confirm pairing.

First-Time Connection (Bluetooth on Mobile):

- Slide the **Mode Toggle** to the "X" mode.
- Press and hold the **Home** button for 3 seconds to power on.
- The controller's LED will flash (indicating pairing).
- **Enable Bluetooth** on your phone / PC, then search for "Xbox Wireless Controller" and **select it** to pair.
- When the LED becomes steady with a short vibration to confirm pairing.

Reconnection:

Keep the **Mode Toggle** under "X" mode, and short-press the **Home** button to reconnect your phone.

Turbo Settings

• Manual Turbo:

Press **M & A** to activate continuous firing while holding the "A" button.

• Automatic Turbo:

Press **M & A** a second time, press **A** to activate auto-turbo, press again to pause auto-turbo.

• Cancel Turbo:

Press **M & A** a third time to cancel turbo.

[Note] (Adjustable Turbo Speed: Level 1 to 3):

- ① Press **M** & turn **Left Stick** left to decrease Turbo speed.
 - ② Press **M** & turn **Left Stick** right to increase Turbo speed.
 - ③ Only **A, B, X, Y, L, R, ZR, and ZL** can be set turbo.
-

Programming GL & GR Button Settings

• To Program A Button:

- ① While connected, press and hold **M & GL/GR**. The RGB LED will slowly flash red, indicating programming mode.
- ② Press the buttons you want to program (e.g., **A** or **A & B**) to assign a new function.
- ③ Press **GL/GR** to save and exit programming mode.

• To Cancel A Programming Function:

Press and hold **M & GL/GR** until the RGB LED slowly flashes red, then press **GL/GR** to clear the button's function.

- **Supports Manual On/Off for Macro Looping:**

Short-press **M + GL** or **M + GR** to enable or disable macro looping.

【Note】

Programmable Buttons:

A / B / X / Y / ZR / ZL / L / R / L3 / R3 / "-" / "+" / D-pad (Up / Down / Left / Right) / Left Stick - all 8 directions / Right Stick - all 8 directions

Vibration Adjustment

- Increase vibration intensity: Press **M** & turn **Left Stick** up.
- Decrease vibration intensity: Press **M** & turn **Left Stick** down.

【Note】

Available settings: Level 0 to 4 vibration intensity.

Joysticks And Motion Sensor Calibration

- **Calibration Process:**

- ① Keep the controller connected, press "+" & "-" & "B" to enter calibration mode.
 - ② The Indicator LEDs will flash alternately as red.
 - ③ Rotate both **left and right sticks** clockwise for 3 full rotations.
 - ④ Place the controller on a flat surface and press the "B" button.
-

Charging And Power

- **Charging Indicators:**

- ① **Off State:** When charging, the Indicator LED flashes red. The LED turns green once fully charged.
- ② **Connected State:** The LED indicates the current mode.
(X-input Mode / D-input Mode / Switch Mode)

- **Power Off:**

Press and hold the **Home** button for 5 seconds to power off, or the controller will automatically shut down after 10 minutes of inactivity.

- **Low Battery Warning:**

When connected, if both Indicator LED flashes red rapidly, it indicates low battery. Please recharge promptly.

Product Specifications

- **Product Name:** EasySMX S10 Lite Wireless Gamepad
- **Model:** S10C
- **Operating Current:** <75mA
- **Battery Capacity:** 1000mAh
- **Sleep Current:** <20 μ A
- **Input Voltage:** 5V
- **Charging Time:** Approximately 3 hours

Package Contents

- Wireless Controller x 1
- Type-C Data Cable x 1
- User Manual x 1

Safety Information

Before operating the device, please read and adhere to the following safety precautions to ensure optimal performance and avoid hazards:

1. Operating Temperature:

Use the device between 0°C to 35°C. Store the device and accessories between -10°C and 40°C. Extreme temperatures may cause malfunctions.

2. Small Parts Warning:

Keep the device and its accessories out of reach of children to prevent accidental damage or choking hazards.

3. Water and Moisture:

Do not expose the device or accessories to rain or moisture to avoid the risk of fire or electric shock.

4. Heat and Sunlight:

Keep the device and battery away from fire, high temperatures, and direct sunlight.

5. Battery Safety:

- Do not throw batteries into fire.
- Do not dismantle, crush, or modify the battery.
- Do not immerse batteries in water or other liquids.
- Avoid external impact or pressure on the battery to prevent leakage, overheating, fire, or explosion.

6. Battery Replacement:

Do not attempt to replace the battery yourself, as improper handling may lead to overheating or fire.

7. Tampering:

Do not disassemble or modify the device or its accessories, including the built-in battery, as this will void the warranty.

8. Disposal:

Dispose of the device, battery, and accessories in accordance with local regulations. Improper disposal may result in battery explosion.

Customer Support & Warranty

Warranty: We provide 1-year warranty. If you experience any issues, please contact us for support.

Returns & Replacements: If your product is defective or damaged, we offer hassle-after-sale service within the warranty period.

Contact Us

For technical support, warranty claims, or general inquiries, reach out to us:

Manufacturer: Shenzhen Yisuma Network Technology Co., LTD

Email: support@easysmx.com

Web: www.easysmx.com/pages/contact-us

Add: Jiaxiye Square 1155, Minzhi St. 318, Shenzhen, Guangdong, CN

FAQs & Troubleshooting

Visit our Discord server: Official EasySMX Server for common questions, troubleshooting guides, and software updates.

FCC Caution.

(1) § 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

According to §15.247(e)(i) and §1.1307(b)(1), systems operating under the provisions of this section shall be operated in a manner that ensures that the public is not exposed to radio frequency energy level in excess of the Commission's guidelines.