

 


PURE ONE A90S SERIES Stick Vacuum Cleaner

Instruction Manual

Manual De Uso

Mode D'emploi

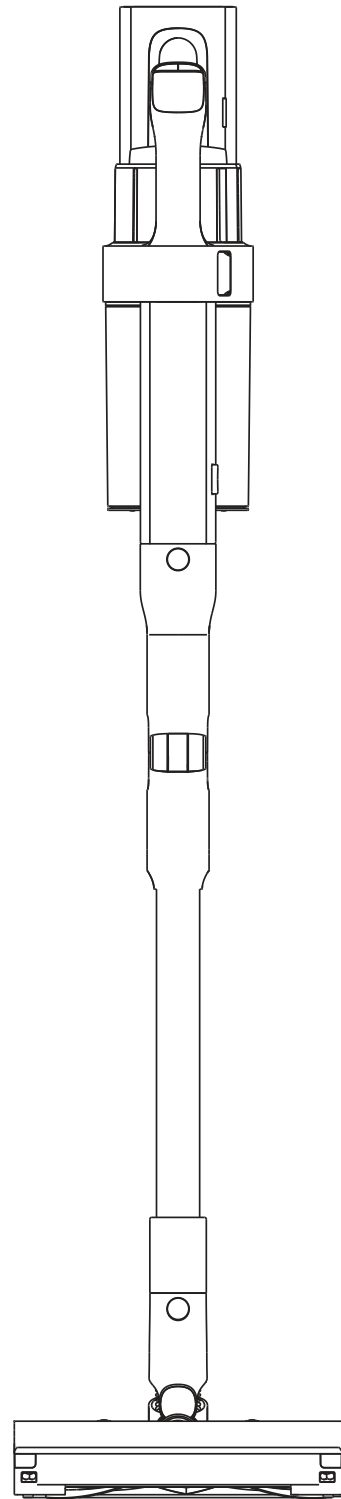

*Actual product may differ from illustration.

TINECO IS HERE TO HELP.

We'll get back to you within 24 hours.



 www.tineco.com

 1-855-292-8864

CONTENTS

Important Safety Instructions.....	2
Specifications	5
Overview.....	6
Accessories.....	8
Assembly	9
Operation	10
Maintenance	14
Troubleshooting.....	17
Warranty	18

HOUSEHOLD USE ONLY

Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE). Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

WARNING – To reduce the risk of fire, electric shock, or injury:

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance shall not be performed by children without supervision.
2. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
3. For INDOOR use ONLY. Do not use the appliance in outdoors, nor in commercial or industrial environments. Do not use the appliance on wet surfaces or surfaces with standing water.
4. Do not allow to be used as a toy. Close attention is necessary when used by or near children, pets or plants.
5. Use only as described in this manual. Use only manufacturer's recommended attachments.
6. Do not use with a damaged cord or plug. If appliance has been dropped, damaged, left outdoors, dropped into water, or is not working as it should, return it to a service center.
7. Do not handle charger, including charger plug, and charger terminals with wet hands.
8. Do not block openings. Stop use if openings become blocked. Clean and remove any blocked objects according to the manual instructions.
9. Keep hair, loose clothing, fingers, and all parts of your body away from openings and moving parts.
10. Use extra care when cleaning on stairs.
11. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
12. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
13. Do not use without dust container and filter.
14. Prevent unintentional activation. Ensure the switch is in the off position before charging, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or powering on the appliance with the switch on may cause accidents.
15. For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

16. Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
17. Under improper usage, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid comes into eye contact, seek medical help. Liquid ejected from the battery may cause irritation or burns.
18. Do not use the appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
19. Do not expose the appliance to fire or excessive heat. Exposure to fire or temperatures above 266°F (130°C) may cause an explosion.
20. Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
21. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
22. This appliance contains battery cells that are non-replaceable. Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care.
23. Always turn off this appliance before connecting or disconnecting the motorized nozzle.
24. Do not charge or store the appliance outdoors or inside a car. Only charge, store or use the appliance in a dry indoor area where the temperature is higher than 39.2°F (4°C) but lower than 104°F (40°C). The charger is for indoor use only.
25. Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
26. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
27. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
28. Use supply unit <YLS06512A-T300200> to charge Tineco battery ZB2481-7S1P-01B only.
29. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
30. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
31. Unplug from outlet when not in use and before servicing.

SAVE THESE INSTRUCTIONS

For Both FCC & IC application:

This device complies with Part 15 of the FCC Rules / Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Supplier's Declaration of Conformity

Tineco PURE ONE A90S

This appliance complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This appliance may not cause harmful interference, and (2) this appliance must accept any interference received, including interference that may cause undesired operation.

Tineco INTELLIGENT, INC.

1700 WESTLAKE AVENUE N., SUITE 200, SEATTLE, WA, 98109, USA

WWW.TINECO.COM

1-855-292-8864

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Specifications


Product	PURE ONE A90S
Voltage	25.2V ---
Rated Power	650W
Dustbin Capacity	0.8L
AC Input	100-240V $\sim$

Disposal

- The battery contains materials that are harmful to the environment and must be removed from the appliance before it is discarded.
- When removing the battery, the appliance must be powered off.
- Batteries, chargers, accessories and packaging should be sorted for environmental friendly recycling. Do not put them into fire, water or soil. Do not dispose of batteries and chargers into household waste! 
- If battery leakage contacts skin or clothing, immediately flush with water to avoid irritation and seek medical help.

Overview

 EN

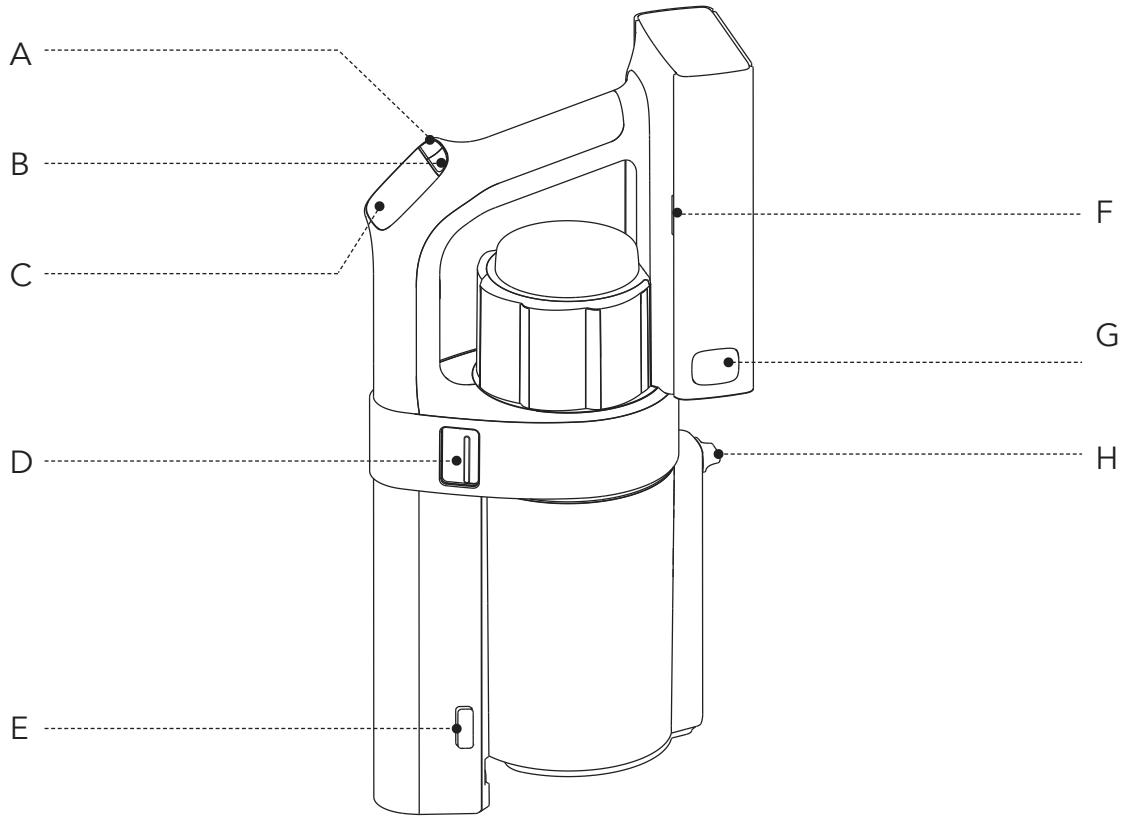

A. Mode Switch

B. Power On/Off

C. Digital Display

D. Large/Small Particle Switch

E. Dustbin Release Button

F. Battery Indicator Light

G. Battery Release Button

H. Dust Empty Release

Digital Display

NE



A. Front Edge Cleaning

B. Carpet

C. Malfunction Indicator

D. Left Edge Cleaning

E. MAX Mode

F. ECO Mode

G. AUTO Mode

H. Right Edge Cleaning

I. Wi-Fi Indicator

J. Dirt Monitoring Loop
(Blue to red according to the
dirt amount)

 
K. Hard Floor

Accessories

EN


Note:

- Test an accessory on a small, inconspicuous area before use on sensitive surfaces.
- To identify what should be included with your purchase, please refer to the packaging box.
- As shown below, there are many components compatible with this model. If you require more accessories, please go to **www.tineco.com** or **store.tineco.com**.

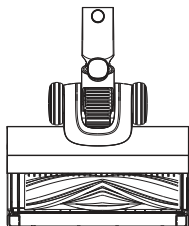


3DSense Master

 Smart Floor Brush with edge detection, wide brush opening, floor-type sensing, and green light dust reveal for optimal cleaning.

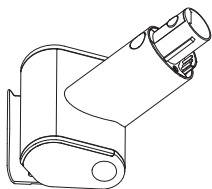


Mini Power Brush

 For vacuuming upholstered furniture, mattresses etc. Vacuums pet hair and removes ingrained dirt.



FlexiSoft Nozzle

 The ideal cleaning tool for screens and mirrors. Its ultra-soft microfiber gently removes dust without scratching delicate surfaces. Features 180° vertical and 360° horizontal rotation for multi-angle cleaning.

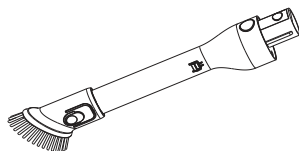


2-in-1 Crevice Dusting Tool


The slimline crevice tool is ideal for tight spots, corners and crevices, while the brush is ideal for cleaning above the floor surfaces.

Assembly

 Tube Installation

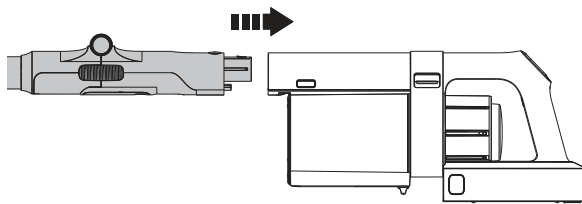


Insert to the main body.

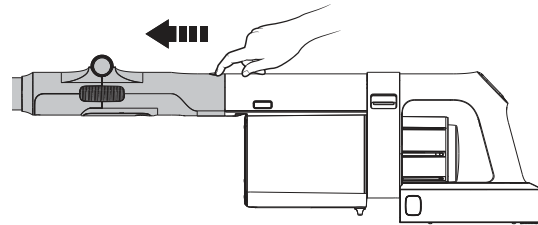 


Press the release button to remove the tube.

 Brush Installation

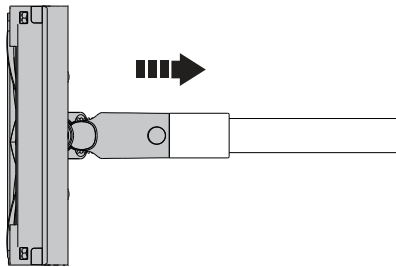


Insert the power brush.

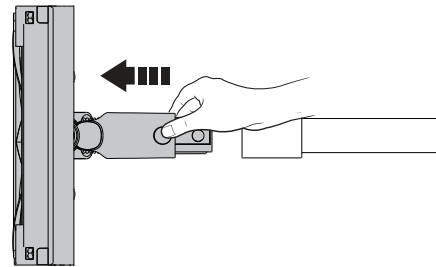 

Press the release button to remove the power brush.

 Charging Stand Installation

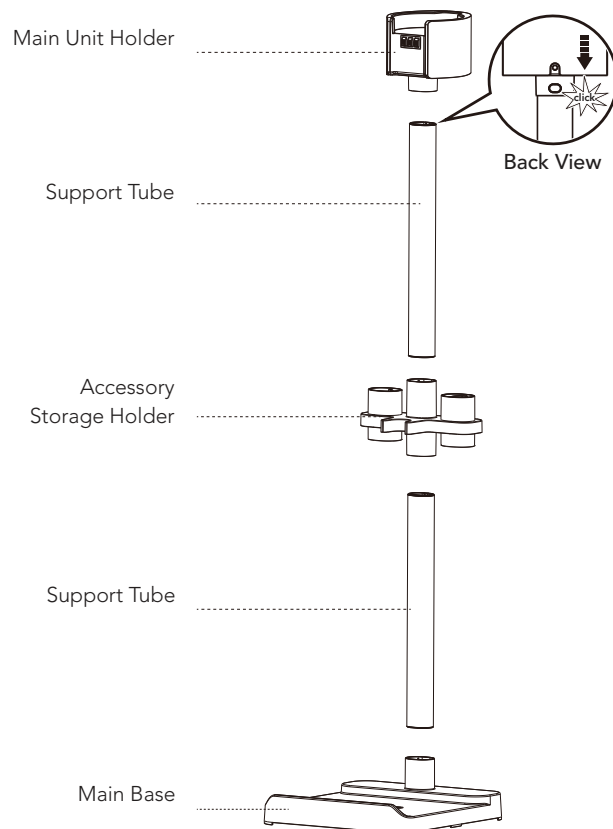


1. Each support tube has a securing clip on the back.
2. Ensure the Main Unit Holder and the Accessory Storage Holder are installed with openings facing forward.
3. Assemble from bottom to top: Main Base → Accessory Storage Holder → Main Unit Holder.
4. Make sure that each of the clips is secured in place before storing the vacuum cleaner.

Operation


Preparing for Use

Note:

 - Before the first use, please charge the appliance (see "Charging the Battery") for 2-2.5 hours in an area where the ambient temperature is between 39.2°F (4°C) and 104°F (40°C).
- Select an accessory and attach it to the appliance before use.

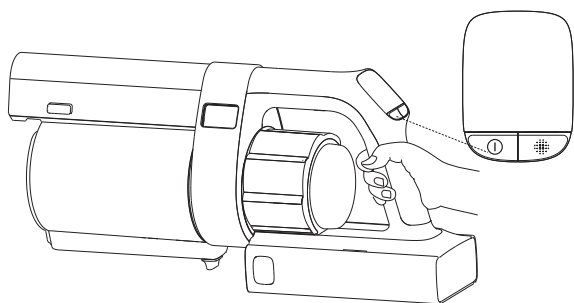

Press the  button to activate suction.

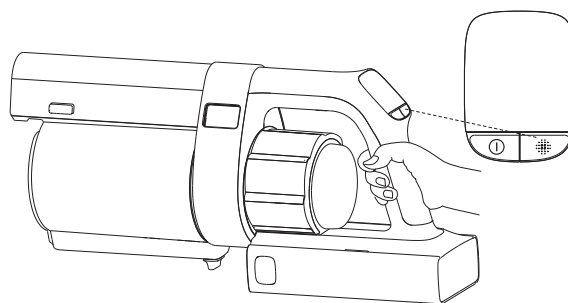 


Press the  button to switch cleaning mode.




Default: AUTO Mode
Press: ECO Mode
Hold: MAX Mode

 Emptying the Dustbin

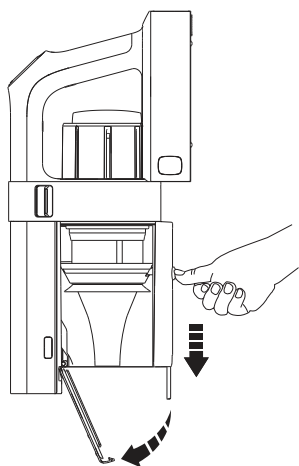


 When powered off, press the dust release button to empty the dustbin and simultaneously remove dirt on the mesh filter.

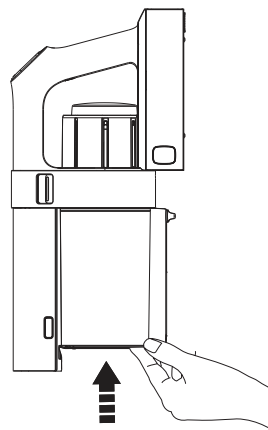


Close and click the dustbin flap back into place.

 Charging the Battery

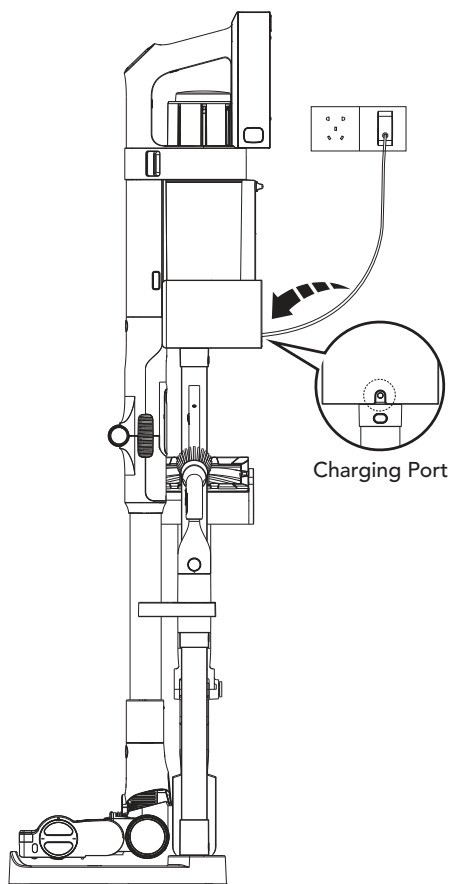

 Plug the adaptor into the charging port at the back of the Main Unit Holder.

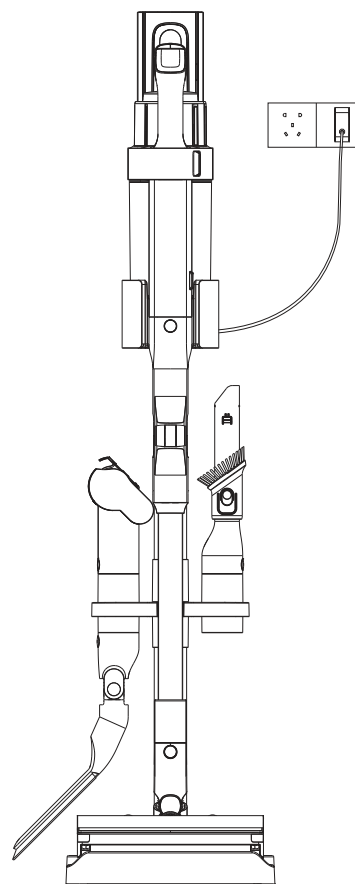

Place the appliance on the Charging Stand and plug the adaptor into a wall outlet.

 
Warning:

- Only use the Tineco-provided adaptor to charge the appliance.
- To avoid trip hazards, please place the appliance securely on the charging dock, near a wall during charging.
- During long periods of not being used, store the appliance in a cool, dry place. Ensure the battery is fully charged every 3 months.
- Do not expose appliance to sunlight or freezing temperature. Recommended temperature range: 39.2°F (4°C)~104°F (40°C).

APP

NE

- Access smart features through the Tineco app. Download the Tineco app from the App Store, Google Play and Tineco Official Site.
- The green dust indicator light on the brush roller can be adjusted or turned off via the app.

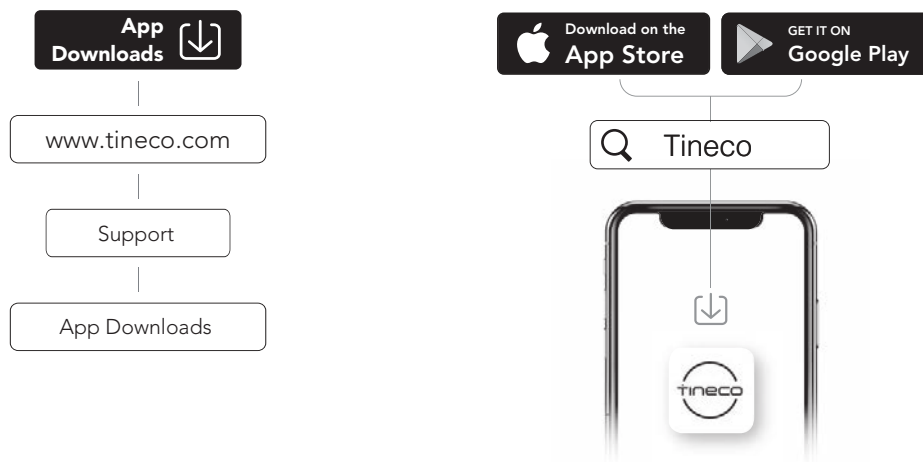

Turn On/Off WiFi

- Turn on WiFi: During operation, hold the  button for 3 seconds to enter Help Center and go to Connect to network.



- Turn off WiFi: Hold the  button for 5 seconds to turn off.



Brush Indicator

When in Use



In use: changes from blue to red as the amount of detected dust increases.



Mode switch: The mode indicator flashes for 1 second before returning to the cleanliness status display.



ECO Mode: Cyan
AUTO Mode: Sky blue
MAX Mode: Bright fuchsia

Large/small particle switch: The mode indicator flashes for 1 second before returning to the cleanliness status display.



Large particles



Small particles

During Charging



Low power: red



Medium power: green



High power: green

Fully Charged



Full power: green

 
Maintenance

NE


Note:

- Clean the dustbin and filters after each use.
- Remove, wash, and dry the filter and HEPA every 12 months, and replace it every 24 months.


Dustbin and Mesh Filter

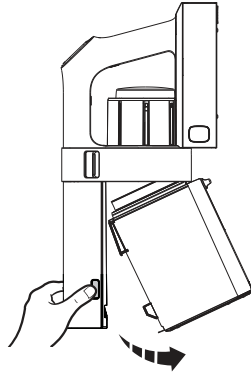

 
Press the dustbin release button to detach the dustbin from the main body.

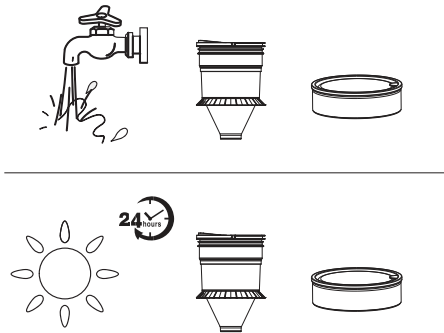

 The mesh filter and sponge can be washed under cold running water and must be completely dry before reinstalling.

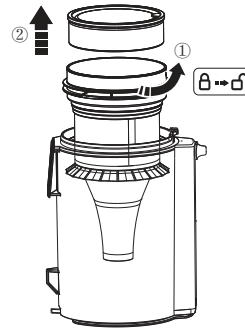


 Rotate counterclockwise and pull upward to detach the mesh filter.

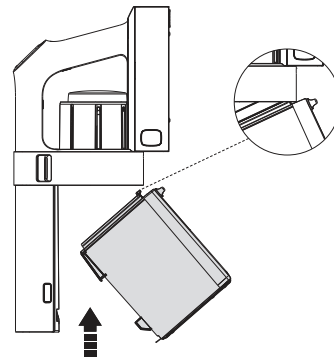


After cleaning, install the clean filter back into the dustbin, then install the dustbin back into the main body.

 HEPA Filter

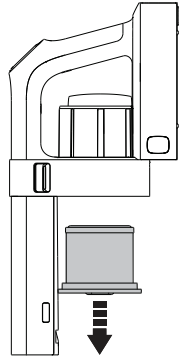


 Pull out the HEPA filter for cleaning. Do not use the appliance without first installing the HEPA filter.

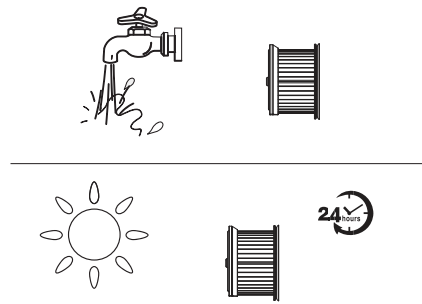


The HEPA filter can be washed under running water and must be completely dry before reinstalling.

 Dust Sensor

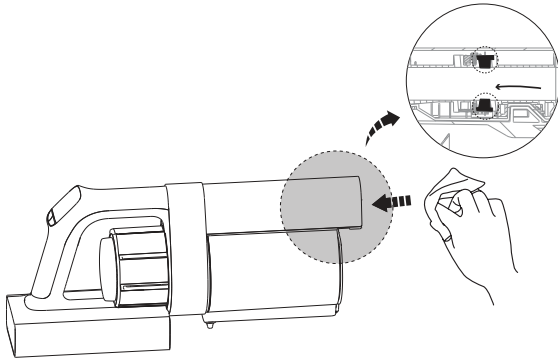


To avoid dust accumulation which can affect cleaning performance, wipe the suction mouth with a damp cloth.

 
Brush Roller

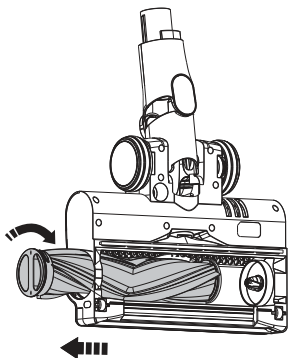

 With the power off, rotate the knob on the roller end cover, then pull out the brush roller.

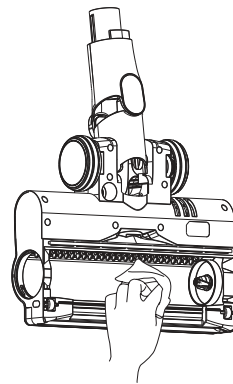

 After removing the brush roller, gently clean the brush window, suction mouth and the row of plastic teeth.

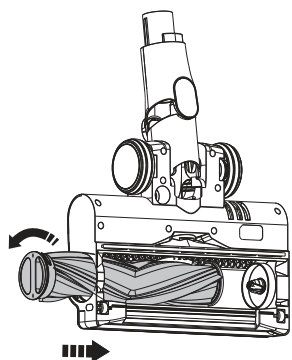

Fully reinsert the brush roller into the brush window and rotate the knob anticlockwise until it clicks securely back into place.

⚠ Warning:

- The power brush contains electrical components which must not be soaked or washed with water.
- To reduce injury, do not touch the brush roller while the appliance is in working condition.

Troubleshooting

Problem	Possible cause	Solution
The appliance does not turn on	No power	Charge the battery
	Auto protection for overheating	Restart after cooling down
	The appliance is blocked (i.e. the tube, suction mouth or some other parts)	Check and remove blockages
Weak suction power	Dustbin and filters are full	Clean the dustbin and filters
	The appliance is blocked (i.e. the tube, suction mouth or some other parts)	Remove blockages
	The brush roller is tangled with hair or fiber	Clean the brush roller
Battery won't charge	The appliance is not properly fitted	Place the appliance on the charging stand again
	The adaptor is not correctly inserted	Reinsert the adaptor correctly
	The adaptor is not designed for this appliance	Use the original adaptor
Malfunction indicator blinking	Air channel blocked	Remove blockages, clean the filter and dustbin
	The brush roller is tangled with hair or fiber	Clean the brush roller
Abnormal motor sounds	The appliance is blocked (i.e. the tube, suction mouth or some other parts)	Remove blockages

Note:

If the above troubleshooting guide fails to provide a solution, please visit our website www.tineco.com for further support.

Warranty

EN

2-YEAR LIMITED WARRANTY

- Only applies to purchases made from authorized retailers of Tineco.
- Is subject to the adherence of the requirements outlined in this instruction manual, and is subject to further conditions outlined below.
- This warranty is governed by and construed under the laws of the country in which the purchase took place. We provide 2-year warranty or a warranty period as stipulated by applicable local law, whichever is longer.

WHAT IS COVERED?

- Your Tineco appliance has a 2-year warranty against original defects in material and workmanship, when used for private household purposes in accordance with the Tineco Instruction Manual. Motorized accessories and battery bought separately come with a 1-year warranty.
- This warranty provides, at no extra cost to you, all labor and parts necessary to ensure your appliance is in proper operating condition during the warranty period.
- This warranty will only be valid if the appliance is used in the country in which it was sold.

WHAT IS NOT COVERED?

Tineco shall not be liable for costs, damages or repairs incurred as a result of:

- Appliances purchased from an unauthorized dealer.
- Careless operation or handling, misuse, abuse and/or lack of maintenance or use not in accordance with the Tineco Instruction Manual.
- Use of the appliance other than for normal domestic purposes, e.g. for commercial or rental purposes.
- Use of parts not in accordance with the Tineco Instruction Manual.
- Use of parts and accessories other than those produced or recommended by Tineco.
- External factors unrelated to product quality and use, such as weather, modifications, accidents, electrical outages, power surges or acts of God.
- Repairs or alterations carried out by unauthorized parties or agents.
- Failing to clear blockage and other hazardous material from the appliance.
- Normal wear and tear, including normal wearing parts, such as clear bin, belt, filter, HEPA, brush bar, and power cord (or where external damage or abuse is diagnosed), carpet or floor damage due to use not in accordance with manufacturer's instructions or failure to turn the brush bar off when necessary.
- Reduction in battery discharge time due to battery age or use.

WARRANTY LIMITATIONS

- Any implied warranties relating to your appliance including but not limited to warranty of merchantability or warranty of fitness for a particular purpose, are limited to the duration of this warranty.
- Warranty coverage applies to the original owner and to the original battery only and is not transferable.
- This limited warranty gives you specific legal rights. You may also have other rights which vary by region.
- Manufacturer's warranties may not apply in all cases, depending on factors such as use of the product, where the product was purchased, or who you purchased the product from. Please review the warranty carefully, and contact the manufacturer if you have any questions.

WARRANTY SERVICE

Register: We highly recommend that upon purchase, you register your appliance by logging into our official website (www.tineco.com) or scanning the QR code (see right) to enjoy more exclusive benefits. To register, please enter the whole serial number (on the right of the appliance). Failure to register your product won't diminish your warranty rights.



How to Claim: Please retain your proof of purchase. To make a claim under our Limited Warranty, you need to provide your serial number and the original purchase receipt with the purchase date and order number on it.

All work will be carried out by Tineco or an authorized agent.

Any replaced defective parts will become the property of Tineco.

Service under this warranty will not extend the period of this warranty.

Contact our Customer Service Hotline:
1-855-292-8864
 or Visit Tineco website
www.tineco.com
 for expert customer service.

CONTENIDO

Medidas importantes de seguridad	21
Especificaciones.....	24
Descripción general	25
Accesorios	27
Montaje	28
Funcionamiento.....	29
Mantenimiento	33
Resolución de problemas	36
Garantía.....	37

TINECO ESTÁ AQUÍ PARA AYUDAR.

Nos pondremos en contacto dentro de 24 horas.

 www.tineco.com

 1-855-292-8864

SOLO PARA USO DOMÉSTICO

Medidas importantes de seguridad

Al usar aparatos eléctricos, se debe seguir siempre una serie de medidas básicas de seguridad, entre ellas las que se indican a continuación.

LEA TODAS LAS INSTRUCCIONES ANTES DE USAR ESTE APARATO. De no seguir todas las advertencias e instrucciones, se podrían producir descargas eléctricas, incendios o lesiones personales graves.

ES

ADVERTENCIA – Para disminuir el riesgo de incendios, descargas eléctricas o lesiones:

1. Este aparato puede ser utilizado por niños a partir de 8 años y personas con discapacidades físicas, sensoriales o mentales, o con falta de experiencia y conocimientos, si están supervisados o han recibido instrucciones sobre el uso del aparato de modo seguro y comprenden los peligros que dicho uso acarrea. Los niños no deben jugar con el aparato. La limpieza y mantenimiento a cargo del usuario no deben ser realizados por niños sin supervisión.
2. El aparato no debe ser utilizado por personas (niños incluidos) con discapacidades físicas, sensoriales o mentales, o con falta de experiencia y conocimientos, a menos que lo hagan bajo supervisión o se les haya dado instrucciones.
3. SOLO para uso en INTERIORES. No use el aparato en el exterior, ni en entornos comerciales o industriales. No use el aparato sobre superficies húmedas o que tengan agua.
4. No permita que se utilice el aparato como un juguete. Es necesario vigilar atentamente el aparato cuando lo usen niños o se utilice cerca de niños, mascotas o plantas.
5. Use el aparato solo como se indica en este manual. Use solo accesorios recomendados por el fabricante.
6. No use el aparato si el cable o el enchufe están dañados. Si el aparato se ha caído o dañado, se ha dejado a la intemperie, ha caído al agua o no funciona como debiera, llévelo a un centro de servicio.
7. No manipule el cargador, incluido el enchufe del cargador, ni los terminales del cargador con las manos mojadas.
8. No obstruya las aberturas. Deje de utilizarlo si estas quedaran obstruidas. Limpie y retire los objetos obstruidos siguiendo las instrucciones del manual.
9. Mantenga el pelo, la ropa holgada, los dedos y todas las partes del cuerpo alejados de las aberturas y partes móviles.
10. Tenga mucho cuidado al limpiar escaleras.
11. No aspire líquidos inflamables o combustibles, tales como gasolina, ni lo use en lugares donde pudieran estar presentes.
12. No aspire nada que se esté quemando o humeando como, por ejemplo, cigarrillos, cerillas o cenizas.
13. No use el aparato sin el depósito de polvo y el filtro.
14. Evite puestas en marcha accidentales. Verifique que el interruptor está en posición de apagado antes de cargar el aparato, levantarlo o transportarlo. Llevar el aparato con el dedo en el interruptor o activar el aparato con el interruptor en posición de encendido puede originar accidentes.

15. Para cargar la batería, use únicamente la unidad de suministro extraíble incluida con este aparato. Un cargador apto para un tipo de batería podría presentar un riesgo de incendio si se usa con otra batería.
16. Desconecte la batería del aparato antes de realizar ajustes, cambiar accesorios o almacenarlo. Tales medidas preventivas disminuyen el riesgo de poner el aparato en funcionamiento por accidente.
17. Si se hace un uso inadecuado de la batería, el líquido de su interior podría salirse. Evite el contacto con ese líquido. Si hubiera un contacto accidental, lávese con agua abundante. Si el líquido entra en contacto con los ojos, solicite ayuda médica. El líquido que sale de la batería puede causar irritación o quemaduras.
18. No use el aparato si estuviera dañado o manipulado. Las baterías dañadas o modificadas pueden presentar comportamientos impredecibles y causar un incendio, explosión o riesgo de lesiones personales.
19. No exponga el aparato al fuego o al calor excesivo. Su exposición al fuego o a temperaturas superiores a 130 °C puede causar una explosión.
20. Siga todas las instrucciones de carga y no cargue el aparato a temperaturas fuera del rango especificado en las instrucciones. Una carga incorrecta o a una temperatura fuera del rango especificado puede dañar la batería y aumentar el riesgo de que se produzca un incendio.
21. Las reparaciones deben ser realizadas por personal cualificado que utilice únicamente piezas de repuesto idénticas a las originales. Esto garantizará que la seguridad del producto se mantenga.
22. Este aparato contiene células de batería no reemplazables. No modifique ni trate de reparar el aparato ni la batería, a excepción de lo indicado en las instrucciones para su uso y cuidados.
23. Apague siempre el aparato antes de conectar o desconectar la boquilla motorizada.
24. No cargue ni guarde el aparato a la intemperie ni dentro de un vehículo. Cargue, guarde o use el aparato únicamente en interiores secos donde la temperatura sea superior a 4 °C, pero inferior a 40 °C. El cargador solo es apto para usarse en interiores.
25. Use los aparatos solo con las baterías especialmente indicadas para ellos. El uso de cualquier otro tipo de batería puede presentar riesgos de incendio y lesiones personales.
26. Cuando no esté usando la batería, manténgala alejada de objetos metálicos, tales como clips, monedas, llaves, clavos, tornillos y otros objetos metálicos pequeños que pudieran conectar un terminal con el otro. Cortocircuitar los terminales de la batería puede causar quemaduras o un incendio.
27. No introduzca ningún objeto en las aberturas. No use el aparato si alguna de sus aberturas está obstruida. Manténgalo libre de polvo, fibras, pelo y cualquier elemento que pudiera reducir el flujo de aire.
28. Utilice la unidad de alimentación <YLS06512A-T300200> únicamente para cargar la batería Tinco ZB2481-7S1P-01B.
29. No estire ni lo transporte por el cable, ni utilice el cable como asa, no cierre puertas sobre el cable ni lo haga pasar por bordes o esquinas afilados. No coloque aparatos sobre el cable. Mantenga el cable apartado de las superficies calientes.
30. No estire del cable para desenchufar el aparato. Agarre del enchufe, no el cable.
31. Desenchufe el aparato cuando no lo utilice y antes de realizar cualquier tarea de mantenimiento.

CONSERVE ESTAS INSTRUCCIONES

Para las aplicaciones FCC e IC:

Este dispositivo cumple la sección 15 de las normas de la FCC/normas RSS exentas de licencia de Industry Canada. Su funcionamiento está sujeto a las dos condiciones siguientes: (1) el dispositivo no puede causar interferencias perjudiciales; y (2) el dispositivo debe aceptar cualquier interferencia recibida, incluidas las que puedan dar lugar a un funcionamiento no deseado.

Los cambios o modificaciones no aprobados expresamente por la parte responsable del cumplimiento pueden anular la autoridad del usuario para utilizar el equipo.

Este equipo se ha sometido a pruebas y se ha determinado que cumple los límites establecidos para los dispositivos digitales de clase B de acuerdo con las disposiciones de la sección 15 de la normativa de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias perjudiciales en una instalación residencial. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia, por lo que si no se instala y se usa como se indica en estas instrucciones, podría producir interferencias perjudiciales en las comunicaciones por radio. Sin embargo, no se puede garantizar que no se produzcan interferencias en una instalación en particular. Si este equipo causa interferencias perjudiciales en la recepción de señales de radio o televisión (que se pueden detectar apagando y encendiendo el dispositivo), recomendamos al usuario que intente corregir dichas interferencias siguiendo una o varias de las siguientes soluciones:

- Cambie la orientación o la ubicación de la antena receptora.
- Aumente la distancia entre el equipo y el receptor.
- Conecte el equipo a una salida en un circuito diferente al que esté conectado el receptor.
- Consulte al vendedor o a un técnico experto en radio y televisión para obtener ayuda.

Declaración de conformidad de la FCC del proveedor

Tineco PURE ONE A90S

Este dispositivo cumple las disposiciones de la sección 15 de la normativa de la FCC. Su funcionamiento está sujeto a las dos condiciones siguientes:

(1) el dispositivo no puede causar interferencias perjudiciales; y (2) el dispositivo debe aceptar cualquier interferencia recibida, incluidas las que puedan dar lugar a un funcionamiento no deseado.

Tineco INTELLIGENT, INC.

1700 WESTLAKE AVENUE N., SUITE 200, SEATTLE, WA, 98109, EE. UU.

WWW.TINECO.COM

1-855-292-8864

Este dispositivo contiene transmisores/receptores exentos de licencia que cumplen con los RSS exentos de licencia de Innovación, Ciencia y Desarrollo Económico de Canadá. Su funcionamiento está sujeto a las dos condiciones siguientes:

- (1) Este dispositivo no puede causar interferencias.
- (2) Este dispositivo debe aceptar cualquier interferencia, incluidas aquellas que puedan provocar un funcionamiento no deseado del dispositivo.


Especificaciones

Producto	PURE ONE A90S
Tensión	25,2 V $\equiv$
Potencia nominal	650 W
Capacidad del depósito de polvo	0,8 L
Entrada CA	100-240 V~

Eliminación

- La batería contiene materiales dañinos para el medio ambiente y deben retirarse del aparato antes de desecharlo.
- Al retirar la batería, el aparato debe estar apagado.
- Las baterías, los cargadores, los accesorios y el embalaje deben clasificarse para reciclarlos de un modo respetuoso con el medio ambiente. No los arroje al fuego, al agua ni los entierre. No deseche las baterías ni los cargadores junto con la basura doméstica. 
- Si la batería presenta fugas y el líquido entra en contacto con la piel o la ropa, enjuáguelos inmediatamente con agua para evitar irritaciones y consulte con un médico.

 Descripción general

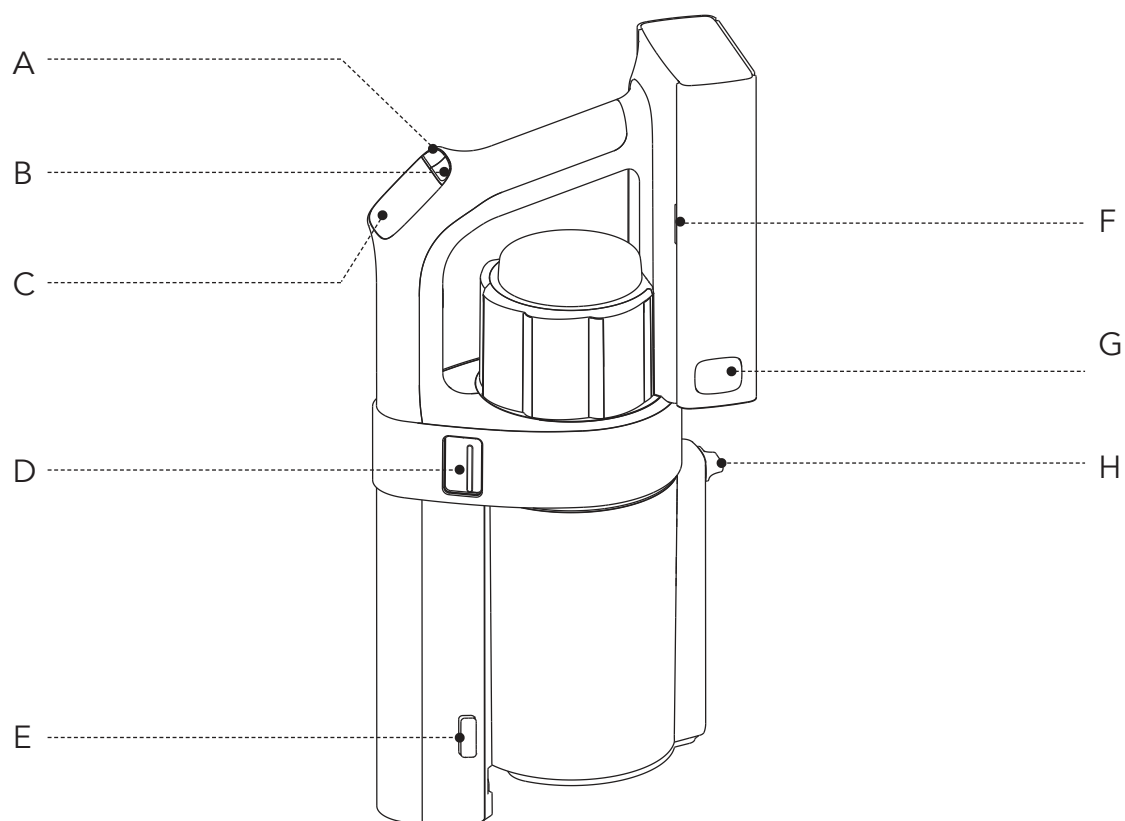

A. Modo interruptor

B. Encendido/apagado

C. Pantalla digital

D. Interruptor para partículas grandes/pequeñas

E. Botón de liberación del depósito de polvo

F. Luz indicadora de la batería

G. Botón de liberación de la batería

H. Liberación de vaciado del polvo

Pantalla digital



- A. Limpieza de borde frontal
- B. Carpet
- C. Indicador de mal funcionamiento
- D. Limpieza del borde izquierdo
- E. Modo MAX
- F. Modo ECO

 
- G. Modo AUTO
- H. Limpieza de borde derecho
- I. Indicador de Wi-Fi
- J. Bucle de control de suciedad (azul o rojo según la cantidad de suciedad)
- K. Suelo duro

Accesorios

Nota:


- Pruebe los accesorios en un área pequeña y poco visible antes de usarlos sobre superficies sensibles.
- Consulte el embalaje para identificar el contenido de su compra.
- Como se ilustra abajo, hay muchos componentes compatibles con este modelo. Si necesita más accesorios, visite www.tineco.com o store.tineco.com.

ES

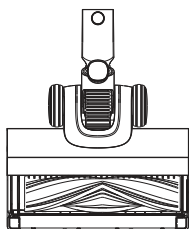


3DSense Master

 Cepillo inteligente para suelos con detección de bordes, amplia abertura del cepillo, sensor de tipo de suelo y luz verde que revela el polvo para una limpieza óptima.

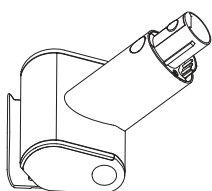


Minicepillo eléctrico

 Para aspirar muebles tapizados, colchones, etc.
Aspira pelo de mascotas y elimina la suciedad incrustada.

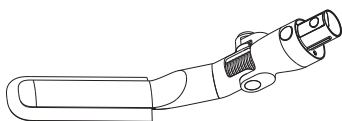

Boquilla FlexiSoft

 La herramienta de limpieza ideal para pantallas y espejos. Su microfibra ultrasuave elimina el polvo con delicadeza sin rayar las superficies delicadas. Cuenta con rotación vertical de 180° y horizontal de 360° para una limpieza desde múltiples ángulos.

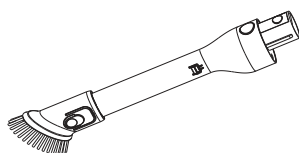


Herramienta 2 en 1 para limpiar rincones y polvo

La herramienta para ranuras fina es ideal para puntos estrechos, esquinas y ranuras, mientras que el cepillo es perfecto para limpiar superficies de suelo.


Montaje

Instalación del tubo

 ES

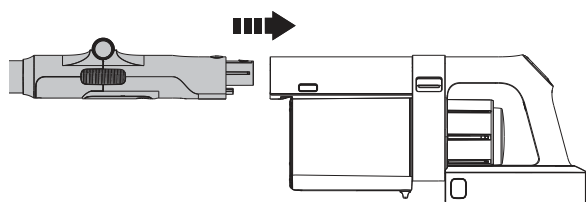


Inserte el cuerpo principal.

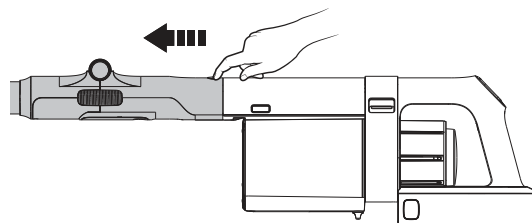 


Presione el botón de liberación para retirar el tubo.

 Instalación del cepillo

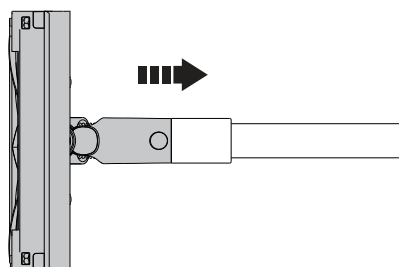


Inserte el cepillo eléctrico.

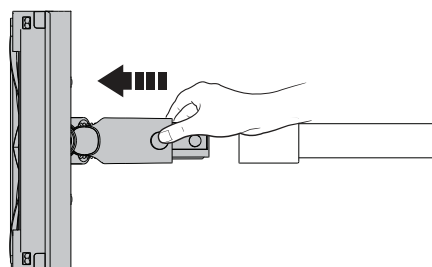 

Presione el botón de liberación para retirar el cepillo eléctrico.

 Instalación de la base de carga

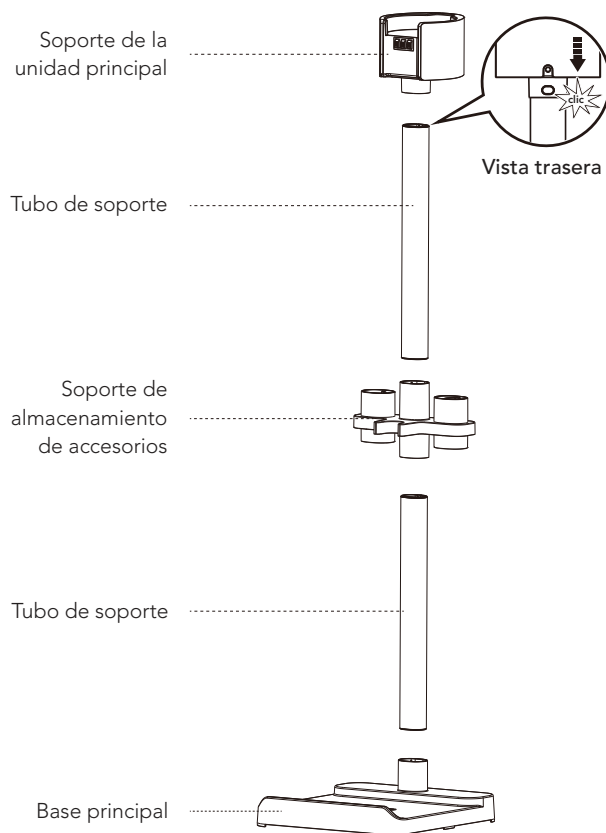

1. Cada tubo de soporte tiene un clip de sujeción en la parte posterior.
2. Asegúrese de que el soporte de la unidad principal y el soporte de almacenamiento de accesorios están instalados con las aberturas hacia delante.
3. Montar de abajo a arriba: Base principal → Soporte de almacenamiento de accesorios → Soporte de unidad principal.
4. Antes de guardar el aspirador, asegúrese de que cada una de las pinzas está bien sujeta.

 
Funcionamiento

Preparación para el uso


Nota:

- Antes del primer uso, cargue el aparato (consulte "Carga de la batería") durante 2-2,5 horas en un área donde la temperatura ambiente sea de entre 4 °C y 40 °C.
- Seleccione un accesorio y acóplelo al aparato antes de usarlo.

ES

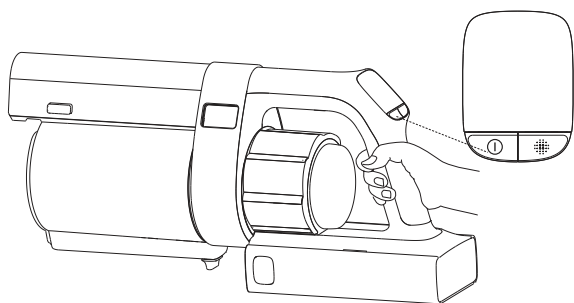

 Presione el botón ① para activar la succión.

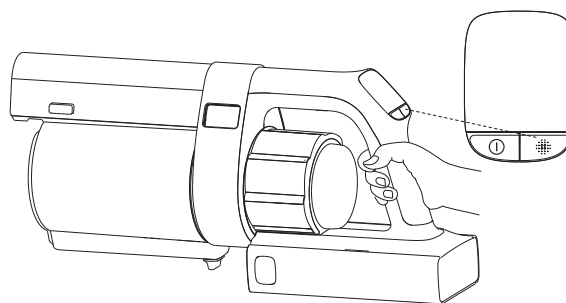


Pulse el botón para cambiar al modo de limpieza.




Por defecto: modo AUTO
Pulsar: modo ECO
Mantener: modo MAX

 Vaciado del depósito de polvo

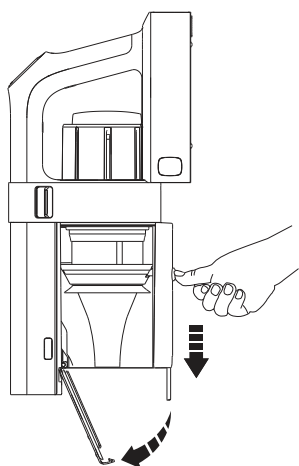


 Cuando esté apagado, presione el botón de liberación de polvo para vaciar el depósito y, al mismo tiempo, eliminar la suciedad del filtro de malla.

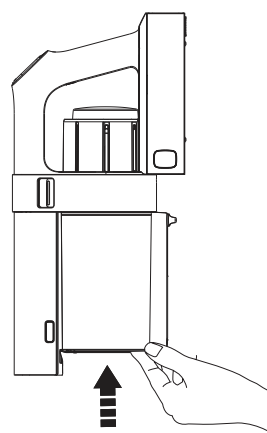


Cierre hasta que haga clic la tapa del depósito de polvo para volver a colocarla.

 Carga de la batería

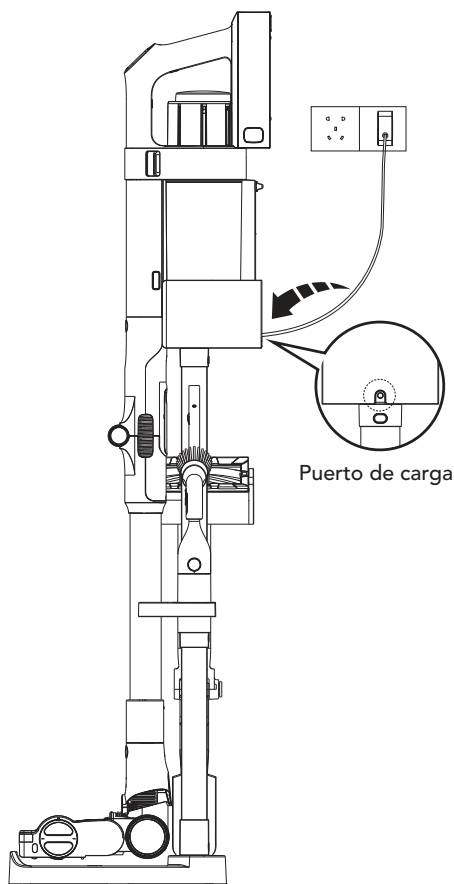

 Enchufe el adaptador al puerto de carga en la parte trasera del soporte de la unidad principal.

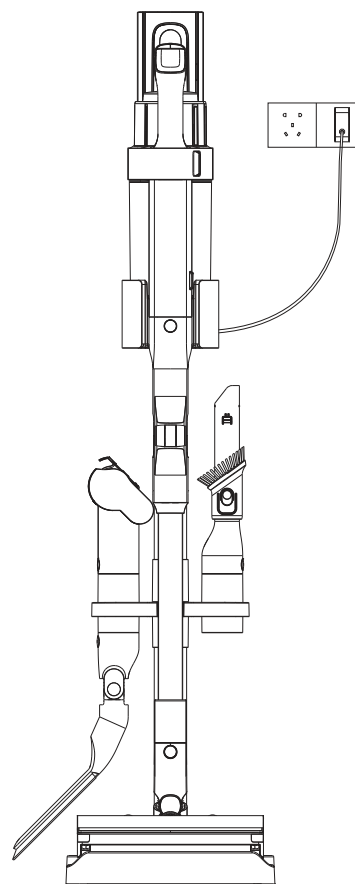

Coloque el aparato en la base de carga y enchufe el adaptador a una toma de pared.

 


Advertencia:

- Utilice solo el adaptador proporcionado por Tineco para cargar el aparato.
- Para evitar tropiezos, durante la carga, coloque el aparato de manera segura en la base de carga cerca de una pared.
- Si no se utiliza durante un periodo prolongado, almacene el aparato en un lugar fresco y seco. Asegúrese de que la batería esté completamente cargada cada 3 meses.
- No exponga el aparato a la luz directa del sol ni a temperaturas por debajo de cero grados. Rango de temperaturas recomendado: entre 4 °C y 40 °C.

Aplicación

- Acceda a funciones inteligentes a través de la aplicación Tineco. Descargue la aplicación Tineco de la App Store, Google Play o el sitio web oficial de Tineco.
- La luz indicadora verde del rodillo del cepillo se puede ajustar o apagar a través de la aplicación.

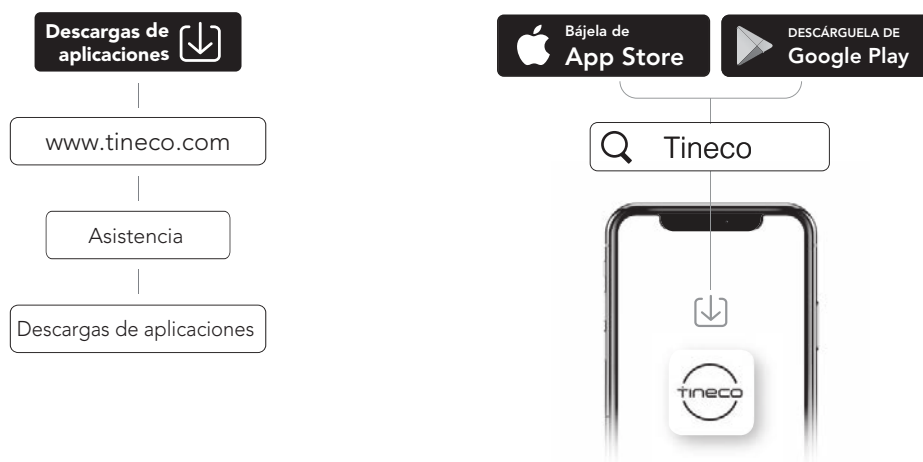

ES

Activar/Desactivar Wi-Fi

- Activar Wi-Fi: durante el funcionamiento, mantenga pulsado el botón  durante 3 segundos para acceder al Centro de ayuda y vaya a Conectar a la red.



- Desactivar Wi-Fi: mantenga pulsado el botón  durante 5 segundos para desactivarlo.



Indicador del cepillo

Durante el uso



En uso: cambia de azul a rojo a medida que aumenta la cantidad de polvo detectado.

Modo interruptor: el indicador de modo parpadea durante 1 segundo antes de volver a la pantalla de estado de limpieza.



Modo ECO: cian
Modo AUTO: azul cielo
Modo MAX: fucsia brillante

Interruptor de partículas grandes/pequeñas: el indicador de modo parpadea durante 1 segundo antes de volver a la pantalla de estado de limpieza.



Partículas grandes



Partículas pequeñas

Durante la carga



Baja carga: rojo



Carga media: verde



Carga alta: verde

Completamente cargado



 
Carga completa: verde

Mantenimiento


Nota:

- Limpie el depósito de polvo y los filtros después de cada uso.
- Retire, lave y seque el filtro y HEPA cada 12 meses y sustitúyalo cada 24 meses.


Depósito de polvo y filtro de malla

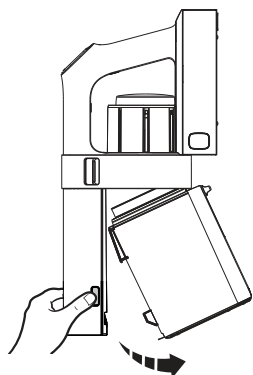

 
Presione el botón de liberación del depósito de polvo para separarlo del cuerpo principal.

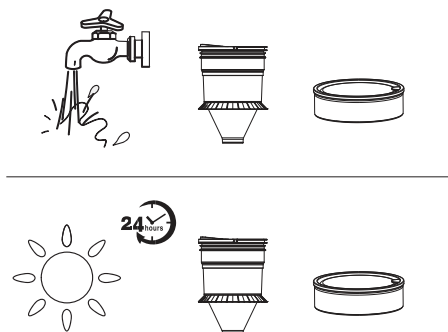

 El filtro de malla y la esponja se pueden lavar con agua fría corriente y deben estar completamente secos antes de volver a instalarlos.

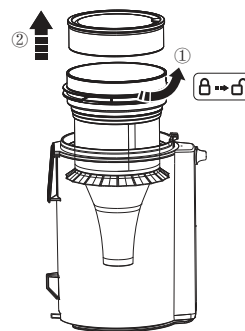

 Gire en sentido antihorario y tire hacia arriba para separar el filtro de malla.

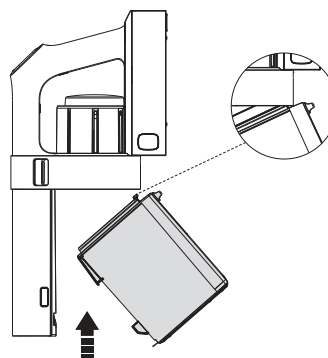

Después de limpiarlos, vuelva a colocar el filtro limpio en el depósito de polvo y, a continuación, vuelva a instalar el depósito de polvo en el cuerpo principal.