 


Monkey

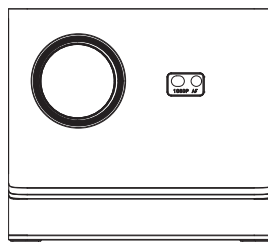

USER MANUAL

MTV30 PROJECTION KARAOKE MACHINE

CONTENTS

CAUTION - - - - -	01
OPERATION SAFETY INSTRUCTIONS AND CAUTIONS - - -	02
PACKING - - - - -	06
INSTALLING - - - - -	07
NOTE FOR HEAT DISSIPATION - - - - -	08
NOTE FOR EYES - - - - -	08
START USING - - - - -	09
FOCUS ADJUSTMENT - - - - -	10
PARTS INFO - - - - -	11
EXTERNAL DEVICE - - - - -	12
REMOTE CONTROL - - - - -	13
PROJECTION - - - - -	14
APPENDIX: COMPARISON TABLE OF PROJECTION	
DISTANCE AND SCREEN SIZE - - - - -	15
KTV WIRELESS MICROPHONE USAGE - - - - -	16
STATEMENT - - - - -	17

CAUTION

1. It is necessary to use the standard power adapter of the device.
Improper use of the power adapter can cause serious damage to the device;
2. If the device is not used for a long time, please ensure to turn off the power switch;
3. Please avoid foreign objects entering or obstructing the fan outlet to avoid affecting the fan's operation;
4. The equipment is in working condition, please do not directly power off or shut down;
5. When connecting external devices with high power consumption, please confirm if the power consumption can be supported;
6. The device is equipped with a built-in power supply. Please do not place it in a high temperature or damp place to avoid danger;
7. Suitable for safe use in non tropical climate conditions with an altitude of 2000 meters and below;

Caution

To prevent electric shock, do not open the casing. There are no components inside the aircraft that customers can repair. Please entrust qualified professional maintenance personnel to carry out maintenance matters.

Warning

This label warns users that there is voltage inside the unit that has not been insulated, which may cause surface magnetic fields to cause electric shock. Therefore, it is very dangerous to come into contact with any components inside the unit.

Warning

To prevent fire or electric shock, do not expose this machine to rainwater or moisture.

Warning

This is an A-grade product that may cause radio interference in living environments. In this case, it may be necessary for users to take practical and feasible measures to interfere with it.

OPERATION SAFETY INSTRUCTIONS AND CAUTIONS

Please read the contents below carefully before use.
Children, in particular, should be instructed by their guardians to know how to use and operate the products before use.



WARNING

To avoid serious injuries or death resulting from electric shock, short circuit, damages, fire, or other dangers, please strictly follow the cautions below, including but not limited to the following conditions:

POWER/AC POWER ADAPTER

- The AC power adapter is especially designed for Moukey electronic products. Don't use it for other purposes.
- It is for indoor uses only. Don't use it in any humid condition.
- Don't place the power cable nearby any heater or heating radiator. Besides, don't excessively bend, damage the power cable, or put any heavy object on it.
- Only the rated voltage specified for the product can be used. The required voltage is indicated on the nameplate of the product.
- Only the adapter specified can be used. The product may be damaged or overheated if any inappropriate adapter is used.
- Please inspect the plug and clear the dirt or dust on the plug on a regular basis.

DON'T REPAIR OR REPLACE PARTS WITHOUT AUTHORIZATION

- The product has no part for any user to repair without authorization. Don't disassemble it or attempt to dismantle or transform the interior components in any form. In case any unusual condition occurs, please stop using it immediately and contact your distributor or Moukey's customer service center.

WATER RESISTANCE WARNING

- Don't use the product in rain, humid condition or nearby water; don't put any vessel containing liquid (e.g., a vase, bottle, or glass) on it, or the liquid may splash into any inlet. In case any liquid splashes into the product, please switch it off immediately and

unplug the power cable from the AC power socket. After that, ask a qualified maintainer to repair the instrument.

- Don't plug, unplug the power plug with a wet hand.

FIRE PROTECTION WARNING

- Don't place any burning object (e.g., a candle) on the product. A burning object may topple and result in a fire hazard.

SWITCH IT OFF IF ANY UNUSUAL CONDITION OR FAULT OCCURS

Switch off the instrument immediately and unplug the power plug from the power socket in case any of the following conditions occurs. After that, ask a qualified maintainer to repair the instrument.

- The power cable or the plug is worn or damaged.
- Unusual odor or smoke occurs.
- Some objects enters the product.
- The sound is interrupted suddenly when the product is used.
- If the product has any crack or damage.

WARNING! LITHIUM BATTERY PRODUCT

- Please use the charging cable included with the product. When using a power adapter for charging, ensure it meets the relevant safety standards or is certified in your region.
- The product contains a non-removable battery; do not attempt to replace it yourself to avoid damaging the battery or device. The battery should only be replaced by an authorized service center with the same model; using an incorrect battery may compromise safety measures (e.g., fire, explosion, battery leakage). Discontinue use if the battery becomes severely swollen.
- Do not throw the battery into fire or place it in a high-temperature oven, nor crush, cut, puncture, impact, or disassemble the battery mechanically, as this may cause it to explode.
- Do not expose the battery to excessive heat sources such as sunlight, fire, or ovens, as this may cause fire or explosion.
- Do not place the battery in extremely high-temperature or low-pressure environments, as this may lead to explosion or leakage of flammable liquids or gases.
- Do not dispose of old batteries in household waste; dispose of this device and used batteries according to local laws and regulations.

SRRC WARNING!

● To avoid interference with medical equipment, keep this device at least 15 cm away from implanted or personal medical devices (such as pacemakers, cochlear implants, hearing aids, etc.) during use. Please consult your physician or the device manufacturer for specific usage restrictions.

Do not modify the antenna or use non-original accessories. Do not use this device in locations where radio equipment is prohibited, in order to comply with regulations.

! NOTICE

To prevent you and others from having potential personal injuries, instrument damages, or financial losses, please strictly follow the cautions below, including but not limited to the followings:

ASSEMBLING

● Please correctly assemble the product as per the assembling instructions specified in the operation manual. In addition, the bolts must be tightened regularly, otherwise the instrument may be damaged or even personal injuries may be caused.

LOCATION

- Don't place the product at any unstable location, otherwise it may topple suddenly.
- Before moving the instrument, pull out all the cables to prevent them from being damaged or stumbling anyone and causing personal injuries.
- When installing the product, please confirm that the AC power socket is within reach. In case any problem or fault occurs, switch it off immediately and unplug the plug from the socket. Even the power switch is shut off, a small amount of electric current still goes to the product. If the product is not used for an extended period, please unplug the power cable from the AC power socket definitely.
- Please install the cables carefully. In case anyone is stumbled by any of the cables, the instrument may topple and give rise to personal injuries.
- Before moving the instrument, unplug the power plug from the socket and pull out all the power cables from the peripheral devices.

CONNECTION

- Switch off all devices before connecting the instrument to other devices. Before turning on or off any of such devices, turn down the volume to the minimum.
- Please definitely turn down the volume of any device to the minimum and increase it gradually when playing the instrument to reach ideal auditory experience.

OPERATION

- Don't insert your fingers or hands into the keyboard cover or any interval.
- Don't insert or drop any paper, metal or other object into the keyboard cover, panel, or keyboard interval, otherwise you and others may be subject to personal injuries, the instrument or other objects may be subject to damages or malfunctions.
- Don't place your body or any heavy object on the instrument; avoid excessive force when operating the buttons, switch, or jacks.
- Keep the small parts out of the reach of infants, otherwise such parts may be accidentally swallowed by them.
- Don't use the instrument/device or headphone with a high or uncomfortable volume for an extended period, otherwise this may result in permanent hearing impairment. Please seek medical advice immediately in case hearing impairment or tinnitus occurs.


MAINTENANCE

- Don't place any ethylene, plastic, or rubber object on the instrument, or the panel may discolor.
- Please use soft, dry or slightly wet cloth to clean the instrument. Don't use any paint thinner, solvent, alcohol, cleaning solution, or duster cloth soaked with chemical substances.

REMARKS: Moukey is not responsible for any damage, data loss or damage resulting from incorrect use or unauthorized transformation of the product.

PACKING

After opening the package, please check if the content inside is in good condition. If there's any missing parts, please contact the manufacturer for replacement.

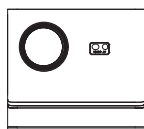


MTV30 Projection
Karaoke Machine



Remote



 Power cord



Instruction



wireless microphone*2

INSTALLING

The guidance below makes sure the long service life of the device. To prevent fire and electronic shock, please read the instruction carefully and be cautious about the warning below.




Do not install into places with poor ventilation



Do not install into places are hot and humid



Do not plugged the vent (Intake and exhaust)

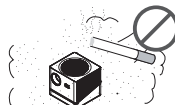

Do not install in smoky and dusty environment




Do not install nearby temperature sensor or smog sensor. It may cause the sensor failed



Do not install somewhere directly blown by the warm/cold wind of the A/C, or it may cause the breakdown because of the water vapor condensation


NOTE FOR HEAT DISSIPATION

To maintain the projector's performance and reliability, please leave at least 30cm space between the projector and the objects around.

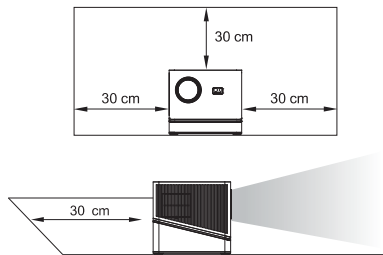


NOTE FOR EYES

The projector is with high brightness, please do not directly look into it or do not let the projector's light shine through the eyes, to avoid eyesight damage.

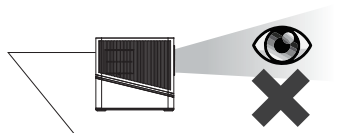

START USING

For best projection effect, we suggest you to choose the following method to install the projector.

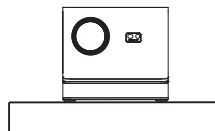


Horizontal Placement

Easy installation, Easy adjustment

! Caution

When the projector is hanged on the ceiling or in the back projection system, please change the projection mode

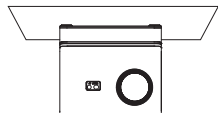

Hanger Installation


Saving space, Long durability

The hanger is not the attached accessory



FOCUS ADJUSTMENT

When the image is blurry, it is recommended to use the autofocus function of the remote control to improve the clarity of the image. If satisfactory clarity cannot be achieved, it can also be adjusted again through F+/F fine tuning. Alternatively, please move the product forward or backward in moderation.

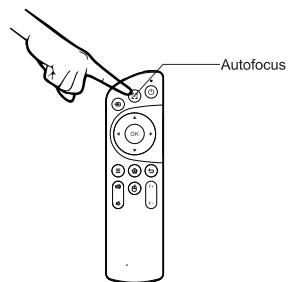


Fuzzy Image




Clear Image

 PARTS INFO

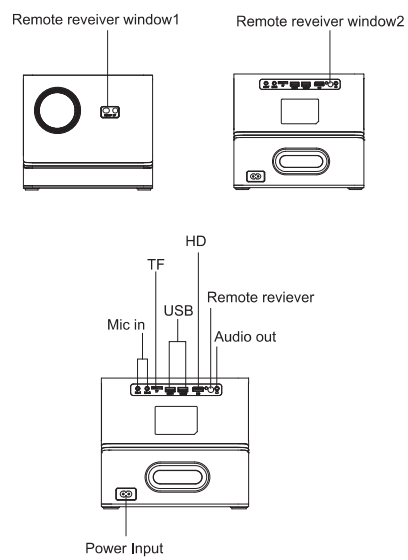

EXTERNAL DEVICE

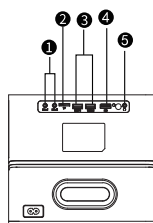 


- ① 
- ② 
- ③ 
- ④ 
- ⑤ 

REMOTE CONTROL

Audio version:

 Voice remote (Only for audio version)

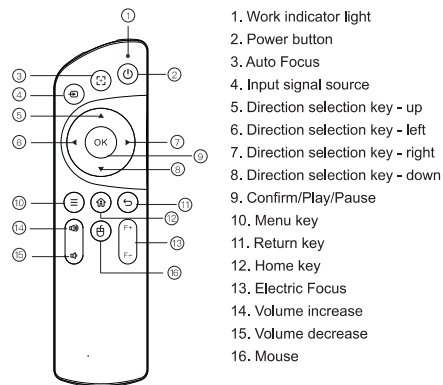


Auto pairing:

1. Press the voice button to enter audio pairing page;
2. Long press the left/right button ◀/▶ to enter auto pairing mode.

Manual pairing:

1. Press the home button "🏠", choose setting in the pop-up interface.
2. Enter the interface, choose settings, press OK to enter manual pairing mode.
3. Longpress the left/right button ◀/▶, the instruction light shines and enter pairing mode, search for the device and start pairing.

PROJECTION

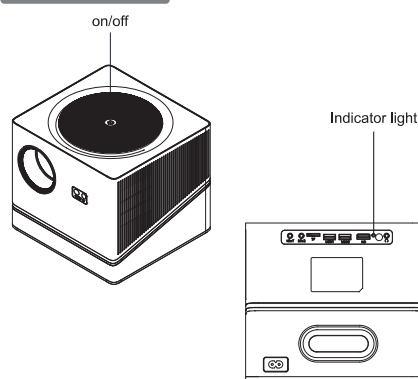


Indicator light status at the switch on/off position:


Standby: red light
Power on: green light

Press the voice button on the remote control to enter the pairing page;
Press and hold the left and right buttons on the remote control simultaneously;
Release the remote control indicator light until it flashes;
Wait for the automatic pairing to succeed before exiting the pairing page.

APPENDIX: COMPARISON TABLE OF PROJECTION DISTANCE AND SCREEN SIZE

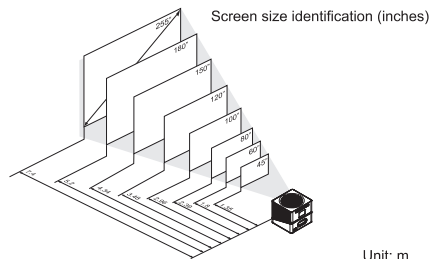

Screen Size (inches)	Screen Size length X height (m)		Projection distance (m)
45 inches	length 0.97m	height 0.54m	1.35m
60 inches	length 1.325m	height 0.74m	1.8m
80 inches	length 1.79m	height 1.01m	2.39m
100 inches	length 2.26m	height 1.25m	2.96m
120 inches	length 2.66m	height 1.49m	3.48m
150 inches	length 3.3m	height 1.865m	4.34m
180 inches	length 4.025m	height 2.275m	5.2m
255 inches	length 5.66m	height 3.18m	7.4m

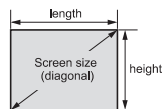


Design tolerance +/-8%

This table uses the front end of the lens and the center of the lens as the measuring points, and assumes that the projector is placed horizontally (the front and rear adjusters are fully drawn out).

KTV WIRELESS MICROPHONE USAGE

Operating instructions:

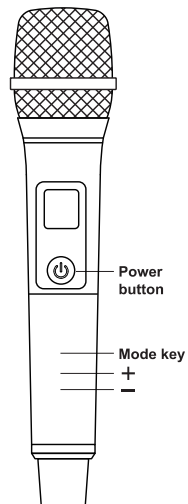

1. Power button:

On/Off:
Short press to turn on, long press for 1 second to turn off

Lock code operation:
Press and hold the power button and '+' button' simultaneously for 3 seconds to restart the audio power supply. After completion, the 'lock button' symbol will be displayed in the lower right corner.

Decoding operation:
Press and hold the power button and '-' button' simultaneously for 3 seconds to restart the audio power supply. After completion, the 'lock button' symbol in the lower right corner will turn off.

A/B channel switching:
Press and hold the power button and mode button simultaneously for 20 seconds

2. Mode key:

Short Press:
Switch between frequency and volume adjustment

Long Press:
Enter pairing mode

3. +/- key:

Adjust frequency or microphone volume

STATEMENT



WEEE

This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or shop where you bought this product.



CE

Manufacturer hereby declares that the This products is in compliance with Directive 2014/53/EU, and this product is allowed to be used in all EU member states.



FCC

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.



Projection Karaoke Machine

Model No.: MTV30

Input: 100-240V 50/60Hz 105W

FCC ID: 2AV7N-MTV

Radio Frequency band(s): 2402MHz-2480MHz

Maximum radio-frequency power transmitted: <4dBm

Email: service@moukeysound.com

Manufacturer: Guangzhou Rantion Technology Co., Ltd.

Address: Room 7002 and 7003, 7th Floor, Digital Entertainment Industrial Park, Greater Bay Area, No. 28 Huangpu Park West Road, Huangpu District, Guangzhou, China.

Made in China

UK REP Information for UK representatives
Name: GOAL REACH CONSULTING LTD
Address: Office 1029 3 Hardman Street
10th Floor, Spinningfields Manchester, UK
M3 3hf
E-mail: goalservice@hotmail.com

EU REP Information for EU representatives
Name: SUCCESS COURIER SL
Address: Calle Rio Tormes Num,1, planta
1, Derecha, Oficina 3, Fuenlabrada, Madrid,
28947 Spain
E-mail: successservice2@hotmail.com





FR
EMBALLAGES A SEPARER
ET A DEPOSER DANS LE
BAC DE TRI



WARNING
Cancer - www.P65Warnings.ca.gov.



FR
Cet appareil,
ses accessoires
et cordons
se recyclent



A DEPOSER
EN MAGASIN



A DEPOSER
EN DECHETERIE



OU



RECICLA
Al Atol

Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

V01 2504