

DONNER VIVA

STRINGLESS GUITAR

HVIN: VIVA

User Manual | Manuel d'Instructions | Bedienungsanleitung | Manuale d'Uso
Manual de Usuario | 取扱説明書 | 使用说明书

FREE LIVE FREE LIVES

 
 
 
 
CONTENTS

English	01-11
Français	12-22
Deutsch	23-33
Italiano	34-44
Español	45-55
日本語	56-65
中 文	66-74


PRODUCT INTRODUCTION

1.1 Packing list

- A. DONNER VIVA Stringless Guitar
- B. Carrying Bag
- C. Strap
- D. User Manual
- E. Quick Start Guide
- F. Type-C Charging/Data Cable

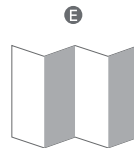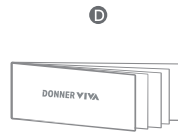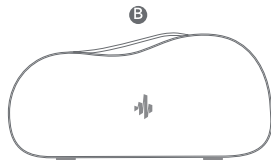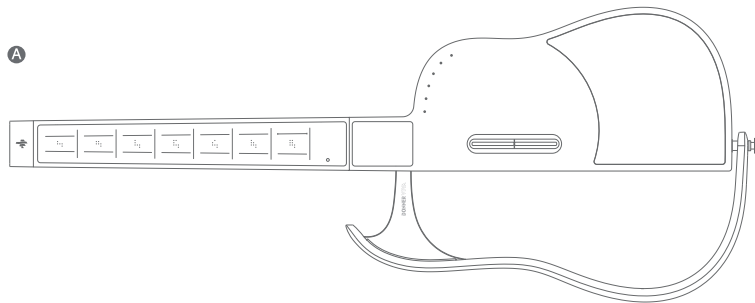

 1.2 Hardware and function diagram

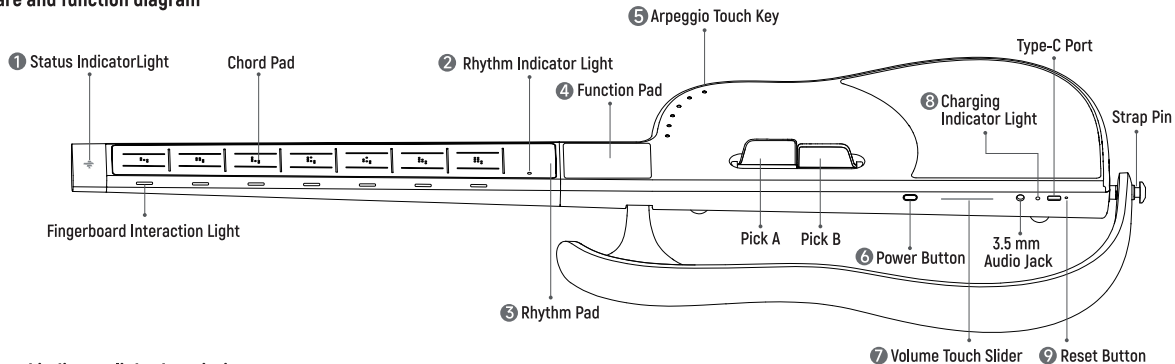

1.3 Button and indicator light description

Position	Indication	Status	Description
1 Status indicator light	Standby status	Not connected to the APP	White
		Connected to the APP	Blue light flashes briefly when connected successfully
		Low battery	When battery level is below 20%: red light flashes

Position	Indication	Status	Description
2 Rhythm Indicator Light	In use	Not in APP performance mode	Flashes at the frequency of the currently set bpm: white light flashes rapidly
		In APP performance mode	Flashes at the frequency of the default bpm of the current song: white light flashes rapidly

Position	Indication	Status	Description
③ Rhythm pad	In use	Drum machine on	Method 1: Press and hold the rhythm pad, then strum any pick downward to turn on the drum machine Method 2: When the drum machine is ready, press the rhythm pad and push any pick down to activate the fill and enter the rhythm
		Drum fill	When the drum machine is on, press and hold the rhythm pad and strum any pick downward to activate a drum fill
		Drum standby	When the drum machine is on, press and hold the rhythm pad and strum any pick upward to activate a drum fill and enter drum standby mode
④ Function Pad	In use	Change key	● Press and hold the function pad, all fret lights will brighten, and the fret light corresponding to the current key will flash; ● When the user presses a fret key to select a key, the root note of that key will sound. The corresponding fret light flashes twice while all other fret lights turn off; ● After the selected fret light finishes flashing, all fret lights return to their default display; ● If the function pad is released before a new fret key is selected, all fret lights return to their default display.
		Stop drum machine	Tap the function pad to stop the drum machine
		Stop drum machine after fill	Press and hold the function pad and strum any pick downward to complete a drum fill within the bar and stop the drum machine.
		Drum standby	When the drum machine is on, press and hold the rhythm pad and strum any pick upward to immediately enter drum standby mode.


Position	Indication	Status	Description
⑤ Arpeggio Touch Key	/	In use	When the chord pad is pressed, touch the arpeggio key to play a single note within the chord
⑥ Power Button	Press and hold for 1.5 seconds	In use/ in standby mode	Power on/power off
	Short press	In use	Check remaining battery level
	Short press while the drum machine is on	In use	Drum machine stops immediately
⑦ Volume Touch Slider	Slide	In use	Slide left to decrease volume / Slide right to increase volume
⑧ Charging Indicator Light	Charging	Charging	Red light stays on
		When fully charged	Green light stays on
⑨ Reset Button	In use	When unresponsive	Short press the Reset button to restart

PRODUCT USE


Basic operation instructions

A. Folding/unfolding sequence


A-1. Insert the guitar neck into the body

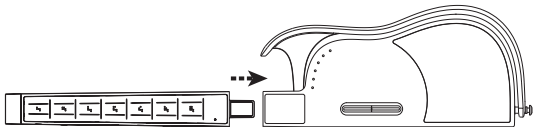

A-2. From the back, rotate the guitar support according to the mark to unfold it

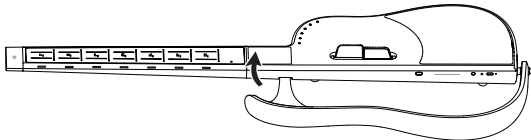


The guitar neck can be placed on the back of the body for magnetic storage

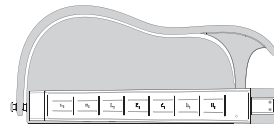


B. Powering on

Press and hold the power button for 1.5 seconds to turn on

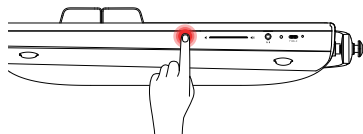


C. How to start playing

C-1. Press any chord on the chord pad with your left hand

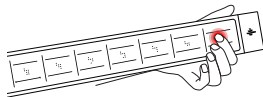


C-2. Strum any pick with your right hand to start playing

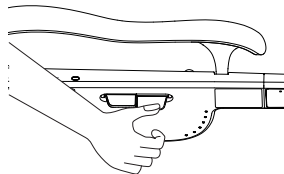

C-3. Touch any arpeggio key with your right hand to start playing



D. External devices

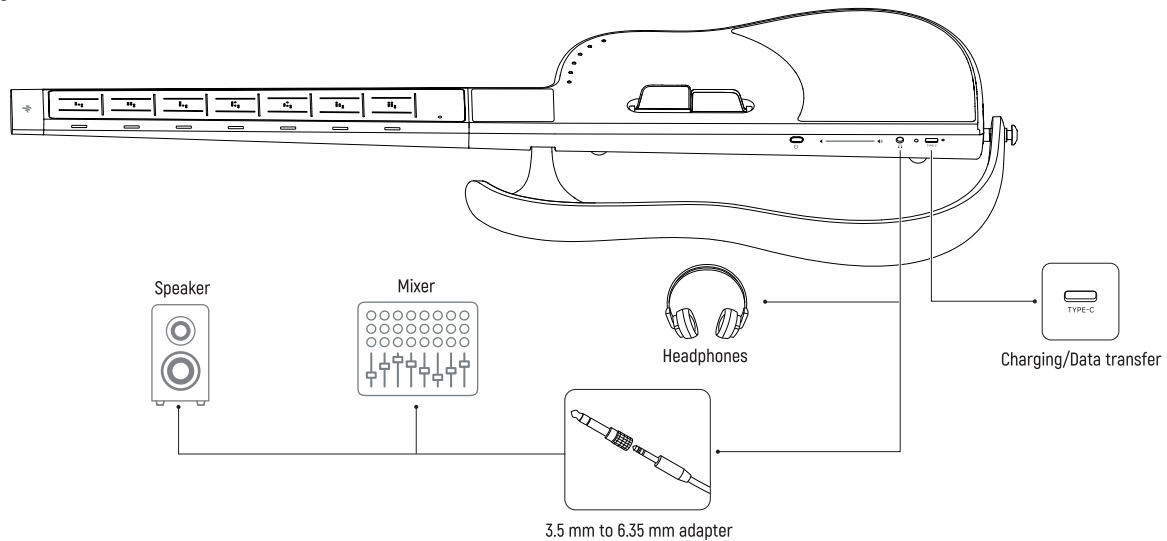

E. How to install the APP

Method 1: Open the Donner official website, scroll to the bottom, click "Donner Play" to enter the download page, and then select the version according to your mobile phone system

Official website: <https://www.donnermusic.com/>

APP Icon



APP download entry



Method 2: You can also search "Donner Play" directly in the app store to download

■ For iPhone users, search and download in the App Store



App Store

■ For Android users, search and download in the following application stores





Google Play

F. Device bluetooth connection

Step 1: Open the app and select the "Connections" page




Step 2: Tap the bluetooth button and select the device to connect. A prompt will appear when the connection is successful

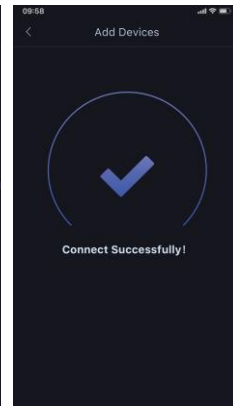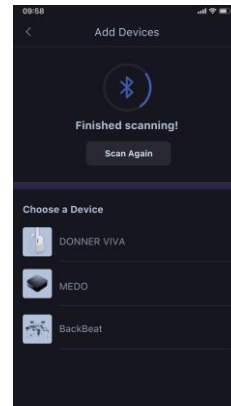

FEATURE AND PLAY MODE INTRODUCTION

A. Easy start with interactive playing


A-1. Select a song and tap Start to begin playing

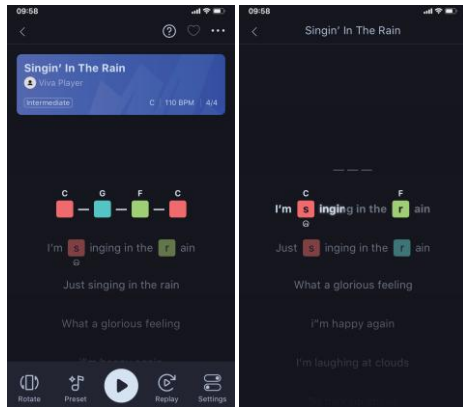

A-2. Follow the chord progression displayed with the lyrics. The fretboard lights will flash or brighten to indicate the next chord to be played




A-3. Press the fret position indicated by the light with your left hand, and strum the pick with your right hand to play

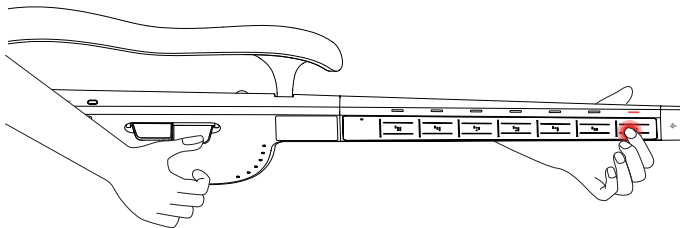

B. Three modes


B-1. Beginner mode: Guided playing without timing or rhythm. Each strum triggers chord progression jumps, allowing you to sing along freely.

- Select a song labeled "Beginner" to experience simple mode.

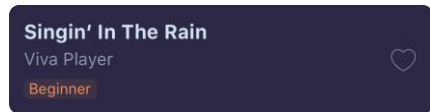


B-2. Intermediate mode: Rhythm-following mode with timing and progression. Each strum advances the chord chart, guiding the user to follow the lyrics. The drum machine and bass automatically start in sync with the lyrics while playing.

- Select a song labeled "Intermediate" to experience advanced mode.

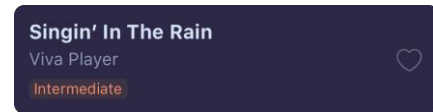

B-3. Original Track mode: Automatic progression mode where lyrics and accompaniment move forward automatically, faithfully reproducing the original song. The user follows the chord and lyric prompts to perform.

- Select a song labeled "Original Track" to experience original mode.

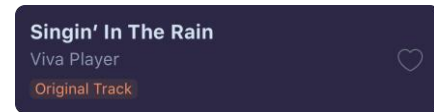

C. Scan the QR code below to explore more playing tutorials.



PRODUCT PARAMETERS

Product Specifications

Product Parameter List		
Body weight		1.96kg
Body dimensions	Unfolded	792*312*76mm
	Folded	433*192*76mm
Input port		Type-C
Output port		3.5 mm stereo
Battery voltage		7.6V
Battery capacity		2800mAh
Charging time	Fast charge	DC 5V / 3A ~ 3 hours
	Slow charge	DC 5V / 2A ~ 4 hours
Battery life	Built-in speaker	6 hours [at 70% volume]
	External speaker	16 hours
Speaker	Woofer	4Ω/15W
	Tweeter	4Ω/5W
Recommended adapter specifications		DC 5V/3A or 5V/2A
Radio frequency band		2402MHz-2480MHz
Maximum radio transmission power		<4dBm



WARNING

Failure to follow the warnings below may result in personal injury or serious equipment damage.

- Do not disassemble, modify, or repair this product without authorization.
- Avoid using the product at high volume for extended periods to prevent hearing damage.
- Do not place the product in direct sunlight, high temperatures, or near open flames.
- Maintain proper posture while playing to avoid shoulder, neck, or wrist strain from prolonged use.
- Do not leave the power adapter connected to the device for long periods to avoid overcharging or overheating.
- If the device emits excessive heat, an unusual odor, or smoke, stop using it immediately and disconnect the power supply.
- When charging, always use the officially recommended charger specifications.
- Please use the charging cable included with the product. When using a power adapter for charging, ensure it meets the relevant safety standards or is certified in your region.
- The product contains a non-removable battery; do not attempt to replace it yourself to avoid damaging the battery or device. The battery should only be replaced by an authorized service center with the same model; using an incorrect battery may compromise safety measures (e.g., fire, explosion, battery leakage). Discontinue use if the battery becomes severely swollen.
- Do not throw the battery into fire or place it in a high-temperature oven, nor crush, cut, puncture, impact, or disassemble the battery mechanically, as this may cause it to explode.
- Do not expose the battery to excessive heat sources such as sunlight, fire, or ovens, as this may cause fire or explosion.

- Do not place the battery in extremely high-temperature or low-pressure environments, as this may lead to explosion or leakage of flammable liquids or gases.
- Do not dispose of old batteries in household waste; dispose of this device and used batteries according to local laws and regulations.
- To avoid interference with medical equipment, keep this device at least 15 cm away from implanted or personal medical devices (such as pacemakers, cochlear implants, hearing aids, etc.) during use. Please consult your physician or the device manufacturer for specific usage restrictions.
- Do not modify the antenna or use non-original accessories. Do not use this device in locations where radio equipment is prohibited, in order to comply with regulations.

Product maintenance

Use a soft, dry cloth or a regular wet wipe for cleaning. Do not use paint thinner, solvents, alcohol, cleaning agents, or cloths soaked with chemical substances.

Note: Avoid getting water into the device during cleaning!

Warranty Information

Type	Warranty coverage	Warranty period
Main product unit	Main unit (excluding accessories)	One year



CAUTION

Failure to follow the cautions below may result in minor personal injury or device damage.

- If the device is not used for a long period (over 3 months), recharge the battery at least once to prevent damage caused by over-discharge.
- It is recommended to use and charge the battery between 20% and 80% to extend its lifespan.
- Avoid leaving the device unused for a long time after the battery is completely drained and powered off.
- Charge the device in a normal temperature environment and avoid charging under excessively hot or cold conditions.
- Unplug the adapter after charging is complete to prevent the battery from remaining under high voltage for an extended period.
- Avoid strong impact, dropping, or applying excessive pressure to the product during use.
- If left idle for an extended time, the device will automatically power off after 10 minutes.
- Keep this product out of reach of children and pets.
- When using headphones, maintain a moderate volume and avoid sudden volume spikes.
- Avoid using the product in dusty, oily, or excessively humid environments.



FCC STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



WARNING

This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or shop where you bought this product.



STATEMENT

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by GUANGZHOU RANTION TECHNOLOGY CO., LTD. is under license. Other trademarks and trade names are those of their respective owners.



CE STATEMENT

Manufacturer hereby declares that the This products is in compliance with Directive 2014/53/EU, and this product is allowed to be used in all EU member states.

ISED Canada Compliance Statement

This device complies with Innovation, Science and Economic Development Canada's License exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux normes RSS d'Innovation, Sciences et Développement économique Canada en matière d'exemption de licence. Son fonctionnement est soumis aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. Il peut être utilisé en conditions d'exposition portable sans restriction.








WARNING: Cancer risk from exposure to Lead. See www.P65Warnings.ca.gov


INTRODUCTION

1.1 Liste de Colisage

- A. DONNER VIVA Guitare sans cordes
- B. Sac de de transport
- C. Strap
- D. Manuel d'instructions
- E. Guide rapide
- F. Câble de charge/données Type-C

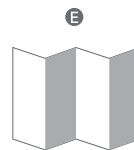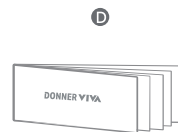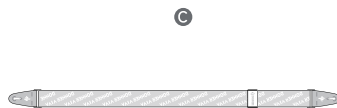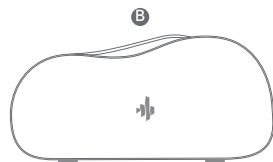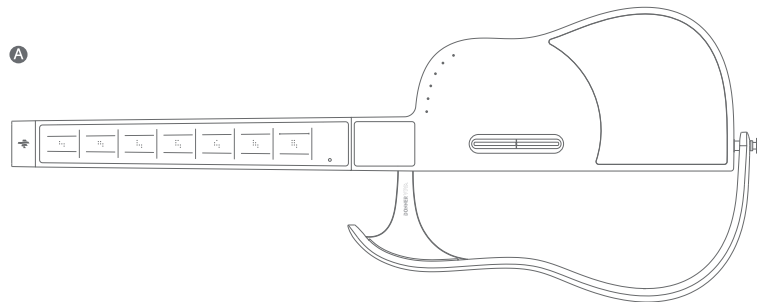

1.2 Schéma matériel et fonctionnel

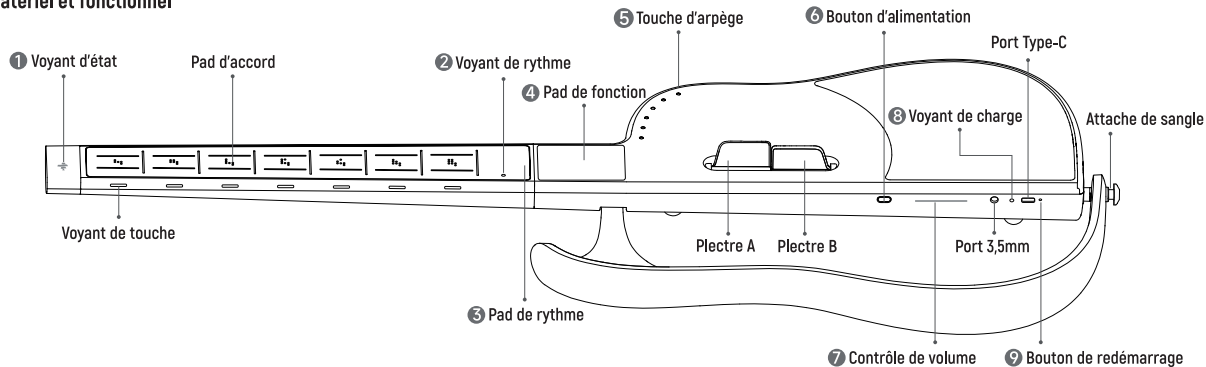

1.3 Description des touches et des voyants

Position	Indication	Indication d'état	Instructions
1 Voyant d'état	État de veille	Application non connectée	Blanc
		Application connectée	Une brève invite bleue en cas de succès
		Batterie faible	Lorsque le niveau de batterie est inférieur à 20% : Voyant rouge clignotant

Position	Indication	Indication d'état	Instructions
2 Voyant de rythme	En cours d'utilisation	Mode chant et jeu non activé dans l'application	Clignotement à la fréquence du tempo actuel (bpm): clignotement de la lumière blanche
		Mode chant et jeu activé de l'application	Clignotement au tempo par défaut (bpm) de la chanson actuelle: clignotement de la lumière blanche

Position	Indication	Indication d'état	Instructions
3 Pad de rythme	En cours d'utilisation	Boîte à rythmes activée	Méthode 1: Appuyez sur le pad de rythme et basculez n'importe quel plectre vers le bas pour activer la boîte à rythmes. Méthode 2: 1 Lorsque la boîte à rythmes est prête, appuyez sur le pad rythmique et poussez n'importe quel médiator vers le bas pour activer le fill et entrer dans le rythme
		Ajout des ornements à la boîte à rythmes	Lorsque la boîte à rythmes est activée, maintenez le pad de rythme enfoncé et basculez n'importe quel plectre vers le bas pour ajouter des ornements.
		Préparation de la boîte à rythmes	Lorsque la boîte à rythmes est activée, maintenez le pad de rythme enfoncé et basculez n'importe quel plectre vers le haut pour activer la boîte à rythmes en mode attente après avoir ajouté des ornements.
4 Pad de fonction	En cours d'utilisation	Changement de tonalité	● Appuyez longuement sur le pad de fonction jusqu'à ce que tous les voyants de frette s'allument et que le voyant de frette correspondant clignote; ● L'utilisateur appuie sur la touche de frette et sélectionne le mode correspondant, et la guitare émettra la note fondamentale associée à ce mode, tandis que le voyant de frette clignote deux fois et que les autres voyants de frette s'éteignent; ● Après que le voyant de frette sélectionné a clignoté, tous les voyants de frette reviennent à l'état par défaut; ● Si vous relâchez le pad de fonction avant de sélectionner la nouvelle touche de frette, tous les voyants de frette reviendront à l'état par défaut.
		Arrêt de la boîte à rythmes	Cliquez sur le pad de fonction pour arrêter la boîte à rythmes
		Arrêt après l'ajout des ornements à la boîte à rythmes	Maintenir le pad de fonction enfoncé tout en basculant n'importe quel plectre vers le bas effectuera un ajout des ornements dans la mesure et arrêtera la boîte à rythmes.
		Préparation de la boîte à rythmes	Lorsque la boîte à rythmes est activée, maintenez le pad de rythme enfoncé et basculez n'importe quel plectre vers le haut pour rendre immédiatement la boîte à rythmes en mode veille.


Position	Indication	Indication d'état	Instructions
5 Touche d'arpège	/	En cours d'utilisation	Appuyez sur le pad d'accord et touchez la touche d'arpège pour émettre une note unique de l'accord.
6 Bouton d'alimentation	Appuyez longuement pendant 1,5 seconde	En cours d'utilisation / En veille	Allumer/Éteindre
	Appuyez brièvement	En cours d'utilisation	Vérifiez le niveau de batterie restant
	Appuyez brièvement pendant la boîte à rythmes activée.	En cours d'utilisation	La boîte à rythmes s'arrête immédiatement.
7 Contrôle de volume	Faites glisser	En cours d'utilisation	Faites glisser vers la gauche pour diminuer le volume / Faites glisser vers la droite pour augmenter le volume
8 Voyant de charge	En charge	En charge	Le voyant rouge reste allumé
		Charge complète	Le voyant vert reste allumé
9 Bouton de redémarrage	En cours d'utilisation	Impossible à jouer	Appuyez brièvement sur le bouton Reset pour redémarrer

INSTRUCTIONS


Instructions de base

A. Ordre de pliage/dépliage


A-1. Insérez le manche dans le corps de l'instrument.

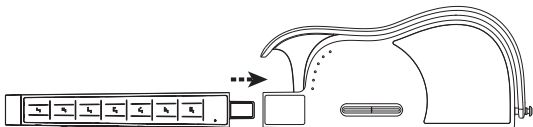

A-2. Tournez et dépliez le support de l'instrument depuis l'arrière selon l'indication.

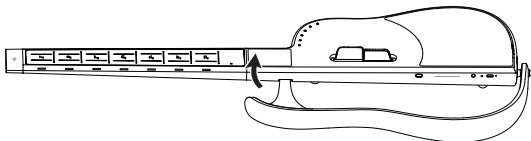


Le manche peut être placé à l'arrière du corps de l'instrument pour un rangement magnétique.

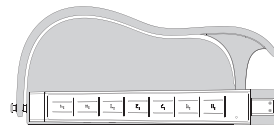


B. Allumez

Appuyez longuement sur le bouton d'alimentation pendant 1,5 seconde pour allumer.

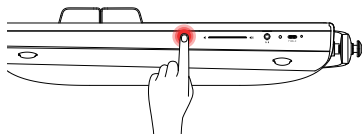


C. Comment jouer


C-1. Appuyez sur n'importe quel accord sur le pad d'accords avec la main gauche.

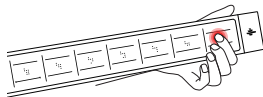

C-2. Basculez n'importe quel plectre avec la main droite pour jouer.

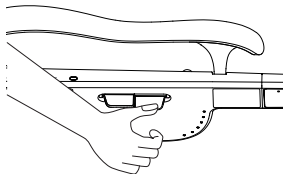

C-3. Touchez n'importe quelle touche d'arpège avec la main droite pour jouer.

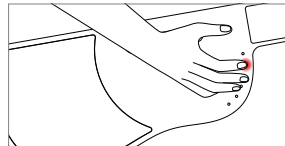

D. Périphériques externes

