

Monkey



Audio Speaker

MPS5

USER MANUAL

CONTENTS

OPERATION SAFETY INSTRUCTIONS AND CAUTIONS	01-03
PACKAGE CONTENTS	03
PARAMETERS	04
BUTTON CONFIGURATION	04-06
BT PAIRING & TWS PAIRING	07
CHARGING	07
TF / USB / AUX MODE	07
POWER BANK MODE	07
WIRELESS MICROPHONE MODE	07

OPERATION SAFETY INSTRUCTIONS AND CAUTIONS



Please read the contents below carefully before use.

Children, in particular, should be instructed by their guardians to know how to use and operate the products before use

Warning

To avoid serious injuries or death resulting from electric shock, short circuit, damages, fire, or other dangers, please strictly follow the cautions below, including but not limited to the following conditions:

Power/AC power adapter

- The AC power adapter is especially designed for Donner electronic products. Don't use it for other purposes.
- It is for indoor uses only. Don't use it in any humid condition.
- Don't place the power cable nearby any heater or heating radiator. Besides, don't excessively bend, damage the power cable, or put any heavy object on it.
- Only the rated voltage specified for the product can be used. The required voltage is indicated on the nameplate of the product.
- Only the adapter specified can be used. The product may be damaged or overheated if any inappropriate adapter is used.
- Please inspect the plug and clear the dirt or dust on the plug on a regular basis.

Don't repair or replace parts without authorization

- The product has no part for any user to repair without authorization. Don't disassemble it or attempt to dismantle or transform the interior components in any form. In case any unusual condition occurs, please stop using it immediately and contact your distributor or Donner's customer service center.

Water resistance warning

- Don't use the product in rain, humid condition or nearby water; don't put any vessel containing liquid (e.g., a vase, bottle, or glass) on it, or the liquid may splash into any inlet. In case any liquid splashes into the product, please switch it off immediately and unplug the power cable from the AC power socket. After that, ask a qualified maintainer to repair the instrument.
- Don't plug, unplug the power plug with a wet hand.

Fire protection warning

- Don't place any burning object (e.g., a candle) on the product. A burning object may topple and result in a fire hazard.

Switch it off if any unusual condition or fault occurs

--Switch off the instrument immediately and unplug the power plug from the power socket in case any of the following conditions occurs. After that, ask a qualified maintainer to repair the instrument.

- The power cable or the plug is worn or damaged.
- Unusual odor or smoke occurs.
- Some objects enters the product.
- The sound is interrupted suddenly when the product is used.
- If the product has any crack or damage.

Notice

To prevent you and others from having potential personal injuries, instrument damages, or financial losses, please strictly follow the cautions below, including but not limited to the followings:

Assembling

- Please correctly assemble the product as per the assembling instructions specified in the operation manual. In addition, the bolts must be tightened regularly, otherwise the instrument may be damaged or even personal injuries may be caused.

Location

- Don't place the product at any unstable location, otherwise it may topple suddenly.
- Before moving the instrument, pull out all the cables to prevent them from being damaged or stumbling anyone and causing personal injuries.
- When installing the product, please confirm that the AC power socket is within reach. In case any problem or fault occurs, switch it off immediately and unplug the plug from the socket. Even the power switch is shut off, a small amount of electric current still goes to the product. If the product is not used for an extended period, please unplug the power cable from the AC power socket definitely.
- Please install the cables carefully. In case anyone is stumbled by any of the cables, the instrument may topple and give rise to personal injuries.
- Before moving the instrument, unplug the power plug from the socket and pull out all the power cables from the peripheral devices.

Connection

- Switch off all devices before connecting the instrument to other devices. Before turning on or off any of such devices, turn down the volume to the minimum.
- Please definitely turn down the volume of any device to the minimum and increase it gradually when playing the instrument to reach ideal auditory experience.

Operation

- Don't insert your fingers or hands into the keyboard cover or any interval.
- Don't insert or drop any paper, metal or other object into the keyboard cover, panel, or keyboard interval, otherwise you and others may be subject to personal injuries, the instrument or other objects may be subject to damages or malfunctions.
- Don't place your body or any heavy object on the instrument; avoid excessive force when operating the buttons, switch, or jacks.
- Keep the small parts out of the reach of infants, otherwise such parts may be accidentally swallowed by them.
- Don't use the instrument/device or headphone with a high or uncomfortable volume for an extended period, otherwise this may result in permanent hearing impairment. Please seek medical advice immediately in case hearing impairment or tinnitus occurs.

 
Maintenance

- Don't place any ethylene, plastic, or rubber object on the instrument, or the panel may discolor.

●Please use soft, dry or slightly wet cloth to clean the instrument. Don't use any paint thinner, solvent, alcohol, cleaning solution, or duster cloth soaked with chemical substances.

Remarks: Donner is not responsible for any damage, data loss or damage resulting from incorrect use or unauthorized transformation of the product.

PACKAGE CONTENTS

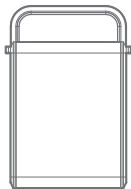


Wireless speaker *1



Wireless microphone *2



 3.5mm Aux cable*1



Type C cable *1



Strap *1





User manual *1

PARAMETERS

BT Version	5.3
Output Power	100W
Frequency Response	40Hz-18KHz
BT Distance	≥12 m
Battery Capacity	11.1V, 2000mAh
DC Input	TypeC 5V DC 3A
ChargeTime	≤4 hours
Playing Time	83 hours (@50% Volume)
Dimension	187*95*221mm
Weight	1995g
Radio Frequency band(s)	2402MHz-2480MHz
Maximum radio-frequency power transmitted	< 4dBm

  BUTTON CONFIGURATION

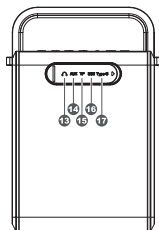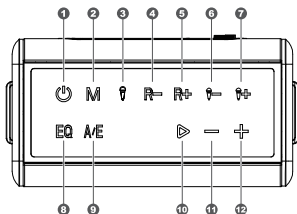

- ❶ Power ON/OFF & RGB Light
- ❷ Mode/TWS Connection
- ❸ Microphone ON/OFF
- ❹ Echo Volume -
- ❺ Echo Volume +
- ❻ Microphone volume -
- ❼ Microphone volume +
- ❽ EQ Mode
- ❾ Karaoke ON/OFF

- ❿ Play / Puase / Answer / Reject / Redail
- ⓫ Volume- / Previous Track
- ⓬ Volume+ / Next Track
- ⓭ 3.5mm Headphone out
- ⓮ Aux-In
- ⓯ TF Slot
- ⓰ USB-A
- ⓱ Type-C

BUTTON CONFIGURATION

Button	Function	Operation	LED Indication
 POWER	Power On	Short press 1'S to power on the speaker, if there is no TF/USB/Aux in, speaker will entering BT Mod	Prompt will be heard, Blue LED quick flashing
	Power Off	Hold the button for 2'S to power off the speaker	
	RGB Light	Short press change RGB light flashing mode	
	Force Shut down	Hold two keys to force shut down the speaker once it malfunction	
 MODE	Mode	Short press to change the playing mode of BT/TF/USB/Aux	Prompt will be heard
	BT Disconnect	Hold the button for 3'S to disconnect the BT connection	Prompt will be heard
	Reset	Hold the button for 8' S to reset the speaker and clean all memory.	Prompt will be heard
	TWS	Double press the M button to enter TWS pairing mode, or Double press it again to quit TwS pairing mode	Prompt will be heard
	Vocal Elimination	Press the button to eliminate the original vocal of song to enable the Karaoke function	
	EQ Mode	The default EQ is Pop, press it again switch to 3D or Bass sound effect	Prompt can be heard Pop: LED off 3D: White Bass: Green
	Energy saving mode	The default EQ is Pop, press it again switch to 3D or Bass sound effect	
	Microphone ON / OFF	Press the button to active wireless microphone connection. Or press it again to disconnect the wireless microphone	Connected: Green Disconnect: Off

BUTTON CONFIGURATION

Button	Function	Operation	LED Indication
	Play / Pause	In BT/TF/USB playing mode press it to play or pause the music been played	BT: Blue LED stay on TF/USB: Blue LED flashing
		In Aux play mode press to mute the music been played	Playing: Blue LED stay on Pause: Flashing
	Answer the phone	Or hold for 2'S reject the phone	
	Reject	Or press it 1'S to hang up the phone	
	Hang up	Or double click it to redail the last phone number	
	Volume Down	Press it to decrease the volume	
	Previous Track	Hold it 2'S back to previous song	
	Volume Up	Press it to increase the volume	
	Next Track	Hold it 2'S forward to next song	
	Volume- of Echo	Press it to decrease the Echo volume of Microphone	
	Volume+ of Echo	Press it to increase the Echo volume of Microphone	
	Volume- of microphone	Press it to decrease the volume of wireless microphone	
	Volume+ of microphone	Press it to increase the volume of wireless microphone	

BT PAIRING & TWS PAIRING

1. Power on the speaker and the blue LED will flashing, the speaker is waiting for BT pairing.
2. Go to your device and Bluetooth setting and the mode of "MPS5" to connect.
3. If you need two speakers TwS connection, please make sure the two speakers are no connect with any other device, or your can clean all memory of them by hold the Mode button for 8' S.
4. Choose one speaker and double click Mode button, this speaker will work as Primary and orange TWS LED will quick flashing, BT LED quick flashing.
5. Another one speaker no need any operation, it's work as Secondary and connect with Primay automatically.
6. Once two speaker TWS paired, both TWS LED will turn green. Secondary BT LED will turn off, but the Primary BT LED keep flashing and waiting for BT connection.
7. You can double click Mode button on either speakers again to quit the TWS pairing mode.

CHARGING

- The red LED will flashing if the speaker is low battery, please charge the speker by the type-c cable in the package.
- Once the battery fully charged, the red LED will turn off.

TF / USB / AUX MODE

- When there is TF card or USB or Aux cable insert in, speaker will switch to TF/USB/Aux playing mode automatically and paly the music source in the device.
- You can select the playing mode by simply press Mode button.

POWER BANK MODE

- The speaker will power off automatically in 10 minutes if there is no BT connection, it is energy save mode.
- You can hold the "EQ" button for 8'S to quit energy save mode, and active power bank mode.

WIRELESS MICROPHONE MODE

- Hold the Power button on the wireless microphone to turn on it, the microphone will connect with the speaker automatically.
- If microphone not connected, please press the button to active the "  " wireless microphone connection.
- You press the "  " button to turn off the wireless microphone connection.



FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment .

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Manufacturer hereby, declares that the This products is in compliance with Directive 2014/53/EU, and this product is allowed to be used in all EU member states.



<EN> WARNING: This symbol means the product must not be discarded as household waste , and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or shop where you bought this product.



WARNING:

Cancer risk from exposure to lead. See www.P65Warnings.ca.gov.

ISED Warning

This device complies with Innovation, Science and Economic Development Canada's licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux normes RSS d'Innovation, Sciences et Développement économique Canada en matière d'exemption de licence. Son fonctionnement est soumis aux deux conditions suivantes:

- (1) Cet appareil ne doit pas provoquer d'interférences; et
- (2) Cet appareil doit accepter toute interférence, y compris celles qui peuvent entraîner un fonctionnement indésirable de l'appareil.

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF.
L'appareil peut être utilisé sans restriction dans des conditions d'exposition portables.



● To avoid interference with medical equipment, keep this device at least 15 cm away from implanted or personal medical devices (such as pacemakers, cochlear implants, hearing aids, etc.) during use. Please consult your physician or the device manufacturer for specific usage restrictions.

● Do not modify the antenna or use non-original accessories. Do not use this device in locations where radio equipment is prohibited, in order to comply with regulations.



Warning! Lithium battery product

● Please use the charging cable included with the product. When using a power adapter for charging, ensure it meets the relevant safety standards or is certified in your region.

● The product contains a non-removable battery; do not attempt to replace it yourself to avoid damaging the battery or device. The battery should only be replaced by an authorized service center with the same model; using an incorrect battery may compromise safety measures (e.g., fire, explosion, battery leakage). Discontinue use if the battery becomes severely swollen.

● Do not throw the battery into fire or place it in a high-temperature oven, nor crush, cut, puncture, impact, or disassemble the battery mechanically, as this may cause it to explode.

● Do not expose the battery to excessive heat sources such as sunlight, fire, or ovens, as this may cause fire or explosion.

● Do not place the battery in extremely high-temperature or low-pressure environments, as this may lead to explosion or leakage of flammable liquids or gases.

● Do not dispose of old batteries in household waste; dispose of this device and used batteries according to local laws and regulations.

<FR> Avertissement ! Produit à batterie au lithium

● Veuillez utiliser le câble de charge fourni avec le produit. Lors de l'utilisation d'un adaptateur secteur pour la charge, assurez-vous qu'il répond aux normes de sécurité correspondantes ou qu'il est certifié dans votre région.

● Le produit contient une batterie non amovible; n'essayez pas de la remplacer vous-même afin d'éviter d'endommager la batterie ou l'appareil. La batterie ne doit être remplacée que par un centre de service agréé avec le même modèle; l'utilisation d'une batterie incorrecte peut compromettre les mesures de sécurité (par exemple, incendie, explosion, fuite de la batterie). Cessez d'utiliser l'appareil si la batterie est gravement gonflée.

● Ne jetez pas la batterie au feu et ne la placez pas dans un four à haute température, ne l'écrasez pas, ne la coupez pas, ne la percez pas, ne la heurtez pas et ne la démontez pas mécaniquement, car cela pourrait provoquer une explosion.

● N'exposez pas la batterie à des sources de chaleur excessive telles que la lumière du soleil, le feu ou les fours, car cela pourrait provoquer un incendie ou une explosion.

● Ne placez pas la batterie dans des environnements à température extrêmement élevée ou à basse pression, car cela pourrait entraîner une explosion ou une fuite de liquides ou de gaz inflammables.

● Ne jetez pas les vieilles batteries avec les déchets ménagers; éliminez cet appareil et les batteries usagées conformément aux lois et réglementations locales.

MouKey

Audio Speaker

Model: MPS5

Input: 5V --- 3A

FCC ID: 2AV7N-V108SERIES

IC: 28214-V108SERIES

Email: service@moukeysound.com

Copyright © 2025 Donner LLC. All rights reserved.

Made in China VA 2508



Manufacturer: Guangzhou Rantion Technology Co., Ltd.

Address: Room 7002 and 7003, 7th Floor, Digital Entertainment Industrial Park, Greater Bay Area, No. 28 Huangpu Park West Road, Huangpu District, Guangzhou, China.

UK REP Information for UK representatives

Name: GOAL REACH CONSULTING LTD

Address: Office 1029 3 hardman street 10th floor,
spinningfields manchester, UK m3 3hf

E-mail: goalservice@hotmail.com

EU REP Information for EU representatives

Name: SUCCESS COURIER SL

Address: Calle Rio Tormes Num.1, planta 1, Derecha, Oficina 3,
Fuenlabrada, madrid, 28947 Spain

E-mail: successservice2@hotmail.com

