



## KTSL-WS1-UV-SG BLUETOOTH WIRELESS KEYPAD

### INSTALLATION AND OPERATING INSTRUCTIONS

**Read and understand all warnings and notes stated below before proceeding with installation.**

- Operating temperature: 0°C/32°F to 40°C/104°F
- Do not expose directly to water.
- Not for outdoor use.

**Warning:** Install/use in accordance with appropriate electrical codes and regulations.


**Warning:** If you are not sure about any part of these instructions, consult a qualified electrician.

**WARNING:** TO AVOID FIRE, SHOCK, OR DEATH, TURN OFF THE POWER AT THE CIRCUIT BREAKER BEFORE YOU INSTALL THIS CONTROLLER.

**Avertissement:** pour éviter un incendie, un choc électrique ou la mort, éteignez l'alimentation et le disjoncteur avant d'installer ce contrôleur.

**Cautions:**


- Do not attempt to disassemble or repair.
- Clean outer surface with a damp cloth only.

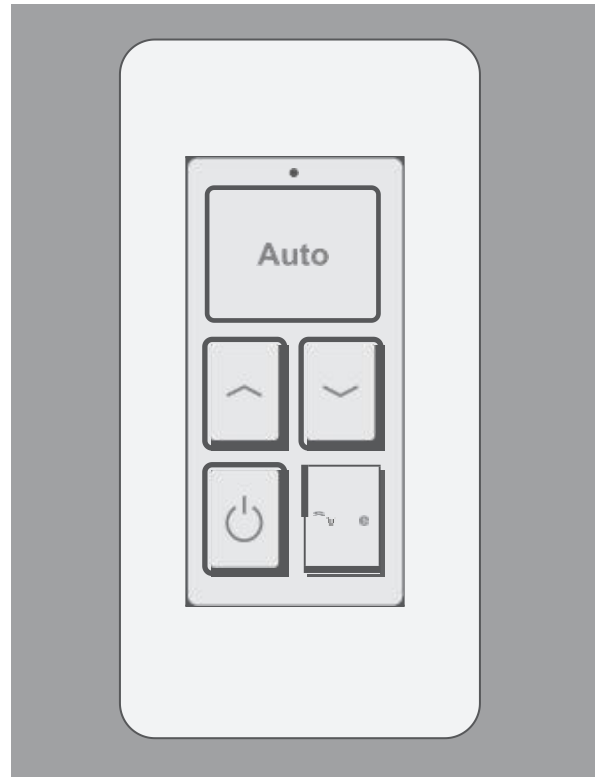

### INSTALLING

1. Ensure that the power to wall box is off.
2. Wire the wall switch according to Wiring Diagram A.
3. Insert wall switch into wall box and mount using the provided screws.
4. Attach provided faceplate into place.
5. Restore power to the wall box.

#### WIRING DIAGRAM A

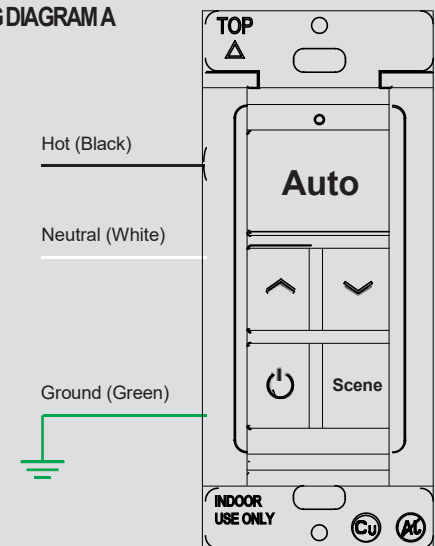

Wire Strip Length: 16mm (5.8")

Install the device in a standard outlet box

## COMMISSIONING

1. Search for and download the SmartLoop app (logo pictured to right) from the App store or Google Play store.
2. The Switches page is used to program the keypads and timekeepers in a region. Press **Switches** in the bottom pane to access this page.
3. Press + to enter the Scanning page.
4. Press and hold **Auto** and ^ for about 2 seconds to enter pairing mode. The Added Switches counter will then increment.
5. Press **Done**.
6. Press the gear icon to open settings for a keypad.
7. Press **Lights** or **Groups**, then check ☒ the desired light/group. Only one light/group can be assigned per keypad.
8. Press **Next Step**.
9. Press up to 3 desired scene names to program to the keypad **Scene** button.
10. Press Save.




SmartLoop app

### SmartLoop Website



For further system commissioning information, please scan the QR code to access the Smart Loop user manual.

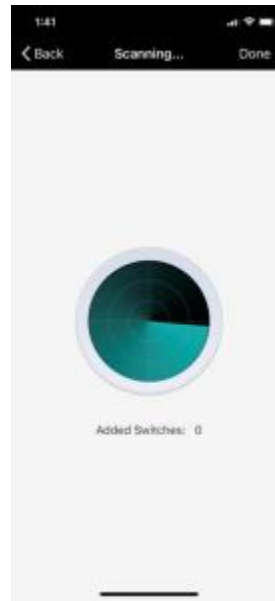

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

---

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

**SAVE THESE INSTRUCTIONS**