

zingbird®

www.zingbird.store

T62

User Manual

TURE WIRELESS
EARBUDS

Contents

1. Customer Service & Packing List.....

01

2. Product Overview & Parameters.....

02

3. How to Pair with Your Devices / Reset.....

03-04

4. How to Wear Your Earbuds.....

05

5. How to Fit Your Ears.....

05

6. Power on / Power Off.....

06

7. How to Charge.....

07

8. Touch Control Music/Call/Voice Assistance.....

08

9. Touch Control (Use one Earbud).....

09

10. How to sync volume on Android.....

09

11. Battery Warning, Storage and Maintenance.....

10

12. FCC Caution.....

11-12

13. FAQ.....

13-16

Email: T62@zingbird.store

Web: www.zingbird.store

(If you have any issues,
please feel free to contact us,
and we will reply within 24hrs.)

Packing List

Charging Case * 1

Earbuds * 1 Pair (L&R)

Ear Tips * 3 Pairs
(1 pair on the earbuds)

Type-C Charging Cable * 1

User Manual * 1

Note: Please remove protective films of the charging pins before using it.

01

Overview

Charging Contact

LED Indicator

Touch Control Area

Charging Pin on Case

Charging Case Power Display

Type-C Charging Port

Product Parameters

Model No.: T62

Charging Port: Type-C

Input: 5V = 1A

Support Profile: AZDRAWRCP

Earbuds: 30mAh 3.7V, 0.11Wh

Charging Case: 300mAh 3.7V, 1.11Wh

Charging Time: 1h for earbuds;
1h~1.1h for charging case

Transmission Range: 33 feet
(without obstacle)

02

How to Pair with Your Devices?

Stereo Mode

(First to use – please ensure that both the earbuds and the charging case are fully charged.)

① Take out both earbuds from the case.
(Both earbuds will automatically power on and enter pairing mode within 10s)

② Turn on Bluetooth on your device(Phone/PC), select "T62" to connect the earbud successfully.

Reset

If only one earbud is working or the earbuds fail to pair or connect, reset them as follows:
1. Turn off Bluetooth on all devices near the earbuds and remove/forget [T62] records from your device.
2. Put both earbuds in the charging case and ensure that they are charging.
3. Tap both earbuds quickly 5 times to clear the pairing record with the last device. (Both earbuds' LEDs will flash green and white lights 3 times).

03

Single Earbud Mode

① Take out one earbud from the charging case.

② Turn on Bluetooth on your device, select "T62" to connect the earbud successfully.

Reset

If only one earbud is working or the earbuds fail to pair or connect, reset them as follows:
1. Turn off Bluetooth on all devices near the earbuds and remove/forget [T62] records from your device.
2. Put both earbuds in the charging case and ensure that they are charging.
3. Tap both earbuds quickly 5 times to clear the pairing record with the last device. (Both earbuds' LEDs will flash green and white lights 3 times).

04

How to Wear Your Earbuds?

Step 1:

Make sure the ear tips are facing down. Then place the earbuds in your ears.

Step 2:

Rotate the earbuds back to the auricle side to fit snugly. Ear tip facing up is the wrong way to wear earbuds.

How to Fit Your Ears?

Step 1:

Select the appropriate eartip size (small, medium, large) and place it on the earbuds.

Step 2:

Place the ear tips firmly on the earbuds. There should be no gaps between the ear tip and earbuds.
(Medium-sized ear tips are pre-mounted on earbuds.)

① Place eartips onto the earbuds

② Firmly push eartips onto the earbuds

05

Power On and Power Off

Power On

Auto Power On: Open the charging case, earbuds will automatically power on.

Manual Power On: Long tap on the touch control area for 2s, earbuds will power on and earbud light will flash white 1s.

Power Off

Auto Power Off: Put both earbuds in the charging case, and closing the case, earbuds will automatically power off .

Note: This method just for earbuds doesn't pair with your device yet.

Manual Power Off: Long tap on either earbud for 5s, the light on earbuds will flash green, then earbud power off.

06

How to Charge?

Earbuds Charging:

Place both earbuds in the charging case and close the lid of the case. (Earbuds are charging, the LED indicator will flash light green; Earbuds are fully charged, the green light will go off)

Charging Case Charging:

Please use the included Type-C USB cable to charge the charging case. (When charging, the digital display will flash and show the real-time battery level.)

07

Touch Control

Use Two Earbuds

MUSIC

Play/Pause: Single tap

Next Track: Double tap R earbud

Last Track: Double tap L earbud

Volume +: Long tap R earbud

Volume -: Long tap L earbud

CALL

Answer Call: Double tap

End Call: Double tap

Reject Call: Long press 2s

VOICE ASSISTANCE

Activate Siri or other voice assistants: Triple tap left or right earbuds.

① "L" or "R" Earbud Both OK

② Previous Track Music: Double tap

③ Next Track Music: Double tap

④ Single Tap

⑤ Double Tap

⑥ Triple Tap

⑦ Long Tap

08

Use One Earbud

Left Earbud

Right Earbud

Previous Track Music: Double tap

Next Track Music: Double tap

How to sync volume on Android?

1. Find "Settings" on the phone

2. Enable "Bluetooth"

3. Connect with "T62"

4. Click on the "Set button"

5. Enable the option "Sync volume with phone"

12:13

Settings search

Bluetooth on

T62

Settings search

Bluetooth on

T62

09

Battery Warning

Using the wrong battery can cause fire and other hazards (for example, in the case of semimetallic battery types).
1. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of batterythat can result in an explosion.
2. Do not leaving a battery in an extremely high temperature surrounding environment than can result in an explosion or the leakage of flammable liquid or gas.
3. A battery subjected to extremely low air pressure that may result in an explosion or thleakage of flammable liquid or gas.

Storage and Maintenance

1. If the earbuds have been unused for more than 3 months, we recommend that you charge them.

2. Please use chargers that are FCC (Federal Communications).

3. Do not disassemble earbuds.

4. Adult supervision is required for children aged 6 and under.

5. Do not expose earbuds to high or low temperature. do not use the earbuds in thunderstorm storm. Avoid falling or violent impact of the device. Keep the device away from fire,dn not put.

10

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is a guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to attempt to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase separation between equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

11

FAQ

(You can refer to the following solutions. If you cannot solve them, please contact us by email, we will support you throughout)

What should I do if my earbuds are not charging?
① Check whether there are dirty in the charging pins of the earbuds and the charging case.

Poor sound quality, seems unsatisfactory?
① The mesh of earbuds may be dirty.
Please use a fine cotton swab dipped in a small amount of alcohol to wipe the mesh of earbuds.

The size of the choosing eartips and earbuds wearing direction may be unsuitable.
Please choose the right eartips and adjust earbuds wearing direction.

How to avoid mistaken touch?
Please do not let the touch area touch other objects (such as hair, desktops, hats, headbands, etc.)

Why do my earbuds keep falling? How to avoid it?
① Your device does not have the wrong ear caps, pls choose the ear-tips that fit your ear size.
② The earbuds are not worn in the right way, pls put the earbuds under your ear and rotate it to match the right angle.

12

Signal Lag

① Please check whether there is interference in the surrounding environment.
② Check whether the earbuds are low power state and high temperature state.
③ The use distance is not recommended to exceed 10 meters.
④ If none of the above conditions exist, please restart the device and earbuds, and re-pair them.

Volume up and down automatically
Please make sure the surface of the touch area is sweaty, wipe with dry paper and try again.
② Please note that the touch area please do not touch other objects to avoid false touch (such as hair, desktop, hat, headband, etc.)

What are the possible reasons why earbuds and computers don't pair?
① Your device does not have Bluetooth function, you can connect a Bluetooth converter externally.
② The Bluetooth version of the computer is too low, try upgrading the Bluetooth.

13

Why is the volume of my earbuds small?

① Please check whether the sound output hole is blocked.
② Try to adjust the device volume and earbuds volume to the maximum, see if it works.

The call is not clear/unable to speak.
① Make a master-slave switch to confirm whether the two earbuds talk the same.
② Confirm that the main earbud is worn, the microphone function only works in the main headset. (The host will switch between master and slave after putting it in the case and showing the lid.)
③ If you use the conference APP, it may be poor compatibility.

14

The image displays a series of 16 instructional panels for the JBL Tune 760NC headphones, arranged in a horizontal row. Each panel is numbered and contains specific instructions, diagrams, and icons.

- Panel 1: Touch Control** - Shows the touch controls for music playback (Play/Pause, Next Track, Last Track, Volume +/-) and call management (Answer Call, End Call, Reject Call).
- Panel 2: Use Two Earbuds** - Illustrates the correct way to insert both earbuds into the ears.
- Panel 3: Use One Earbud** - Shows how to use a single earbud while the other is in the charging case.
- Panel 4: Battery Warning** - Warns against using the headphones near flammable liquids or gases and provides instructions for safe use.
- Panel 5: FCC Caution** - States that the device complies with Part 15 of the FCC Rules and provides instructions for safe use.
- Panel 6: Storage and Maintenance** - Provides instructions for storing and maintaining the headphones.
- Panel 7: FAQ** - Answers common questions about the headphones, such as "What should I do if my earbuds are not charging?" and "Poor sound quality, seems unsatisfactory?"
- Panel 8: Signal Lag** - Explains the reasons for signal lag and provides instructions for troubleshooting.
- Panel 9: Why is the volume of my earbuds small?** - Provides instructions for adjusting the volume and troubleshooting low volume issues.
- Panel 10: How to sync volume on Android?** - Shows the steps to sync the volume on an Android device.
- Panel 11: How to sync volume on iOS?** - Shows the steps to sync the volume on an iOS device.
- Panel 12: How to sync volume on Windows?** - Shows the steps to sync the volume on a Windows PC.
- Panel 13: How to sync volume on Mac?** - Shows the steps to sync the volume on a Mac.
- Panel 14: How to sync volume on Linux?** - Shows the steps to sync the volume on a Linux PC.
- Panel 15: How to sync volume on Android TV?** - Shows the steps to sync the volume on an Android TV.
- Panel 16: How to sync volume on Apple TV?** - Shows the steps to sync the volume on an Apple TV.