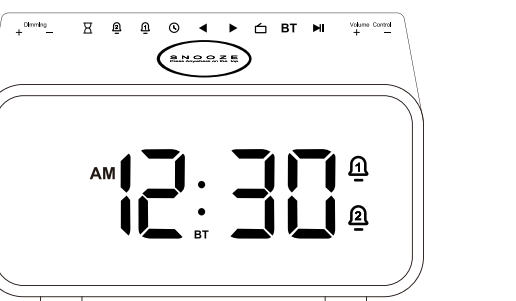


(90*110mm说明书做风琴折)

ANJANK AC201 User Manual  If a faulty product is found when setting up, please email us at customer02@kerchanstar.com.	Power Specifications1 Package Include1 Features.....1 Front View2 Top View2 Back View3 Bottom View.....4 Getting Started4 Dimmer Control.....5 Wireless Speaker Pairing5 Auto Time Setting7 Manual Time Setting.....7 Alarm and Ringtone Setting9 Alarm Pause / Snooze10 Alarm On/Off11 Manual-scan Radio Station.....12 Auto-scan Radio Station.....12 Sleep Timer Setting13 Wireless Charging.....14 Support14	Power Specifications AC, 100-240V, 50-60Hz, 0.7A DC, 12V-2A, 24W, Class 2 Package Include •1*Bluetooth alarm clock •1*Adapter with cord •1*CR2032 button cell •1*User Manual Features •FM Radio •12/24H Mode •Auto Set Time •9 Minutes Snooze •Sleep Timer •0-100% Dimmer •Wireless Speaker •Wireless Charging •Dual Alarm Clock •Battery Backup (Only memory function) 1	Front View Radio Indicator Time AM/PM Appear in 12H Mode 12:30 Alarm 1 Indicator Alarm 2 Indicator Wireless Speaker Indicator Top View SNOOZE Wireless Charging 2	Back View Battery Backup (1 CR2032 button cell is included) BT Bluetooth Speaker Previous Track/ + Next Track/ - FM Radio Sleep Timer Music Play/Pause Dimmer Control Volume Control Time Set Alarm 1 Setting Alarm 2 Setting 3	Bottom View Snooze Dimmer Control Getting Started 1. Plug the adapter into a standard household outlet, you will see 12:00 on the display and the clock is ready to be set. 2. Check out whether the CR2032 button cell (included) is at place. Backup battery is to preserve the time and alarm settings in case of power outage. NOTICE: 1.If the display is "blank" after plugging in, please check whether the "Display Dimmer" on the back is at the high position. 2.It is NOT a battery-powered alarm clock. The battery just preserves time and alarm settings in case of power outage. The screen will go blank if only use battery. Please keep plugged in. 4	Dimmer Control The "Display Dimmer" dial is at the back of the clock, and the adjustable brightness range is from 0 to 100%. Wireless Speaker Pairing 1.Press " BT " button to turn on/off the wireless speaker. When the wireless speaker turns on, " BT " icon will blink for pairing. 2.Enable your phone bluetooth and select "AC201" from its available/paired list. After pairing successfully, " BT " will light on. Light on 5	3.Press "◀" or "▶" button to play the previous track or next track, or press "⏸" button to pause it. 4.Slide the "Volume Control" dial or use your phone to adjust the speaker volume. NOTICE: 1. When wireless speaker turns on, the "AC201" will automatically connect to the last phone if available. If not, "AC201" will enter pairing mode. 2. Long press "BT" button to exit the current bluetooth device connection and enter pairing mode again, " BT " icon will blink. 3. When radio is on, press " BT " button, radio will turn off. And the "AC201" will automatically connect to the last phone, but the music will not play automatically, you need to press "⏮" button or use your phone to start. 4. Not available as the phone function. 5. Place your speaker and phone no more than 10 meters (33ft) away from each other. 6	Auto Time Setting Under Bluetooth connection, the clock will auto-sync time according to your phone. If you want change hour format, press the "🕒" button. NOTICE: Because of the MAP/HFP protocol restriction, some phones did not support the auto-setting. If the clock cannot auto-correct time, please set time manually. Manual Time Setting 1.Press the "🕒" button to set HOUR setting. Press "◀" or "▶" button to set hour. Blink 12:30 7	2.Press the "🕒" button to confirm and enter MINUTE setting. Press "◀" or "▶" button to set minute. 3.Press the "🕒" button to confirm and enter 12/24 hour mode setting. Press "◀" or "▶" button to select. 12H Blink 4.Press the "🕒" button to finish time setting. 8	Alarm And Ringtone Setting 1.Take the example of setting Alarm 1. Press the "🔔" button to enter ALARM HOUR setting. Press "◀" or "▶" button to set hour. Blink 12:30 2.Press the "🔔" button to confirm and enter MINUTE setting. Press "◀" or "▶" button to set minute. 🔔 Blink 01 3.Press the "🔔" button to confirm and enter RINGTONE setting. A number will be shown on the display and sound will be played accordingly to indicate the alarm ringtone (# 01 is Beep, #02 is FM Radio). Press "◀" or "▶" button to select your preferred ringtone. 4.Press the "🔔" button to finish alarm setting. The Alarm 2 also works in the same way. NOTICE: 🔔 button only works on alarm 1 setting, not alarm 2. So do "🔔". Alarm Pause / Snooze When the alarm goes off, you have two options: 1.Press any button except SNOOZE button to stop the alarm when it's ringing. Alarm will go off next day. 10	2.Press SNOOZE button to snooze, "🔔" icon will blink on the display. The alarm will go off again 9 mins later. If you want to cancel snooze, press "🔔", and the alarm 1 will not go off today. NOTICE: 1.The SNOOZE button is at the bottom of clock, press the clock top to get snooze. 2.Beep alarm (#01 ringtone) will last 5 minutes; FM radio alarm (#02 ringtone) will sound for 1 hour. 3.The alarm ringtone will start off quiet and gradually get louder for the first 30s. 4.The beep alarm (#01 ringtone) volume is default, can not be adjusted. You can adjust the FM radio alarm (#02 ringtone) volume by rolling the "Volume Control" dial when setting alarm. Alarm On / Off Long press the "🔔" button to turn on or off the Alarm 1. If "🔔" icon on the display disappears, this alarm will NOT go off next day. The Alarm 2 also works in the same way. 11	Manual-Scan Radio Station 1.Press "📻" button to turn radio mode on or off. 2.When the radio is on, press "◀" or "▶" button to select channel. 1283 Blink Auto-scan Radio Station When the radio is on, long press "📻" button, FM radio will scan and auto-store the scanned stations. Then press "◀" or "▶" button to select your favorite channel. Radio Alarm Setting When the radio is on, you can select the channel you want, and long press "🔔" button until the letter "AL1" blinks on the display. It means this channel is saved as the second alarm ringtone for Alarm 1. 12	Sleep Timer Setting When the radio or wireless speaker turns on, you can press the "🕒" button repeatedly to select the sleep time ranging from OFF, 10, 20, 30, 40 to 120 minutes. Wireless Charging The round area of clock top is wireless charging sensor. Place your phone in the center, the phone will light up if charging successfully. Note: 1.Remove any protective cases containing magnet, metal, or materials thicker than 0.12" (3mm) 13	Support If you have any issue with this clock, please contact us at customer02@kerchanstar.com. We will address your issue within 24 hours. 2.Compatible with wireless charging enabled devices: iPhone14/14Pro/14Pro Max/14 mini/13/13 Pro/13 Pro Max/13 mini/12/12 Pro/12 Pro Max/12 mini/11/11 Pro/11 Pro Max/XS Max/XR/XS/8/8 Plus; Samsung Galaxy Note 9/Note8/S8/S8 Plus/S7/S7 Edge/ S6 Edge Plus/S9/S10/S10 Plus/S10E/S21/S22/S23; Google Pixel 7/7Pro/6/5/4/4XL/3/3XL, Nexus 4/5/6/7, LG V50/V40/V35/V30; LG G8/G7/G6. And other devices with wireless charging function. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and(2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna.- Increase the separation between the equipment and receiver.- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.- Consult the dealer or an experienced radio/TV technician for help. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. 14
---	--	---	---	---	---	--	--	---	---	---	--	--	--	--