

Please read carefully before use and keep for future reference.

FEATURES AND CONTROLS

1 CD DOOR

2 PLAY/PAUSE

Press to play or pause a loaded CD. Press the "PLAY/PAUSE" button to power on, press and hold "PLAY/PAUSE" button for 2 seconds to power off.

3 STOP/BT

- Press to stop a CD during play. In stop mode.
- Press for 2 seconds to activate AudioStream™ (Bluetooth® out) mode.

4 MODE

- Turning on the device, press and hold the **MODE** button for the FM radio function then press and hold again to switch to CD mode.
- Press to repeat a single track or an entire CD, play tracks in a random order, or play the CD in intro mode.

5 OPEN

Press to open the CD DOOR.

6 SKIP/SEARCH

Press to skip between tracks on a loaded CD. Press and hold to search an individual track on a loaded CD.

7 PROG

Press to program a loaded CD to play tracks in a specified order.

 
 
 
8 VOLUME

Turn to adjust the volume.

9 USB POWER INPUT

10 STEREO

EARPHONE JACK

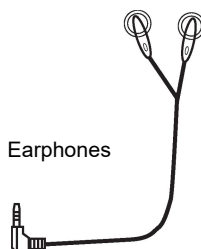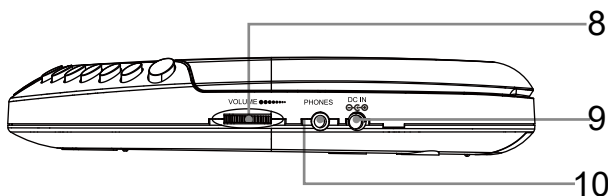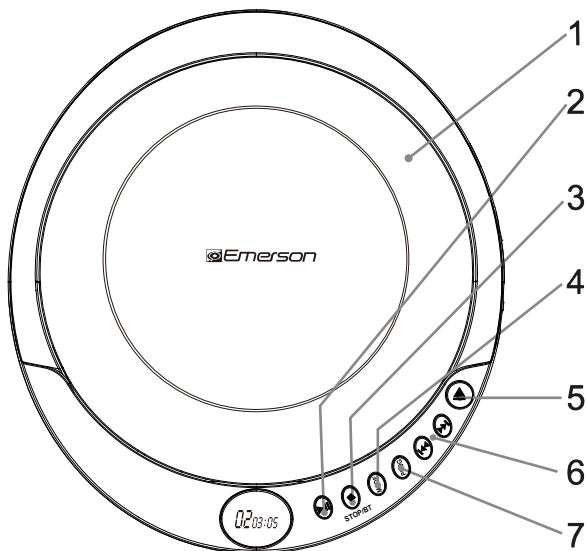

Personal CD Player

Features

- CD player: CD, CD-R
- 60 second anti-skip protection
- Rotary volume control
- LCD display
- FM Radio
- AudioStream™ (Bluetooth® out)
- Low battery indicator
- DC power: requires 2, AA size, batteries (not included)

Includes

- One set of stereo earbuds
- One set of DC line

 
Setup

USB Power

USB power supply

If you are using USB power we recommend that you remove any batteries first.


Insert a micro USB cable into the USB port on the device and use a suitable USB power supply.

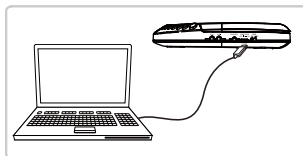

Battery Power

Batteries power supply

 Requires 2, AA size, batteries (not included). Please remove any batteries from the unit if it will not be used for a period of time.

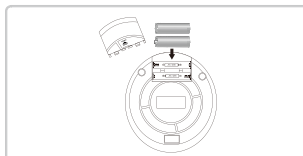

Operations

Note: This unit is not compatible with MP3 CDs.

Loading a CD

1. Press the **OPEN** button to open the CD DOOR.
2. Load a CD into the player, label side up.
3. Close the CD DOOR.

Playing a CD

1. Follow the instructions for Loading a CD.
2. Press the **PLAY/PAUSE** button to begin playing the loaded CD.

Connect via bluetooth

1. Press the **STOP** button for 2 seconds to activate bluetooth out mode.
2. "BT" will blink on the DISPLAY, When the "BT" is on, it is connected.

Programming a CD

1. Follow the instructions for Loading a CD and Playing a CD.
2. Press the **STOP** button to stop the CD during play.
3. Press the **PROG** button.
"01" will begin to blink on the DISPLAY.
Press the **SKIP/SEARCH** buttons to select the track you wish to program.
5. Press the **PROG** button to save the selected track to the program.
6. Repeat steps 4 and 5 to program up to 20 tracks to play in the order they are programmed.
7. Press the **PLAY/PAUSE** button to begin playing the programmed tracks.

Programming FM radio

1. Press and hold the **MODE** button for the FM radio function.
2. Press the **PLAY** button to switch to scan mode.
3. Press the **PROG** button to memory radio console position, "PROG" will begin to blink.
4. Press the **SKIP/SEARCH** button to select the position of the storage area, press the button again to confirm and save. after 5 seconds, it will be automatically confirmed.
5. Press the **PROG** button to save the selected storage area, a total of 30 units can be stored.

SAFETY INFORMATION

To ensure safe and lasting enjoyment of your unit, please follow these guidelines:

Protect from Moisture: Avoid exposing the unit to liquids, rain, or humid environments. Gentle Cleaning Only: Use a soft, dry cloth to clean the unit case. Avoid abrasive cleaners that could damage the finish.

Handle with Care: Refrain from dropping, disassembling, deforming, modifying, or inserting objects into the unit.

Professional Service Only: Do not attempt to repair, modify, or disassemble the unit yourself. There are no user-serviceable components inside, and tampering may void the warranty.

Prevent Scratches: Keep the unit away from sharp objects to avoid scratches and potential damage.

Turn it Off When Needed: Follow all signage that requires turning off electronic devices in designated areas.

Temperature Matters: Avoid exposing the unit to extreme hot or cold temperatures.

Direct Sunlight Warning: Keep the unit out of direct sunlight.

FCC NOTICE

Any Changes or modifications not expressly approved by the party responsible

for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to protect reasonably against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SUPPORT

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.emersonaudio.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Emerson Technical support.

EMERSON Technical Support
2320 East 49th Street
Vernon, CA 90058
Tel: (866) 411-6292
Email: support@emersonaudio.com

Made in China