



 
Portable Bluetooth® Boombox with Digital FM Radio Quick Start Guide

100070575


What's in the Box?

Check to make sure you have everything below.


A

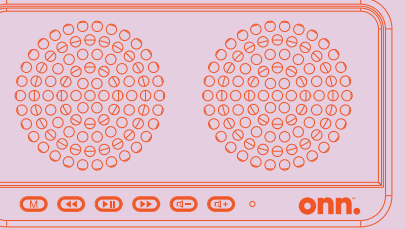

B

 

C

 


D



A. 1 Portable Bluetooth® Boombox
B. 1 AUX Cable 19.6 in (50 cm)
C. 1 Micro-USB charging cable 11.8 in (30 cm)
D. 1 Quick Start Guide

 Product Overview

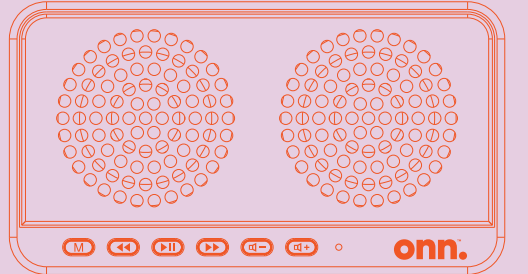

Product Overview (Continued)

M

MODE

Press to switch modes (AUX/FM/Bluetooth®).
Press and hold to turn device on/off.

<<

PREVIOUS

Press to go to the previous track/channel.
Press and hold to scan backward for a channel in FM mode.

>||

PLAY/PAUSE/SCAN

Press to play/pause a track when in AUX/Bluetooth® mode.
Press and hold to disconnect connected devices and/or start pairing when in Bluetooth® mode.
Press and hold to automatically search and save a radio station when in FM mode.

Product Overview (Continued)

>>

NEXT

In Bluetooth® mode:

- Press to go to the next track.
- Press and hold to begin TWS pairing.

In FM mode:

- Press to go to the next channel.
- Press and hold to scan forward for a channel

<-

VOLUME-

Decrease the volume.

<+

VOLUME+

Increase the volume.


⏻

DC 5V: Charging Port

⊕

AUX: Auxiliary Input

 Product Overview (Continued)

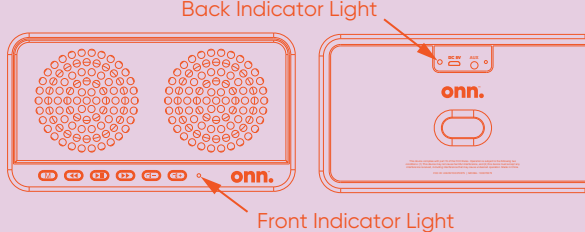

Back Indicator Light

Front Indicator Light

FRONT INDICATOR LIGHT

- Blue Light:** Indicates that the device is in Bluetooth® mode. Light will flash when pairing.
- Red Light:** Indicates that the device is in AUX/FM mode.
- Blinking Red Light:** Indicates low battery. Please charge your device.
- Purple Light:** Indicates that the device is in TWS mode.
- Flashing Purple Light:** Indicates that the device is in TWS Pairing mode.

BACK INDICATOR LIGHT

- Red Light:** Indicates that the device is charging.
- Green Light:** Indicates that the device is fully charged.

We'd love to hear from you. Scan with your Walmart app and let us know what you think.


Safety Precautions

1. Do not expose to dripping or splashing.
2. Do not place any objects filled with water on the device.
3. Do not block the ventilation holes.
4. When using high output signals, do not turn the volume to maximum to avoid distortion.
5. Do not leave objects generating magnetism near the speakers.

Charging your Device

Use the included micro USB charging cable and insert it into the DC 5V charging port located at the back of your boombox. Connect the other end of the cable to a power source to charge your device. Allow up to four hours to fully charge the battery.

Full charge = 6 hours of playback

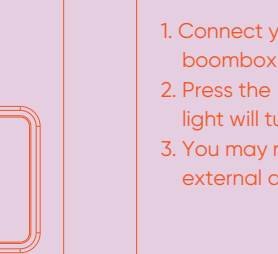

Bluetooth® Mode

1. Press the **(M)** button to switch to Bluetooth® mode. The front indicator light will turn blue in Bluetooth® mode.
2. On your smartphone, search for the Bluetooth® device named "onn bmbox" and connect to it.
3. If prompted to input a password, enter "0000".
4. Your device is now connected via Bluetooth®.

AUX Mode

- Connect your external device to the AUX input at the back of the boombox via the AUX cable.
- Press the **(M)** button to switch to AUX mode. The front indicator light will turn red.
- You may now start streaming audio to your boombox using your external device.

TWS Mode

TWS (True Wireless Stereo) technology allows you to play music on two onn. Bluetooth® boomboxes simultaneously, creating a surround sound experience.

1. Press and hold the  button on both boomboxes to turn them on and enter Bluetooth® Pairing Mode.
2. Open Bluetooth® settings on your mobile device and search for "onn. bmbox".
3. Once connection is successful, press and hold the  button to enter TWS pairing. The indicator light will flash purple. At this time the second speaker will automatically begin TWS pairing.
4. Once both speakers are connected, the purple indicator light will remain on.
5. To disconnect from TWS mode, press and hold the  button on either boombox.

Note: When playing music in TWS mode, one speaker will act as the left channel and the other as the right channel.

Resetting Your Device

If your boombox is not operating properly, you may reset it. To use a small object – such as a paper clip – to press the button on the AUX jack. Press and hold the button for approximately 2 seconds until the boombox powers off, and then power it on again as usual.

The Specs

- Digital FM Radio
- Model: 100070575
- Bluetooth® 5.1
- 3.5 mm AUX In
- RMS: 5W (2.5W x2) output
- Range: 33 ft (10 m)
- Battery: 3.7V / 2000mAh Rechargeable Battery

FCC War

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Warning (Continued)

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

Need h

We're here for you every day
from 7 a.m. – 9 p.m. CST.
Give us a call at 1-888-516-2630