



8+



BMDR3100

**3-IN-1 HYDROAIR
RC RACER**

BATTERY SAFETY

- Using lithium batteries carries certain risks, including fire, injury, or property damage. Users must understand these risks and take full responsibility for proper battery use.
- If the battery leaks, avoid contact with skin or eyes. In case of contact, rinse thoroughly with clean water and seek medical attention immediately.
- Disconnect the plug immediately if you notice any unusual smell, noise, or smoke.
- Always use the original factory-supplied USB charging cable for safe charging.
- Do not charge swollen, damaged, or worn-out batteries.
- Do not overcharge the battery. Unplug the charger once the battery is fully charged.
- Do not charge the battery near flammable materials (e.g., carpet, wooden floors, or furniture) or on conductive surfaces. Always monitor the battery while charging.
- Do not charge the battery if it has not cooled down. Charging temperature should be between 32°F and 104°F.
- Use only adapters with an output voltage of 5V for charging.
- Do not dispose of the battery with household waste. Follow local regulations for proper disposal.
- Owners are responsible for keeping all product identification and warning labels legible.

Parts List


A

(2 modular batteries included)




B


Remote Control

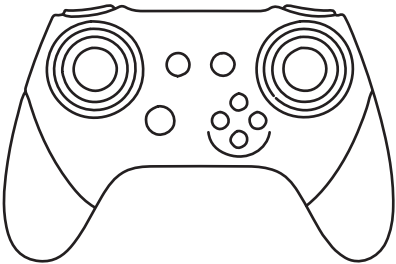

C

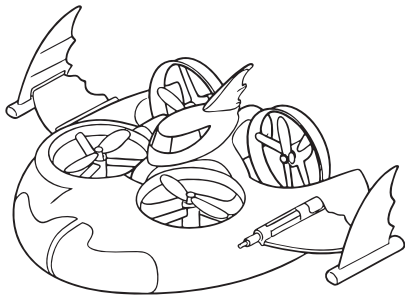

D

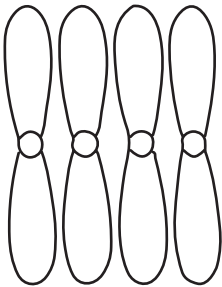


E

Pry Tool



F

USB Charging Cable

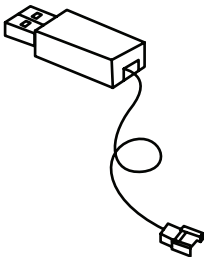


G

Screwdriver



Charging the Battery

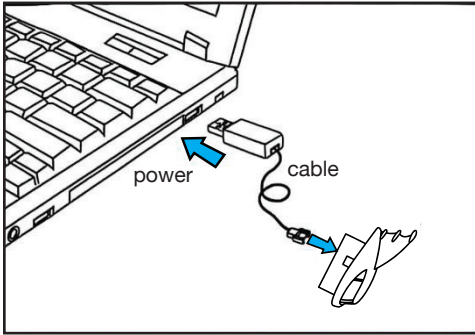


Use the included USB Charging Cable **F** to connect the battery to power as shown.

Please make sure the battery is dry before charging.

The LED light will turn on indicating that the battery is charging.

The LED light will turn off when the device is fully charged. The charging time is about 60 minutes and the usage time is about 6 minutes.


Battery Installation (Remote Control)

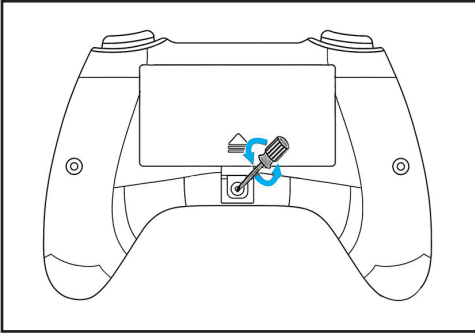

1. Use the included Screwdriver **G** to remove the screw from the battery compartment located on the back of the Remote Control **B** by rotating it counter clockwise.

NOTE:

- Ensure the polarity symbols on the batteries match the symbols inside the battery compartment.
- Do not mix new and old batteries.
- Do not mix different types of batteries.

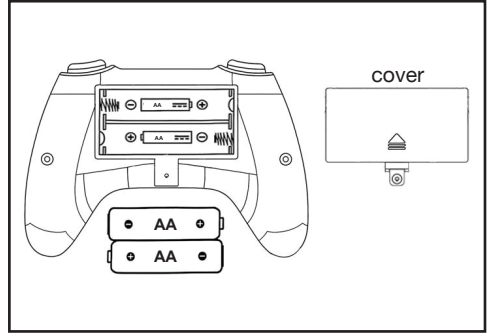


2. Install two AA batteries (sold separately) following the indicated polarities (+/-), then reattach the compartment cover and use the screwdriver to secure the screw into place.

Remote Control Distance

The remote control distance between water mode and ground mode is approximately 40 feet.

Land and Water Mode: Controls

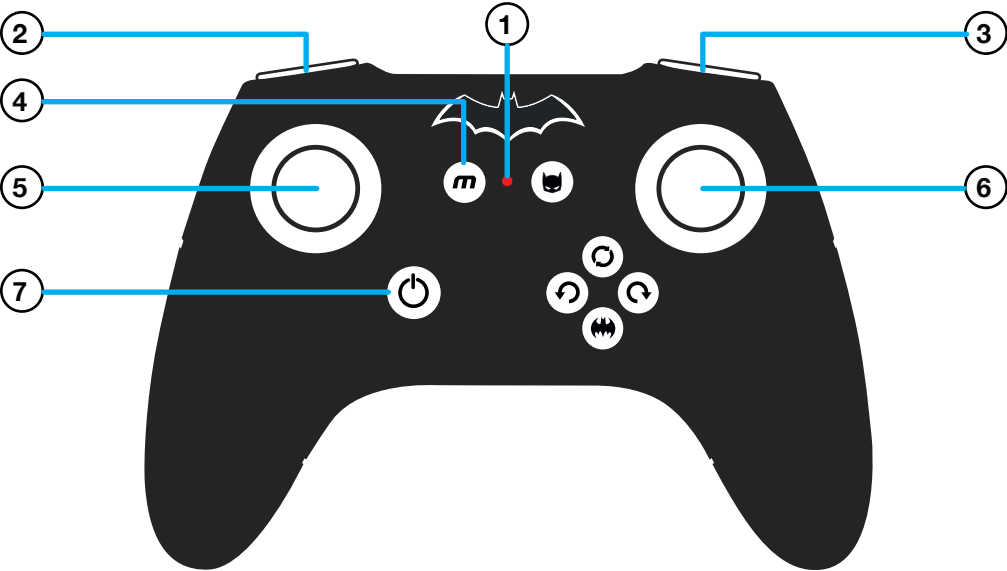


1	Indicator Light	The indicator light for Air Mode is RED. The indicator light for Water Mode is PURPLE.
2	Left Button (LB)	Press to increase speed
3	Right Button (RB)	Press to decrease speed
4	Mode	Select between Air, Land, and Water Mode
5	Left Joystick	Forward throttle
6	Right Joystick	Directional movement (turn left / turn right)
7	Power	Press to turn the device on/off

NOTE: The other buttons not labeled on this page have no function in this mode.



Land and Water Mode: Controls

forward

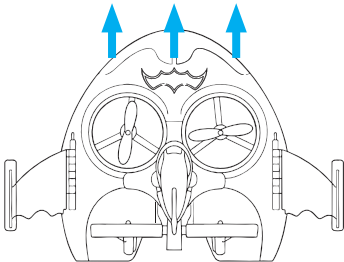

turn left

turn right

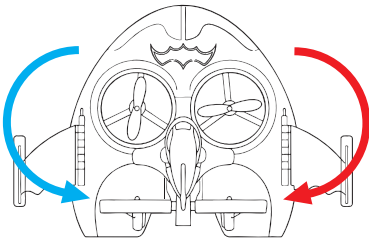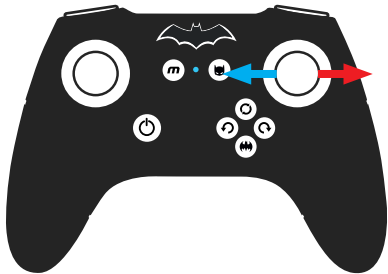

FCC WARNING

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Need Help?

For customer support regarding your device, please submit a request at **support@dpaudiovideo.zendesk.com**. You will be provided a ticket number regarding your inquiry, which you can refer to when contacting us further.

You may also reach a customer service representative by calling **1-833-909-2673**. We are available Monday - Friday, 9am - 5pm PST, except major holidays.

We strongly urge customers to email their inquiry prior to calling, as this will enable us to better assist you. Please make sure to note the model number and a description of your inquiry.

Warranty Information

Limited Warranty

DP AV (the “Company”) warrants this new product purchased and contained in this package (the “Product”) against defects in material or workmanship for 90 Days (Parts & Labor) and 1 Year (Limited) from the date of delivery. In order for the Company to honor this limited warranty, you must present a valid proof of purchase or delivery, as applicable (e.g. a receipt or delivery notice that also shows purchase) of this Product. IMPORTANT NOTE:

The customer is encouraged to carefully inspect the Product upon receipt after purchase – especially prior to any assembly, disassembly, mounting, installation or utilizing a third-party product of any kind, such as a decorative or protective cover or case.

This warranty is void if the Company deems, in its discretion, that the Product may have been damaged when the packaging was opened, through modification, improper transport, improper storage, improper use, improper assembly or disassembly, exposure to adverse elements, mounting or other installation, end user negligence, water damage or tampering of the barcode of the Product. This warranty does not apply: (a) to cosmetic damage, including but not limited to screen damage, a cracked display, scratches, dents and broken ports; (b) to damage caused by accident, abuse, misuse, fire, water vapor exposure, excessive exposure to humidity, water or other liquid contact, earthquake or other external cause; (c) to defects caused by normal wear and tear or otherwise due to the normal aging of the product; (d) if any serial number has been removed or defaced from the product; or (e) to damage caused by installation or mounting, assembly or disassembly, use with a third party device, cable, protective or decorative cover/case, component or product that does not meet the Company’s product specifications. This warranty is a limited warranty for repair of the Product or replacement of the Product with a new or refurbished product, subject to the conditions set forth herein.

The Company is not liable for consequential, indirect, incidental, special or punitive damages and the Company’s total liability hereunder shall not exceed an amount greater than the retail purchase price of the product.

Warranty Information

90 Days Parts & Labor

The Company warrants to you as the original retail purchaser of the Product, that should the Product have any warranted defect out of the packaging, under normal conditions, such defect(s) will be repaired or replaced with a new or refurbished part (at the Company's sole discretion) without charge, if the Product is submitted to the Company within a period of ninety (90) calendar days from the date of delivery of the Product. The customer is responsible for transportation cost and insurance charges (if applicable) to the Company and must be able to document a clear proof of delivery to the Company as well as proof of registered receipt by the Company. It is the customer's responsibility to retain original packaging or provide like packaging in order to facilitate the warranty repair or replacement process. The Company will incur no liability whatsoever to provide packaging for warranty items. Should the product be damaged en route to the Company due to insufficient or improper packaging or improper transport, the warranty may be voided. You must receive a return authorization number (RMA#) before sending the unit in for service. This warranty only applies to manufacturer defects, and the Product must be returned to the Company in its original condition.

1 Year Limited Parts

If determined to be covered under warranty, the one (1) year (from delivery) limited parts warranty gives the customer the option to return the Product to the Company for repair or replacement. The customer will be responsible for labor charges. This warranty does not cover any incidental or indirect costs incurred as a result of a defect in the Product, including any consequential, incidental or indirect damages.

NOTE: Save this instruction and information sheet.

**IMPORTED/DISTRIBUTED BY DP AUDIO VIDEO
PO BOX 24857, LOS ANGELES, CA 90024.**



BATMAN and all related characters and
elements © & ™ DC. WB SHIELD: © & ™ WBEI. (s25)