

## 15.3.2 Components

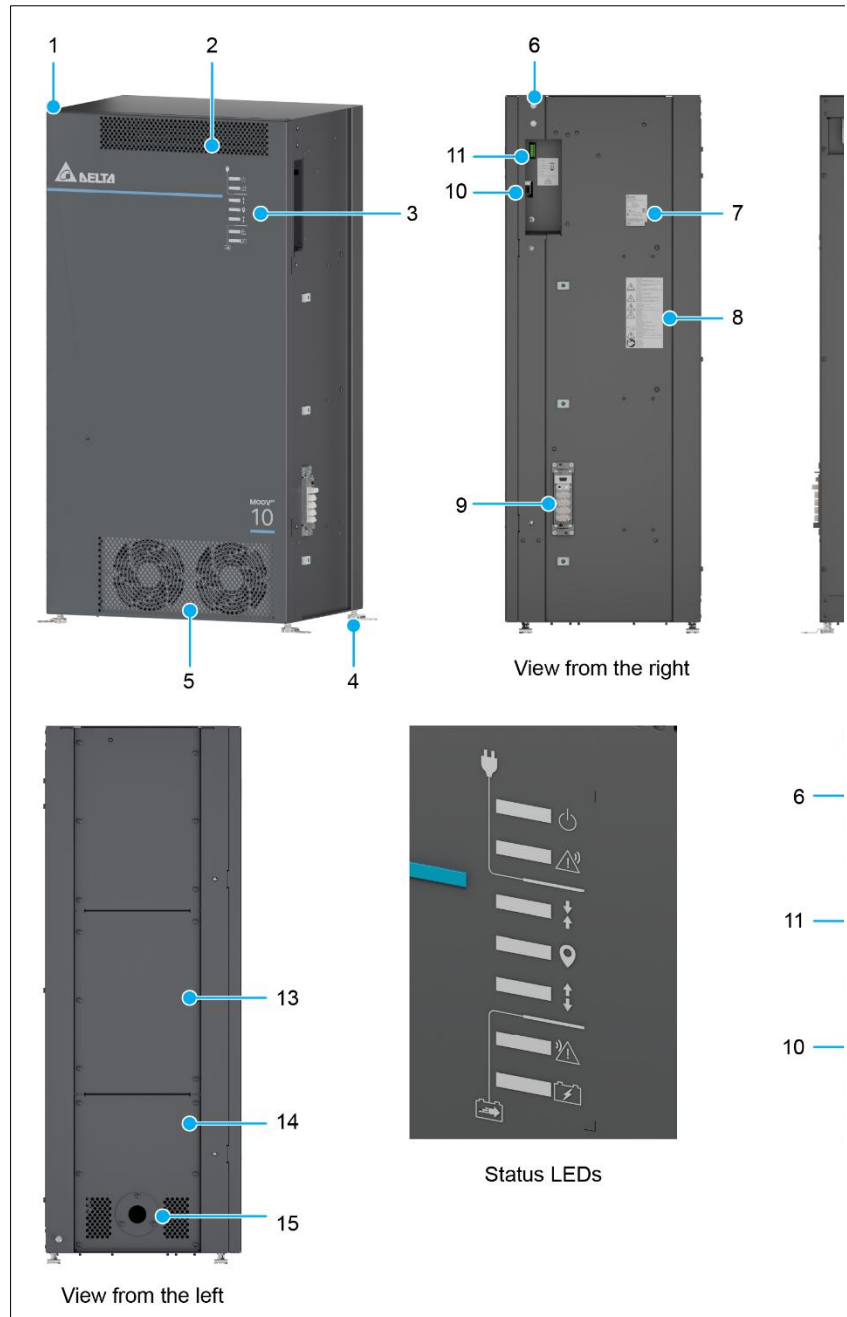


Figure 2 External components of the Wireless Primary Box

Threads for lifting the WPB with a crane or pulley

et

s LED panel

ing feet for mounting to the floor and leveling

tlet

ds for stack light

abel and MAC address

|    |                                                             |
|----|-------------------------------------------------------------|
| 8  | Warning label                                               |
| 9  | Heavy duty socket for cable from Wireless Primary Pad (WPP) |
| 10 | Ethernet port                                               |
| 11 | Socket for stack light cable                                |
| 12 | Mounting plate for wall mounting                            |
| 13 | Upper cover of AC connection                                |
| 14 | Lower cover of AC connection                                |
| 15 | AC cable entry                                              |

### 15.3.3 Status LED Panel

The Status LED Panel indicates system and operating status.

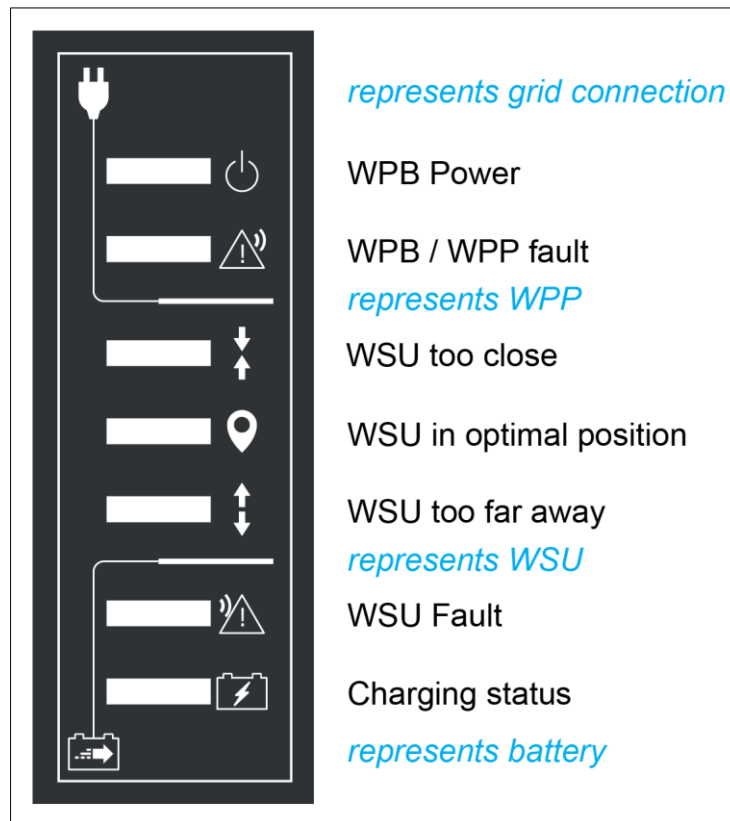


Figure 3 Status LED Panel on WPB

## 15.3.4 AC Input

### 15.3.4.1 Field Wiring Terminals

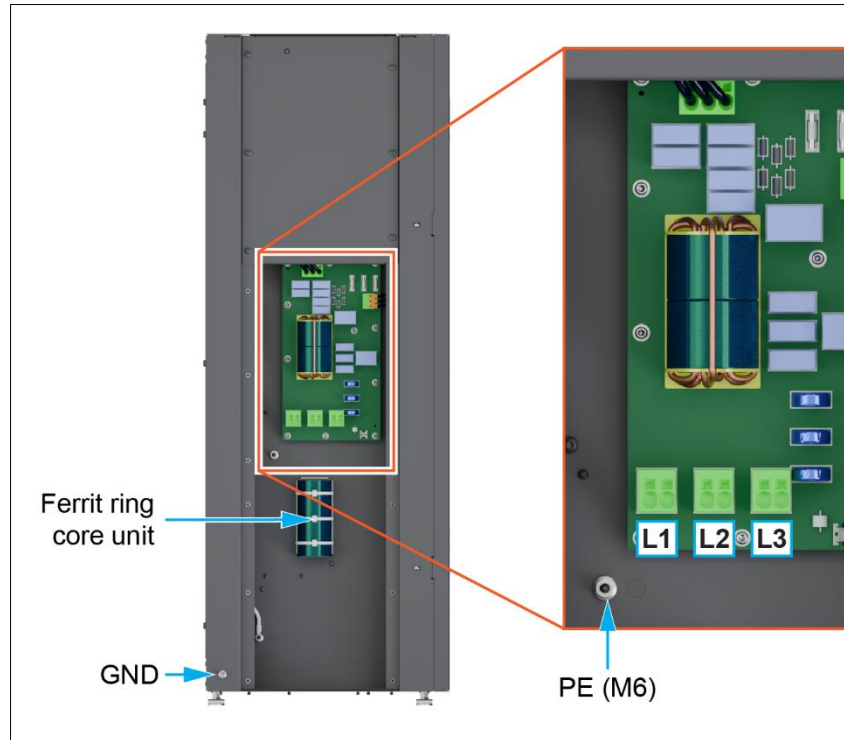


Figure 4 Field wire terminals on WPB

|            |                                                                                 |
|------------|---------------------------------------------------------------------------------|
| L1, L2, L3 | Phases of the AC Supply Grid with ground<br>Voltage 400 / 480 V, 47 to 63 Hz.   |
| PE/GND     | PE/GND connected to star point of the<br>PE/GND Bolt on Chassis part close to X |

| Fused supply line with SDD (Supply Disconnecting Device) | For installation and operation of the WPB, a fused supply line according to the following specifications is required |                |      |
|----------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|----------------|------|
|                                                          | Region                                                                                                               | Supply Voltage | Fuse |
|                                                          | Europe                                                                                                               | 400 VAC/47 Hz  | 32 A |
|                                                          | US and Canada                                                                                                        | 480 VAC/63 Hz  | 20 A |

Table 1 Required supply disconnecting device (SDD)

### 15.3.4.2 Grounding System

The WPB requires a 3-phase industrial AC input connection in order to provide power to the other system components.

Grounding systems supported are TN-C, TN-S, TN-C-S, TT with grounded star points.

## 15.3.5 Ethernet Service Interface

The Ethernet service interface has a physical RJ45 socket configured with 100BASE-TX (Fast Ethernet) as per IEEE 802.3u. The Ethernet service interface can be used for system monitoring and control. For more information refer 3.5.2 WPB – Ethernet.

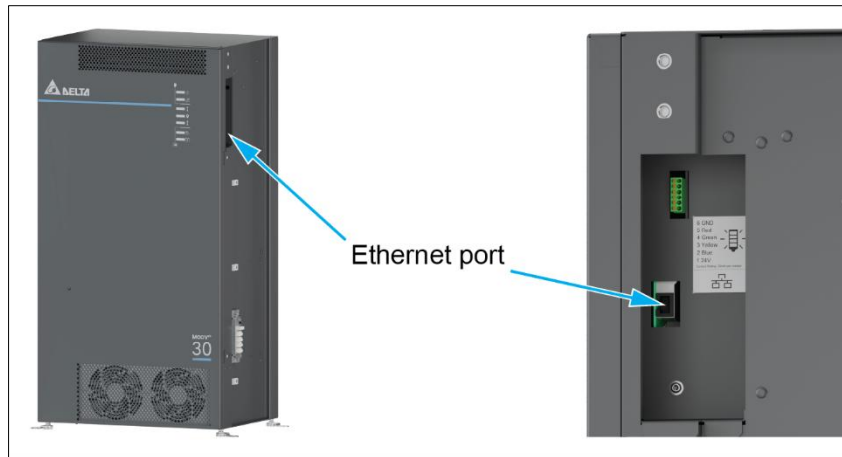


Figure 5 WPB – Ethernet Service Interface

**ATTENTION:**



Ethernet service interface must be used by qual during the service and should be disconnected c done.

The ethernet service cable length is restricted to

### 15.3.6 Heavy-duty Connector



Figure 6 WPP – Heavy-duty connector

The heavy-duty plug of the WPP is connected to the heavy-duty socket of the WPB.

The heavy-duty plug has 3 cables:

- PE/GND cable
- Signal cable
- Power cable

### 15.3.7 Technical specification

|                            |                                             |
|----------------------------|---------------------------------------------|
| Dimensions (H x W x D)     | 1050 x 550 x 400 mm (41.3 x 21.7 x 15.7 in) |
| Weight                     | 107 kg (235.9 lbs)                          |
| Ingress protection classes | IP21                                        |
| Cooling                    | Forced air                                  |
| Ambient temperature        | +5 to +40 °C (+41 to +104 °F)               |
| Ambient relative humidity  | 5% to 85%, non-condensing                   |
| Maximum operating altitude | 3000 m (9842 ft) above sea level            |
| Noise levels emitted       | Up to 75 dB(A), depending on the distance   |

|                                              |                                              |
|----------------------------------------------|----------------------------------------------|
|                                              | Fans will operate if internal temperature is |
| Shock and Vibration (operating)              | EN IEC 60721-3-3:2018, Class 3M11            |
| Shock and Vibration (transport and handling) | EN IEC 60721-3-2:2018, Class 2M4             |
| Storage temperature                          | -45 to +70 °C (-49 to +158 °F)               |

**Table 2** Specifications WPB – Mechanical

|                                                                                   | EU / UK                                                                       | US /             |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------|------------------|
| AC Input rated Voltage                                                            | 400 VAC 3PH<br>400 to 480 VAC 3PH<br>~                                        | 480 V            |
| AC Input voltage range                                                            | 360 to 528 VAC 3-phase                                                        |                  |
| AC Input frequency                                                                | 47 to 63 Hz                                                                   |                  |
| Maximum AC input current                                                          | 18 A                                                                          |                  |
| Required supplementary fuse                                                       | 32 A,<br>tripping characteristic: B                                           | 20 A<br>tripping |
|                                                                                   | <b>Note:</b> Installed externally to the WPB                                  |                  |
| Branch fuse                                                                       | Use 125 Amp. Branch protection is fuse. Note: Installed externally to the WPB |                  |
| Required SDD (Supply Disconnecting Device)                                        | CEKON<br>(IEC 60309) plug                                                     | A SDD<br>with    |
| Required short circuit ratio                                                      | > 30                                                                          |                  |
| Max. line inductance                                                              | ≤ 400 μH                                                                      |                  |
| Minimum conductor size<br>(for mechanically<br>protected/unprotected power cords) | 4 mm <sup>2</sup> /10 AWG                                                     |                  |
| Input power                                                                       | 11.5 kVA                                                                      |                  |
| Power factor (100% Load)                                                          | 0.95                                                                          |                  |
| Peak efficiency                                                                   | > 92%                                                                         |                  |

**Table 3** Specifications WPB – AC Input

## 15.4 Wireless Primary Pad (WPP)

### 15.4.1 Overview

The WPP is fed by the WPB with a medium voltage (MV) AC supply and transfers it to the WSU via magnetic field. The WPP supplies the WSU with wireless power. The WPP communicates its operating limits to the WPB. WPP with the WSU via Pad-to-Pad link (PPL), refer [8.7.1 WPP & WSU Interface – Pad to Pad Link \(PPL\)](#). The status of the WPP is displayed on the status LED panel. The chamfered edges prevent metallic foreign objects from remaining in the magnetic field.

## 15.4.2 Components

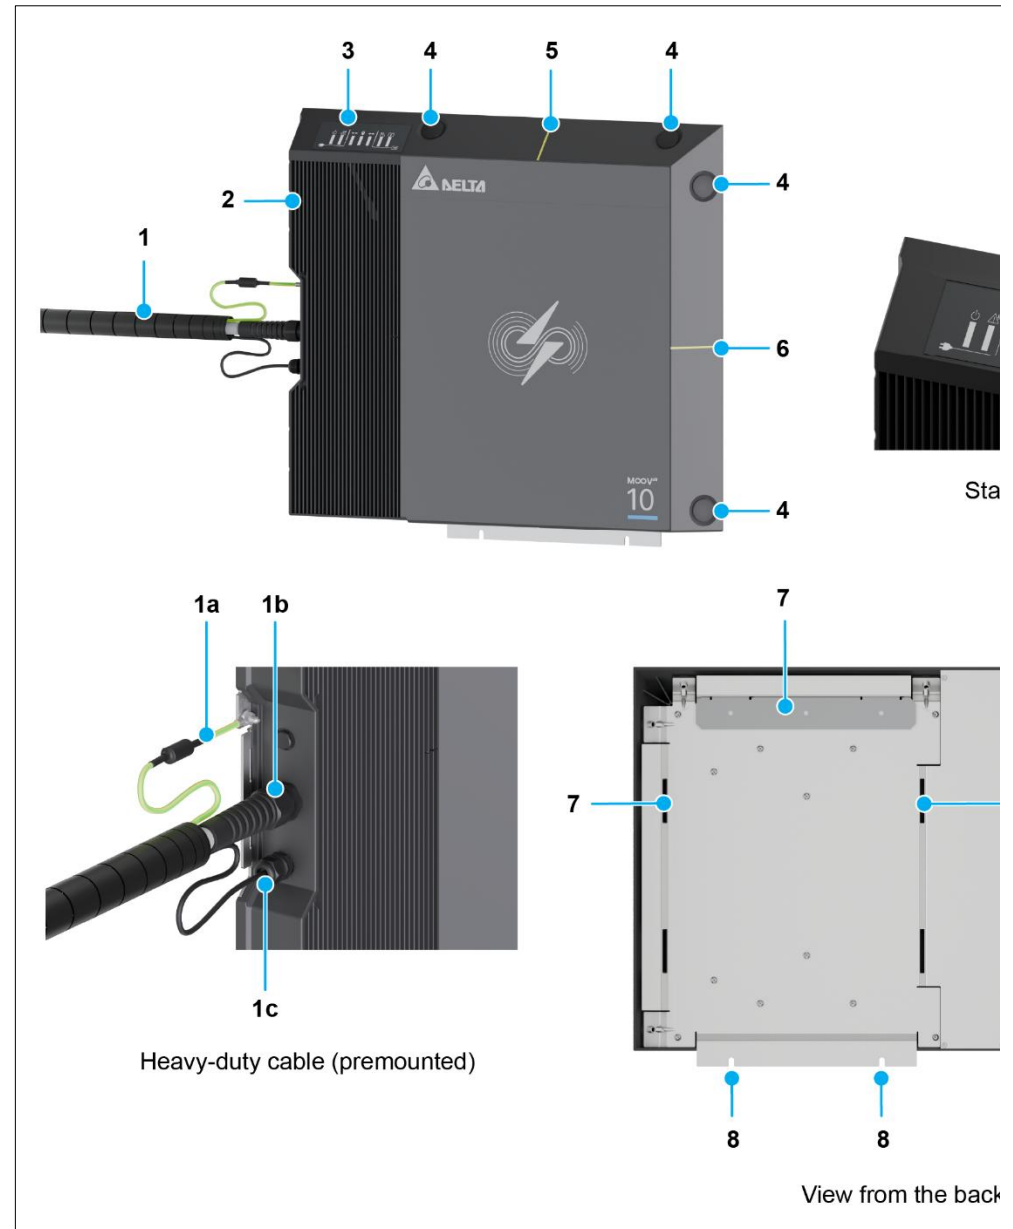


Figure 7 Components of the Wireless Primary Pad (WPP)

|   |                                                                                             |
|---|---------------------------------------------------------------------------------------------|
| 1 | Heavy-duty cable (connected to WPB) with grounding cable (1a), and communication cable (1c) |
| 2 | Heatsink                                                                                    |
| 3 | Status LED panel                                                                            |
| 4 | M12 threads for lifting the WPP with a crane or pulley                                      |
| 5 | Center mark for horizontal alignment with the Wireless Secondary                            |
| 6 | Center mark for vertical alignment with the WSU                                             |
| 7 | Mounting plate for wall mounting with different positioning options                         |
| 8 | Mounting holes for screwing the WPP to a wall or mounting system                            |

### 15.4.3 Status LED panel

The Status LED Panel indicates system and operating status.

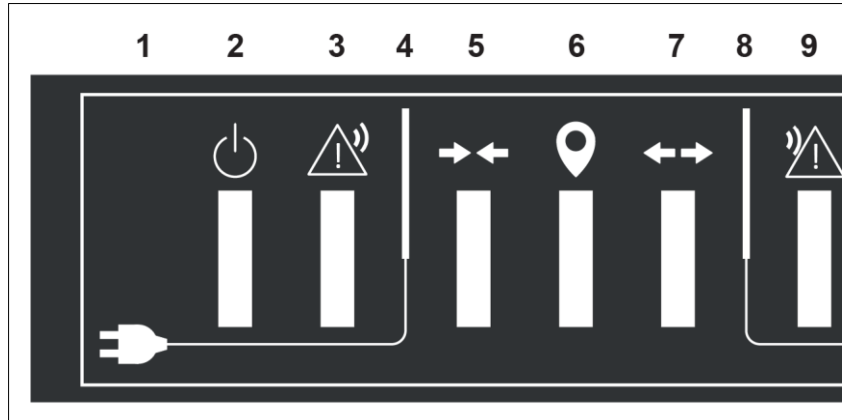


Figure 8 Status LED Panel on WPP

Refer to section [12.2 “LED status indication”](#), [page 126](#), for detailed explanation of Status LED functions.

|    |                            |
|----|----------------------------|
| 1  | Represents grid connection |
| 2  | WPB power                  |
| 3  | WPB / WPP fault            |
| 4  | Represents WPP             |
| 5  | WSU too close              |
| 6  | WSU in optimal position    |
| 7  | WSU too far away           |
| 8  | Represents WSU             |
| 9  | WSU fault                  |
| 10 | Charging status            |
| 11 | Represents battery         |

### 15.4.4 Heavy-duty plug

The WPP has a heavy-duty plug with 3 cables for charging power, signals and PE protection (grounding). The heavy-duty connector is plugged into the heavy-duty socket on the WPB. The length of the cables is 5 m (16.4 ft).

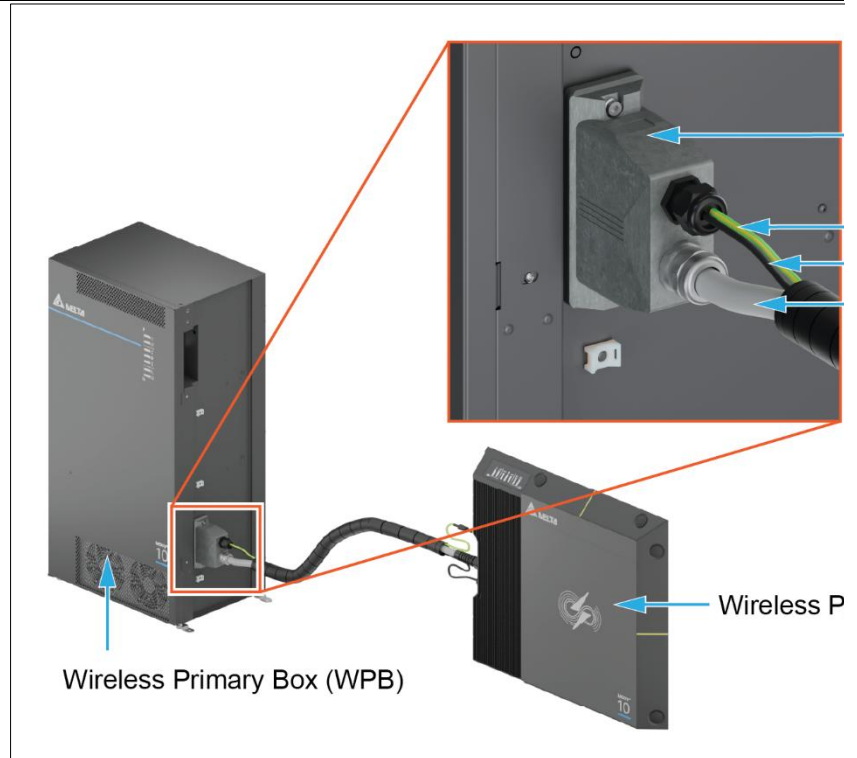


Figure 9 Heavy-duty plug on WPP with cables

#### 15.4.5 Technical specification

|                                              |                                                                                                                                |
|----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| Dimensions (H x W x D)                       | 691 x 750 x 70 mm (27.2 x 29.5                                                                                                 |
| Weight                                       | 42 kg (92.6 lbs)                                                                                                               |
| Cable length (WPB to WPP)                    | 5 m (196.85 in)                                                                                                                |
| Ingress protection classes                   | IP69                                                                                                                           |
| Cooling                                      | Convection                                                                                                                     |
| Ambient temperature                          | -40 to +70 °C (-40 ° to +158 °F)<br>output de-rating above +40 °C (                                                            |
| Ambient relative humidity                    | 4 to 100 %                                                                                                                     |
| Maximum operating altitude                   | 3000 m (9842 ft) above sea level                                                                                               |
| Shock and vibration (operating)              | EN IEC 60721-3-4:2018, Class                                                                                                   |
| Shock and vibration (transport and handling) | EN IEC 60721-3-2:2018, Class                                                                                                   |
| Impact resistance                            | IEC 62262 Code IK07: 2 J<br>WPP tested with higher impact<br>with IEC 62368-1, UL 1564, CS<br>to standards or contact Delta fo |
| Storage temperature                          | -45 to +70 °C (-49 to +158 °F)                                                                                                 |

Table 4 Specifications – Wireless Primary Pad (WPP) – Mechanical

## 15.5 Wireless Secondary Unit (WSU)

### 15.5.1 Overview

The WSU couples to the magnetic field of the WPP. It converts the energy to an electrical current to charge the battery. The WSU communicates with WPP using PPL, refer [8.7.1 WPP & WSU Interface – Pad to Pad Link \(PPL\)](#), and with the BMS via CANopen®. The WSU is provided with over voltage protection, over current protection, reverse polarity protection and short circuit protection. Refer [10.2.4.2 WSU Cable Connections](#) for cable connections.

Following are the main parts of the WSU.

### 15.5.2 Components

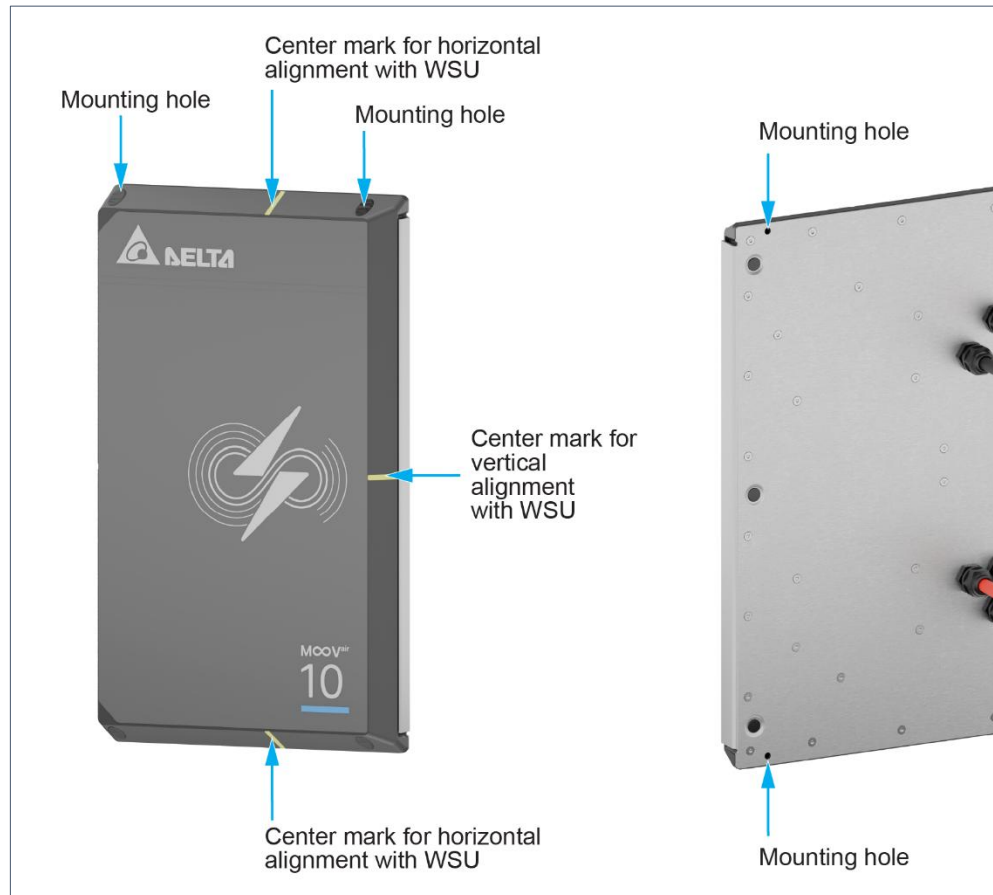


Figure 10 Components of the Wireless Secondary Unit (WSU)

### 15.5.3 Multi-purpose control cable

The WSU has a multi-purpose control cable for connection to the vehicle, with auxiliary input power, Auxiliary output power and CANopen® communications interfaces.

Length of control cable: 0.5 m (19.7 ft)

Connector type: Deutsch connector

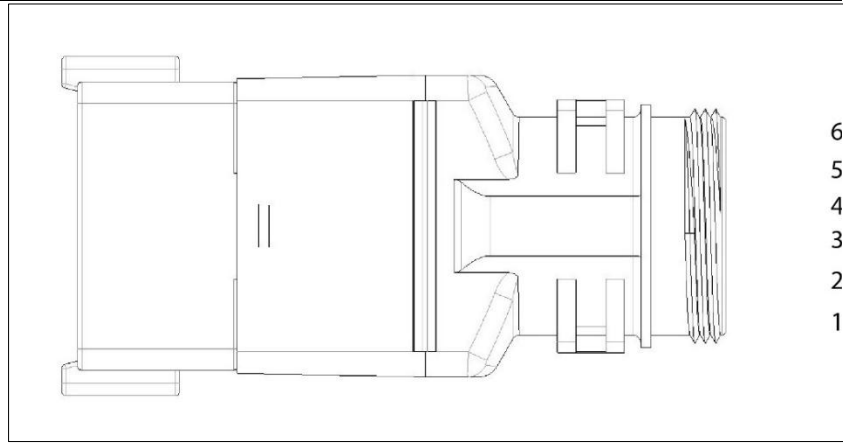


Figure 11 WSU Control cable

| Pin | Signal   | Function                                                  |
|-----|----------|-----------------------------------------------------------|
| 1   | AUXIN+   | AUX supply from battery, fused 2A at V <sub>batt</sub>    |
| 2   | AUXIN-   | AUX supply reference from battery                         |
| 3   | NC       | -                                                         |
| 4   | AUXOUT+  | AUX supply for external devices, max. output: 5 V, 100 mA |
| 5   | CANOUT_H | BMS Vehicle CAN/2nd WSU/120 Ohm i                         |
| 6   | CANOUT_L | BMS Vehicle CAN/2nd WSU/120 Ohm i                         |
| 7   | CANIN_H  | BMS Vehicle CAN                                           |
| 8   | CANIN_L  | BMS Vehicle CAN                                           |
| 9   | NC       | -                                                         |
| 10  | AUXOUT-  | AUX supply reference for external device                  |
| 11  | NC       | Reserved                                                  |
| 12  | NC       | Reserved                                                  |

Table 5 Pin assignment WSU Deutsch Connector

### 15.5.3.1 Auxiliary Input Power

The WSU has an auxiliary input power interface which must be supplied by the vehicle to power the WSU internal controller. This is required to be able to establish communications with the WPP for a charge cycle to commence and for the vehicle to acquire data from the WSU for system monitoring.

For integration purposes the WSU can be powered from a 24VDC PSU when the battery is not available.

**Note:** Connect AUX IN- to Power output cable BLACK (-).

Input voltage range 24 to 60 V

Maximum input current 200 mA

Nominal current without auxiliary output connected 20 mA

Table 6 Specifications – WSU – Auxiliary Input Power

### 15.5.3.2 Auxiliary Output Power

The WSU has an optional auxiliary output power interface that can be used to power small components/modules on the vehicle. It supplies 5 V with a maximum current of 100 mA.

Nominal output voltage 5 V

Maximum output current 100 mA

Table 7 Specifications – WSU – Auxiliary Input Power

### 15.5.3.3 CANopen® Interface

#### 15.5.3.4 The WSU has a CAN bus interface that is used for monitoring the system and also for the BMS to control the WCS.

The CAN bus communications interface is compliant to ISO 11898-1 and 11898-2. It provides both a CAN IN and a CAN OUT interface for flexibility of the wiring configuration within the vehicle. The WSU does not include CAN bus termination, instead this can be achieved using the CAN OUT if desired.

See section 8.4.1 External Commanded CANopen® for details on CANopen® Control Mode and section 8.7.3 WSU - CANopen® for details on CANopen® Communications.

#### CAN bus termination:

If a CAN termination is needed, it can be placed in **between** Pin 5 and Pin 6 of WSU Deutsch connector.

#### Technical specification

Dimensions  
(H x W x D)

565 x  
12.9 x

|                                              |                                                                                                                                                               |
|----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Weight                                       | 20 kg (44.1 lbs)                                                                                                                                              |
| Ingress protection classes                   | IP69                                                                                                                                                          |
| Cooling                                      | Convection                                                                                                                                                    |
| Ambient temperature                          | -40 to +80 °C (-40 to +176 °F),<br>output de-rating above +40 °C                                                                                              |
| Ambient relative humidity                    | 15 to 100%                                                                                                                                                    |
| Maximum operating altitude                   | 3000 m (9842 ft) above sea level for all subsystems                                                                                                           |
| Shock and vibration (operating)              | Random vibrations IEC 60068-2-64:2008)<br>Shock test 100g IEC 60068-2-27:2009<br>Shock test 25g IEC 60068-2-27:2009<br>Shock test 50g IEC 60068-2-27:2009     |
| Shock and vibration (transport and handling) | EN IEC 60721-3-2 Class 2M4                                                                                                                                    |
| Impact resistance                            | IEC 62262 Code IK08<br>WSU tested with 5J impact force in accordance with IEC 62341, UL 1564, CSA 22.2 and refer to standard Delta contact Delta information. |
| Storage temperature                          | -45 to +70 °C (-49 to +158 °F)                                                                                                                                |

**Table 8 Specifications – Wireless Secondary Unit (WSU) – Mechanical**

|                                                                                   |              |
|-----------------------------------------------------------------------------------|--------------|
| Nominal output voltage                                                            | 24 & 48 VDC  |
| Output voltage range                                                              | 18 to 54 VDC |
| Absolute maximum DC voltage on power output and auxiliary input                   | 44 VDC       |
| Maximum charge current<br>(For more details refer 8.5.1.1 Output Operating Area). | 275 A        |
| Maximum output power<br>( See also 8.5.1 Output Power and De-rating).             | 10 kW        |

|  |                                                                                |                                                                                                         |
|--|--------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
|  | Output protection                                                              | over voltage<br>over current<br>over temperature<br>short circuit<br>open circuit<br>reverse connection |
|  | Length of power cables                                                         | 2 m (78.74 in)                                                                                          |
|  | Ring terminal                                                                  | 10 mm M10 stud                                                                                          |
|  | <i>Table 9      Specifications – Wireless Secondary Unit (WSU) – DC Output</i> |                                                                                                         |
|  | Safety.                                                                        |                                                                                                         |

1. Put clean PVC or polythene gloves on your hands to protect your hands from cleaning agents.
2. Wipe off any dirt with a clean dry cloth or soft brush. Use a microfiber or a soft lint-free cloth only. Do not use abrasive cloths, towels, paper towels or similar items.
3. Dirt, oil and grease may require a solvent to be removed. If this is required use an alcohol solution consisting of 70% isopropyl alcohol and 30% water. Keep liquids away from the WPB. Moisten (not wet) a microfiber or soft lint-free cloth with the cleaning agent and wipe clean.
4. Dry all of the equipment before use.

### 15.5.4 Cleaning WPP & WSU

|                                                                                                                                      |                                                                             |
|--------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------|
| <div data-bbox="359 264 539 315" data-label="Text"><b>WARNING:</b></div> <div data-bbox="383 324 515 443" data-label="Image"> </div> | <p>Make sure to switch OFF WPB.</p>                                         |
| <div data-bbox="359 512 539 564" data-label="Text"><b>CAUTION:</b></div> <div data-bbox="383 571 515 689" data-label="Image"> </div> | <p>Do not use heated pressure washer or a steam cleaner on WPP and WSU.</p> |

- Put clean PVC or polythene gloves on your hands to protect your hands from cleaning agents.
- Wipe off any dirt with a clean dry cloth or soft brush. Use a microfiber or a soft lint-free cloth only. Do not use abrasive cloths, towels, paper towels or similar items.
- Dirt, oil and grease may require a solvent to be removed. If this is required use an alcohol solution consisting of 70% isopropyl alcohol and 30% water. Keep liquids away from the WPB. Moisten (not wet) a microfiber or soft lint-free cloth with the cleaning agent and wipe clean.
- For cleaning by cold water pressure washer, either clean without cleaning agent or use a cleaning agent as referred in [Error! Reference source not found.](#), items 2 & 3 with a dosage of up to 3%. Pressure washer suitability as follows:
  - Flow rate: 15 liter/minute max
  - Impact force: 1.2 N max


### 15.5.5 Cleaning Fans of WPB

|                                                                                                                                          |                                                                                                                                                                 |
|------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div data-bbox="359 1440 518 1491" data-label="Text"><b>DANGER:</b></div> <div data-bbox="370 1500 502 1619" data-label="Image"> </div>  | <p><b>Electric Shock</b></p> <p>Make sure to disconnect the main power supply and wait for 30 min before opening WPB, as it may lead to death of Personnel.</p> |
| <div data-bbox="343 1688 534 1740" data-label="Text"><b>WARNING:</b></div> <div data-bbox="370 1749 502 1863" data-label="Image"> </div> | <p>Make sure not to disconnect the fan cables, while replacing Fan Assembly. Pull the receptacle not the cable.</p>                                             |

### Special tools needed

- Vacuum cleaner
- Screwdriver Torx T30. **Note:** Use a magnetic screwdriver as the screws can easily fall down.

### Procedure

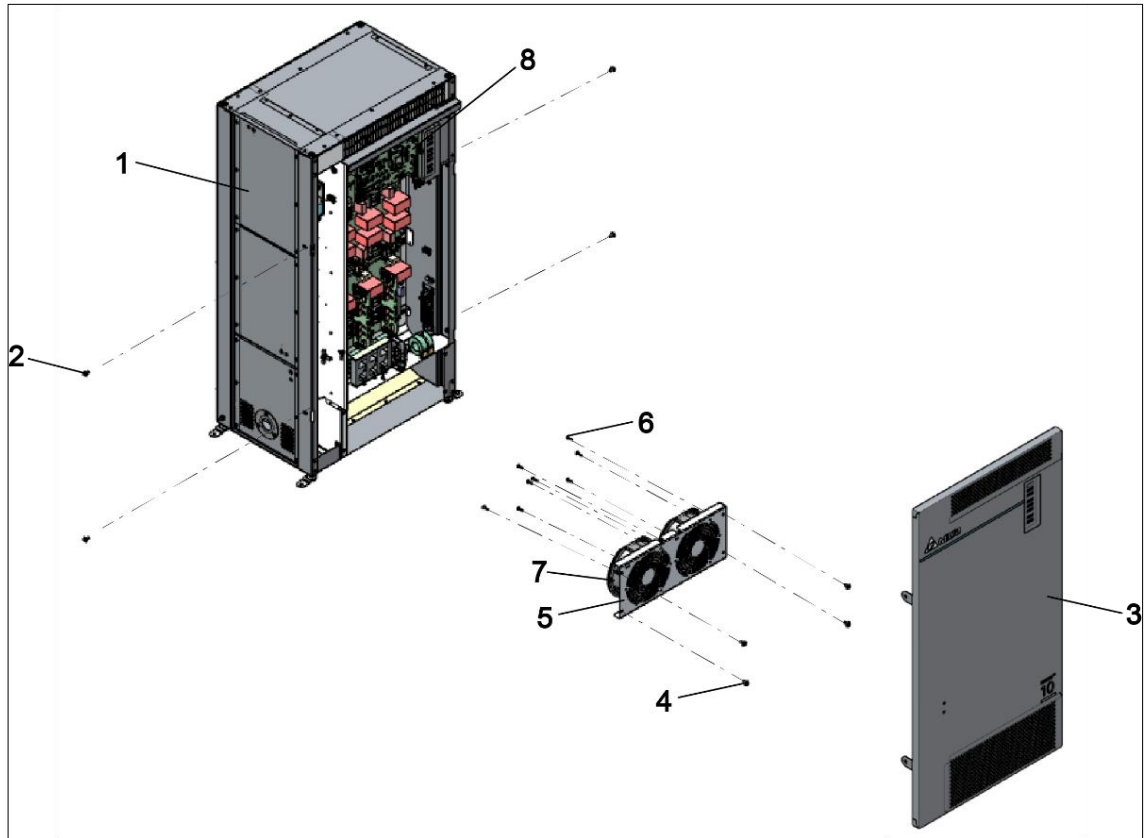

|   |                               |
|---|-------------------------------|
| 1 | WPB                           |
| 2 | M6 Screws                     |
| 3 | Front Cover                   |
| 4 | Screws M M6*1*12 FPH TORX SUS |
| 5 | Fan Panel Assembly            |
| 6 | Screws                        |
| 7 | Fans                          |
| 8 | Control Board                 |

1. Power off the system and wait for 30 minutes until the WPB cools down.
2. Remove the four screws M6 (2) and remove the front cover (3). See [Error! Reference source not found.](#)
3. Unplug the Fan Panel Assembly (5) from the control board (8).
4. Remove the four screws (4) and remove Fan Panel Assembly (5).
5. Clean the fans (7) with a dry cotton cloth or with a vacuum cleaner.

6. Do not use any cleaning agents or solvents to clean the fans, this may damage the fans.
7. Once cleaning is complete, connect the Fan Panel Assembly (5) to the control board (8).
8. Install the fan panel assembly (5) with screws (4). Fix the cables to the cable holders with cable ties.
9. Install the front cover (3) with the four screws M6 (2).
10. Make sure that everything is installed and connected. Now turn on the power supply to the WPB.


## 15.6 Corrective Maintenance

### 15.6.1 Replacing Fans of WPB

**DANGER:**


#### Electric Shock

Make sure to disconnect the main power supply and wait for 30 min before opening WPB, as it may lead to death of Personnel.

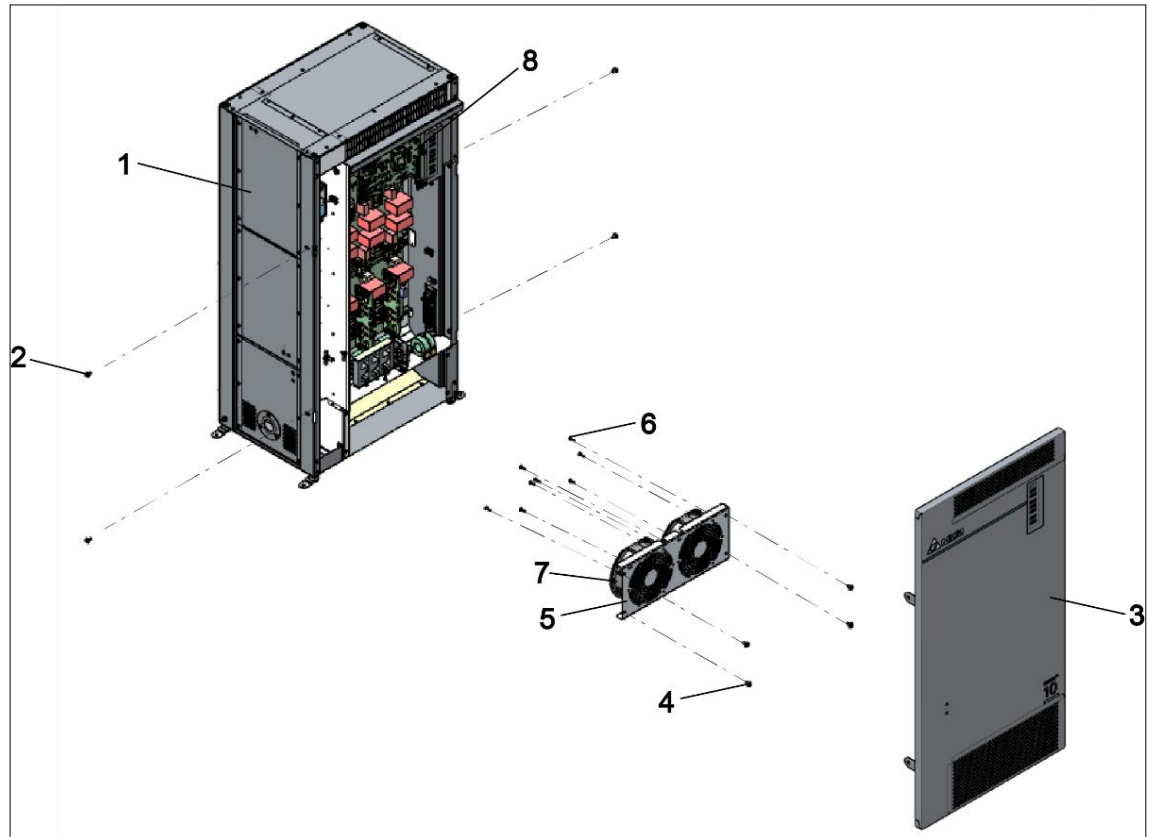

- |   |                               |
|---|-------------------------------|
| 1 | WPB                           |
| 2 | M6 Screws                     |
| 3 | Front Cover                   |
| 4 | Screws M M6*1*12 FPH TORX SUS |
| 5 | Fan Panel Assembly            |
| 6 | Screws                        |
| 7 | Fans                          |
| 8 | Control Board                 |


1. Make sure to power off the system and wait for 30 minutes until the WPB cools down.
2. Remove the four screws M6 (2) and remove the front cover (3).
3. Unplug the Fan Panel Assembly (5) from the control board (8).
4. Remove four screws (4) and remove Fan Panel Assembly (5).
5. Remove the press button screws (6) and remove the fans (7).
6. Install the new fans (7) with press button screws (6).
7. Connect the Fan Panel Assembly (5) to the control board (8).
8. Install the Fan Panel Assembly (5) with four screws (4).
9. Fix the cables to the cable holders with cable ties.
10. Install the front cover (3) with the four screws M6 (2).
11. Make sure that everything is well installed and connected. Now turn on the power supply to WPB.

## 15.6.2 Replacing Fuses of WPB




### Electric Shock

Make sure to disconnect the main power supply and wait for 30 min before opening WPB, as it may lead to death of Personnel.

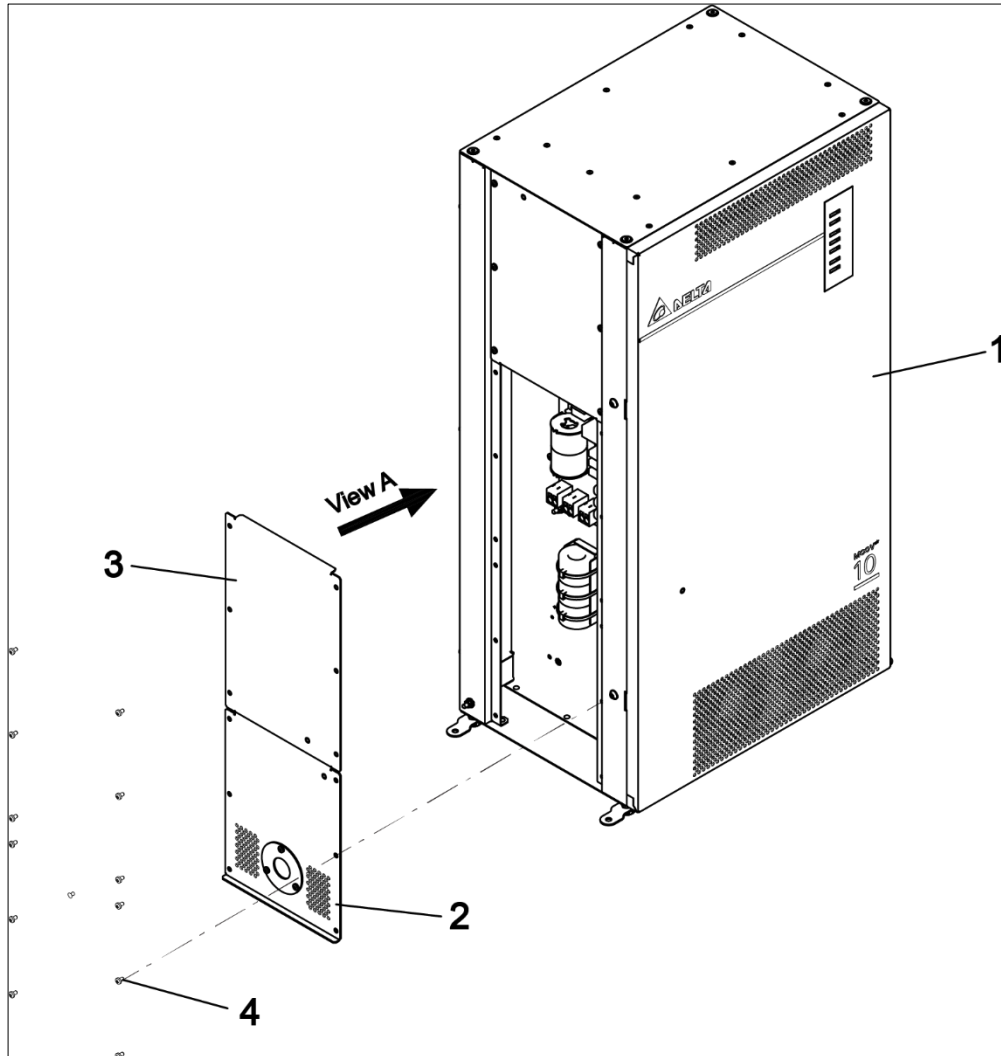

- |   |              |
|---|--------------|
| 1 | WPB          |
| 2 | Lower Cover  |
| 3 | Middle Cover |
| 4 | Screws       |

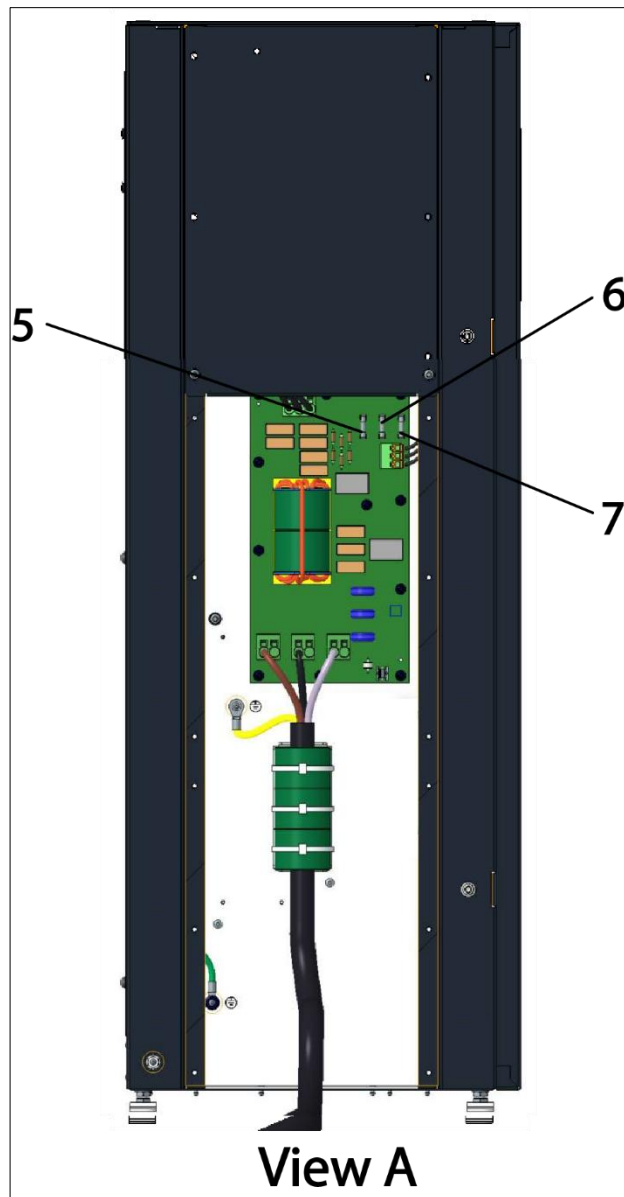


---

**5** Fuse for L1

---

**6** Fuse for L2

---

**7** Fuse for L3

---

1. Power off the system and wait for 30 minutes until the WPB cools down.
2. Unscrew (4) and remove the middle cover (3) and lower cover (2). See [Error! Reference source not found.](#)
3. Disconnect all electrical connection around the fuses L1, L2 and L3 (5, 6, 7).
4. Replace all the three fuses with the new Fuses.
5. Reconnect all electrical connections around the fuses.
6. Install middle cover (3) with six screws (4).
7. Check that everything is installed and connected. Now turn on the power supply to WPB.
8. Install lower cover (2) with six screws (4).

## 15.7 Firmware Updates

Please contact your charger dealer/sales representative for information.

### 15.7.1 WPB and WPP Firmware Update

Configure your laptop or PC to use the static IP address 192.168.1.n, where n may be any number from 0 to 255 other than 100 (e.g. 99) and subnet mask 255.255.255.0.

Connect your laptop to the WPB via an Ethernet cable.


1. Turn on the WPB.
2. Open the WPB webpage by entering the IP address 192.168.1.100 in your browser.
3. Enter the following credentials when prompted.

User: Delta

PWD: G745Pxy, where xy correspond to the last two digits of the MAC address (default is 00).

**Note:** The label with the MAC address is below the WPB type label.

The **Home** page is shown

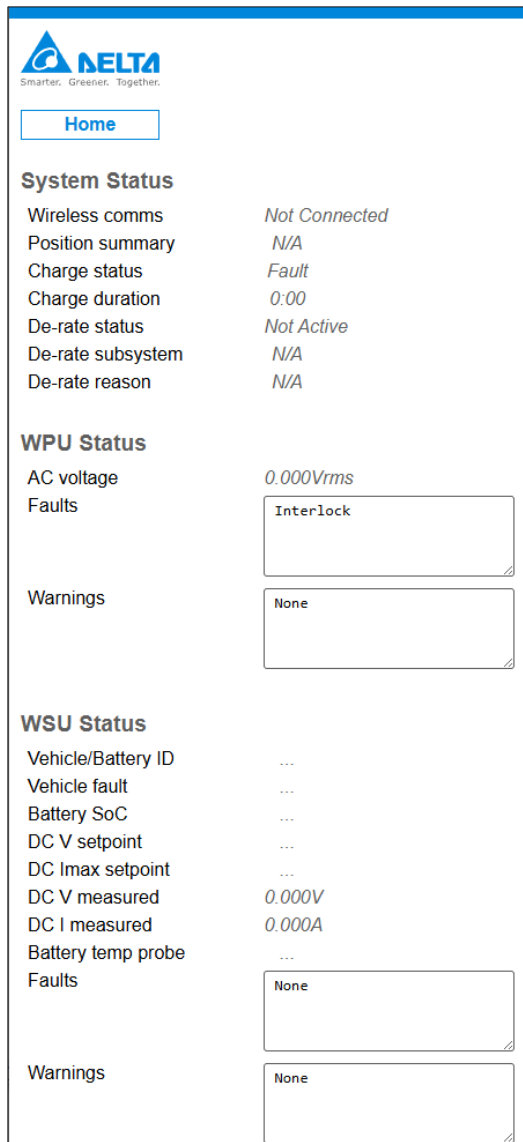


The screenshot shows the Delta WPB Home page. At the top is the Delta logo with the tagline 'Smarter. Greener. Together.' and a 'Home' button. Below this is the 'System Status' section, which lists various parameters and their current values: Wireless comms (Not Connected), Position summary (N/A), Charge status (Fault), Charge duration (0:00), De-rate status (Not Active), De-rate subsystem (N/A), and De-rate reason (N/A). The 'WPU Status' section shows AC voltage (0.000Vrms) and a list of faults (Interlock). The 'WSU Status' section shows various vehicle and battery parameters, including Vehicle/Battery ID, Vehicle fault, Battery SoC, DC V setpoint, DC I max setpoint, DC V measured (0.000V), DC I measured (0.000A), Battery temp probe, and a list of faults (None). There are also warning sections for both WPU and WSU, both showing 'None'.

| System Status     |               |
|-------------------|---------------|
| Wireless comms    | Not Connected |
| Position summary  | N/A           |
| Charge status     | Fault         |
| Charge duration   | 0:00          |
| De-rate status    | Not Active    |
| De-rate subsystem | N/A           |
| De-rate reason    | N/A           |


| WPU Status |           |
|------------|-----------|
| AC voltage | 0.000Vrms |
| Faults     | Interlock |
| Warnings   | None      |

| WSU Status         |        |
|--------------------|--------|
| Vehicle/Battery ID | ...    |
| Vehicle fault      | ...    |
| Battery SoC        | ...    |
| DC V setpoint      | ...    |
| DC I max setpoint  | ...    |
| DC V measured      | 0.000V |
| DC I measured      | 0.000A |
| Battery temp probe | ...    |
| Faults             | None   |
| Warnings           | None   |

4. Open the **Admin** page.

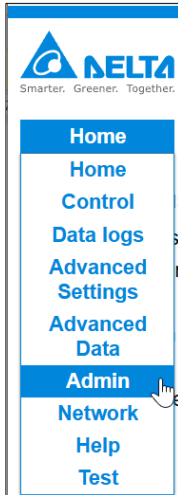

5. Navigate to bottom of the **Admin** page,

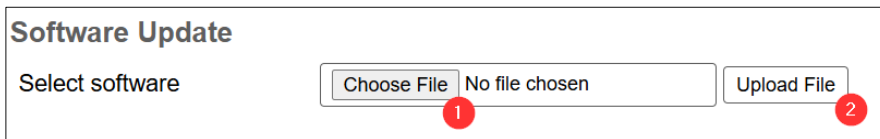

6. Click *Choose File* and select the provided .BIN file (1) update the Ethernet or WPB/WPP controllers by selecting the and by clicking on the Upload File (2) button:

The WPB or WPP controller update process typically takes around 5 minutes each!

When updating the Ethernet controller, the web will go down for about 30 seconds!

7. The displayed firmware version numbers refer to the three WPU controllers:

| WPB               |             |
|-------------------|-------------|
| Model name        | ...         |
| Part number       | EOE00000000 |
| Hardware version  | 000000      |
| Serial number     | YYWW000000  |
| SW - App1 version | (1) V3.1.2  |
| SW - App2 version | (2) V22.1   |
| WPP               |             |
| Model name        | ...         |
| Part number       | ...         |
| Hardware version  | ...         |
| Serial number     | ...         |
| SW - App1 version | (3) V7.0    |

(1) WPB Ethernet Controller version

(2) WPB Controller version

(3) WPP Controller version (not displayed if no WPP is connected to the WPB)

For more detailed version information use any of these URLs in your web browser:

<http://192.168.1.100/api/firmware/wpb>

<http://192.168.1.100/api/firmware/wpp>

## 16 Troubleshooting

This section provides information for identification and correction of malfunctions and faults of the WCS.

### 16.1 Identifying Subsystems to Troubleshoot

The following are different ways to identify a faulty subsystem:

- Status LED panel
- CANopen®
- Ethernet (Webpage)
- Stack Light (if fitted)

### 16.2 Fault indication on status LED panels

| 10kW WCS - Status LEDs                                                               |                                                                                     |                                                                                     |                                                                                      |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |
|--------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| Category                                                                             | WPB / WPP                                                                           |                                                                                     | POSITIONING                                                                          |                                                                                       |                                                                                       |                                                                                       |                                                                                       | WSU                                                                                   |                                                                                       |
| Symbol                                                                               |  |  |  |  |  |  |  |  |  |
| Description                                                                          | Power                                                                               | WPB/WPP Fault                                                                       | Position Too close                                                                   | Position Optimal                                                                      | Suboptimal Too close                                                                  | Suboptimal Too far                                                                    | Position Too far                                                                      | WSU Fault                                                                             | Charging Status                                                                       |
| Power Not OK                                                                         |                                                                                     |                                                                                     |                                                                                      |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |
| Power OK                                                                             |                                                                                     |                                                                                     |                                                                                      |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |
| Power OK, Position OK, Charging                                                      |                                                                                     |                                                                                     |                                                                                      |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       | Flash                                                                                 |
| Power OK, Position Suboptimal Too far, Charging                                      |                                                                                     |                                                                                     |                                                                                      |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       | Flash                                                                                 |
| Power OK, Position Suboptimal Too close, Charging                                    |                                                                                     |                                                                                     |                                                                                      |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       | Flash                                                                                 |
| Power OK, Position too far, not charging                                             |                                                                                     |                                                                                     |                                                                                      |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |
| Power OK, Position too close, not charging                                           |                                                                                     |                                                                                     |                                                                                      |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |
| Power OK, Data communication to WSU is established and BMS doesn't require charging. |                                                                                     |                                                                                     |                                                                                      |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |
| Power OK, WPB / WPP Fault                                                            |                                                                                     |                                                                                     |                                                                                      |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |
| Power OK, WSU Fault                                                                  |                                                                                     |                                                                                     |                                                                                      |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |
| Power OK, WPB / WPP & WSU Fault                                                      |                                                                                     |                                                                                     |                                                                                      |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |                                                                                       |

Figure 57 Possible Status LED Panel Scenarios

**Note:** Further diagnostics for troubleshooting can be acquired from the CANopen® interface e.g. PPL Connection Status, detailed Positioning Status etc.

## 16.3 Troubleshooting on WPB

| Symptom         | Probable Cause                                         | Corrective Action                                                                                                                                            |
|-----------------|--------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No power to WPB | WPB is not connected properly to grid.                 | Check the connection between WPB and grid.                                                                                                                   |
|                 | Supplementary Fuses (supply line fuses) are blown OFF. | Check the supplementary fuses (supply line fuses) and if necessary, replace them. (32 A for Europe and 20 A for US and Canada).                              |
|                 | Fuses to Auxiliary supply are blown OFF.               | Check the fuses to Auxiliary supply and replace them if necessary.                                                                                           |
|                 | One phase connection is missing.                       | Check for any missing grid connection (Phase 1, 2 and 3) to WPB or improper connection. In this case charging starts but B6 voltage drops and WCS shuts down |
|                 | WPB Internal defect                                    | Verify with Delta and request a replacement if necessary.                                                                                                    |

Table 13 Troubleshooting of WPB

### 16.3.1 WPB Event Class 0

All events in class 0 lead to the system being switched off. This also opens the contactor. The system is kept in the switched-off state until it is actively reset.

| Event Log                                   | Description                                 | Action          |
|---------------------------------------------|---------------------------------------------|-----------------|
| HW Temperature Monitoring = Overtemperature | Temperature exceeded defined hardware limit | Contact service |
| Board connection Monitoring                 | Internal board connection fault             | Contact service |

Table 14 Events – WPB – Event class 0

### 16.3.2 WPB Event Class 1

All events in class 1 lead to the system being switched off. This also opens the contactor. If the last start process was less than 1 minute ago, there is a maximum waiting time of 1 minute until the system is restart.

| Item | Event Log                                           | Description                                            | Action                                                                                      |
|------|-----------------------------------------------------|--------------------------------------------------------|---------------------------------------------------------------------------------------------|
| 1    | Internal loss Monitoring = Error                    | Internal losses of WPB exceeded defined limit          | Contact service.                                                                            |
| 2    | Buck Power Monitoring = Overpower                   | Buck Power exceeded defined limit                      | Contact service.                                                                            |
| 3    | PFC Power Monitoring = Overpower                    | Buck Power exceeded defined limit                      | Contact service.                                                                            |
| 4    | HW Boost Current Monitoring = Overcurrent           | Boost current exceeded defined hardware limit          | Contact service.                                                                            |
| 5    | HW Buck Current Monitoring = Overcurrent            | Buck current exceeded defined hardware limit           | Contact service.                                                                            |
| 6    | HW Bulk Voltage Monitoring = Overvoltage            | Bulk voltage exceeded defined hardware limit           | Contact service.                                                                            |
| 7    | HW Inverter Voltage Monitoring = Overvoltage        | Inverter voltage exceeded defined hardware limit       | Contact service.                                                                            |
| 8    | HW Inverter Current Monitoring = Overcurrent        | Inverter current exceeded defined hardware limit       | Contact service.                                                                            |
| 9    | HW Interlock Monitoring = Error                     | Interlock Monitoring detected not connected WPP        | Check cable connection from WPB to WPP.                                                     |
| 10   | Rectifier Temperature Monitoring = Overtemperature  | Rectifier temperature exceeded defined software limit. | Check if fans are dirty or defect.<br>Check if ambient temperature is within specification. |
| 11   | Rectifier Temperature Monitoring = Undertemperature | Rectifier temperature below defined software limit.    | Check if ambient temperature is within specification                                        |
| 12   | DC Temperature Monitoring = Overtemperature         | DC temperature exceeded defined software limit.        | Check if fans are dirty or defect<br>Check if ambient temperature is within specification.  |
| 13   | DC Temperature Monitoring = Undertemperature        | DC temperature below defined software limit.           | Check if ambient temperature is within specification.                                       |

| Item | Event Log                                                                          | Description                                              | Action                                                                                                            |
|------|------------------------------------------------------------------------------------|----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
| 14   | Inverter Temperature Monitoring = Overtemperature                                  | Inverter temperature exceeded defined software limit.    | Check if fans are dirty or defect.<br>Check if ambient temperature is within specification.                       |
| 15   | Inverter Temperature Monitoring = Undertemperature                                 | Inverter temperature below defined software limit.       | Check if ambient temperature is within specification.                                                             |
| 16   | MCU Temperature Monitoring = Overtemperature                                       | MCU temperature exceeded defined software limit.         | Check if fans are dirty or defect.<br>Check if ambient temperature is within specification.                       |
| 17   | MCU Temperature Monitoring = Undertemperature                                      | MCU temperature below defined software limit.            | Check if ambient temperature is within specification.                                                             |
| 18   | WPP Ferrite Overtemperature = TRUE                                                 | WPP Ferrite temperature exceeded defined software limit. | Let WPP cool down.<br>Check if Ambient temperature is within specification.<br>Avoid direct exposure to sunlight. |
| 19   | WPP Capacitor Overtemperature = TRUE                                               | WPP Capacitor temperature exceeded defined limit.        | Let WPP cool down.<br>Check if ambient temperature is within specification.<br>Avoid direct exposure to sunlight. |
| 20   | SW B6 overvoltage Monitoring = Overvoltage                                         | B6 Voltage exceeded defined software limit.              | Check if grid voltage is within specification.                                                                    |
| 21   | Inverter Frequency and Phase Monitoring = Frequency error                          | Inverter frequency is out of defined limits              | Check airgap / misalignment.<br>Check for any damage on WPB or WPP.                                               |
| 22   | Inverter Frequency and Phase Monitoring = Inverter sync timeout error              | Inverter is not able to synchronize frequency and phase  | Check airgap / misalignment.<br>Check for any damage on WPB or WPP.                                               |
| 23   | Inverter Frequency and Phase Monitoring = Inverter voltage discharge timeout error | Inverter not able to discharge within defined time       | Contact support.                                                                                                  |

Table 15 Events – WPB – Event class 1

### 16.3.3 WPB Event Class 2

All events in class 2 lead to the system being switched off. As soon as the error is no longer present, the system is restarted up to 5 times. If the error is present 5 times in sequence, an event 1 is generated which leads to a waiting time of 1 minute.

| Item | Event Log                                                        | Description                                              | Action                                                                   |
|------|------------------------------------------------------------------|----------------------------------------------------------|--------------------------------------------------------------------------|
| 1    | Inverter Frequency and Phase Monitoring = Missing edge error     | Inverter is not able to synchronize frequency and phase. | Check airgap / misalignment. Check for any damage on WPB or WPP.         |
| 2    | Inverter Frequency and Phase Monitoring = Frequency jump error   | WPB detects sudden change in resonance frequency.        | Check airgap / misalignment. Check if WSU or Battery are in fault state. |
| 3    | Inverter Frequency and Phase Monitoring = Short edge delay error | Inverter is not able to synchronize frequency and phase. | Check airgap / misalignment. Check for any damage on WPB or WPP.         |
| 4    | Inverter Frequency and Phase Monitoring = Long edge delay error  | Inverter is not able to synchronize frequency and phase. | Check airgap / misalignment. Check for any damage on WPB or WPP.         |
| 5    | SW Bulk overvoltage Monitoring = Overvoltage                     | Bulk voltage exceeded defined software limit.            | Contact support.                                                         |
| 6    | SW Bulk undervoltage Monitoring = Undervoltage                   | Bulk voltage below defined software limit.               | Contact support.                                                         |
| 7    | SW Inverter current Monitoring = Overcurrent                     | Inverter current exceeded defined software limit.        | Check airgap / misalignment. Check for any damage on WPB or WPP.         |
| 8    | SW Inverter voltage Monitoring = Overvoltage                     | Inverter voltage exceeded defined software limit.        | Check airgap / misalignment. Check for any damage on WPB or WPP.         |
| 9    | HW locked status = HW locked                                     | Appears simultaneously to the monitorings above.         | Check airgap / misalignment.                                             |

Table 16 Events – WPB – Event class 2

### 16.3.4 WPB Event Class 3

All events in class 3 do not lead to the system being switched off. These are warnings about non-critical errors or active deratings.

| Item | Event Log                                        | Description                                             | Action                                                                            |
|------|--------------------------------------------------|---------------------------------------------------------|-----------------------------------------------------------------------------------|
| 1    | Fan 1 Monitoring = Error                         | Fan 1 error detected.                                   | Check if fan is dirty.<br>Replace fan.                                            |
| 2    | Fan 2 Monitoring = Error                         | Fan 2 error detected.                                   | Check if fan is dirty.<br>Replace fan.                                            |
| 4    | Available buck power Monitoring = Insufficient   | Available output power lower than maximum output power. | Check airgap / misalignment.                                                      |
| 5    | Derated Power Vs Frequency Monitoring = Derated  | Resonance frequency close to its defined limit.         | Check airgap / misalignment.<br>Check if battery voltage is within specification. |
| 6    | Derated Power Vs B6 Voltage Monitoring = Derated | Grid voltage too low.                                   | Check if grid voltage is within specification.                                    |

Table 17 Events – WPB – Event class 3

### 16.3.5 WPB Event Class 4

All events in class 4 do not lead to the system being switched off. This is only information.

| Item | Event Log                                  | Description                                                                                                                                          | Action                                    |
|------|--------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------|
| 1    | Max Grid Power Monitoring = Derated        | Grid Power derating active.                                                                                                                          | Allow maximum Output power over Ethernet. |
| 2    | Position Monitoring = Too Close            | WPP and WSU are positioned too close together.                                                                                                       | Increase distance between WPP and WSU.    |
| 3    | Position Monitoring = Too far              | WPP and WSU are positioned too far apart.                                                                                                            | Decrease distance between WPP and WSU.    |
| 4    | Position Monitoring = Suboptimal too close | If the WPP and WSU are positioned between the optimal working area and too close, the WSU will not be able to support the maximum output current.    | Increase distance between WPP and WSU.    |
| 5    | Position Monitoring = Suboptimal too far   | If the WPP and WSU are positioned between the optimal working area and too far away, the WSU will not be able to support the maximum output voltage. | Decrease distance between WPP and WSU.    |

Table 18 Events – WPB – Event class 4

## 16.4 Troubleshooting on WPP

| Symptom             | Probable Cause                        | Corrective Action                                         |
|---------------------|---------------------------------------|-----------------------------------------------------------|
| No power to WPP     | WPP is not connected properly to WPB. | Check the connection between WPB and WPP.                 |
|                     | WPP Internal defect                   | Verify with Delta and request a replacement if necessary. |
| WPP LEDs not lit up | WPP internal defect                   | Verify with Delta and request a replacement if necessary. |

Table 19 Troubleshooting on WPP

## 16.5 Troubleshooting on WSU

| Symptom                | Probable Cause                                                 | Corrective Action                                                                                                                                                  |
|------------------------|----------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No power to WSU        | WSU is not installed properly and is not connected to battery. | Check the installation of WSU and make sure all connections to battery are right.<br>Check AUXIN power.                                                            |
|                        | WSU internal defect                                            | Verify with Delta and request a replacement if necessary.                                                                                                          |
| Charging not happening | Battery connection to WSU is incorrect.                        | Make sure to securely connect both the red and black cables to the battery terminals.<br>Make sure that the polarity is not reversed.                              |
|                        | Wrong battery                                                  | Check the voltage range of the battery, correct voltage range is (18V to 44V and 36V to 60V)<br>Below or above this range is not accepted.                         |
|                        | Pad to pad positioning is wrong.                               | Check the position of both the pads and correct it as referenced in section <a href="#">8.5.1.2</a> .                                                              |
|                        | Misalignment is too big.                                       | Check the alignment between WPP and WSU, it must be within the range. Refer to sections <a href="#">Error! Reference source not found.</a> and <a href="#">0</a> . |
|                        | Battery is Full                                                | Charging does not happen when battery is full, User should know this information via BMS or vehicle SoC gauge.                                                     |

Table 20 Troubleshooting on WSU

## 16.5.1 WSU Event Class 1

All events in class 1 lead to the system being switched off within 100ms.

| Item | Event Log                                           | Description                                            | Action                                                                                                                         |
|------|-----------------------------------------------------|--------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| 1    | HW Rectifier Odd current monitoring = Overcurrent,  | Rectifier Odd current exceeded defined hardware limit  | Check connection to battery.<br>Check battery status.<br>Contact support.                                                      |
| 2    | HW Rectifier Even current monitoring = Overcurrent, | Rectifier Even current exceeded defined hardware limit | Check connection to battery.<br>Check battery status.<br>Contact support.                                                      |
| 3    | HW Rail Odd voltage monitoring = Overvoltage,       | Rail Odd voltage exceeded defined hardware limit       | Check connection to battery.<br>Check if battery voltage is within specification.<br>Check battery status.<br>Contact support. |
| 4    | HW Rail Even voltage monitoring = Overvoltage,      | Rail Even voltage exceeded defined hardware limit      | Check connection to battery.<br>Check if battery voltage is within specification.<br>Check battery status.<br>Contact support. |
| 5    | HW Rectifier Odd voltage monitoring = Overvoltage,  | Rectifier Odd voltage exceeded defined hardware limit  | Check connection to battery.<br>Check if battery voltage is within specification.<br>Check battery status.<br>Contact support. |
| 6    | HW Rectifier Even voltage monitoring = Overvoltage, | Rectifier Even voltage exceeded defined hardware limit | Check connection to battery.<br>Check if battery voltage is within specification<br>Check Battery Status<br>Contact Support    |
| 7    | Aux voltage monitoring = Overvoltage,               | Aux voltage exceeded defined software limit            | Check connection to battery.<br>Check if battery voltage is within specification<br>Check Battery Status<br>Contact Support    |
| 8    | Aux voltage monitoring = Undervoltage,              | Aux voltage below defined software limit               | Check connection to battery.<br>Check if battery voltage is within specification.<br>Check battery status.<br>Contact support. |
| 9    | FET Temperature monitoring = Overtemperature,       | FET temperature exceeded defined software limits       | Let WSU cool down.<br>Check if ambient temperature is within specification.<br>Avoid direct exposure to sun.                   |

| Item | Event Log                                     | Description                                       | Action                                                                                                       |
|------|-----------------------------------------------|---------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| 10   | Rung Temperature monitoring = Overtemperature | Rung temperature exceeded defined software limits | Let WSU cool down.<br>Check if ambient temperature is within specification.<br>Avoid direct exposure to sun. |

Table 21 Events – WPB – Event class 1

## 16.5.2 WSU Event Class 2

All events in class 2 lead to the system being switched off within 32 msec.

| Item | Event Log                                       | Description                                                                           | Action           |
|------|-------------------------------------------------|---------------------------------------------------------------------------------------|------------------|
| 1    | Rectifier 1 voltage plausibility = Too High, or | Voltage difference between Rectifier 1 and mean value exceeds defined software limit. | Contact support. |
| 2    | Rectifier 1 voltage plausibility = Too Low, or  | Voltage difference between Rectifier 1 and mean value exceeds defined software limit. | Contact support. |
| 3    | Rectifier 2 voltage plausibility = Too High, or | Voltage difference between Rectifier 2 and mean value exceeds defined software limit. | Contact support. |
| 4    | Rectifier 2 voltage plausibility = Too Low, or  | Voltage difference between Rectifier 2 and mean value exceeds defined software limit. | Contact support. |
| 5    | Rectifier 3 voltage plausibility = Too High, or | Voltage difference between Rectifier 3 and mean value exceeds defined software limit. | Contact support. |
| 6    | Rectifier 3 voltage plausibility = Too Low, or  | Voltage difference between Rectifier 3 and mean value exceeds defined software limit. | Contact support. |
| 7    | Rectifier 4 voltage plausibility = Too High, or | Voltage difference between Rectifier 4 and mean value exceeds defined software limit. | Contact support. |
| 8    | Rectifier 4 voltage plausibility = Too Low, or  | Voltage difference between Rectifier 4 and mean value exceeds defined software limit. | Contact support. |
| 9    | Rectifier 5 voltage plausibility = Too High, or | Voltage difference between Rectifier 5 and mean value exceeds defined software limit. | Contact support. |
| 10   | Rectifier 5 voltage plausibility = Too Low, or  | Voltage difference between Rectifier 5 and mean value exceeds defined software limit. | Contact support. |
| 11   | Rectifier 6 voltage plausibility = Too High, or | Voltage difference between Rectifier 6 and mean value exceeds defined software limit. | Contact support. |
| 12   | Rectifier 6 voltage plausibility = Too Low, or  | Voltage difference between Rectifier 6 and mean value exceeds defined software limit. | Contact support. |

| Item | Event Log                                        | Description                                                                       | Action                                                                                                       |
|------|--------------------------------------------------|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| 13   | Rectifier current plausibility = Unbalanced, or  | current difference between rectifiers exceeds defined software limit.             | Check connection to battery.<br>Contact support.                                                             |
| 14   | Rail voltage plausibility = Error, or            | Voltage difference between Rail Even and Rail Odd exceeds defined software limit. | Check connection to battery.<br>Check fuses if installed<br>Contact support.                                 |
| 15   | HW temperature monitoring = Overtemperature, or  | Temperature exceeded hardware defined limits.                                     | Let WSU cool down.<br>Check if ambient temperature is within specification.<br>Avoid direct exposure to sun. |
| 16   | PPL Error monitoring = Error, or                 | PPL connection disrupted.                                                         | Check airgap / misalignment.                                                                                 |
| 17   | Power transfer monitoring = Power Transfer Error | Power transfer not possible.                                                      | Check airgap / misalignment.                                                                                 |
| 18   | CANOPEN RPDO Timeout occurs is reached           | WSU is missing RPDO messages.                                                     | Check CANopen settings.                                                                                      |

Table 22 Events – WPB – Event class 2

### 16.5.3 WSU Event Class 3

All events in class 3 do not lead to the system being switched off. These are warnings or active deratings.

| Item | Event Log                                           | Description                 | Action                      |
|------|-----------------------------------------------------|-----------------------------|-----------------------------|
| 1    | Power controller saturation monitoring = Saturation | Power transfer not possible | Check airgap / misalignment |

Table 23 Events – WPB – Event class 3

## 17 Connecting a Stack Light

### 17.1 Overview


Note: The stack light is not available from Delta.

If the stack light is not directly mounted to the WPB, consider the maximum cable length.



Figure 58 WPB with stack light

## 17.2 Pin assignment

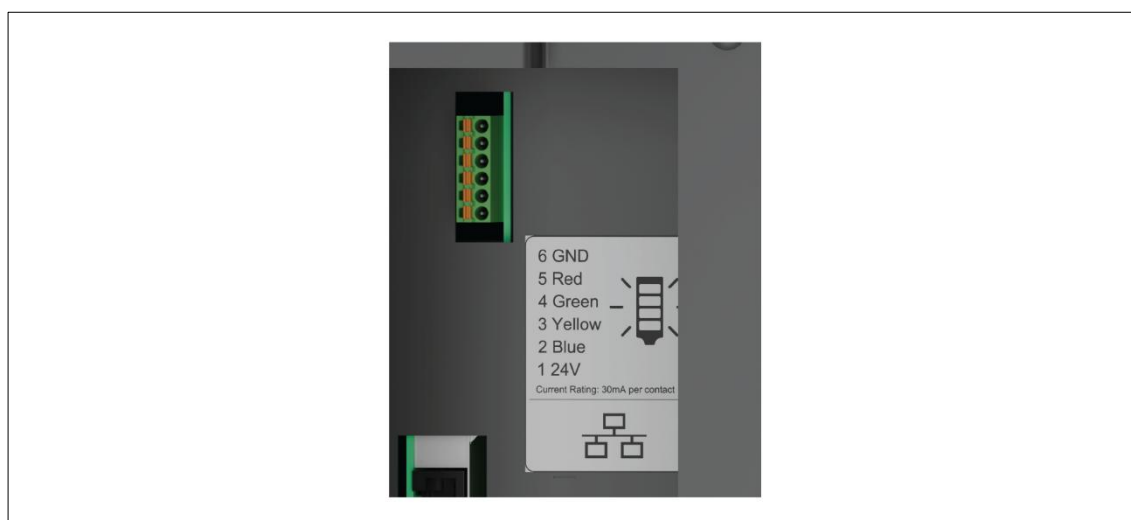

| Pin (top-down) | Description | Usage                        |
|----------------|-------------|------------------------------|
| 6              | GND         | WPB ground/screen connection |
| 5              | Red         | Fault                        |
| 4              | Green       | Power on                     |
| 3              | Yellow      | Charge status                |
| 2              | Blue        | Charge process               |
| 1              | 24 V        | 24 VDC Power supply          |

Figure 59 Pin assignment of stack light connector

## 17.3 Technical specification

|                              |                                                  |
|------------------------------|--------------------------------------------------|
| Connector type               | Phoenix Contact; FMC 1,5/ 6-ST-3,81; P/N 1748011 |
| Stack light type             | ROGB/24V, e.g. Tend Technology TPTL4-L7ROGB-S    |
| Suitable screws for mounting |                                                  |
| Type                         | 2 × M8                                           |
| Max. length                  | 15 mm (0.6 in)                                   |
| Pitch                        | 34 mm                                            |
| Max. cables length           | 3 m (9,84 ft)                                    |
| Wire cross section           | 1.5 mm <sup>2</sup> ,                            |
| Rated current                | 30 mA per contact                                |

Table 24 Specifications – WPB – Stack light connector

## 17.4 Stack Light LED Indications During Charging

|   | Light indication                      | Event description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | <b>No charging in progress</b>        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| 1 | BLUE ON                               | <p>(PPL communication established equals TRUE) AND (Charging request equals FALSE)</p> <p>LED duration <b>ON</b>: constantly</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|   | <b>WSU – Charge status of battery</b> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| 2 | BLUE PULSING                          | <p>Pulse <b>ON</b> / <b>OFF</b> a number of times followed by a pause where each pulse represents 10% SOC, according to the following scheme:</p> <p>0% ≤ WSU Battery SOC &lt; 15%: 1 pulse<br/> 15% ≤ WSU Battery SOC &lt; 25%: 2 pulses<br/> 25% ≤ WSU Battery SOC &lt; 35%: 3 pulses<br/> 35% ≤ WSU Battery SOC &lt; 45%: 4 pulses<br/> 45% ≤ WSU Battery SOC &lt; 55%: 5 pulses<br/> 55% ≤ WSU Battery SOC &lt; 65%: 6 pulses<br/> 65% ≤ WSU Battery SOC &lt; 75%: 7 pulses<br/> 75% ≤ WSU Battery SOC &lt; 85%: 8 pulses<br/> 85% ≤ WSU Battery SOC &lt; 95%: 9 pulses</p> <p>LED duration <b>ON</b> / <b>OFF</b>: 250 ms<br/> LED duration <b>OFF</b>: 1500 ms</p> |
| 3 | BLUE ON                               | <p>WSU Battery SOC ≥ 95%</p> <p>LED duration <b>ON</b>: constantly</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|   | <b>Charging Monitoring</b>            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| 4 | BLUE ON                               | <p>(WSU Battery SOC ≥ 95%)</p> <p>LED duration <b>ON</b>: constantly</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| 5 | BLUE PULSING                          | <p>(WSU Battery SOC &lt; 95%)</p> <p>LED duration <b>ON</b> / <b>OFF</b>: constantly</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| 6 | BLUE FLASHING                         | <p>(WSU Battery SOC &gt; 100) AND [(Charging Monitoring = LOW POWER) OR (Charging Monitoring = HIGH POWER)]</p> <p>LED <b>FLASHING</b> frequency: 2 Hz</p> <p>NOTE: WSU Battery SoC is typically set to 255 if not applicable, but any value greater than 100 is treated as invalid</p>                                                                                                                                                                                                                                                                                                                                                                                  |

## 18 Part numbers

### 18.1 Subsystems

| Part name          | Part number | Quantity |
|--------------------|-------------|----------|
| <b>WPB</b>         | EOE17010813 | 1        |
| <b>WPP</b>         | EOE17010951 | 1        |
| <b>WSU 24/36 V</b> | EOE17011077 | 1        |
| <b>WSU 50 V</b>    | EOE17010950 | 1        |

Table 25 Parts numbers for subsystems

### 18.2 Spare parts

| Part name                                           | Part number | Quantity |
|-----------------------------------------------------|-------------|----------|
| <b>WSU Deutsch Mating Half</b><br>(DT04-12PA-C015)  | TBD         | 1        |
| <b>WPB Mounting Bracket</b><br>(delivered with WPB) | TBD         | 1        |
| <b>WPP Mounting Bracket</b><br>(delivered with WPP) | TBD         | 1        |

Table 26 Part numbers for spare parts

### 18.3 Development Kit

| Part name                                                                                                                                                         | Part number | Qty |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|-----|
| <b>Development kit</b><br>Scope of delivery:<br>- WSU Cable Harness<br>- CAN Bus Termination; D-Sub to D-Sub<br>- Adapter for <i>PCAN-view</i> tool; D-Sub to USB | EOE99001072 | 1   |

Table 27 Part number for development kit

## 19 Warranty

The following section provides the information regarding warranty and non-warranty conditions. Make sure to go through these conditions before approaching Delta for warranty service.

### 19.1 Warranty Conditions

The limited warranty is applicable for physical goods/products purchased from Delta and covers the following conditions.

- The limited warranty applies only to material and production defects under normal use and maintenance during the warranty period.
- Delta repairs or exchange the defective parts under normal use and maintenance during the warranty period.
- The warranty period for the physical goods/products purchased from Delta is valid for 24 months from the date of manufacturing.

### 19.2 Non-Warranty Conditions

The limited warranty does not cover the following conditions:

- Any defects which is not resulting from material and production.
- Failed to obey the safety instructions and guidance given in this document.
- Scratches and wear due to improper handling or installation of the physical goods/products.
- Any indication that the enclosure for WPP and WSU has been opened.
- Cables or connectors has been removed or changed.
- Firmware being loaded is of an older version than the one indicated on the product label.
- Accidental damage or damage caused by other devices.

Kindly contact Delta to determine the problem and to provide with a most appropriate solution.

### 19.3 Return Procedure

In case of repair or return under limited warranty period, kindly contact your Delta sales representative who would assign a RMA number and provide packing and shipping details.

### 19.4 Product Life

Each subsystem product life is 10 years or 44,000 hours, whichever comes first.

## 20 Product Disposal

### **Disposal of system and subsystems**

The WCS and its subsystems constitute industrial electronic equipment. Disposal must be in accordance with applicable local regulations.

### **Disposal of packaging materials**

Packaging materials must be disposed of in accordance with applicable local regulation.

## 21 List of Figures

|           |                                                                                        |    |
|-----------|----------------------------------------------------------------------------------------|----|
| Figure 1  | Components of the Wireless Charging System (WCS)                                       | 14 |
| Figure 2  | External components of the Wireless Primary Box                                        | 17 |
| Figure 3  | Status LED Panel on WPB                                                                | 19 |
| Figure 4  | Field wire terminals on WPB                                                            | 20 |
| Figure 5  | WPB – Ethernet Service Interface                                                       | 21 |
| Figure 6  | WPB – Heavy-duty connector                                                             | 22 |
| Figure 7  | Components of the Wireless Primary Pad (WPP)                                           | 25 |
| Figure 8  | Status LED Panel on WPP                                                                | 26 |
| Figure 9  | Heavy-duty plug on WPP with cables                                                     | 27 |
| Figure 10 | Components of the Wireless Secondary Unit (WSU)                                        | 29 |
| Figure 11 | WSU Control cable                                                                      | 30 |
| Figure 12 | Type labels                                                                            | 35 |
| Figure 13 | Wireless charging interfaces                                                           | 40 |
| Figure 14 | Controlling the Wireless Charging Process                                              | 41 |
| Figure 15 | Output Power and Current Limits with Variable Voltage - 24V                            | 44 |
| Figure 16 | Output Power and Current Limits with Variable Voltage - 36V                            | 44 |
| Figure 17 | Output Power and Current Limits with Variable Voltage - 50V                            | 45 |
| Figure 18 | Output Power Derating vs Charge Time - 50V                                             | 45 |
| Figure 19 | Maximum misalignment (horizontal shift + angle) at 24 VDC, WSU vertically mounted      | 46 |
| Figure 20 | Maximum misalignment (horizontal shift + angle) at 24 VDC, WSU horizontally mounted    | 47 |
| Figure 21 | Maximum misalignment (horizontal shift + angle) at 36/50 VDC, WSU vertically mounted   | 48 |
| Figure 22 | Maximum misalignment (horizontal shift + angle) at 36/50 VDC, WSU horizontally mounted | 49 |
| Figure 23 | Pad Alignment with Vertical Offset                                                     | 50 |
| Figure 24 | Efficiency vs. Air gap - 24V                                                           | 51 |
| Figure 25 | Efficiency vs. Air gap - 36V                                                           | 51 |
| Figure 26 | Efficiency vs. Air gap - 50V                                                           | 52 |
| Figure 27 | Curve – Output Power Derating vs Charge Time – 50 V                                    | 54 |
| Figure 28 | Mounting orientation of WPP and WSU – Variant 1                                        | 64 |
| Figure 29 | Mounting orientation of WPP and WSU – Variant 2                                        | 65 |
| Figure 30 | Mounting orientation of WPP and WSU – Variant 3                                        | 66 |
| Figure 31 | <i>Mounting orientation of WPP and WSU – Variant 4</i>                                 | 67 |
| Figure 32 | WPP – Mounting on ferrous metals                                                       | 69 |
| Figure 33 | WPP – Mounting on non-ferrouse metals                                                  | 69 |
| Figure 34 | WPP – Mounting flush with ferrous metals                                               | 70 |
| Figure 35 | WPP – Mounting flush with non-ferrous metals                                           | 70 |
| Figure 36 | WSU – Mounting on non-ferrous metals                                                   | 71 |
| Figure 37 | WSU – Mounting on ferrous metals                                                       | 71 |
| Figure 38 | WSU – Mounting flush with non-ferrous metals                                           | 72 |
| Figure 39 | WSU – Mounting flush with ferrous metals                                               | 72 |
| Figure 40 | EMF keep-out area, Mounting variant 1: WPP cables on the left                          | 75 |
| Figure 41 | Example for safety markings; WPP mounted to a wall, cable on the left                  | 76 |
| Figure 42 | Example for safety markings; WPP mounted to a post, cable on the left                  | 77 |
| Figure 43 | EMF keep-out area, Variant 2: WPP cables on the top                                    | 78 |
| Figure 44 | Example for safety markings; WPP mounted to a wall, cables on the top                  | 79 |
| Figure 45 | Example for safety markings; WPP mounted to a post, cable on the top                   | 80 |
| Figure 46 | EMF keep-out area, Variant 3: WPP cables at the bottom                                 | 81 |
| Figure 47 | Example for safety markings; WPP mounted to a wall, cables at the bottom               | 82 |

|           |                                                                         |     |
|-----------|-------------------------------------------------------------------------|-----|
| Figure 48 | Example for safety markings; WPP mounted to a post, cable at the bottom | 83  |
| Figure 49 | Dimensions of WPB packaging                                             | 88  |
| Figure 50 | Installation of WPP – Rear View                                         | 102 |
| Figure 51 | Connecting WPP heavy-duty plug to WPB                                   | 103 |
| Figure 52 | Feeding the Cable through Cable Gland (view without Covers)             | 107 |
| Figure 53 | Mounting WSU on Vehicle                                                 | 112 |
| Figure 54 | WSU mounting holes                                                      | 114 |
| Figure 55 | WSU Cable Connections                                                   | 116 |
| Figure 56 | Auxiliary Connections                                                   | 117 |
| Figure 57 | Possible Status LED Panel Scenarios                                     | 170 |
| Figure 58 | WPB with stack light                                                    | 183 |
| Figure 59 | Pin assignment of stack light connector                                 | 184 |

## 22 List of Tables

|          |                                                             |     |
|----------|-------------------------------------------------------------|-----|
| Table 1  | Required supply disconnecting device (SDD)                  | 20  |
| Table 2  | Specifications WPB – Mechanical                             | 23  |
| Table 3  | Specifications WPB – AC Input                               | 23  |
| Table 4  | Specifications – Wireless Primary Pad (WPP) – Mechanical    | 28  |
| Table 5  | Pin assignment WSU Deutsch Connector                        | 30  |
| Table 6  | Specifications – WSU – Auxiliary Input Power                | 31  |
| Table 7  | Specifications – WSU – Auxiliary Input Power                | 31  |
| Table 8  | Specifications – Wireless Secondary Unit (WSU) – Mechanical | 32  |
| Table 9  | Specifications – Wireless Secondary Unit (WSU) – DC Output  | 32  |
| Table 10 | Efficiency and Losses with WPP and WSU perfectly centered   | 52  |
| Table 11 | LED indications – general                                   | 127 |
| Table 12 | LED indications – WSU positioning during charging           | 127 |
| Table 13 | Troubleshooting of WPB                                      | 171 |
| Table 14 | Events – WPB – Event class 0                                | 171 |
| Table 15 | Events – WPB – Event class 1                                | 173 |
| Table 16 | Events – WPB – Event class 2                                | 174 |
| Table 17 | Events – WPB – Event class 3                                | 175 |
| Table 18 | Events – WPB – Event class 4                                | 176 |
| Table 19 | Troubleshooting on WPP                                      | 177 |
| Table 20 | Troubleshooting on WSU                                      | 178 |
| Table 21 | Events – WPB – Event class 1                                | 180 |
| Table 22 | Events – WPB – Event class 2                                | 182 |
| Table 23 | Events – WPB – Event class 3                                | 182 |
| Table 24 | Specifications – WPB – Stack light connector                | 184 |
| Table 25 | Parts numbers for subsystems                                | 186 |
| Table 26 | Part numbers for spare parts                                | 186 |
| Table 27 | Part number for development kit                             | 186 |

## 23 Abbreviations and Acronyms

| Acronym / Abbreviation | Definition                                                                                                                    |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| %                      | Percentage                                                                                                                    |
| °C                     | Centigrade                                                                                                                    |
| μH                     | Micro Henry                                                                                                                   |
| μT                     | Micro Tesla                                                                                                                   |
| A                      | Ampere                                                                                                                        |
| AC                     | Alternating Current                                                                                                           |
| AGV                    | Automated Guided Vehicle                                                                                                      |
| AMR                    | Automated Mobile Robot                                                                                                        |
| approx.                | Approximately                                                                                                                 |
| AUX                    | Auxiliary                                                                                                                     |
| AUXIN                  | Auxiliary Input                                                                                                               |
| AWG                    | American Wire Gauge                                                                                                           |
| BMS                    | Battery Management System                                                                                                     |
| CAN                    | Controller Area Network                                                                                                       |
| Cont.                  | Continued                                                                                                                     |
| dB(A)                  | The unit of measurement of the sound pressure level according to the internationally standardized frequency weighting curve A |
| DC                     | Direct Current                                                                                                                |
| DIN                    | Deutsche Industrie Norm                                                                                                       |
| e.g.                   | Example                                                                                                                       |
| EMF                    | Electromagnetic Field                                                                                                         |
| EN                     | European Norm / European standard                                                                                             |
| EU                     | European Union                                                                                                                |
| FMS                    | Fleet Management System                                                                                                       |
| ft                     | Feet                                                                                                                          |
| Gnd                    | Ground                                                                                                                        |
| H x W x D              | Height x Width x Depth                                                                                                        |
| Hz                     | Hertz                                                                                                                         |
| i.e.                   | That is                                                                                                                       |
| in                     | Inch                                                                                                                          |
| kBit/s                 | Kilobit per second                                                                                                            |
| kg                     | Kilogram                                                                                                                      |
| kV                     | Kilo Volt                                                                                                                     |
| KVA                    | Kilo Volt Amps                                                                                                                |
| kW                     | Kilowatt                                                                                                                      |
| lb                     | Pound                                                                                                                         |

| Acronym / Abbreviation | Definition                                                                                                                                                                               |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LED                    | Light Emitting Diode                                                                                                                                                                     |
| LV                     | Low voltage                                                                                                                                                                              |
| m                      | Meter                                                                                                                                                                                    |
| M32                    | Metric Thread Diameter 32mm                                                                                                                                                              |
| mA                     | Milliampere                                                                                                                                                                              |
| Max.                   | Maximum                                                                                                                                                                                  |
| MHz                    | Megahertz                                                                                                                                                                                |
| mm                     | Millimeter                                                                                                                                                                               |
| N connection           | Neutral line                                                                                                                                                                             |
| NC                     | Not Connected                                                                                                                                                                            |
| NFPA                   | National Fire Protection Association                                                                                                                                                     |
| Nm                     | Newton meter                                                                                                                                                                             |
| Ohm                    | Unit of Electrical Resistance                                                                                                                                                            |
| PE                     | Protective Earth                                                                                                                                                                         |
| PG36                   | Pg thread DIN 40430 “Panzerrohrgewinde” (Armor pipe thread) size 36                                                                                                                      |
| PPL                    | Pad to Pad Link (communication between WPP and WSU)                                                                                                                                      |
| RMA                    | Return Material Authorization                                                                                                                                                            |
| RMS                    | Root Mean Square                                                                                                                                                                         |
| ROGB/24                | Stack light type: Red Orange Green Blue, 24VDC                                                                                                                                           |
| SDD                    | Supply Disconnecting Device                                                                                                                                                              |
| TN-CS                  | Terrestrial Neutral Combined and Separated                                                                                                                                               |
| TN-S                   | Terrestrial Neutral Separated                                                                                                                                                            |
| USA                    | United States of America                                                                                                                                                                 |
| V                      | Volts                                                                                                                                                                                    |
| V <sub>AC</sub>        | Volts Alternating Current                                                                                                                                                                |
| VDC                    | Volts Direct Current                                                                                                                                                                     |
| VDE 0105-100           | “Verband der Elektrotechnik Elektronik Informationstechnik e. V.”<br>Standard 0105-100<br>“Association for Electrical, Electronic & Information Technologies e. V.”<br>Standard 0105-100 |
| V <sub>rms</sub>       | Volt Root Mean Square                                                                                                                                                                    |
| w/o                    | Without                                                                                                                                                                                  |
| WCS                    | Wireless Charging System                                                                                                                                                                 |
| WMS                    | Warehouse Management System                                                                                                                                                              |
| WPB                    | Wireless Primary Box                                                                                                                                                                     |
| WPP                    | Wireless Primary Pad                                                                                                                                                                     |
| WPU                    | Wireless Primary Unit (WPB and WPP)                                                                                                                                                      |
| WSU                    | Wireless Secondary Unit                                                                                                                                                                  |



More information

## **Delta Energy Systems (Germany) GmbH**

Tscheulinstrasse 21, 79331 Teningen

E-mail: [IEV.sales@deltaww.com](mailto:IEV.sales@deltaww.com)

[www.deltaww.com](http://www.deltaww.com)