

190.00 mm

150.00 mm

4 in 1 Star Projector N8+

USER MANUAL

Star Light Projector • White Noise • Alarm Clock • Bluetooth Speaker



⚠️ CHARGE FIRST! Before using, plug it into power outlet(adapter included) until it is fully charged. Then you can start your exciting journey with it.

Star Projector

Short press **⏻** to switch the clock color (there are 6 digit colors), and the clock color can also be automatically cycled. Long press **⏻** 10 voice control function to turn on/off the display indicator (ringed "SC").

Short press **☀️** to adjust the brightness of the projection pattern, 4 brightness levels.

Short press **🎵** to adjust the projector display pattern, 6 display modes: Stars➔Rainbow, stars➔Rainbow, stars➔Rainbow, stars➔Rainbow, stars➔Rainbow, stars➔Rainbow. Long press **⏻** 35 to turn on/off the projection.

Alarm Clock

Short press **⏻** to adjust the brightness of the display, 4 brightness levels.

When the alarm sounds, press any key (except **⏻**) and the remote control switch **⏻** to turn on the projector. The screen displays "SC" (screen symbol). The alarm is canceled, and the beep is 5 minutes. Short press **⏻** to turn off the alarm.

Short press **⏻** to switch between 7 and 24 hour modes. First long press **⏻** to set the time and mode, then use **⏻** to set the accurate time and mode.

Long press **⏻** to remove the alarm setting. When pressing **⏻** to setting the alarm time, ring period (3 modes) and alarm sound (7 sounds can choose).

Bluetooth & White Noise

Short press **🔌** to connect/disconnect the Bluetooth or play/stop white noise music.

When Bluetooth was connected to white noise music is playing. Long press **🔌** to stop the deep sleep. When the clock light flash, select the sleep time by adjusting **⏻** (up/down) (off), 10 minutes, 20 minutes, 30 minutes.

Press this button **🔌** again to confirm the setting and exit this mode. If there is no operation for 5 seconds, it will automatically confirm the setting and exit this mode.

1. Short press **🔌** switch into Bluetooth/white noise/stop music.

2. Bluetooth Music: Long press **🔌** for 35, the indicator light "SC" flashes means it's connecting to device. When it was connected with your device successfully, the indicator light "SC" plays on (The Bluetooth name is N8+). After Bluetooth connected, press **🔌** to adjust the volume and tracks.

3. White Noise Mode: 14 songs to choose. Press **🔌** to adjust the volume and tracks.

4. Bluetooth/white noise mode, short press **🔌** to charge into the previous/next song. Long press **🔌** to increase/decrease the volume. In clock alarm timer mode, short press **🔌** to increase/decrease the setting time.

(Note: Bluetooth automatically connects to the last connected device by default and does not support calls, video or voice calls. After a device is not out of range of Bluetooth connection, it will not automatically reconnect to Bluetooth if it is back in range.)

On/Off

Power On/Off

Alarm Clock

Long press **⏻** 35 to enter the setting mode and set the alarm time, ring (2 modes) and alarm ring (7 sounds) by pressing **⏻**. Short press **⏻** to turn the alarm on or off.

Short press **⏻** switch 12/24 hour mode.

Long press **⏻** to enter the setting mode and set the time and week through **⏻**.

When the alarm sounds, press any key (except **⏻**) and the remote control switch **⏻** to turn on the projector. The screen displays "SC" (screen symbol). The alarm is canceled, and the beep is 5 minutes. Short press **⏻** to turn off the alarm.

Short press **⏻** to adjust the brightness of the display, 4 brightness levels.

Star Projector

Short press **☀️** to adjust the brightness of the projection pattern, 4 brightness levels can be adjusted.

Short press **🎵** to adjust the projector display pattern, 6 display modes: Stars➔Rainbow, stars➔Rainbow, stars➔Rainbow, stars➔Rainbow, stars➔Rainbow, stars➔Rainbow. Long press **⏻** to turn on/off the projection lamp.

Long press **⏻** to voice control function to turn on or off, the display indicates the symbol "SC".

Short press **⏻** to switch the clock color (there are 6 digit colors), and the clock color can also be automatically cycled.

Alarm Clock

Short press **⏻** you can switch the Bluetooth/white noise/music function, it will play 15 seconds (including 5 sound music, 4 piano music). In Bluetooth mode, long press **🔌** for 35 to disconnect, the indicator light "SC" flashes, search for the last device.

Long press **⏻** the sleep time is set, the clock light flashes, and the sleep time is extended through **⏻**. There are 4 modes of sleep time, which are possible, 15 minutes, 20 minutes or 30 minutes.

In Bluetooth/white noise mode, short press **🔌** to the previous/next. Long press **🔌** to turn the volume. In clock alarm timer mode, use **🔌** to adjust the time/week/setting.

Short press **⏻** to play or pause music.

In Bluetooth/white noise mode, short press **🔌** next music. Long press **🔌** to increase/decrease the volume. In clock alarm timer mode, use **🔌** to adjust the time/week/setting.

1

2

3

4

5

Product Parameter

Parameter	Description
Input voltage and current	5V1A
Operating temperature	-20~+50℃ (-4~+104℉)
Built-in battery	3.7V 220mAh
Charging port	Type-C
Projection distance	<5 meters (16.4ft)
Bluetooth version	5.0
Bluetooth distance	<10 meters (49.2ft)
Remote control distance	<6 meters (19.68ft)
Remote control angle	<30°

7 Alarm Clock Songs

Number	Description	Number	Description
01	Alarm sound 1	02	Alarm sound 2
03	Classic engines 1	04	Alarm sound 3
05	Classic engines 2	06	Plano 1
07	Plano 2		

14 White Noise Songs

Description	Description
S-01 White noise	S-02 Breeze
S-03 Wave	S-04 River
S-05 Train	S-06 Dropping water
S-07 Chirrup	S-08 Rain into the leaves
S-09 Swan Lake Music Box	S-10 Plano 1
S-11 Plano 2	S-12 Plano 3
S-13 Plano 4	S-14 Plano 5

⚠️ Attention

1. Please connect to the charger before use, please fully charge before use.

2. Charging prompt, the indicator light is red when charging, and indicator light is blue after full charged.

3. When used as an alarm clock, it is recommended to use it plugged in. This is to prevent the machine from automatically switching off in the middle of the night when you are asleep, or if the low battery alarm disturbs you in the middle of the night.

4. Low battery warning, when the built-in battery voltage is low, a "Ding-dong" alarm will sound, and the indicator light below the display screen flashes, the projection lamp and the sound control function are turned off, and the relevant button operation will sound an alarm; the indicator light will continue to flash, and the "Ding-dong" will sound every 1 minute. Alarm sounds to remind you to charge until the product clock and bluetooth function are turned off at low power; plug in an external power supply, and the alarm will be cancelled.

5. The light effect will be better if it is shown in darker places. The projection area is influenced by the distance between the projector and the ceiling.

6. For eye protection, please do not look at the projection lamp beads directly.

Package List

4 in 1 Star Projector *1

120cm charging cable *1

Adapter *1

Manual *1

Remote control *1

Base *1

Contact Us

2096837958@qq.com

Amazon Online Message

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

– Reorient or relocate the receiving antenna.

– Increase the separation between the equipment and receiver.

– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

– Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.