


105x145mm 2P

P7 掌上音响麦克风 使用说明书

功能介绍

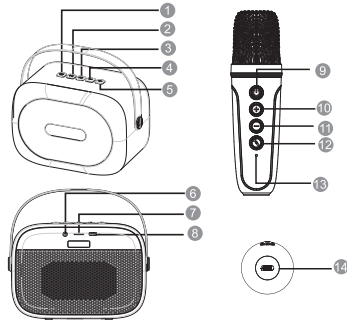

1		长按开/关机 单击切换灯光 双击关闭/开启灯光
2		单击暂停/播放
3		长按切换模式 单击切换模式(TF卡、蓝牙)
4		长按上一曲 单击音量减
5		长按下一曲 单击音量加
6		AUX接口
7		TF卡接口
8		Type-C充电接口
9		长按开/关机 单击麦克风开/关
10		长按上一曲 短按音量加 双击音量加
11		长按下一曲 短按音量减 双击音量减
12		长按混响切换 单击混响开/关
13		蓝灯指示灯 红灯充电指示灯
14		麦克风充电接口

产品信息

- 产品名称: 掌上K歌音响
- 产品型号: P7
- 执行标准: GB 4943.1-2022
- 输出功率: 5W
- 输入信号: 42DB
- 电池: 高性能大容量锂电池
- 充电电压: DC5V
- 频率范围: 106Hz-20kHz
- 供电方式: DC充电和内置电池

主要功能

- 采用高还原电声系统
- 3.7V高性能电池
- 声音穿透力强, 覆盖面广
- 超强MP3音频解码技术
- 全数字音频处理, 音质清晰, 高灵敏

充电连接示意图

将充电线USB头插入标准的USB电源适配器(5V1A), 充电线Type-C头插入音箱的充电接口中。USB左侧的红色指示灯亮表示产品开始充电, 红色指示灯熄灭表示电池已充满, 可断开充电器和音箱的连接。



常见问题处理


1. 开机后如果指示灯没有亮起, 请检查音响电量是否充足, 或是将音响连接到5V/1A电源上进行充电, 充电时间大约在3~4小时。
2. 麦克风没有声音, 可能是电源没有打开, 模式不正确, 或者音量没有调整请调节好麦克风音量。
3. 如果是音响没有混响, 可能是混响开关已关闭, 请打开混响开关。
4. 如果麦克风有噪音, 可能是因为环境噪音, 信号干扰, 话筒喇叭太近等, 请重新调试麦的方向。
5. 如果蓝牙播放中断, 可能是因为蓝牙距离太远, 或是手机和扩音器之间有障碍物, 影响信号的传输, 请靠近连接的手机, 避开障碍物。
6. 如果蓝牙无法连接, 可能是因为距离太远, 有障碍物, 或是被其他手机连接, 请靠近手机避开障碍物, 断开连接的手机。
7. 如果无法充电, 检查充电器是否正常, 音响充电时候, 充电口的红色指示灯是否亮起。

服务与保修

- 保修服务条款:
1. 产品如有任何功能问题, 均可享有保修服务, 保修期为12个月。
 2. 人为损坏, 摔坏, 人为刮花, 无保修卡者不在保修范围。
 3. 客户必须填报所有必要资料(如客户姓名, 地址, 电话, 购买日期等)
 4. 在保修期内所产生的维修费用本公司负责, 运费以及其他费用本公司恕不负责。
 5. 保修服务需要有保修卡并按照规定要求操作即可保修, 否则不保修。

P7 Pocket Karaoke Speaker Operation manual

Function introduction

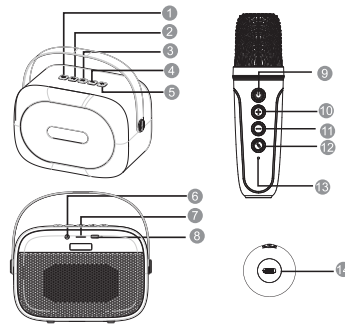

1		Long press: power on/off Single click: switch lights Double click: turn off/on lights
2		Single click: pause/play
3		Long press: original sound on/off Single click: switch mode(TF card, Bluetooth)
4		Long press: previous song Single click: volume down
5		Long press: next song Single click: volume up
6		AUX port
7		TF card port
8		TYPE-C charging port
9		Long press: power on/off Single click: microphone on/off
10		Long press: next song Short press: volume up Double click: Reverb volume down
11		Long press: previous song Short press: volume down Double click: Reverb volume up
12		Long press: magic sound switch Single click: original sound on/off
13		Blue indicator, red charging indicator
14		Microphone charging port

Product information

- Product name: Pocket karaoke speaker
- Product model: P7
- Implementation standard: GB 4943.1-2022
- Output power: 5W
- Input signal: 42DB

- Battery: High performance high capacity lithium battery
- Charging Voltage: DC5V
- Frequency range: 106Hz-20kHz
- Power supply method: DC charging and built-in battery

Main functions

- Adopt high reduction electro-acoustic system
- 3.7V high performance battery
- Strong sound penetration, wide coverage
- Super MP3 audio decoding technology
- Fully digital audio processing, clear sound quality, responsive

Charging connection diagram

Insert the USB cable into the standard USB power adapter (5V1A), and the Type-C plug of the charging cable into the charging interface of the speaker. If the red indicator light on the left side of the USB lighting indicates, the product starts to charge, and the red indicator light off indicates the charge is full, you can break the connection between the charger and the speaker



FAQ

1. If the indicator light does not light up, please check whether the power of the speaker is sufficient. Connect the speaker to a 5V/1A power supply to charge. The charging time is about 3 to 4 hours.
2. If there is no sound from the microphone, maybe the microphone is not turned on, the mode is incorrect, or the mic volume has been closed. Please adjust the microphone volume.
3. If there is no reverb in the speaker, the reverb may be closed. Please turn on the reverb volume on the microphone.
4. If there is noise from the microphone, it may be due to environmental noise, signal interference, or the microphone is too close to the speaker, etc. Please re-adjust the direction of the microphone.
5. If Bluetooth playback is interrupted, maybe Bluetooth transmission distance is too far, or there are obstacles between the mobile phone and the speaker that affect signal transmission. Please move speaker more closer to the connected mobile phone and avoid obstacles.
6. If Bluetooth cannot be connected, maybe the distance is too far, there are obstacles between speaker and phone, or this speaker connected by other mobile phones. Please move the speaker closer to the mobile phone, avoid obstacles and disconnect the other connected mobile phone.
7. If it cannot be charged, check whether the charger is normal and whether the red indicator lights up when the speaker is charging

Service and warranty

1. Warranty service is available for any functional issues with the product, with a warranty period of 12 months.
2. Warranty does not cover damages caused by human factors, such as accidental damage, dropping, intentional scratching, or lack of a warranty card.
3. Customers must provide all necessary information (such as customer name, address, phone number, purchase date, etc.)
4. The company is responsible for repair costs incurred during the warranty period, but is not responsible for shipping and other expenses
5. Warranty service requires a warranty card and compliance with the specified requirements. Without these, warranty service will not be provided

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.