

150mm

I、	Product feature	2
II、	Product description	3
III、	Installation preparation	4
IV、	Installation methods	4
V、	Operation instruction	5
	1 Pairing	5
	2 Main menu function instruction	5
	3 Motion detection setting	7
	4 Events review	7
	5 Ringtone setting	8
	6 Monitor time setting	8
	7 Volume setting	9
	8 Intercom setting	9
VI、	Function Instruction	10
	Lock wiring diagram	12
VII、	AC/DC wiring instruction	13
VIII、	Precautions	13
IX、	Trouble shooting	14
XI、	Main technical parameters	14

2. Long transmission distance

1.7 inch display

Microphone

Multi-function touch button

TF card slot

Power switch

USB charging port

7 inch display	round car camera	USB cable	manual	Adapter
pen	cable	bag of screws	black box	white box

Figure 1 consists of two diagrams. The left diagram is a side view showing a camera mounted on a wall. The camera is at a height of about 180cm, tilted at an angle of about 30 degrees. The camera's view is about 70cm horizontally and about 120cm vertically. The right diagram is a horizontal view of the camera's field of vision. It shows a camera at a height of about 180cm, tilted at an angle of about 16 degrees. The camera's view is about 66cm horizontally.

Diagram illustrating the steps to fix the camera to the wall:

1. Fix the mount bracket to the wall with screws.
2. Secure the bracket on the wall with screws.
3. Fix the camera on the bracket.
4. Fix a screw on the left side to secure the camera.

Turn off: Press and hold the on/off button for around 10 seconds till the screen shuts

Pair indoor display with outdoor camera

Caution: The indoor display and outdoor camera is paired in factory mode. No need to pair again. If the unit can not monitor or call or no signal, please contact your after sales service to confirm before following the steps below.

1. Press the **display** button to go to main menu, use arrow button to select "About" then press **OK** to confirm Select "Reset Setting" and confirm, then use arrow buttons and **OK** to go to the default password 2222 to reset the display to factory setting.

2. After reset, the indoor display, go to main menu and select "Pair" and press **OK** to go to Pair menu.

3. Use the arrow button and **OK** button to input the default password "1234" on indoor display, "di" di and go to pairing mode, screen showing "pairing".

4. Then use go up, go left press the pin hole button three times on outdoor camera, the screen will appear "di" di and go to pairing mode.

5. Both indoor display and outdoor camera sound "dins" to prompt pair successfully, displaying "pair successful".

6. After pairing failed, press "done", displaying showing "pairing failed", have to go to Pair menu to start pairing again.

1. Press **button on display go to the main menu.**

2. Click **OK** after selecting **'Your'** menu.

3. Press the **OK** button and **button to input the default channel 3254**.

4. Press the **color camera** key for three times, it sounds **'OK'**.

2. Main Menu Diagram

The diagram illustrates the main menu of a tablet interface. The tablet screen displays a home screen with various app icons: Eye, Lock, Bell, Speaker, Mail, Calendar, Clock, Alarm, App Store, and Settings. Above the screen, external components are labeled: Motion detector, Language, Tripod, Max Call, and Signal. Below the screen, a control panel includes buttons for Lightness, Direction, Volume, and a slider for Brightness/Contrast, along with a Micro-USB port and a Micro-SIM slot.

1. Press the **Home** button to go to main menu, select motion detection, press **Settings** to go to motion detection settings menu.

2. After going to motion detection setting menu, use **Up/Down** to select the sensitivity, press **Confirm** to confirm.

3. Success.

4. Success.

Events review

1. Press **Home** to go to main menu.
2. Select "Events" in the main menu, press **OK** to confirm and go to events menu.
3. Select "Event" to view the event details.
4. Event Playback Interface.

User Manual

FCC Warning
This device may fail with the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used properly, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Plug the power cord into a different wall outlet, one closer to the wall than the receiver connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Emission Statement
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This statement should be installed and operated with minimum distance 20cm between the user and the equipment.

1. Press **APP DRAWER** to main menu.

2. Select "ring tone" in the main menu, press **ENTER** to confirm and go to the ring tone setting.

3. Tone setting, can set motion detection tone and the ring tone for indoor display. Press **ENTER** and use **UP/DOWN** to select.

4. Setting success.

1

2

3

4

press "monitor time" button to go the main menu.

2 Select "monitor time" in the main menu, press to confirm and go to "monitor time" interface.

3

4 Setting success.

1. Select the "volume" in the main menu, press

2. After going to volume setting interface

Visitor calling:
If visitor press the call button on outdoor camera, the indoor monitor will sound, and screen will show the video of the visitor. The visitor image will be stored in the TF card. If indoor monitor not answer the call, the calling will be stopped after 30 seconds. And screen will show the miss call symbol. If you want to talk to the visitor after you see the video, you just need to press the call button on the display then can talk to the visitor. Press the

the button on the display then can go to monitor interface , and outdoor video will show on the display.

Storage function :
Insert the TF card on the indoor monitor (maximum support 128G), all the calling , motion detection, message, monitor video will stored in the TF card, and you can go to the events menu to view the events.

Ring tone volume :
Go to the ring tone setting interface , can turn on/off the

Screen brightness can be directly adjusted by pressing up/down arrow button on the display. Press the on the display to directly enter the event playback interface; on the monitoring interface, press the up/down arrow button to set the volume and brightness. There are language Settings, IE cardcapacity, system upgrade and more functions waiting for you to experience.

Diagram 1: Standard connection

Connector diagram: A 4-pin D-sub connector with pins 1, 2, 3, and 4. Pin 1 is connected to the red wire, pin 2 to the blue wire, pin 3 to the green wire, and pin 4 to the black wire.

Connector pinout:

1	NC
2	NC
3	NC
4	NC

Diagram 2: Power supply connection

Connector diagram: A 4-pin D-sub connector with pins 1, 2, 3, and 4. Pin 1 is connected to the red wire, pin 2 to the blue wire, pin 3 to the green wire, and pin 4 to the black wire. A power supply is connected to the red wire (+5V) and the black wire (GND).

Connector pinout:

1	NC
2	NC
3	NC
4	NC

Diagram 3: Ground connection

Connector diagram: A 4-pin D-sub connector with pins 1, 2, 3, and 4. Pin 1 is connected to the red wire, pin 2 to the blue wire, pin 3 to the green wire, and pin 4 to the black wire. A ground connection is made to the red wire (GND) and the black wire (+5V).

Connector pinout:

1	NC
2	NC
3	NC
4	NC

- Put the wiring board into the corresponding AC/DC hole on the back of the video doorbell, and then fix the screws.
- Use the matching push-type quick-connect terminal, keep one end pressed down, insert the wires of the terminal block individually and release.
- The other end also remains pressed down to connect to the external power supply, regardless of positive and negative pole, just connect to the terminal block. Please note that the external power supply AC: 8-24V, DC:

1. Leave the product away from strong magnetic field.
2. Do not spray water or other liquid on the product.
3. Do not heavily hit the display and doorbell camera.
4. Leave it away from direct sun exposure and strong reflected light.
5. Do not install the product near to place with ammonia or toxic gas.

do not wipe it with detergent or other chemical solvent.

do not disassemble the device in case of failure. Please repair at your local maintenance locations or direct contact our after service.

Trouble shooting

No response or no ringtone after calling
Check whether the indoor display and outdoor camera is red or not.
Check whether the ring tone is turned off in the ring tone ting.
Check signal strength on display to see if the signal is preferred.

No sound during intercom
Check whether the MIC on display is blocked.
Check whether the MIC of the outdoor camera is blocked.
Check whether the volume is turned on in the volume
ting.

Power supply	DC5V
Power consumption	Standby 285uA Working 250mA
Battery capacity	5000mAh

Indoor display	
Display size	7 inch
Power supply	DC 5V
Battery capacity	2000mAh
Working current	800mA
Two way intercom	Yes
Auto video record	Yes
Video playback	Yes
TF card	Max support 64G
Screen resolution	1280* 800
Working temperature	-20°C ~ -60°C
Size	18.2*13.2*2.0cm

Size	18.1*13.2*2.0cm
------	-----------------