


WARNING: SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER

Smart 44" Ceiling Fan CFS1M

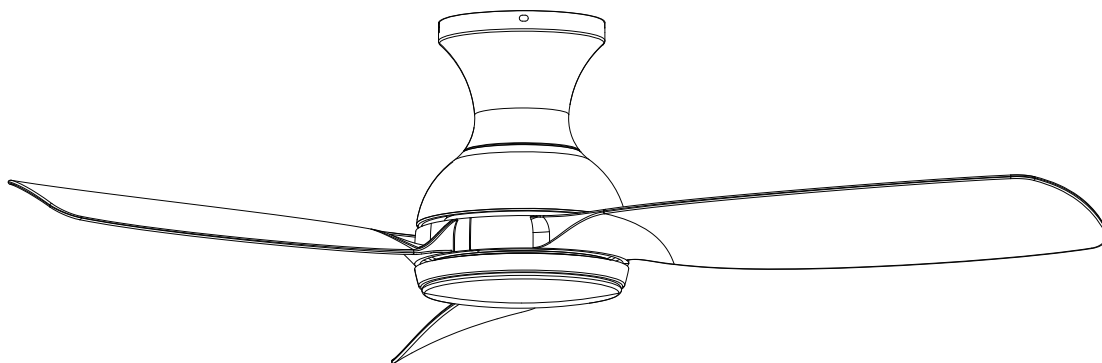

Model No.:CFL00174

FCC ID:2AW95CFL00174

Please read and review instructions before installation



FAN SUPPORT

For all questions about your ceiling fan please read all included instructions, installation procedures, troubleshooting guidelines and warranty information before starting installation.

For missing parts or general inquiries call our trained technical staff at:

+(1866)698-6211 (Mon-Fri 8:00AM-5:00PM (PT))

Email: support@consciot.com

GET SMART

This Consciot Smart Fan is:



Matter enabled for seamless connectivity and interoperability



Compatible with our Aidot app



Coordinate with smart devices for voice-activated control

DC
MOTOR

Quiet, reliable, and up to 70% more efficient than AC motor fans

The Aidot app synchronizes seamlessly with smart home devices you already own:



Scan the QR code below or search for "AiDot" in App Store or Google Play.

Google, Google Home and Google Play are trademarks of Google LLC.

Questions, problems, missing parts? Before returning to the store,
contact Consciot Customer Service.

Email: support@consciot.com

Tel: **+(1866)698-6211** (Mon-Fri 8:00AM-5:00PM (PT))

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

- Before you begin installing the fan, disconnect the power by removing fuses or turning off the circuit breakers.
- Make sure all electrical connections comply with local codes, ordinances, the National Electrical Code and ANSI/NFPA 70-199. Hire an electrician or consult a do-it-yourself handbook if you are unfamiliar with installing electrical wiring.
- Make sure the installation site you choose allows a minimum of 7 feet from the blades to the floor and at least 30 inches from the tip of the blades to any obstruction.
- The weight of the fan is 7.05 pounds.

⚠ DANGER: When using an existing outlet box, make sure it is securely attached to the building structure and can support the full weight of the fan. Failure to do this can result in serious injury or death. The stability of the outlet box is essential in minimizing wobble and noise in the fan after installation is complete.

⚠ WARNING: To avoid personal injury, the use of gloves may be necessary while handling fan parts with sharp edges.

⚠ WARNING: To reduce the risk of fire, electric shock or personal injury, mount the fan to an outlet box marked "ACCEPTABLE FOR FAN SUPPORT" and use the mounting screws provided with the outlet box. Most outlet boxes commonly used for the support of lighting fixtures are not acceptable for fan support and may need to be replaced. Consult a qualified electrician if in doubt. Secure the outlet box directly to the building structure. The outlet box and its support must be able to support the moving weight of the fan (at least 35 lbs.).

⚠ WARNING: To reduce the risk of fire, electric shock or personal injury, wire connectors provided with this fan are designed to accept only one 12-gauge house wire and two lead wires from the fan. If your house wire is larger than 12-gauge and/or there is more than one house wire to connect to the two fan lead wires, consult an electrician for the proper size wire connectors to use.

⚠ WARNING: To reduce the risk of fire, electric shock or personal injury, do not bend the blade arms when installing them, balancing the blades or cleaning the fan. Do not insert objects between the rotating fan blades.

⚠ WARNING: To reduce the risk of personal injury, use only parts provided with this fan. The use of parts other than those provided with this fan will void the warranty.

CAUTION: Be sure the outlet box is properly grounded or a ground (green or bare) wire is present.

CAUTION: Carefully check all screws, bolts, and nuts on the fan assembly ensure they are secured.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Please note changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CARE AND MAINTENANCE

At least twice each year, lower the canopy to check the downrod assembly and tighten all screws on the fan. Clean the motor housing and blades with a soft brush or lint-free cloth to avoid scratching the finish.

IMPORTANT: Shut off the main power supply before you begin any maintenance task. Do NOT use water or a damp cloth to clean the fan.

Questions, problems, missing parts? Before returning to the store,
contact Consciot Customer Service.

Email: support@consciot.com

Tel: +(1866)698-6211 (Mon-Fri 8:00AM-5:00PM (PT))

PREPARATION

Before beginning the assembly of this product, ensure all parts are present. Compare all parts with the package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated assembly time: less than 30 minutes

1. Consciot smart ceiling fan do not work with any dimmable switches, please use a single switch. (Figure 1.1).

2. Choose one of the following mounting options (Figure 1.2) :

Flushmount Installation - best suited for ceilings 8 feet or lower.

Standard Mount - not available for this model.

Angle Mount - not available for this model.

Closemount Installation - not available for this model.

3. Choose a suitable location - Ensure the blades will be at least 30 inches from any obstructions. Also check the downrod length to ensure the blades will be at least 7 feet above the floor (Figure 1.3).

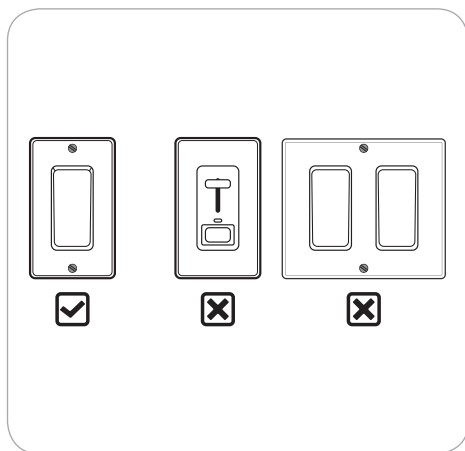


Figure 1.1

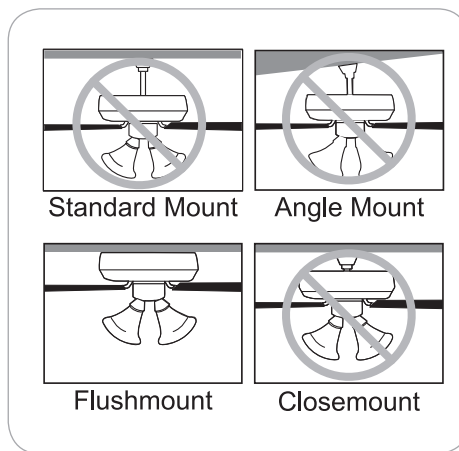


Figure 1.2


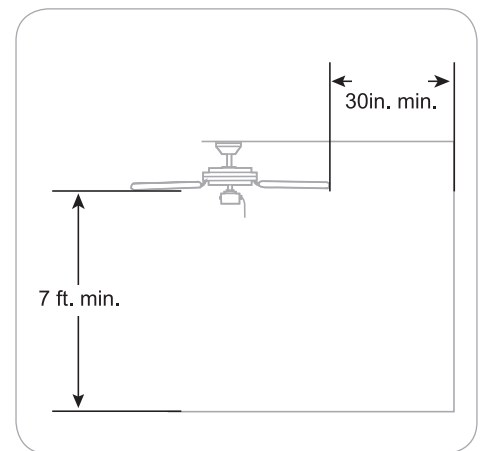


Figure 1.3

 
TOOLS & MATERIALS REQUIRED



Wire Strippers



Safety Goggles

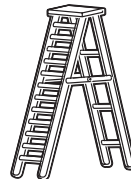

Ladder



Phillips Screwdriver



Gloves



Electrical tape

NOTE: Before discarding packaging materials, be certain all parts have been removed.



 
 


NOTE: Place the parts from the hardware bag into a small container to keep them from being lost.

Questions, problems, missing parts? Before returning to the store,
contact Consciot Customer Service.

Email: support@consciot.com

Tel: +(1866)698-6211 (Mon-Fri 8:00AM-5:00PM (PT))


PACKAGE CONTENTS

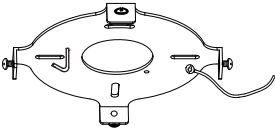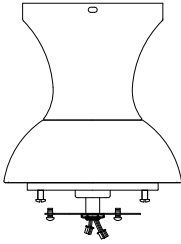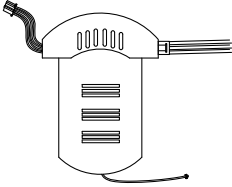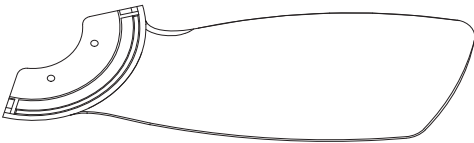								
A	Mounting plate	1	B	Fan-motor assembly	1	C	Light kit	1
								
D	Light cover	1	E	Remote control	1	F	Receiver	1
								
G	Blade				3	H	Matter control code	1

HARDWARE CONTENTS

A parts:

 - A1. Mounting bracket screws(2)
- A2. Spring washers(2)
- A3. Flat washers(2)




B parts:

- B1. Plastic wire nut(3)
- B2. Spare blade screw(1)





C parts:

 - C1. Balancing kit(1)



MOUNTING OPTIONS

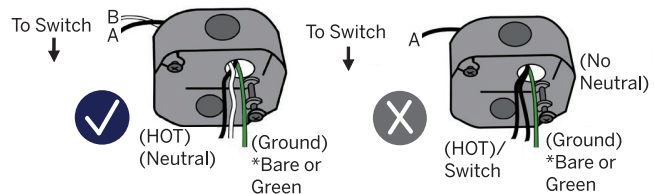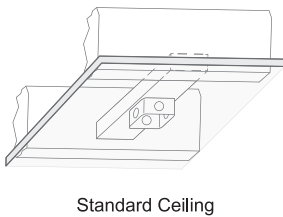

CAUTION: To prevent electrical shock, ensure electricity has been turned off at the circuit breaker before beginning.

Mount to the outlet box as shown above. If your outlet box is not mounted or if you do not have proper wiring in your outlet box, hire an electrician. You will need a hot (black), neutral (white), and ground (green or bare copper), to operate this fan.


Questions, problems, missing parts? Before returning to the store, contact Consciot Customer Service.

Email: support@consciot.com

Tel: +(1866)698-6211 (Mon-Fri 8:00AM-5:00PM (PT))


1 Install the blades

- Remove 6pcs pre-assembled blade screws from the fan-motor assembly (B).
- Align the mounting hole of the fan blades (G) with the mounting hole of the fan-motor assembly, and fix the blade with the blade screws, as shown in the figure.

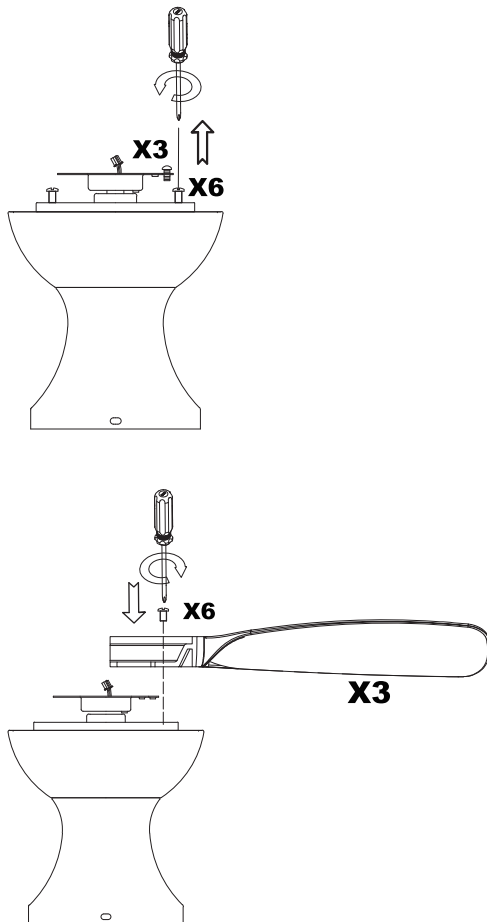


2 Install the LED light kit

- Remove 3pcs pre-assembled screws from the inside of fan-motor assembly (B).
- Connect the male connector from the LED light kit (C) to the female connector from the fan-motor assembly (B).
- Install the LED light kit (C) by screwing in the previously removed screws and tighten.

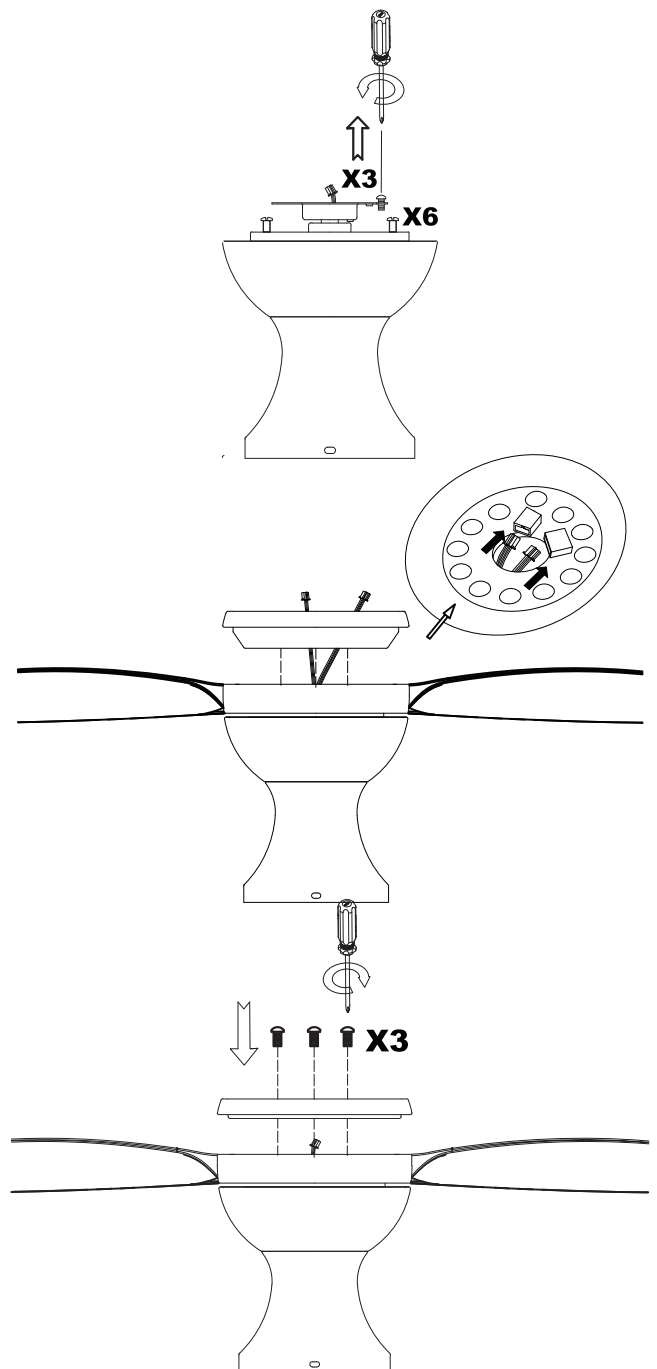


3 Install the mounting bracket to the outlet box

- Remove the 2 pre-assembled screws on the mounting plate and loosen the remaining 2 pre-installed screws to 70%.
- Attach the mounting plate (A) to the outlet box with 2 screws and washers provided. Make sure the bracket is tight and secured.

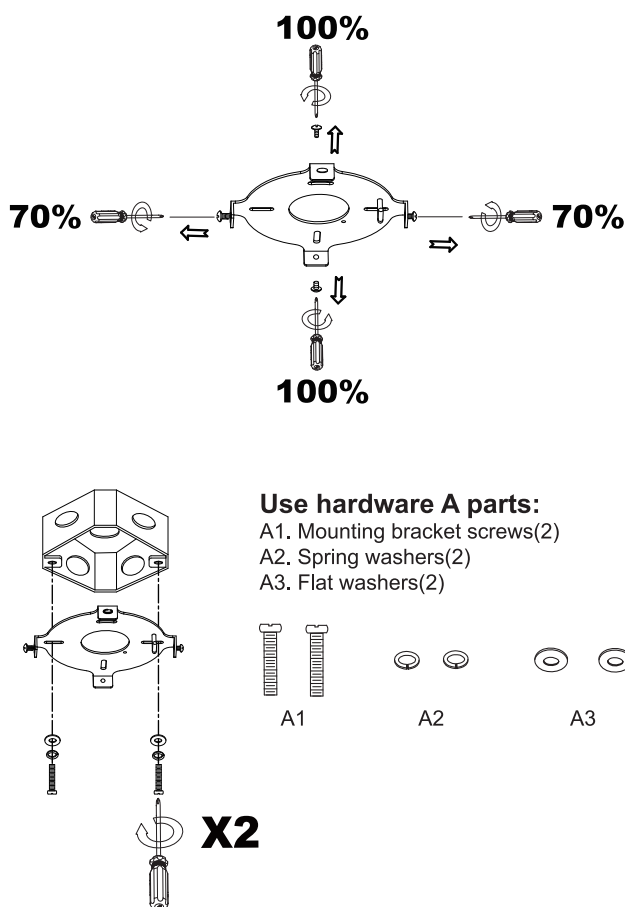


4 Making the electrical connections

- Connect the black (120V line voltage) wire from the outlet box to the black wire from the receiver (F) with the wire nut provided with the electrical hardware. Connect the white (120V neutral voltage) wire from the outlet box to the white wire from the receiver (F) with the wire nut provided with the electrical hardware. Connect the ground wire from the outlet box to the ground wires from the mounting plate (A), the fan-motor assembly (B) and receiver (F) with the wire nut provided with the electrical hardware.
- Plug the lead wire of light and the lead wire of fan to the corresponding female connector on the receiver (F).

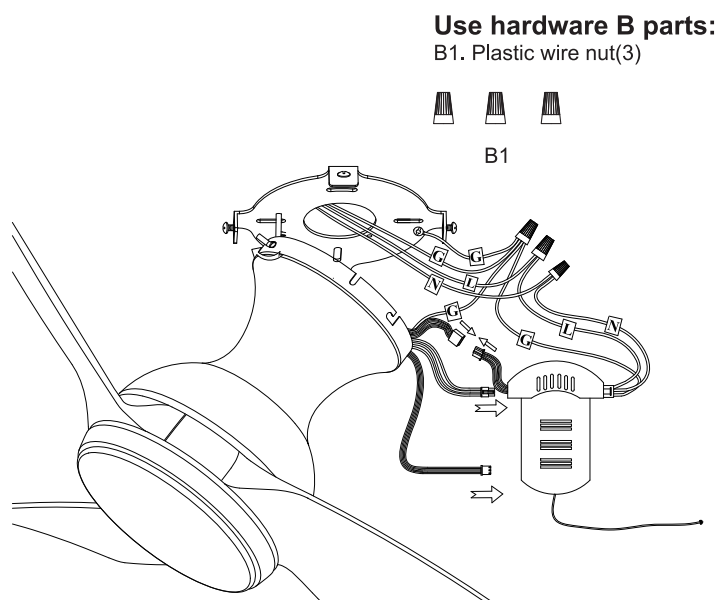


5 Set the receiver antenna

- Pull out the antenna of the receiver and clamp the positioning rubber segment at the U-shaped opening on the top side of the fan-motor assembly (B), to ensure a better antenna signal.

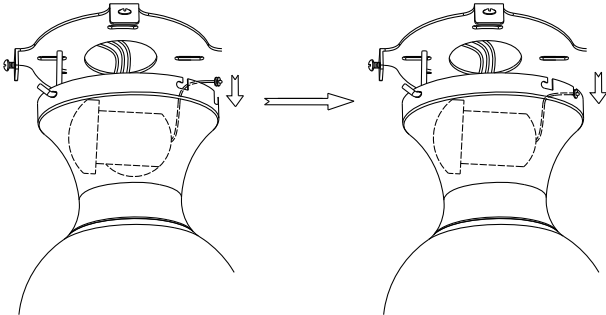

6 Hanging the fan and install the light cover

- Double-check the wire connections before finalizing hanging the fan.
- Remove the motor from the hook on the mounting plate. Slide the fan-motor assembly (B) up to the mounting bracket and place the key hole on the fan-motor assembly (B) over the screw on the mounting plate. Turn motor until it locks in place at the narrow section of the key holes.
- Align the circular hole on canopy with the remaining hole on the mounting plate. Secure by tightening the two screws previously loosened and the 2 screws previously removed.
- Rotate the light cover (D) clockwise until it is secure.

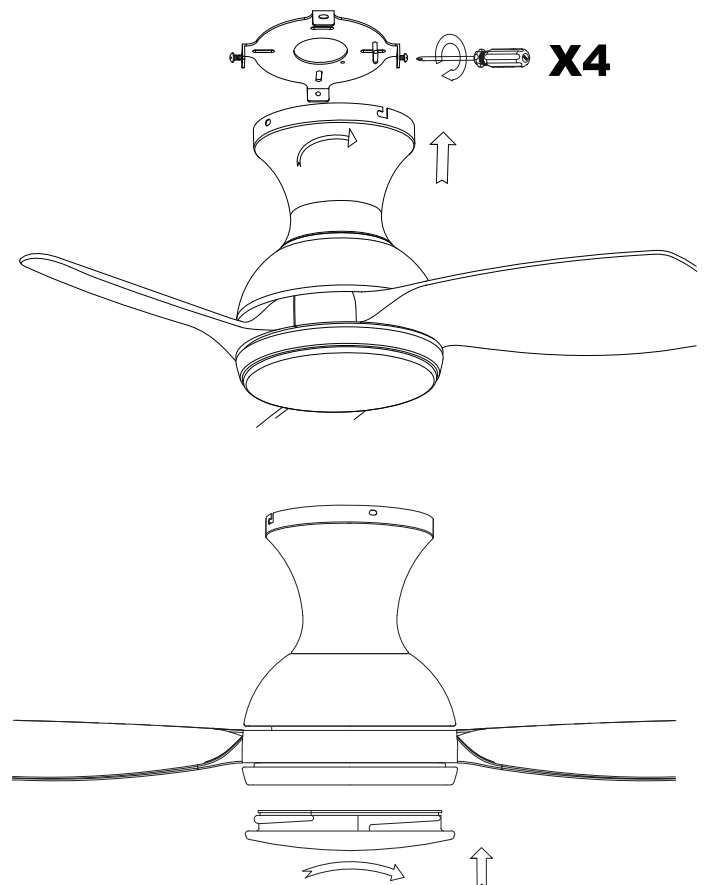


Questions, problems, missing parts? Before returning to the store,
contact Consciot Customer Service.

Email: support@consciot.com

Tel: +(1866)698-6211 (Mon-Fri 8:00AM-5:00PM (PT))

CONTROLLING THE FAN

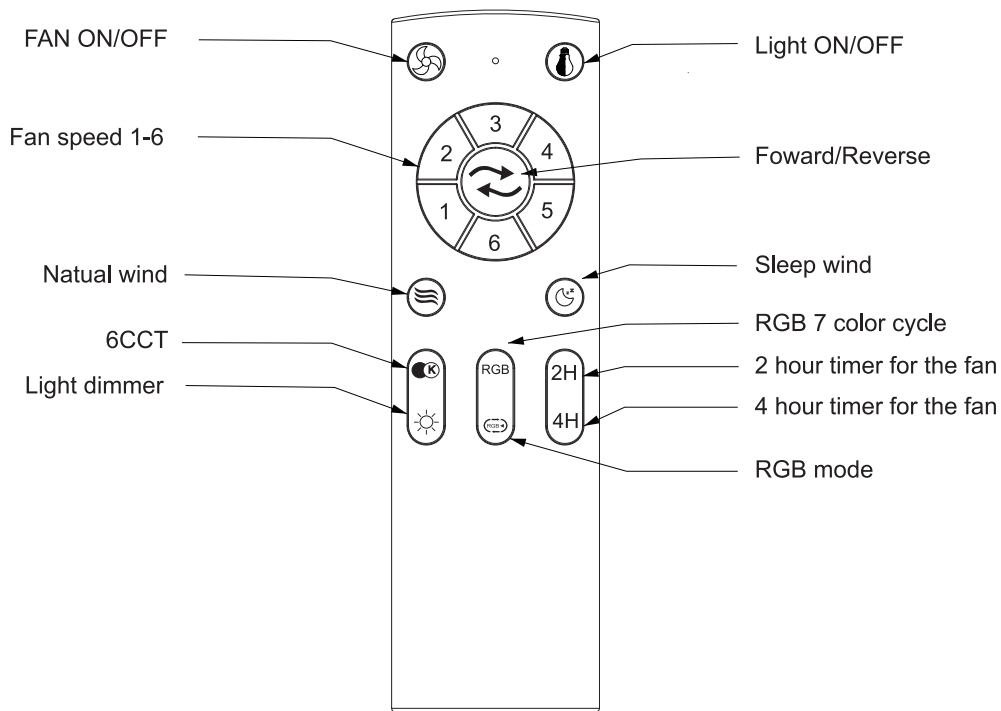

Icon	Button Name	Action
	Light ON/OFF	Short press to turn the light on/off.
	FAN ON/OFF	Short press to turn the fan on/off.
1 2 3 4 5 6	Fan Speed	Short Press the button to adjust the fan speed.
	Foward/Reverse	Short Press the button to adjust the fan diretion, the default direction is clockwise.
	Natural wind	Short press the button to adjust Comfort Breeze on/off.
	Sleep wind	Short press the button to adjust sleep wind on/off.
	6CCT	Short press cycle to adjust color temperature: cycle from 2700K-3000K-3500K-4000K-5000K-6500K-2700K...
2H 4H	Timer Button	Short press to select the desired timer, the timer is set for the fan.
	RGB Mode	Short press to select the RGB mode.
	Light Dimmer	Short press cycle to adjust brightness: cycle from 10%-20%-40%-60%-80%-100%-10%-20%....
RGB	RGB color	Short press cycle to select RGB color.

Note: The maximum working distance of the remote is 10 meters; If the indicator on the remote doesn't turn on anymore, please consider replacing the battery.

Questions, problems, missing parts? Before returning to the store, contact Consciot Customer Service.

Email: support@consciot.com

Tel: +(1866)698-6211 (Mon-Fri 8:00AM-5:00PM (PT))

REMOTE CONTROL PAIRING

The remote and receiver that shipped with your fan is already paired.

Note: When pairing a new remote, you MUST disconnect power (at the wall switch, breaker, or fan from other ceiling fans within range) to prevent faulty operation.

Remote Control Pairing & Unpairing



Pairing


Power cycle the fan by toggling the wall switch (or circuit breaker if needed). Within 8 seconds and press and hold "☀️" button for 3 seconds, and the paired light will breathe once at the warmwhite light.



Unpairing

To purge, power cycle the fan by toggling the wall switch (or circuit breaker if needed). Within 8 seconds and press and hold "●K" and "2H" buttons for 3 seconds, and the unpaired light will breathe once at the warmwhite light.

Fan Wi-Fi Reset & Factory Reset

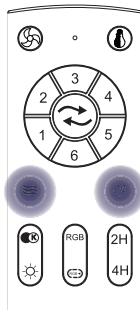

Fan Wi-Fi Reset

Press and hold "☀️" and "🌀" buttons for 3 seconds, the light will breathe once at the warmwhite light, and you can then use the Aidot app or Matter ecosystems to connect your fan to the new network.

Note:

- a.If you change your Wi-Fi settings (SSID or Security Passphrase) you will need to perform a Wi-Fi reset.
- b.In the Wi-Fi reset state, 120s will automatically exit if it is not connected, unless it enters the Wi-Fi reset again.



Factory Reset

Press and hold "4H" button for 5 seconds until the light blinks Red-Green-Blue-Warmwhite light.

Note: Factory reset will not unpairing the remote control.

Questions, problems, missing parts? Before returning to the store, contact Consciot Customer Service.

Email: support@consciot.com

Tel: +(1866)698-6211 (Mon-Fri 8:00AM-5:00PM (PT))

CONNECTING WITH AIDOT

1. Get the AiDot app by searching "AiDot" on the App Store, Google Play, or simply scan the QR code below.



Google, Google Home and Google Play are trademarks of Google LLC.

2. Sign in or create a new account.

3. Ensure Bluetooth and location services are enabled on your mobile device. Press and hold "  " and "  " buttons for 3 seconds, the light will breathe once at the warmwhite light, and you can then use the Aidot app to connect your fan to the network. The fan will flash once with warmwhite light when it is successfully paired with the AiDot.

4. Tap '+' within the AiDot app and then select your bath fan from the list of devices shown.



5. Follow the remaining instructions in the AiDot app.

CONNECTING WITH MATTER

To connect your fan to a Matter smart home ecosystem, a Matter Controller (hub) and the corresponding app are required. For example, to connect to Apple Home, a device such as a HomePod and the Apple Home app are both necessary. Before you start ensure your Wi-Fi network is 2.4 GHz, and that your mobile device and Matter Controller are connected to the Wi-Fi network you will connect your bath fan to.

1. Ensure your Wi-Fi network is 2.4 GHz.

2. Ensure your mobile device and Matter Controller are connected to the Wi-Fi network you will connect your bath fan to.

3. Ensure Bluetooth is enabled on your mobile device.

4. Open the smart home app you want to connect your fan to.

5. Within that smart home app, locate and select the option to add a device.


6. Enter your bath fan's Matter pairing code manually or by scanning its QR code, both located on your fan and in the next section of this instruction manual.

Questions, problems, missing parts? Before returning to the store,
contact Consciot Customer Service.

Email: support@consciot.com

Tel: +(1866)698-6211 (Mon-Fri 8:00AM-5:00PM (PT))

CONNECTING WITH MATTER

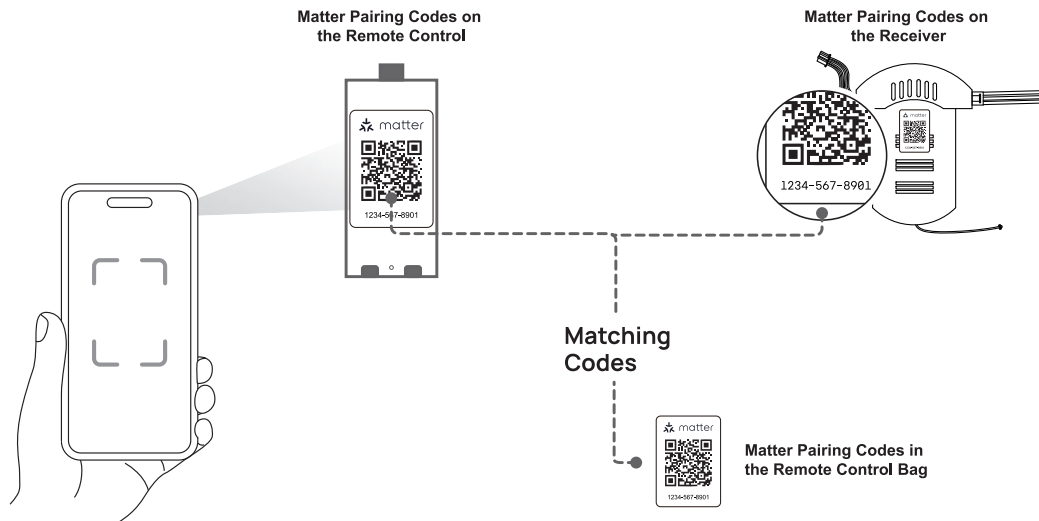


One code will appear for each bath fan in the pack. Take care to scan the correct code when adding each bath fan. You can match the code on your bath fan to the one in this instruction manual as shown in the diagram.

7. Follow any remaining instructions in the smart home app.


CONNECTING WITH ALEXA

1. Press and hold "  " and "  " buttons for 3 seconds to prepare for network pairing.

2. Open the Alexa app.

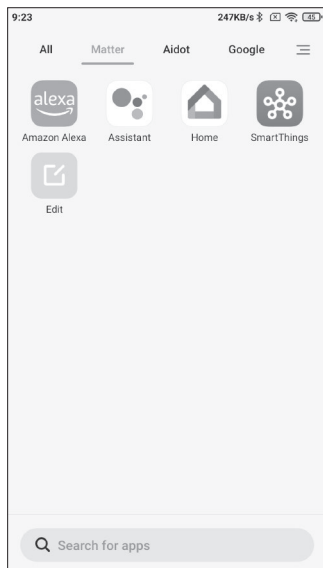

3. Click + to add a device.

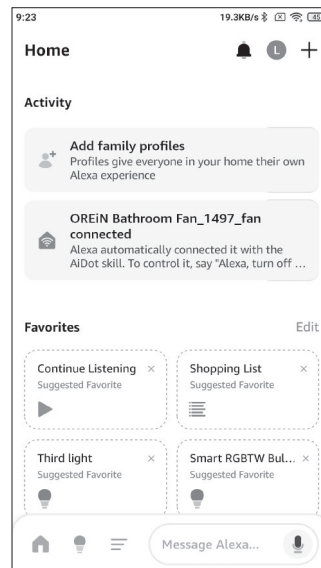



Questions, problems, missing parts? Before returning to the store,
contact Consciot Customer Service.

Email: support@consciot.com



Tel: +(1866)698-6211 (Mon-Fri 8:00AM-5:00PM (PT))

CONNECTING WITH MATTER


4. Scroll down to find the other options and choose the "matter" logo.

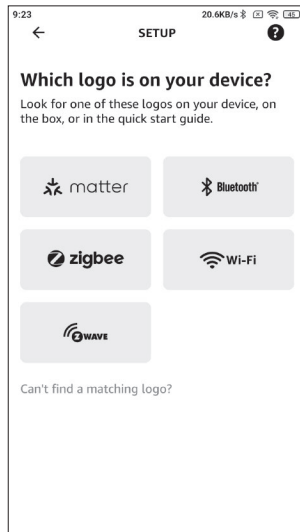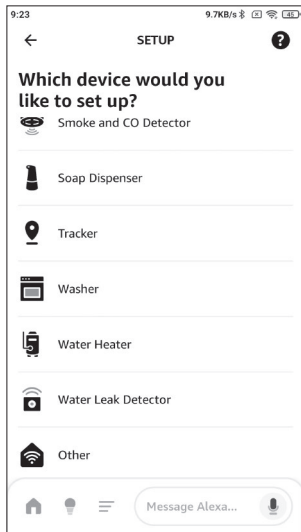


5. Follow the prompts to confirm that the device has a matter logo and is powered on.

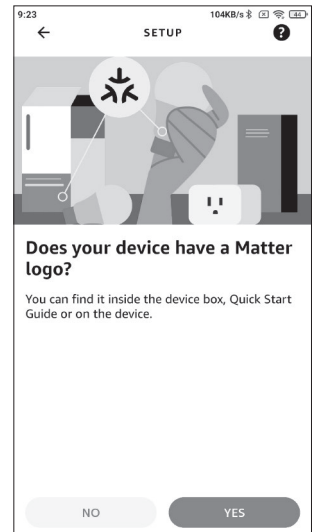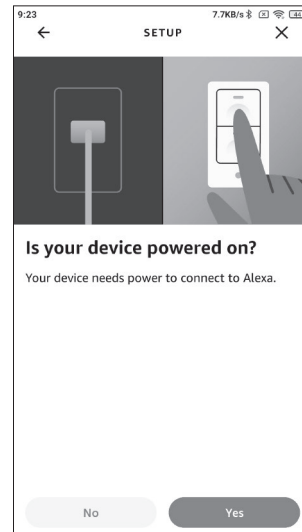


6. Scanning the Matter QR code to pair.

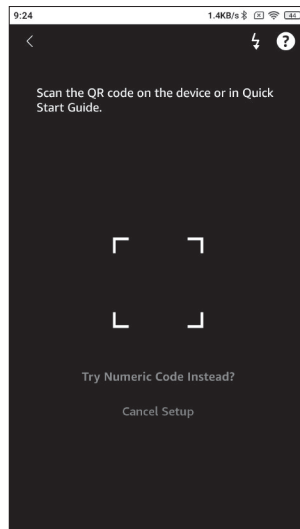

7. Waiting for the pairing.

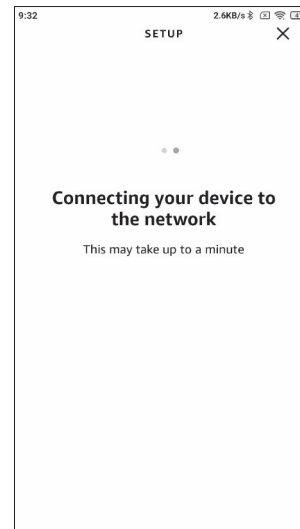

8. The fan will flash once with warmwhite light when it is successfully paired.

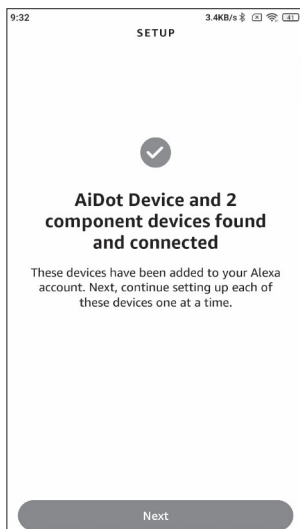

Questions, problems, missing parts? Before returning to the store,
contact Consciot Customer Service.

Email: support@consciot.com

Tel: +(1866)698-6211 (Mon-Fri 8:00AM-5:00PM (PT))

TROUBLESHOOTING

-My Fan Will Not Start-

1. Check main and branch circuit fuses or circuit breakers.
2. Check line wire connections to fan and switch wire connections in the switch housings.

WARNING: Make sure the main power is turned off!

-My Fan is Noisy-

1. Allow for 24-hour break-in period. Most noises associated with a new fan will go away during this time period.
2. Check to make sure the screws which attached to the blades (and blade arms when applicable) are tight.
3. Check to make sure all screws in motor housing are snug.
4. Make sure light cover is tightened and/or glass is snug.
5. Tighten the hanger bracket screws and make sure the outlet box is secured.
6. Your wire connectors may be rattling against the fan's canopy.
7. Make sure you have a cUL/UL approved outlet box and it is installed correctly.

-My Fan is Wobbling-

1. Make sure the fan blades are properly aligned and securely fastened to the motor housing assembly/blade arms.
2. Make sure the gaps between the blades are evenly distributed.
3. Make sure you are using an approved cUL/UL listed outlet box and it is installed correctly.

-My home Wi-Fi network is not showing up in the app's list during setup-

1. Your fan supports connection with 2.4GHz 802.11b/g/n networks. Confirm your network is compatible by checking your router settings or contact your router manufacturer.
2. Make sure your network's SSID is not hidden.
3. Your fan does not support 5 GHz network connectivity.

-My Fan failed to join the Wi-Fi network-

1. Make sure you entered the correct Wi-Fi password and your mobile device is connected to the same network you attempted to connect the fan.
2. Make sure you are within the router manufacturer's specified range. If all of these steps have failed - please power cycle your fan and router and retry.

Questions, problems, missing parts? Before returning to the store,
contact Consciot Customer Service.

Email: support@consciot.com

Tel: +(1866)698-6211 (Mon-Fri 8:00AM-5:00PM (PT))

AFTER INSTALLATION

WOBBLE

The fan blades have been adjusted in the factory to minimize any wobble


⚠ NOTE: CEILING FANS TEND TO MOVE DURING OPERATION DUE TO THE FACT THAT THEY ARE MOUNTED ON A RUBBER GROMMET. IF THE FAN WAS MOUNTED RIGIDLY TO THE CEILING, IT WOULD CAUSE EXCESS VIBRATION. MOVEMENT OF A FEW CENTIMETERS IS QUITE ACCEPTABLE AND DOES NOT SUGGEST ANY PROBLEM.

TO REDUCE THE FAN WOBBLE: PLEASE CHECK THAT ALL SCREWS WHICH SECURED THE MOUNTING BRACKET AND DOWNROD ARE SECURE.

BALANCING A WOBBLING CEILING FAN:

For your convenience, a Balancing Kit is included; please follow this procedure when balancing the fan:

1. Check that all blade and blade arm screws are secure.
2. Most fan wobbling problems are caused when blade levels are unequal. Check this level by selecting a point on the ceiling above the tip of one of the blades. Measure this distance. Rotate the fan until the next blade is positioned for measurement. Repeat for each blade. The distance deviation should be equal to 1/8"(0.32cm).
3. Use the enclosed Blade Balancing Kit if the blade wobble is still noticeable.
4. If the blade wobble is still noticeable, interchanging two adjacent (side by side) blades can redistribute the weight and possibly result in smoother operation.

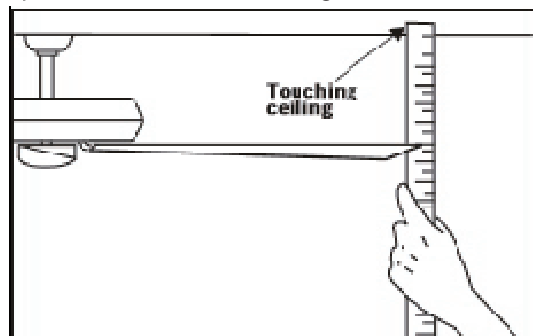

⚠ WARNING: TO REDUCE THE RISK OF PERSONAL INJURY, DO NOT BEND THE BLADE ARM WHILE INSTALLING, BALANCING THE BLADES, OR CLEANING THE FAN. DO NOT INSERT FOREIGN OBJECTS BETWEEN ROTATING FAN BLADES.

NOISE

When it is quiet (especially at night) you may hear occasional small noises. This is normal. Please allow a 24-hour "breaking-in" period, most noises associated with a new fan disappear during the time.

CARE AND CLEANING

1. Periodic cleaning of your ceiling fan is the only maintenance required. Use a soft brush or lint free cloth to avoid scratching the paint finish. Please make sure to turn off electrical power before you clean your fan
2. Do not use water when cleaning your ceiling fan. It could damage the motor or the blades and create the possibility of an electrical shock.
3. Motor has permanently lubricated ball bearing. No need to oil

⚠ NOTE: MAKE SURE THE POWER IS OFF AT THE ELECTRICAL PANEL BOX BEFORE YOU ATTEMPT ANY CLEANING OR REPAIRS.

Questions, problems, missing parts? Before returning to the store,
contact Consciot Customer Service.

Email: support@consciot.com

Tel: +(1866)698-6211 (Mon-Fri 8:00AM-5:00PM (PT))

SPRING SUNSHINE TECHNOLOGY CO., LIMITED

FLAT/RM 01-04, 24/F, FU FAI COMMERCIAL
CENTRE, 27 HILLIER STREET, SHEUNG WAN, HK

+(1866)698-6211 (Mon-Fri 8:00AM-5:00PM (PT))

support@consciot.com

www.consciot.com



Recycle

Made in China