 


SOUNDFREE S40

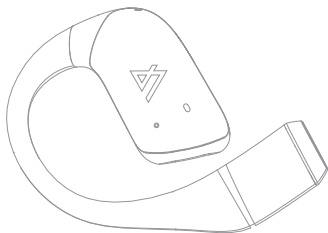

USER MANUAL

BEFORE YOU USE THIS PRODUCT

1. Read this manual carefully before using the product.
2. Following these instructions helps prevent damage and protects your rights from misuse.
3. We are not responsible for damage caused by ignoring these instructions.
4. Pay close attention to the safety instructions.
5. Store this manual safely for future use.

 
CAUTION! RISK OF INJURY

1. Keep the device and batteries away from children.
2. Small parts can be swallowed, especially by children under three.
3. Batteries contain harmful acids and can cause severe burns or death if swallowed. Seek immediate medical help if a battery is ingested.
4. Do not expose batteries to fire, short-circuit, or dismantle them—risk of explosion!
5. Recharge low batteries promptly.
6. If leaking batteries touch skin, eyes, or mucous membranes, rinse with water immediately and consult a doctor.

IMPORTANT INFORMATION ON PRODUCT SAFETY

1. Avoid extreme temperatures, shocks, or vibrations with the device.
2. Keep the device dry.


WHAT'S INSIDE?



1. LYPERTEK SOUNDFREE S40
2. Charging Case
3. Charging Cable
4. Manual

HOW TO WEAR:

 EN

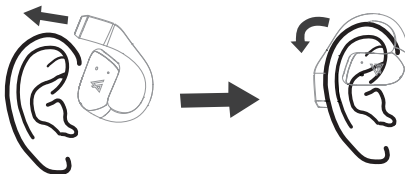


1. Place the SOUNDFREE S40 over your ear with the ear hook hanging down.
2. Rotate the device backward and rest it along the curve of your ear.

CONTROL

 = Touch control area

● = Tap

  = Tap and hold



	L / R
 Power On / Off	 3 sec
 Answer Call	● ●
 End Call	● ●
 Reject Call	 2 sec
 Play / Pause	● ●
 Previous Track	 2 sec
 Next Track	● ● ● ●  2 sec
 Voice Assistant	● ● ● ●

HOW TO RESET:

1. Put SOUNDFREE S40 into the charging case, then open the case;
2. Press and hold the L/R touch control areas simultaneously for 5 seconds. Release when the earbuds' LED flashes white for 1 second.

HOW TO CONNECT:

1. Put LYPERTEK SOUNDFREE S40 into the Charging Case
 2. Open the Charging Case, LYPERTEK S40 will enter the pairing mode.
- OR
1. Press and hold for 3 seconds to turn on the LYPERTEK S40.
 2. It will enter the pairing mode.
3. Then Select LYPERTEK S40 from the Bluetooth “DEVICES” list on the phone to connect.

MULTI-POINT CONNECTION:

1. Connect the first device
2. Turn off Bluetooth on the first device
3. Connect the second device
4. Turn on Bluetooth on the first device again

This allows both devices to be connected simultaneously in a multi-point Bluetooth configuration.

この製品を使用する前に

1. 製品を使用する前にこのマニュアルをよくお読みください。
2. これらの指示に従うことで、損害を防ぎ、不正使用からあなたの権利を保護することができます。
3. これらの指示を無視したことにより生じた損害については当社は責任を負いません。
4. 安全に関する指示に十分注意してください。
5. このマニュアルは、将来使用するために安全に保管してください。

 
注意! 怪我の危険があります

1. 本製品と電池はお子様の手の届かない場所に保管してください。
2. 小さな部品は、特に3歳未満のお子様飲み込むと、誤って飲み込む可能性があります。
3. 電池には有害な酸が含まれており、飲み込むと重度の火傷や死亡につながる可能性があります。電池を飲み込んだ場合は、直ちに医師の診察を受けてください。
4. 電池を火にかけたり、ショートさせたり、分解したりしないでください。爆発の危険があります。
5. 残量が少なくなった電池は、速やかに充電してください。
6. 液漏れした電池が皮膚、目、または粘膜に触れた場合は、直ちに水で洗い流し、医師の診察を受けてください。

製品安全に関する重要な情報

1. デバイスを極端な温度、衝撃、振動にさらさないでください。
2. デバイスを乾燥した状態に保ってください。

中身は何？



1



2



 
3



4

1. LYPERTEK SOUNDFREE S40
2. 充電ケース
3. 充電ケーブル
4. 取扱説明書

着用方法

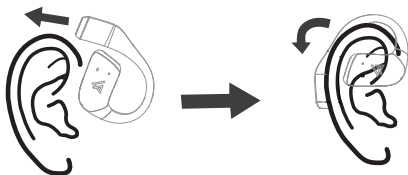

1. SOUNDFREE S40を、イヤーフックを下に向けて耳に装着します。
2. デバイスを後方に回転させ、耳のカーブに沿って置きます。

コントロール

Ⓢ = タッチコントロールエリア

● = タップ

■ = タップアンドホールド



	Ⓛ / Ⓡ
⏻ 電源オン/オフ	■ 3 sec
☎ 電話に応答する	● ●
☎ 通話を終了する	● ●
🚫 通話を拒否する	■ 2 sec
▶ 再生/一時停止	● ●
◀◀ 前のトラック	■ 2 sec
▶▶ 次のトラック	■ 2 sec
🗣 音声アシスタント	● ● ●

リセット方法:

1. SOUNDFREE S40を充電ケースに入れ、ケースを開けます。
2. 左右のタッチコントロールエリアを同時に5秒間長押しします。イヤホンのLEDが1秒間白く点滅したら離します。

接続方法:

1. LYPERTEK SOUNDFREE S40を充電ケースに入れます。
2. 充電ケースを開けると、LYPERTEK S40がペアリングモードになります。

OR

1. LYPERTEK S40 の電源を入れるには、3秒間長押しします。
2. ペアリングモードになります。
3. 次に、携帯電話のBluetooth「デバイス」リストからLYPERTEK S40を選択して接続します。

マルチポイント接続:

1. 最初のデバイスを接続する
2. 最初のデバイスのBluetoothをオフにする
3. 2つ目のデバイスを接続する
4. 最初のデバイスのBluetoothを再度オンにする

これにより、マルチポイント Bluetooth 構成で両方のデバイスを同時に接続できるようになります。

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



www.LYPERTEK.com

Please visit our website for more information.