 


User Manual-NS32

NexiGo Switch Controller

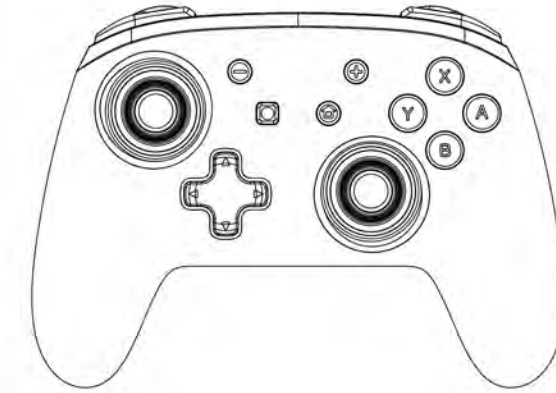

Register to get **EXTRA ONE year warranty**. Only valid in registering within 14 days of product delivery.
nexigo.com/warranty

Welcome to the NexiGo Family!

Thank you for choosing the NexiGo NS32 Switch Controller! You are now part of an exclusive club: the NexiGo family! It's our job to make sure you enjoy your membership. If you have any problems please contact us at **cs@nexigo.com** any time for further assistance. Make sure to register your purchase at **nexigo.com/warranty** for a FREE additional 1-year warranty!

From all of us here at NexiGo, we want to welcome you again to the family. We thank you deeply for your trust and for your business. We know you'll love it here. We look forward to serving you again in the near future.

Yours Sincerely,
The NexiGo Team

Contact Information

Website: www.nexigo.com
Manufacturer: Nexight INC
Email: cs@nexigo.com
Tel: +1(458) 215-6088
Address: 11075 SW 11th St, Beaverton, OR, 97005, US

 
Product Overview

The NexiGo NS32 Switch Controller is an enhanced Pro Controller for the Switch gaming console. Providing all of the normal functionality you would expect from an Switch Pro Controller, the NexiGo NS32 also features a Turbo button so you can preset your buttons to turbo fire, making it great for repetitive tasks or games that require button mashing. Made from a tough ABS material the NexiGo NS32 is durable and designed to last. With a six-axis gyroscope and built-in acceleration functions it has the technology that you need to be competitive.

Package Includes

- 1 x Switch Controller
- 1 x USB Charging Cable
- 1 x User Manual

Product Diagram

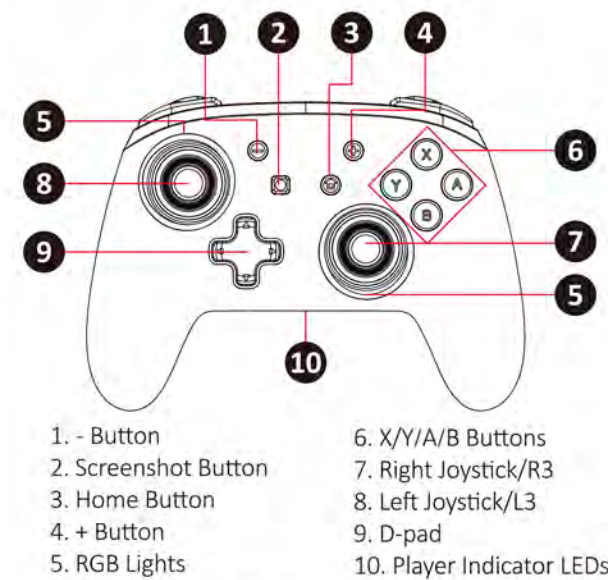

Specifications

Battery Capacity: 600mAh
Charging Voltage: DC 5V/600mA
Playtime: 6 Hours
Connection Method: Wireless or Wired

Wireless Connection (For Switch/Android)

Before First Use

Note: Please ensure that your device is powered on and has been updated to the latest version before pairing the controller.

1. Place the Switch console in the dock.
2. Connect the controller to the dock with the included USB cable.



Wireless Pairing (Switch Console)

1. Make sure the device you want to pair with is powered on. From the home menu in the Switch console select **Controllers** as shown below.



Wireless Pairing (Android)

 
1. Make sure the device you want to pair with is powered on. From the home menu in the Switch console select **Controllers** as shown below.



2. Select **Change Grip/Order** on the **Controllers** menu page as shown below.




3. Press and hold both the **Y + Home** buttons (or press and hold **Pairing** button) for more than two seconds to enter pairing mode with the Switch console.

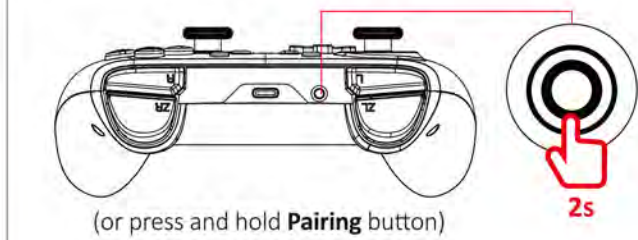

4. The player indicator LEDs on the controller will flash indicating that the pairing was successful and then the appropriate player indicator LEDs will illuminate. Pairing is now complete.

Wireless Pairing (Android)

 1. Make sure the device you want to pair with is powered on.
2. Press and hold the **X + Home** buttons for more than two seconds to enter pairing mode.

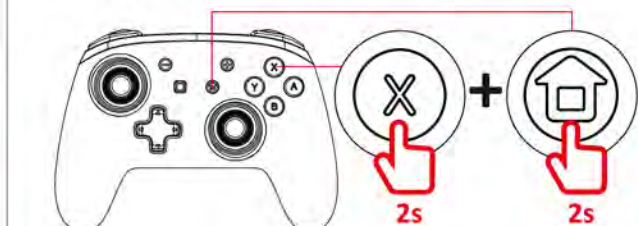


3. Open your Android device, navigate to **Settings > wireless**, and then select **Gamepad** from the list of options.



4. The player indicator LEDs on the controller will flash indicating that the pairing was successful and then the appropriate player indicator LEDs will illuminate. Pairing is now complete.

To Disconnect

 1. While in wireless connection mode, press and hold the **Home** button for three seconds. The controller will unpair from your device.

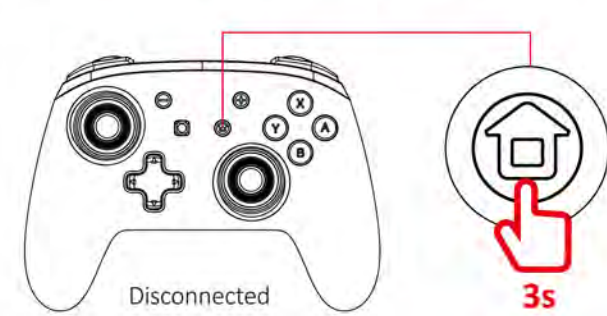


After First Use

1. Press and hold the **Home** button for one second to wake up the controller.
2. After being woken up it will automatically connect to the device it was last paired with.

USB Wired Connection (For Switch/PC)

 1. Use the provided cable to connect the controller to your device.
Note: A PC will provide charging to the controller while connected, the Switch console will not.
2. There are three different modes for wired connections. These can be switched between by pressing and holding the **+** and **-** buttons at the same time for three seconds.

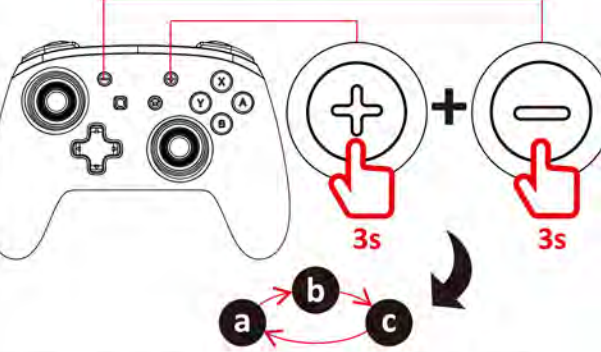

- a. DirectInput mode** is the default mode for connecting to a PC. When using this mode the 2nd and 4th player indicator LEDs will remain permanently lit indicating this is the active mode.

 
- b. Xinput mode** is an alternate mode for connecting to a PC. This mode can be used if you find controller limitations in a game while using the DirectInput mode. When using this mode the 1st and 4th player indicator LEDs will remain permanently lit indicating this is the active mode.

- c. Switch mode** for connecting with a Switch console. When using this mode only the player indicator LED for your controller position will remain permanently lit indicating this is the active mode.

3. After switching to a wired connection the wireless connection will automatically disconnect.
4. After unplugging the wired connection the controller will automatically attempt to reconnect to the last paired device.

Reset Function

To reset the controller, press and hold the **Home** button for at least ten seconds. The controller will be powered off and will then reset itself. You need to re-pair the controller to your devices using the methods outlined above.

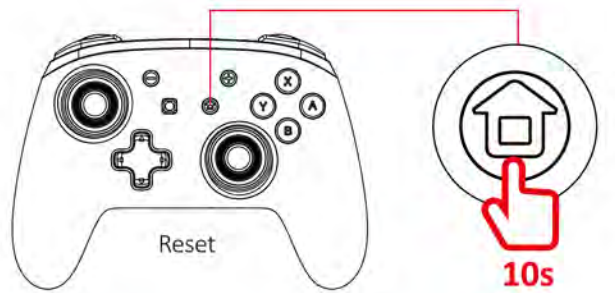


Sleep Function

1. The controller will automatically go to sleep if the wireless connection is unsuccessful after ten seconds.
2. To prolong battery life the controller will automatically go to sleep after five minutes if no buttons are pressed.


Charging Indicator

 1. The built-in player indicator LEDs will rapidly flash when the battery is low. Please charge the controller when you see this signal.

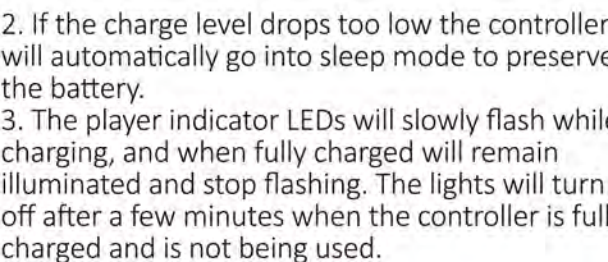


How to Use Turbo Function?

 Many of the buttons on this controller can be set to turbo. The buttons capable of using the turbo function are: **A/B/X/Y/R/L/ZL/ZR**.

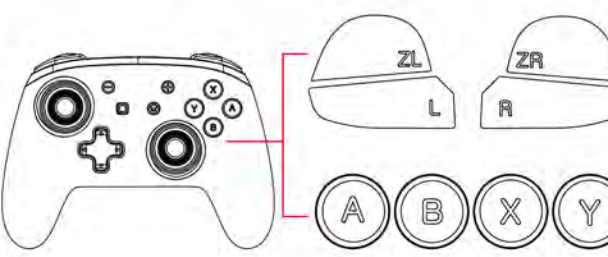


Turbo Function Tutorial

 1. Press the **A** and the **Turbo** button at the same time and release. The **A** key will now be in **Turbo mode**.
2. Press the **A** and the **Turbo** button at the same time again to **turn off** the Turbo mode.

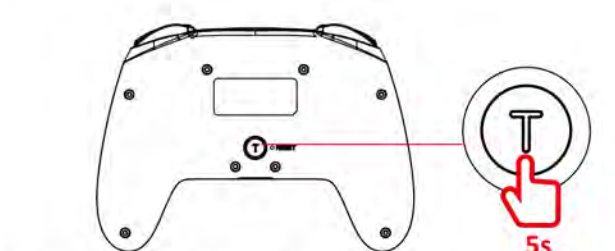


Turbo Speed Adjustment

 1. Press the **Turbo** button and the **-** key at the same time to **decrease** the turbo speed.

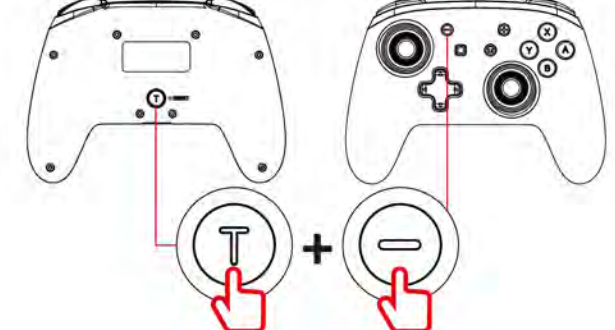

 2. Press the **Turbo** button and the **+** key at the same time to **increase** the turbo speed.

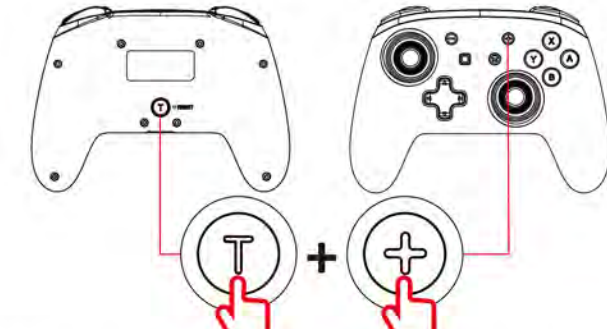


3. Turbo speed can be adjusted in three levels.
 - a. Continuous burst at 5 times per second (Fast)
 - b. Continuous burst at 12 times per second (Faster)
 - c. Continuous burst at 20 times per second (Fastest)


4. When adjusting the speed the controller lights will flash to indicate what the current speed setting is. This flashing indicator is slow for the slowest speed and increases in frequency as the speed of the turbo increases.

Motor Vibration Strength Adjustment

 1. Press the **Turbo** button and the **Down** key at the same time to **decrease** the haptic feedback vibration strength.

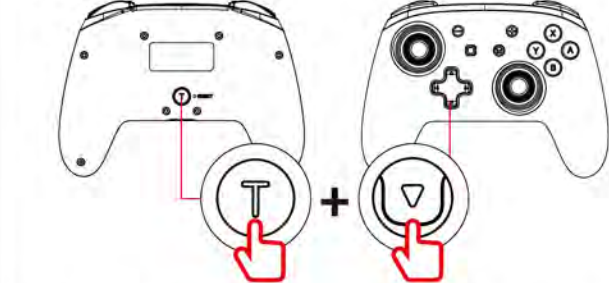

 2. Press the **Turbo** button and the **Up** key at the same time to **increase** the haptic feedback vibration strength.

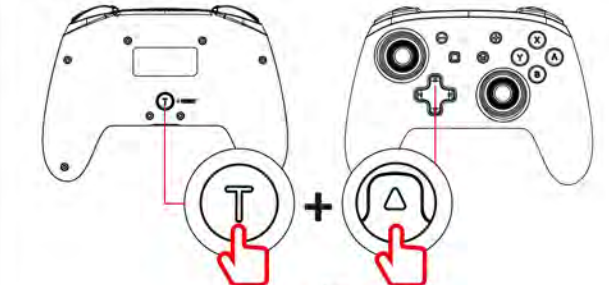


3. The controller motor vibration has four adjustment levels:
 - a. 0%- Turns the vibration motors off completely. This can also be done in settings for many games.
 - b. 30%- The lightest setting, this provides minimal feedback.
 - c. 75%- The default setting, this setting provides noticeable feedback.
 - d. 100%- The maximum setting, this setting provides significant feedback.


4. After choosing a vibration level the motor will vibrate at the chosen level for 0.5 seconds to indicate that choice.

RGB Light Setting

 1. To change the RGB light color press the **Turbo** button and click the **L3** or **R3** key at the same time. There are seven different colors to choose cyclically.

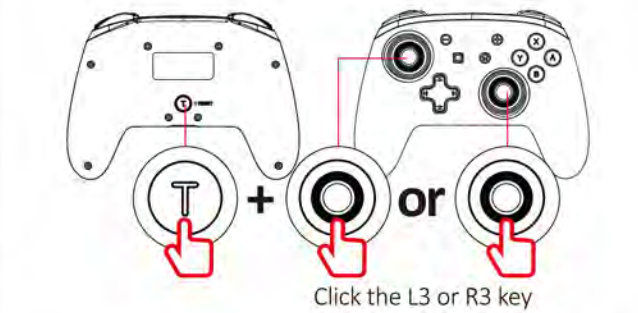

 2. Press the **Turbo** button and hold the **L3** or **R3** key to increase/decrease the brightness of the RGB lighting cyclically. During this time, holding the **Turbo** button for more than 6 seconds will reset any applied turbo functions. Ensure that you do not hold the button for more than 6 seconds if you wish to maintain your turbo settings.

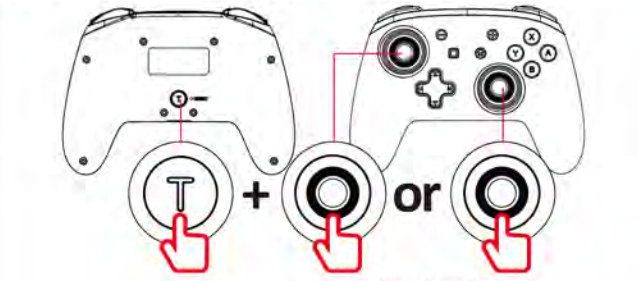

FAQ

Scan the QR code to download the latest manual for more FAQ details.



FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.