 
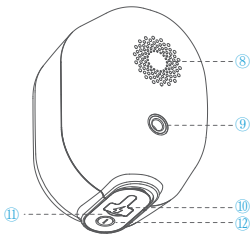 


Home Guards

Smart Camera

Quick Start Guide

 
Camera Guide

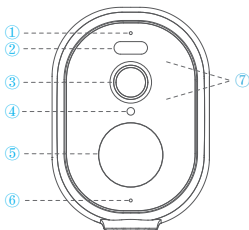


Packing List




Wireless Camera



Charging Cable

 

Screw Pack

 

Mount



Quick Start Guide

Product Spec

Video Resolution	2MP(C302、C362)/3MP(C303、C363)/4MP(C304、C364)
Image Sensor	200W(C302、C362)/300W(C303、C363)/400W(C304、C364)
Lens Field of View	115°(C302、C362)/135°(C303、C363)/125°(C304、C364)
Audio	Full Duplex 2 way Audio
Microphone	Microphone with noise and echo cancellation
Night Vision	Infrared LEDs (850nm) with IR Cut Filter, illuminates up to 16 feet (5m)
Motion Detection	PIR, adjustable sensitivity, detects up to 26 feet (8m)
Networking	2.4GHz 802.11 b/g/n
Battery	5200mAh rechargeable lithium battery
Charge Time to Full	4 hrs
Operating Temperature	14°F to 140°F (-10°C to 60°C)
Dimension	3.5 x 2.4 x 2.2 in (90 x 60 x 56mm)
Weight	7.8oz (221g)

FAQ

Q: How to turn on the camera?

A: Press the button at the bottom of the camera for 3 seconds until you see the green light on and hear the voice prompt. Then release the button.

Q: How to turn off the camera?

A: Press the button at the bottom of the camera for 3 seconds until you see the red light on. Then release the button and you will hear the voice prompt.

Q: How to reset the camera?

 
A: Press the button at the bottom of the camera for about 10 seconds until you hear the voice prompt.

Q: Why the camera cannot connect to the WIFI?

A: Please ensure the camera has been turned on and the indicator light is flashing red and blue alternately. Please also make sure your WiFi network is a 2.4GHz wireless network.

Step 1: Charge your camera battery

Fully charge your camera battery. Plug into a USB power source (5V) using the provided cable.

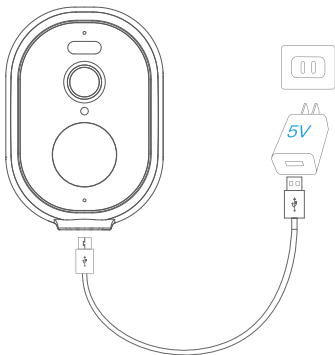


Step 2: Download the APP

Please scan the QR code or search "Home Guards" in Google Play Store or APP Store to download the APP.



Step 3: Add your camera into APP

 Enter into the App, sign up for a free account and log in. Go to the home page and Click the "+" icon on the top right corner, select your camera. Please follow the instruction on the App interface to add your camera.

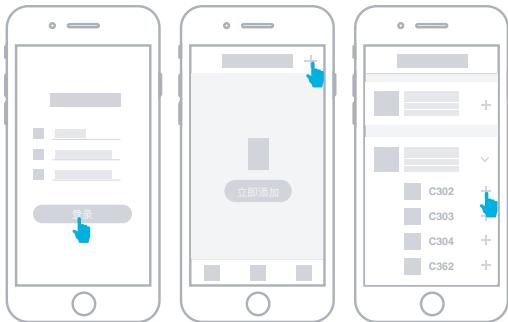

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to

which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.