 


DEERC

6+
age

 
Instructions For Use

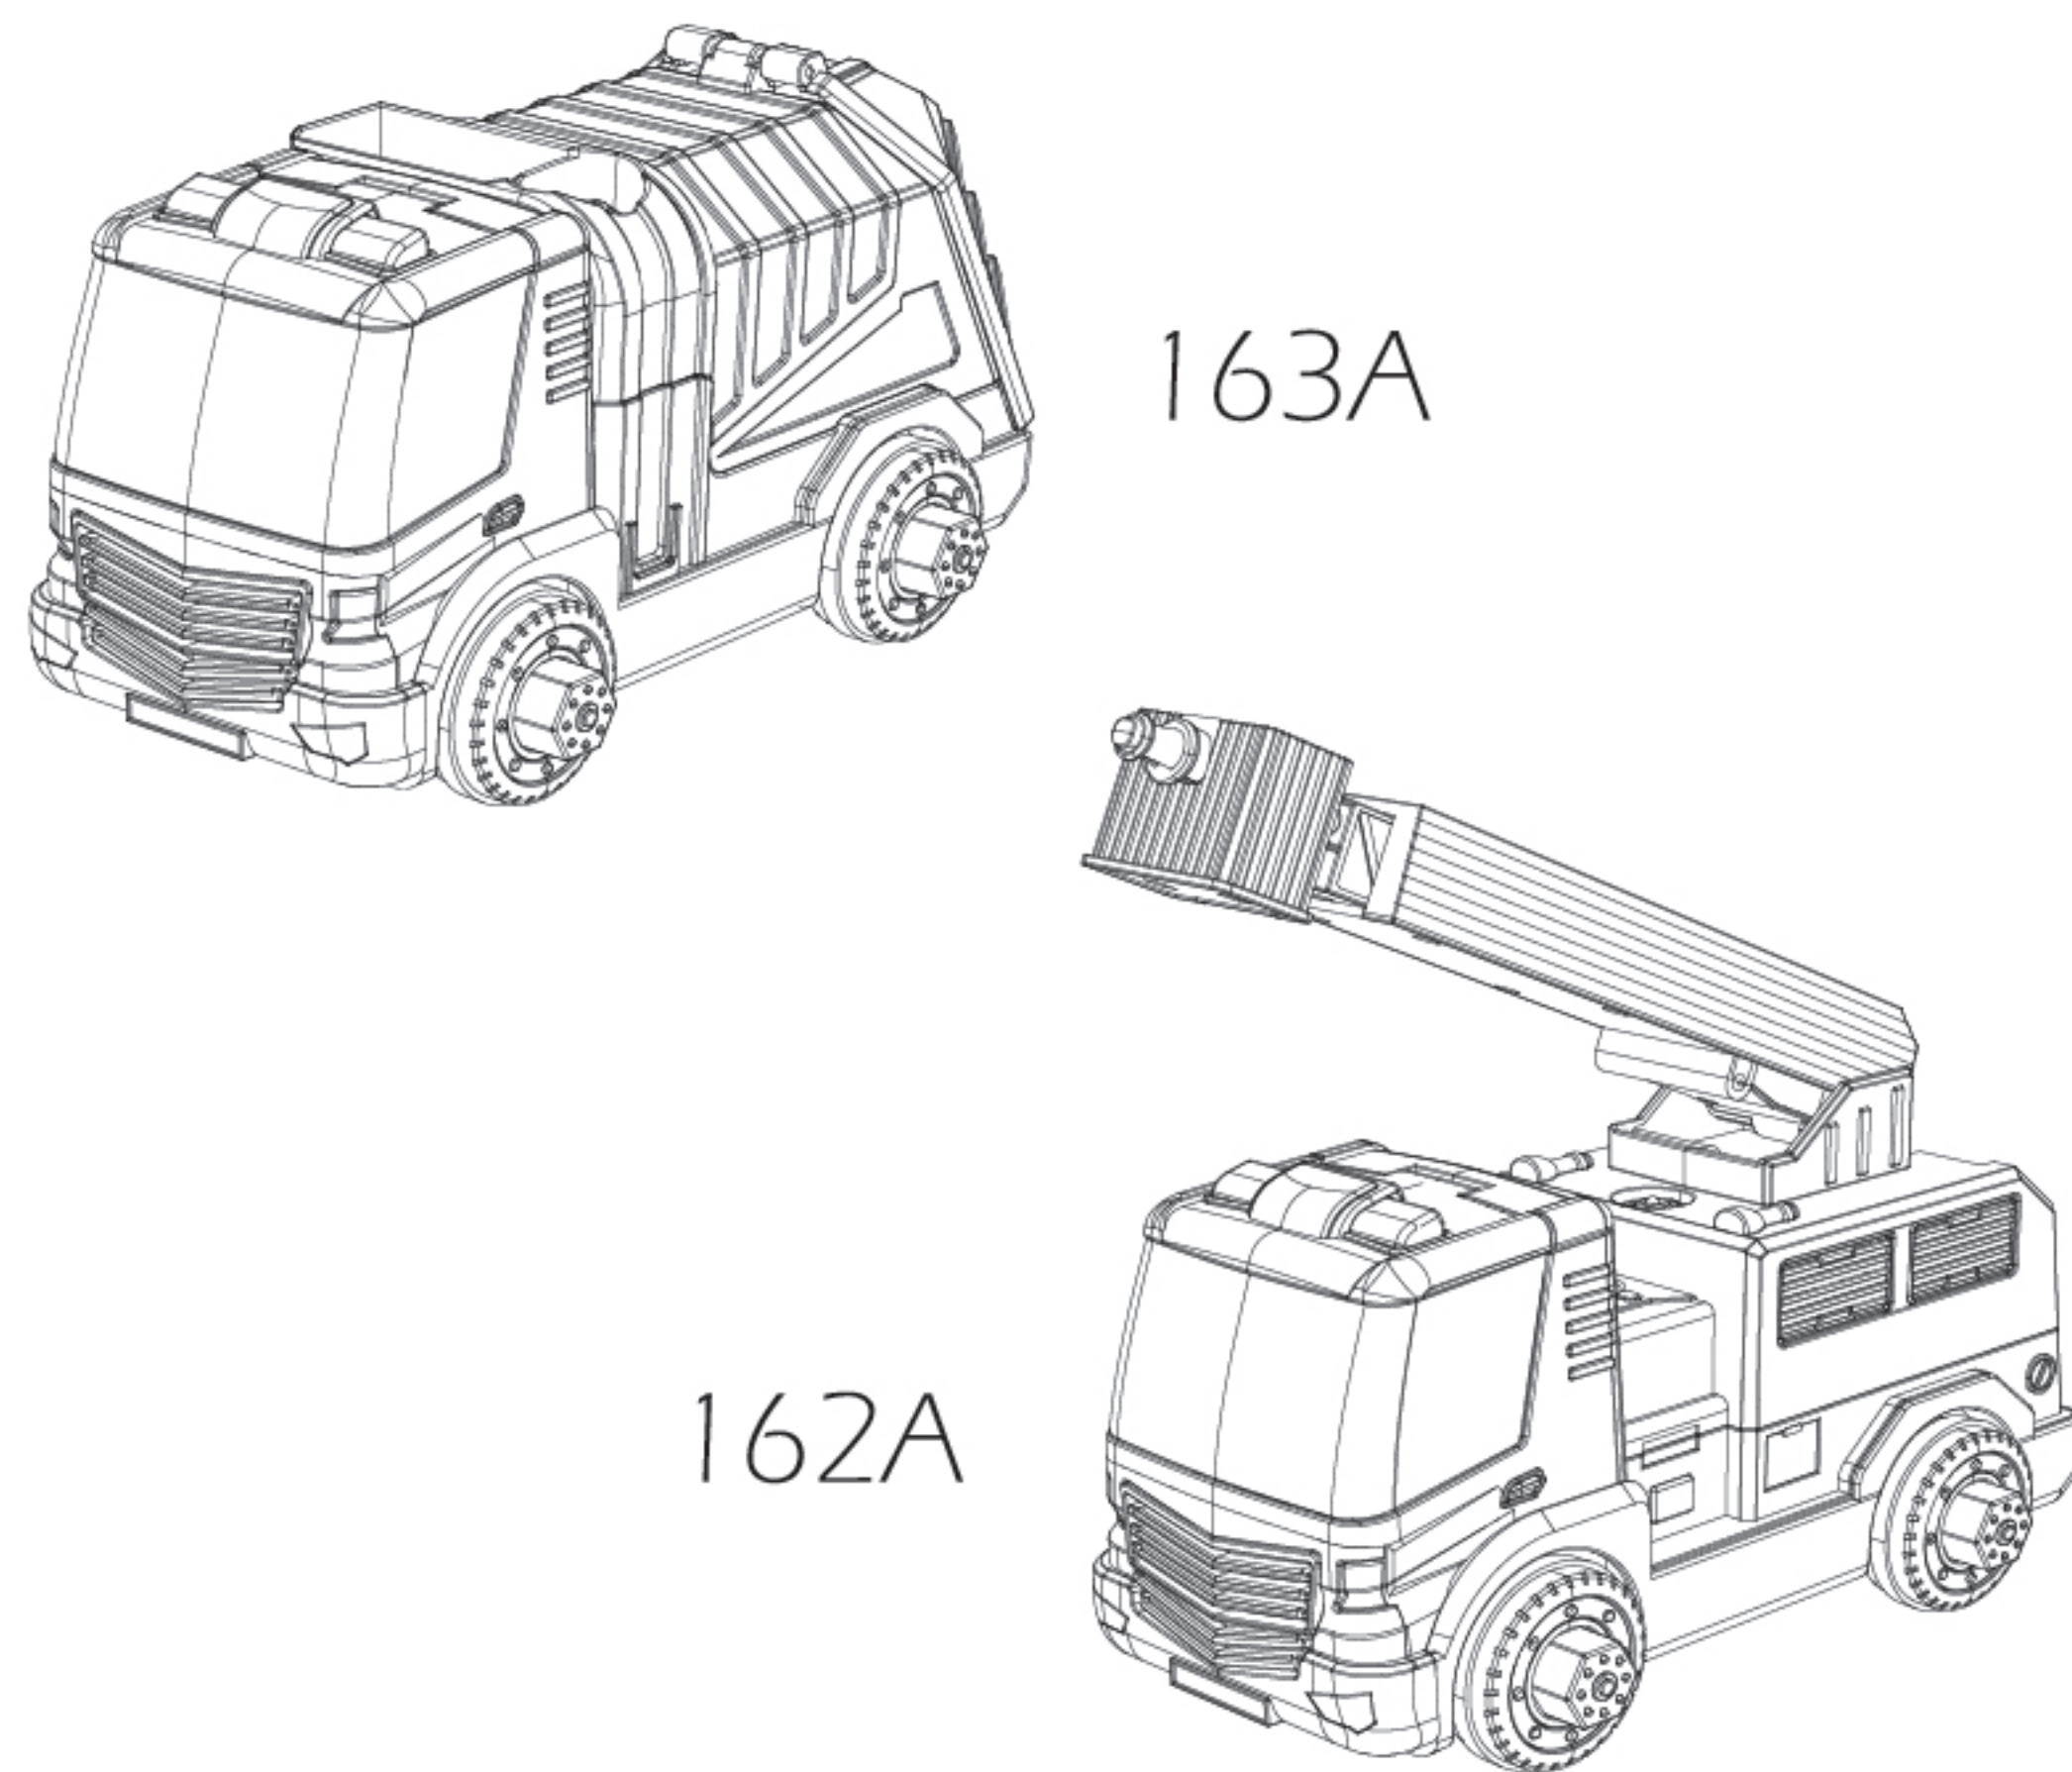


usa@deerc.com (USA)
eu@deerc.com (EU)
jp@deerc.com (JP)

www.deerc.com




< PACKAGE CONTENTS >

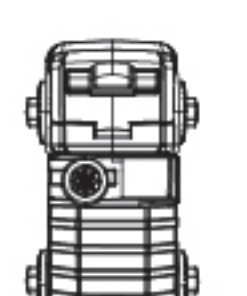 ×1	 ×1	 ×1
RC Car	Remote Control	Electric Screwdriver
 ×1	 ×2	 ×1
Wrench	Driver	Instructions For Use
 
< PRODUCT DETAILS >



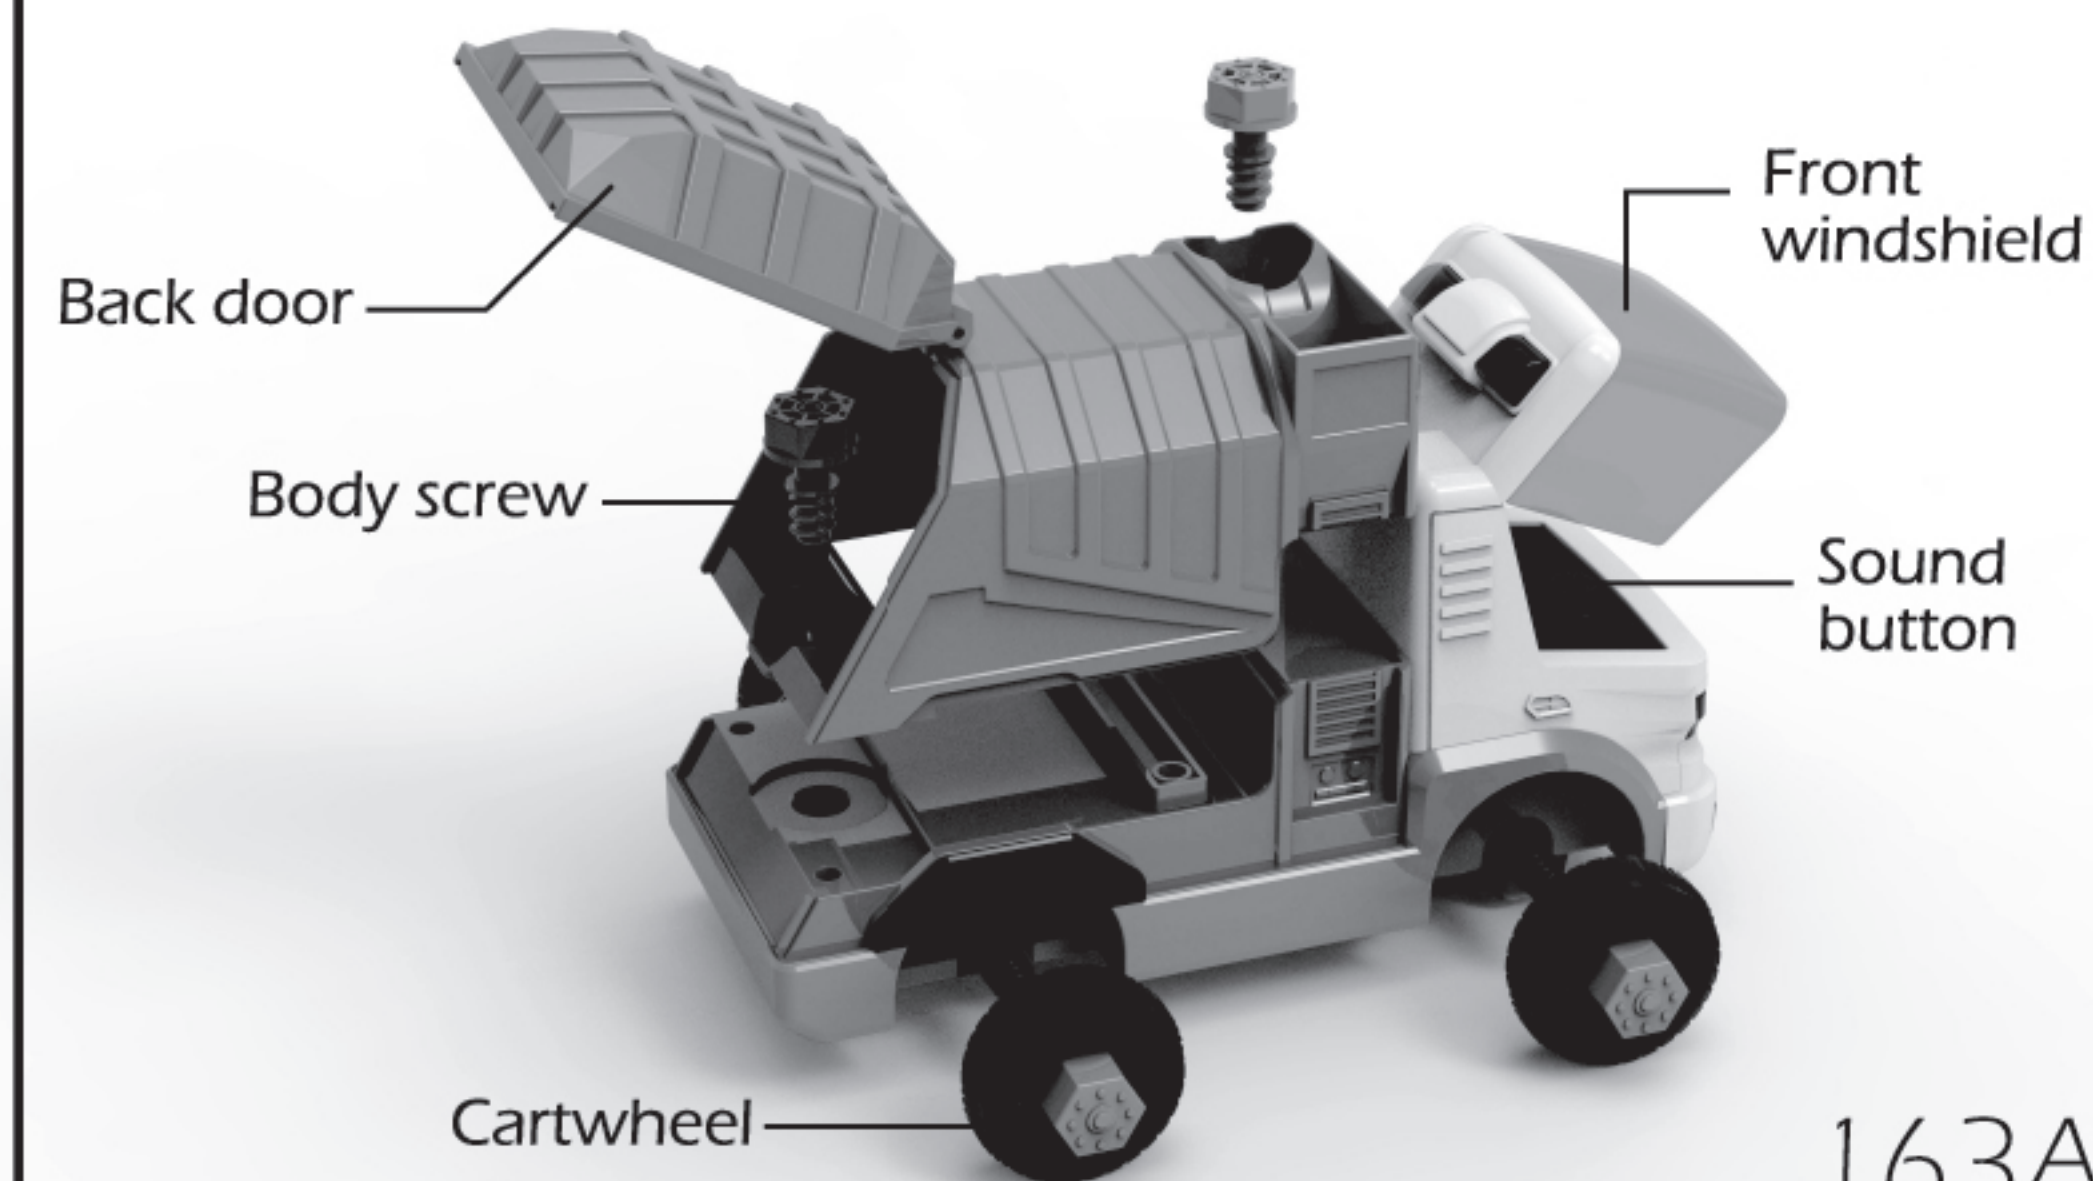


1

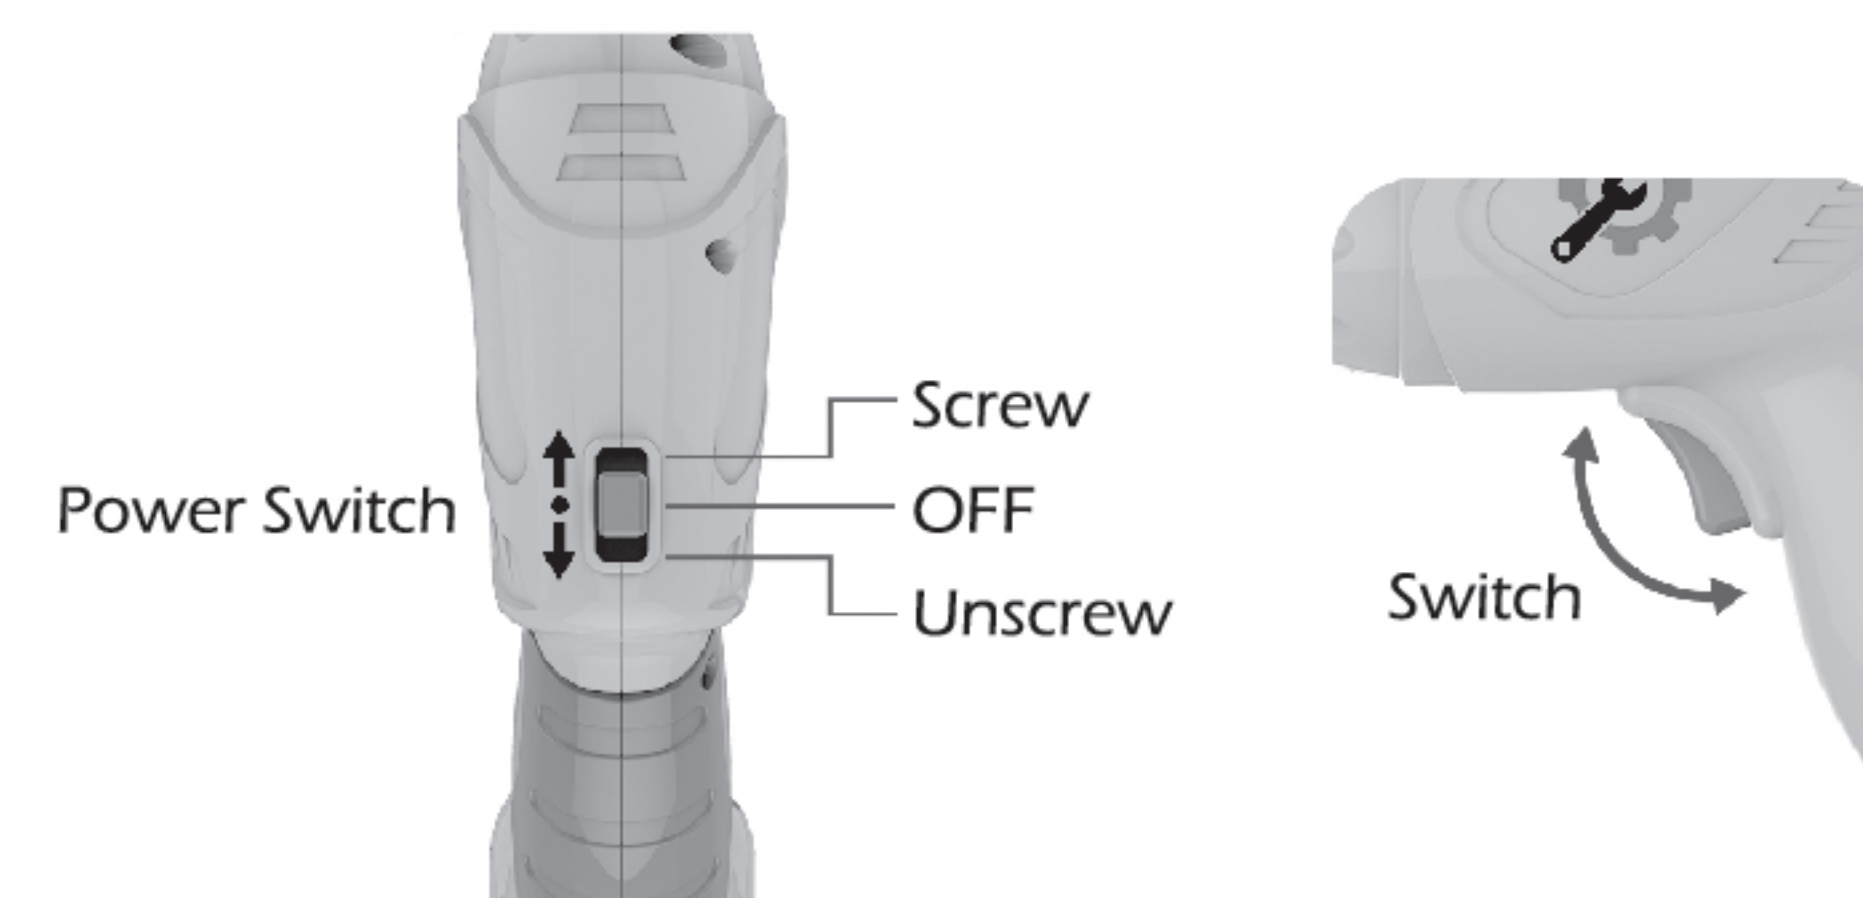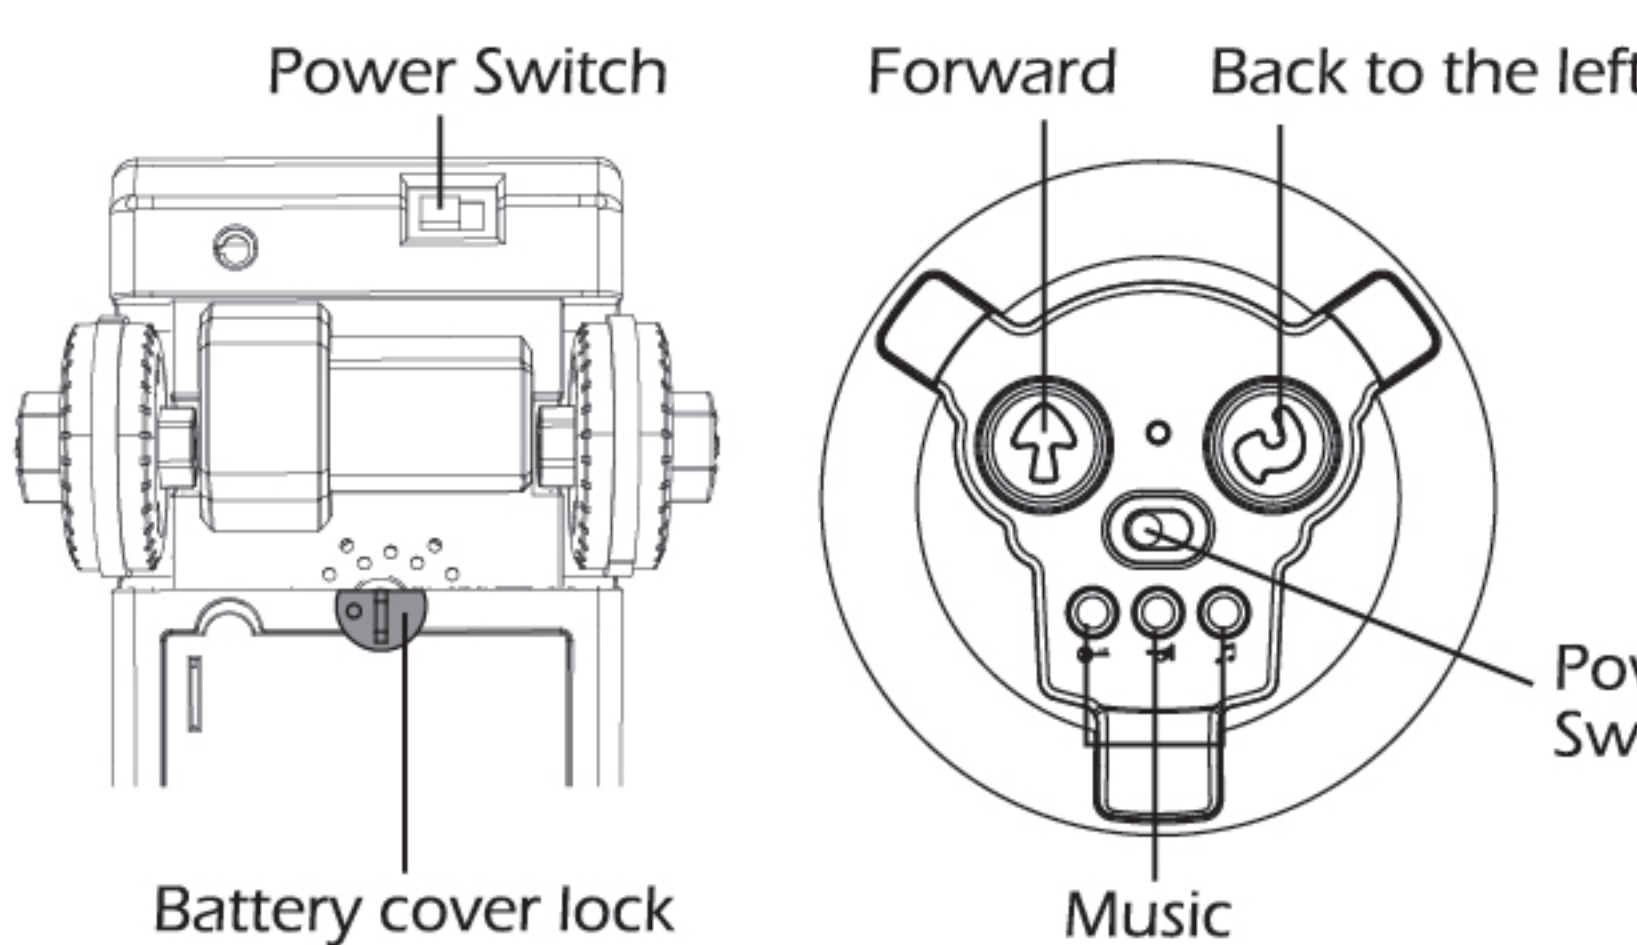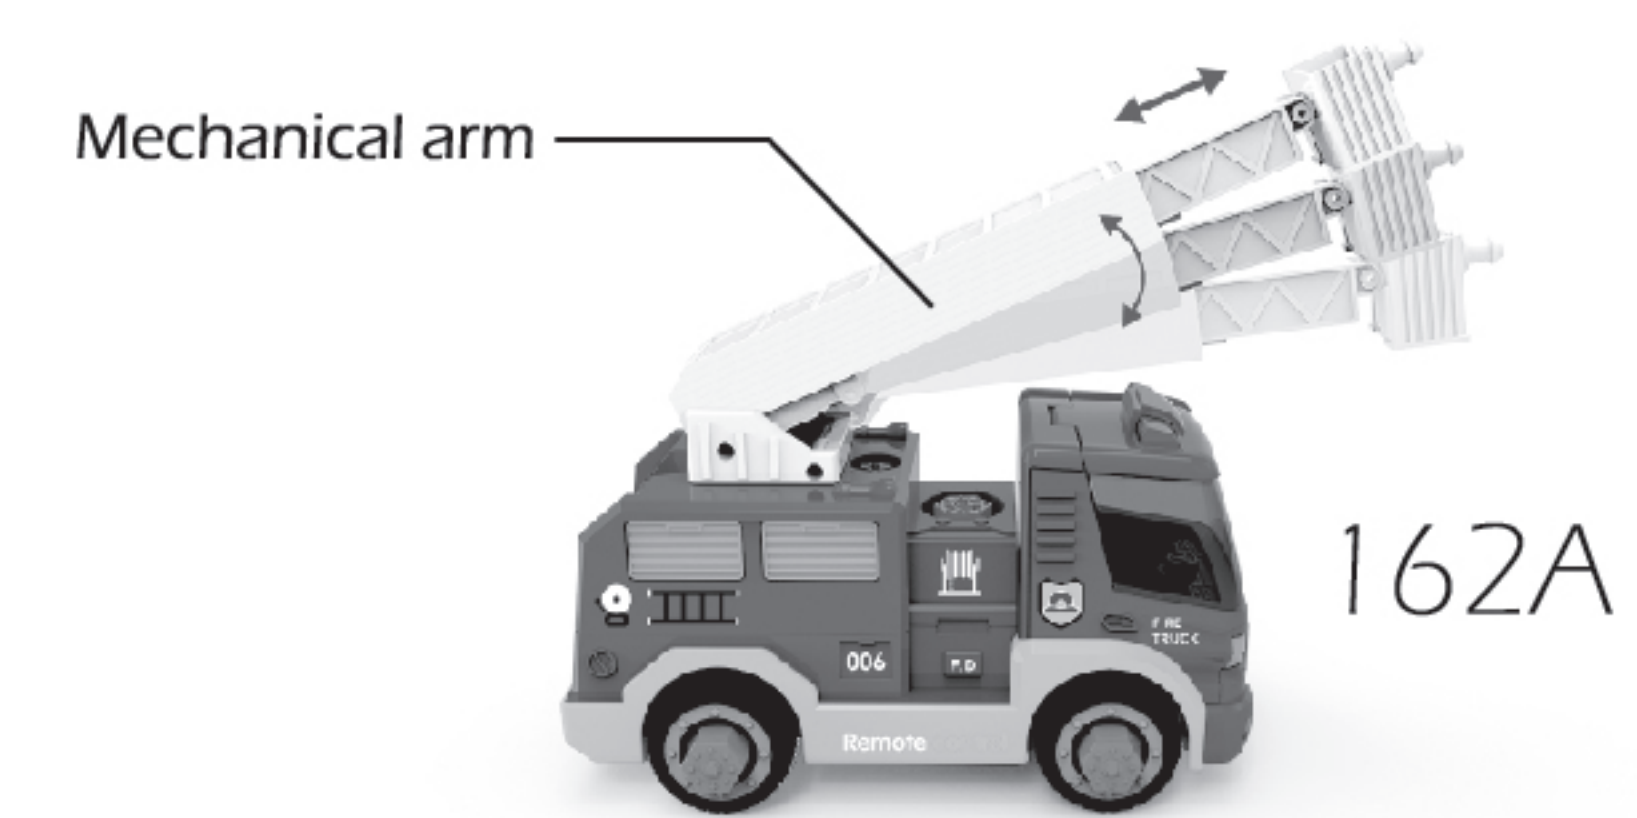   

2
   
< BATTERY INSTALLATION >

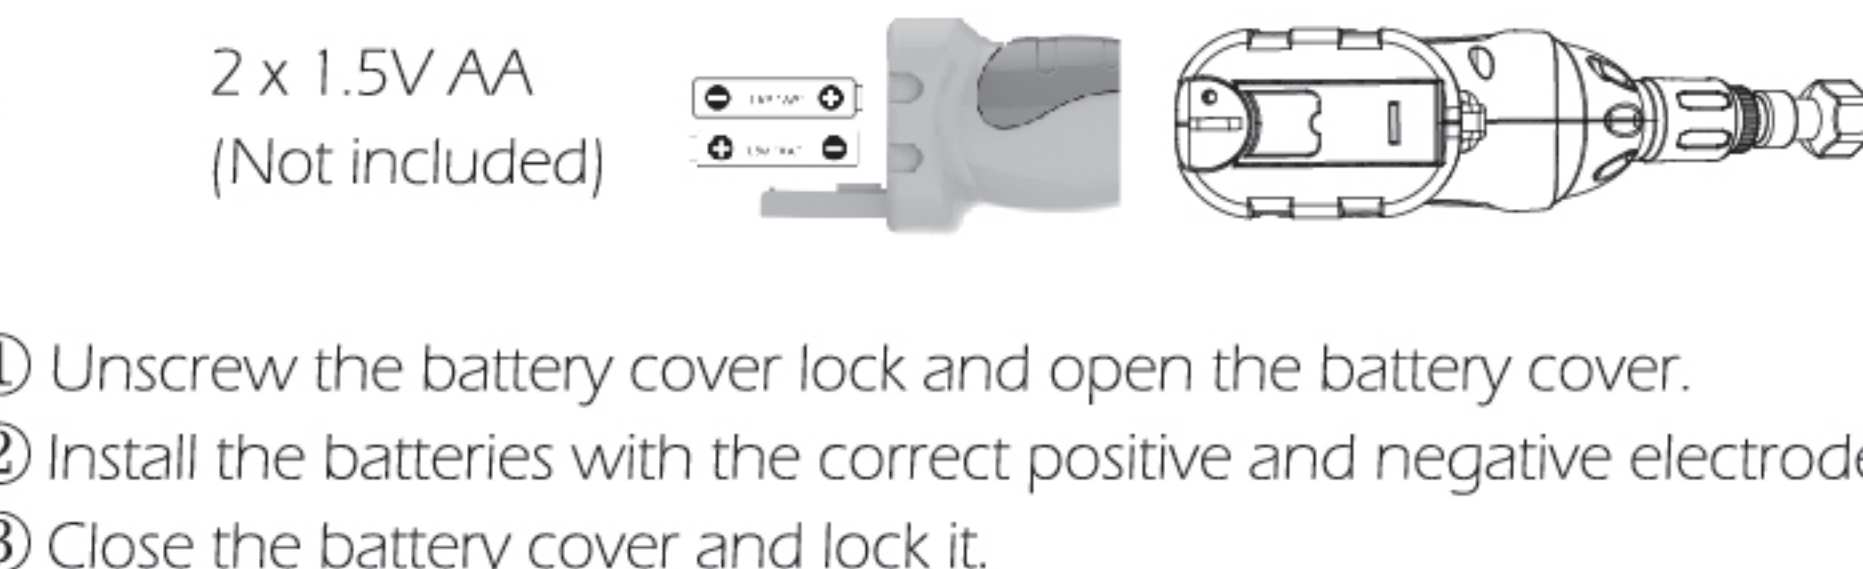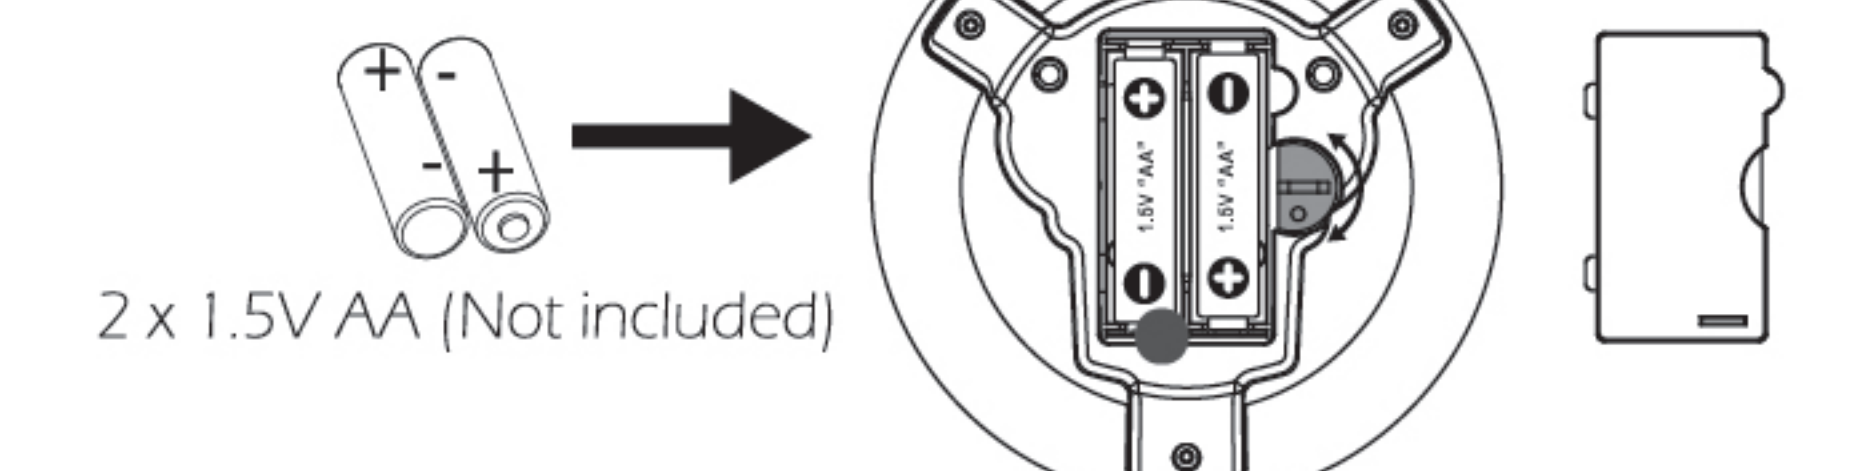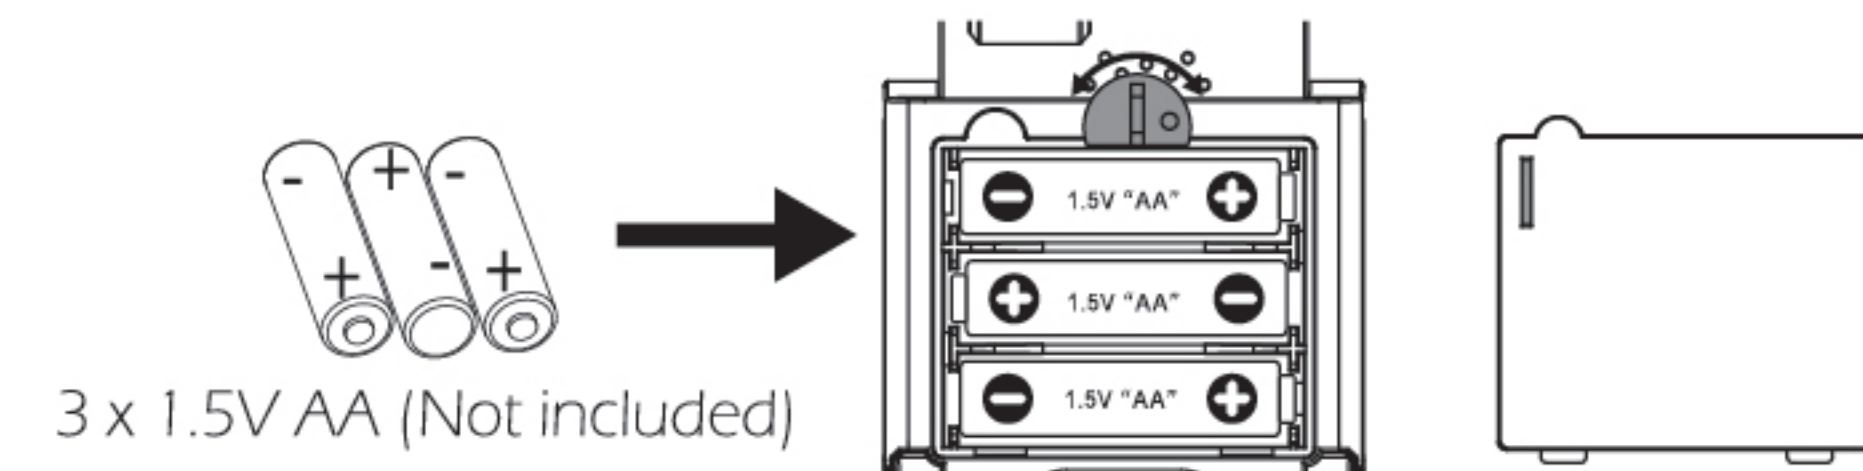

- Unscrew the battery cover lock and open the battery cover.
 - Install the batteries with the correct positive and negative electrodes.
 - Close the battery cover and lock it.
- ATTENTION:**
When the product is not in use, please turn off the power switch and remove the batteries.

 
< OPERATION >

1. Pairing

- After installing the batteries, turn on the power switch of the car and the remote control, then they will automatically pair up.
- The headlights and remote power indicator will flash while waiting for a match. The headlights are kept on and the remote control power indicator is turned off when the match is successful.
- Multiple Pairings require one pairing after another.


3

2. Remote control operation

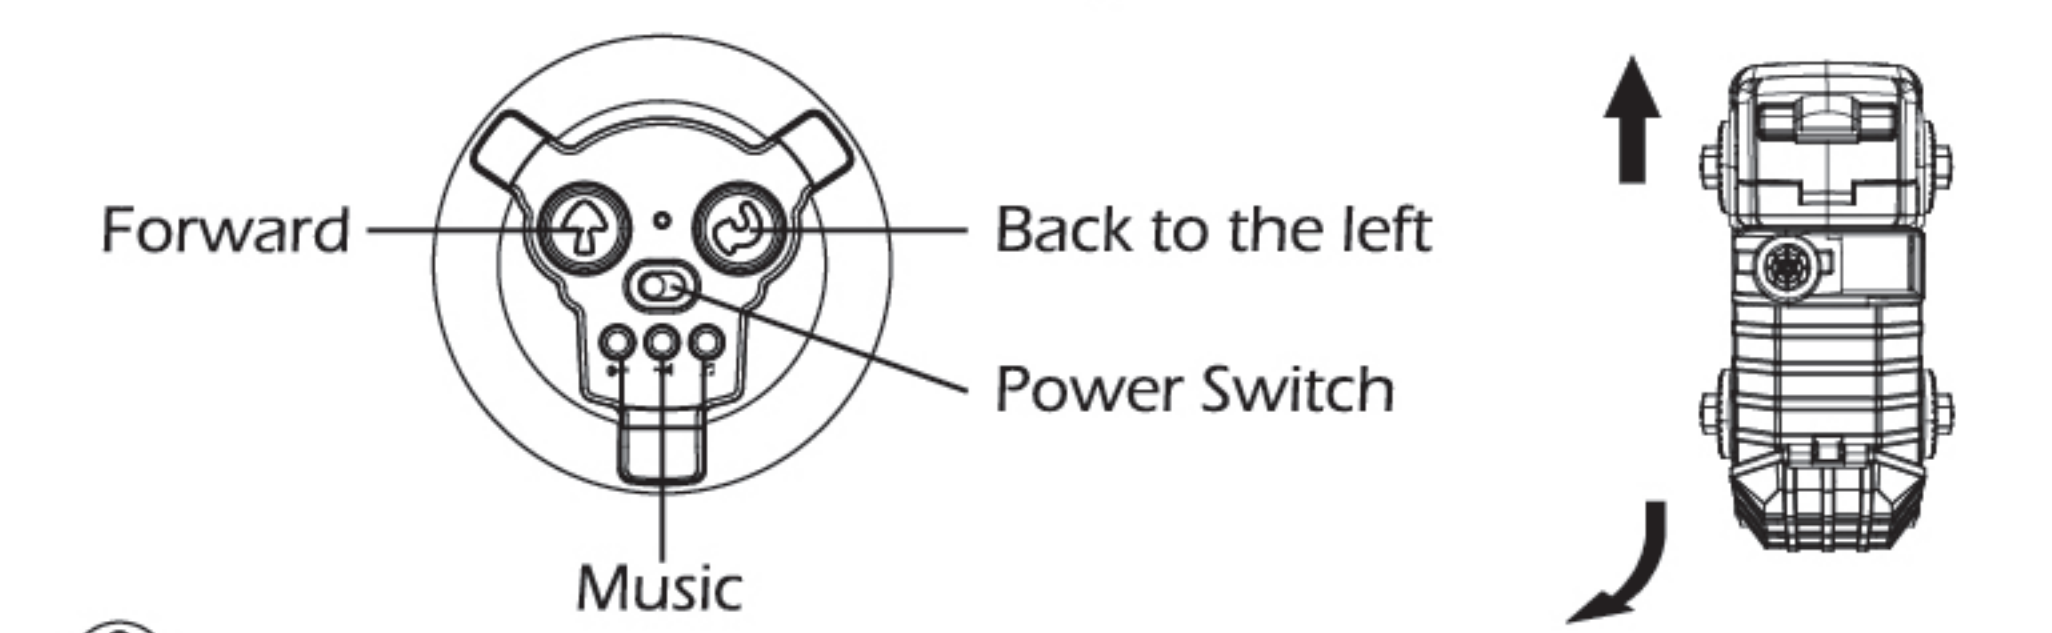

- Press this button to move the car forward.
- Press this button to move the car back to the left.
- Press this button to make the sound of a car starting.
- Press this button to make a fire engines(162A)or car horn sound(163A).
- Press this button to make a car lock and unlock sound.

 3. Wheel removal

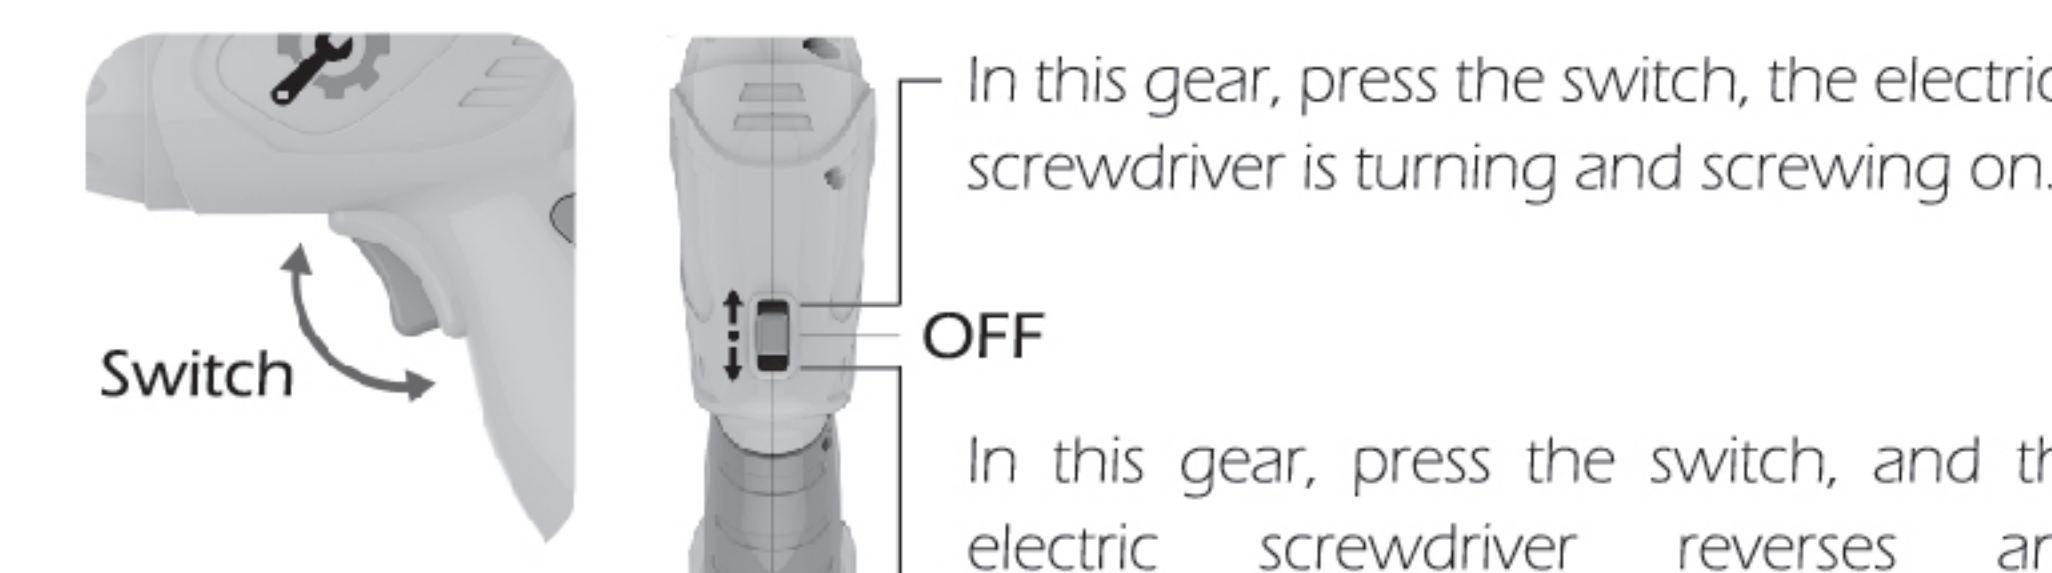

- Affix the wrench to one side of the wheel nut.
- Affix the hand-held drill on the other side to turn the nut.
- Use the other side of the wrench and affix to one side of the screw.
- Affix the hand-held drill on the other side to turn the nut.

4

4. Power saving mode

- When the remote control is not in use for 30 seconds, it goes into power-saving mode and can be awakened by pressing any button.
- When the car is not in use for 25 minutes, it goes into power-saving mode, and need to be restarted to play again.
- When the product is not in use, please turn off the power switch and remove the batteries.

5. Sound button

Press this button to make the sound of fire engines(162A) or a car starting (163A).

6. Body disassembly



Put the car and use the electric drill to turn the upper screw cap.

7. Movable part



The mechanical arm of the car can be lifted and extended.
The front windshield and the back door of the car can be opened.

5

< SPECIFICATIONS >

Weight: 502 g/ 17.7 oz (163A) 560 g/ 19.7 oz (162A)
Operating Time: < 30 minutes
Running Speed: < 2.5 km/h
Dimensions: 190 × 100 × 105 mm
Operating Frequency: 2.4GHz
Transmission Distance: <131 feet
Battery Type: 1.5V AA battery
Operating Temperature Range: 32° to 104°F

< GENERAL INFORMATION >

FCC Notice:
This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.

6

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure
The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 20cm between the radiator & your body.

- BATTERY WARNING:**
- Always check the battery's condition before using it.
 - Replace the battery if it has been in case of odor, overheating, discoloration, deformation or leakage.
 - Never expose the battery to moisture or direct sunlight, or store it in a place where temperatures could exceed 60°C(car in the sun, for example).
 - Always keep battery out of reach of children.
 - Improper battery use may result in a fire, explosion or other hazard.
 - Non-rechargeable batteries are not to be recharged. Rechargeable batteries are only to be charged under adult supervision.
 - Different types of batteries or new and used batteries are not to be mixed.
 - Batteries are to be inserted with the correct polarity.

MANUFACTURER INFORMATION
Manufactured by
Xiamen Huoshiquan Import & Export CO., LTD
Room 703, No. 813-2 Xiahe Road, Siming District, XIAMEN, China
+1(855) 777-8866

7