


THREE PAGE FOLDED, Black and White Copy

PROSCAN

FLAME RGB LIGHT UP
BLUETOOTH SPEAKER

PSP141_DG

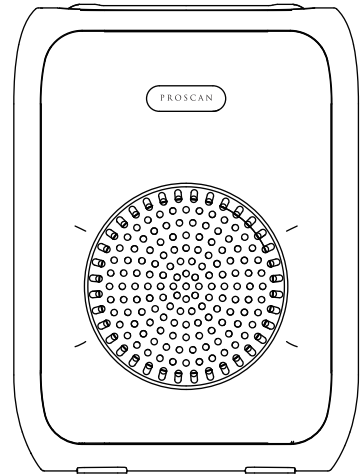

Please read these instructions thoroughly
before use and retain for future reference

Powerful, full range audio with spacious, immersive, Color changing LED
light effects
MIC & USB & FM & TF card reader
PROSCAN, and the PROSCAN logo are trademarks used under license by
CURTIS INTERNATIONAL LTD. ~ www.proscan-brand.com

GETTING STARTED

FEATURES

- Bluetooth 5.3
- Wireless range: 10m
- Color changing LED light effects
- Built-in USB & TF port
- Type-C port for battery recharge
- Built-in rechargeable battery
- Battery life: approx. 3.5hrs at 50% volume

INCLUDES

- 1 x Flame RGB Light up Bluetooth speaker
- 1 x Type-C to USB charging cable
- 1 x User manual

CONTROL PANEL

1

OFF ON

2

MIC

3

DC 5V

4

TF CARD

5

USB


LED Charging indicator

6

7

8

9

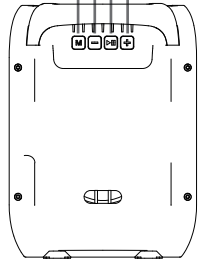

2

1 OFF ON	Switch to ON to turn on the speaker, switch to OFF to turn off the speaker.
2 MIC	3.5mm Microphone and AUX Input.
3 Type-C Charging Socket	Used to charge the battery.
4 TF CARD	TF card input.
5 USB	USB input.
6	Press to switch between Bluetooth and Radio FM mode. You can switch to TF or USB if connected. Press and hold to change the LED light mode.
7	Press to switch to the previous track. Press and hold to decrease the volume.
8	Press to play or pause. In FM mode, press the button to mute, press and hold the button to enter auto scan feature. Double press the button to enter TWS connecting in Bluetooth mode.
9	Press to switch to the next track. Press and hold to increase the volume.

BATTERY POWER

- Please charge fully before use. The charge time is approximately 3 hours.
- When the unit is charging, the LED charging indicator will display a solid red light. When charging is complete, the indicator will turn off.
- Using a Type-C to USB charging cable(included in the package), connect the Type-C charging socket on the speaker to a USB port of a powered-on computer or a USB power adapter(not included) to charge the battery.

3

PAIRING BLUETOOTH

- Switch the ON/OFF button to ON to turn on the Bluetooth speaker, you will hear "Bluetooth mode pairing" and the LED indicator will flash blue quickly.
- Using your Bluetooth phone or Bluetooth device, turn on Bluetooth and search for Bluetooth devices. Select Pro PSP141 from the list of devices. When successfully paired, you will hear "connected", and the LED indicator will on blue.
- Use the controls on the connected Bluetooth device to select and begin playing audio. Use the controls on the device or the speaker to play, pause, skip tracks or adjust volume.

USB/TF CARD PLAY

To listen to music via TF card or USB drive, insert the TF card into the memory card slot, or insert the USB drive into the USB port. The speaker will automatically detect the input and begin playing audio. Use the speaker controls to play, pause, skip tracks, and adjust the volume.

MICROPHONES CONNECTED

Connect 3.5mm wired microphone (not included) to the MIC input of the unit, and then you are ready to sing along with your bluetooth smart device.

AUX INPUT CONNECTION

Power on this unit and switch mode to Bluetooth mode, do not connect to any Bluetooth devices. Inserted 3.5mm cable into this MIC jack, the other side connected to external audio devices, turned up the volume over 70% from external audio devices. Now you can play music from AUX in mode.

Note: Due to this 3.5mm jack combine with microphone and AUX IN features, the sound may have a little echo when played music from AUX IN mode. If you want better sound, please play music via Bluetooth mode.

4

COLOR CHANGING LED LIGHT EFFECTS

There are seven modes of color changing LED light effects. The LED light comes on automatically when your turn on the Bluetooth speaker. Press and hold the mode button for 2 seconds to change the LED light effects mode. After the light modes are displayed in turn, hold the mode button for 2 seconds to turn off the light.

Note: In FM mode, the color changing LED Light will not available.

HOW TO WORK FOR RADIO FM FUNCTION

- Power on this unit and switch mode to FM mode.
- Press and hold play/pause button to enter auto scan feature and automatic storage of radio stations.
- Press +/- button to select the FM radio station.
- Press play/pause button to mute the music.

HOW TO WORK FOR SPEAKER PAIRING TWS MODE

- Get two same units and power on both units, then entering to Bluetooth pairing mode.
- Don't connect to any Bluetooth devices before TWS pairing.
- Press twice the play/pause button from either unit to enter to TWS pairing mode.
- It will pair both units after a few seconds with a voice 'Du'.
- Turn on the Bluetooth from your Bluetooth device.
- Search the Bluetooth pair name 'Pro PSP141' and tap to connect this unit.
- You can play songs now from your Bluetooth devices.
- Press and hold play/pause button again to disconnect the TWS mode.

5

SAFETY AND CARE INSTRUCTIONS

Failure to follow the safety instructions can lead to fire, electrical shock, personal injury. Make sure to read the entire manual.

- Do not use this unit for anything other than its intended use.
- Keep the unit away from heat source and direct sunlight.
- Do not expose the unit to direct sunlight or extremely high or low temperatures.
- Do not expose to rain or moisture, do not handle with wet hands, and do use near water such as a swimming pools, bathtubs or sinks.
- Do not let dust or other things accumulate on the product.
- Do not use unit if it has been dropped or damaged in any way.

- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- If you have an electrical device, such as a pacemaker, consult a physician before using this product.
- Use the specified power source and voltage.
- Place the unit on a sturdy and flat surface.
- Keep the unit out of reach of children or those that require supervision
- Do not cover the product with paper or other materials. Use in a well-ventilated area.
- Use a clean soft cloth to clean. Do not use corrosive or abrasive cleaners to clean.

6

To make a warranty claim.
Please email support2@curtiscs.com or call 1-800-968-9853

90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does **not** cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label [e.g., 120V~60Hz].

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

7

For service assistance and product information, please call:
1-800-968-9853.
Curtis International Ltd.
7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3
www.curtisint.com

ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.
Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.

8

FCC Warning 15.19 Labeling requirements. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. 15.21 Information to user. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. 15.105 Information to the user. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.	FCC RF Radiation Exposure Statement: 1.This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. 2.This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.
--	--