

 
 
T25




QUICK START GUIDE

PLEASE READ THIS QUICK START GUIDE
BEFORE USING THIS DEVICE

WHAT'S IN THE BOX?




HOW TO WEAR

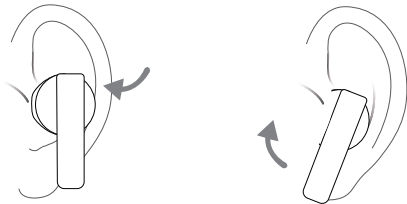

Step 1 Insert the earbuds and enable them to stay at the opening of your ear canals.


Step 2 Gently twist the earbud until it makes a comfortable seal for a better sound experience.

FIRST USAGE

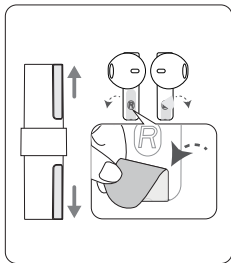


Step 1

Take the earbuds out from the charging case. Then peel the clear tape off from the bottom of the earbuds.

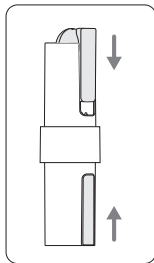

Step 2


Place the earbuds back into the charging case to activate them.

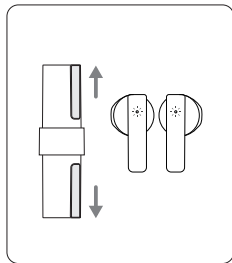

Step 3

Take out the earbuds from the case. The LED flashes white 3 times when powered on.


POWER ON & CONNECT

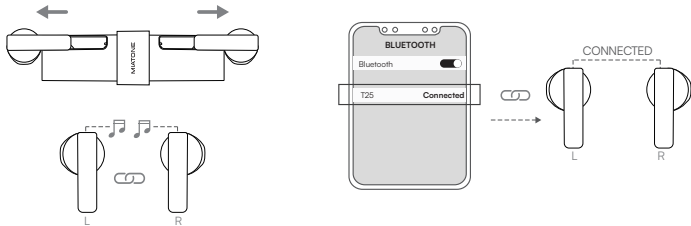


1. Remove the earbuds from the charging case to power on automatically.
2. Enable Bluetooth on your device and select "T25" from the list.
3. "Connected" will appear when pairing is complete.

CONTROLS

x 1	Tap Once
x 2	Tap Twice
x 3	Tap Three Times
>2S	Touch for 2 secs
>3S	Touch for 3 secs

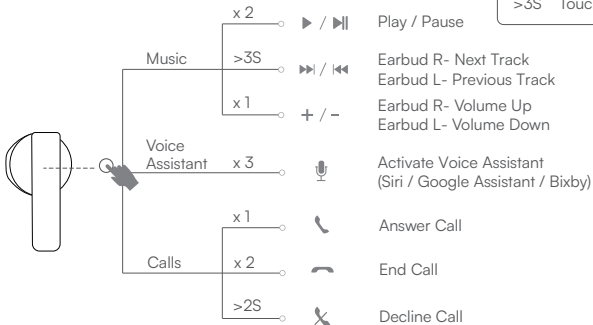


CONNECTING TO TWO DEVICES (MULTIPOINT)

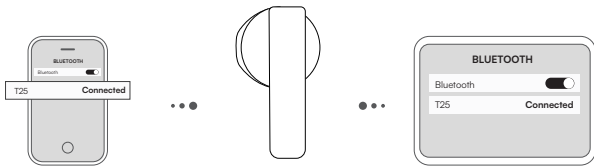

1. The earbuds can connect to two Bluetooth devices at the same time.
2. Pair "T25" with the first device, then turn off Bluetooth on that device (do not turn off the earbuds).
3. Pair the earbuds with the second device.
4. Turn Bluetooth back on for the first device. If it doesn't reconnect automatically, tap "T25" on the list.

POWER OFF

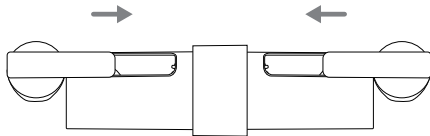


Place the earbuds back into the charging case then the earbuds power off.

Note:

The earbuds could not power on / off automatically when the charging case runs out of battery. In that case, please charge the charging case earlier.

CHARGING

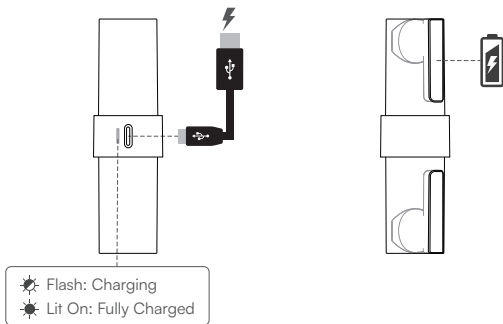

1. Place the earbuds in the charging case.
2. Connect the included cable to the charging case and to a USB-A wall charger (not included) or a computer. The case indicator flashes red while charging and turns solid red when fully charged.

SPECIFICATION

Model: T25

Wireless version: V6.0

Wireless Working Frequency: 2402-2480MHz

Transmit Power:

Wireless Transmission Distance: Up to 10 meters

Charging Input: DC 5V / 500mA

Battery Capacity: Earbuds 30mAh, Charging Case 250mAh

Charging Time: 1.5 hours

Playback Time: 24 hours

Driver Size: 13mm

Impedance: 16ohm $\pm$ 15%

Sensitivity: 106 $\pm$ 3dB

IMPORTANT NOTICE

Reset

If you have problem to connect the earphones with your device, don't worry about it. Follow the steps as below to reset it.

1. Make sure the earphones are not connected. Delete all the pairing records if necessary.
2. Take the earphones out of the charging case, and tap either earbud by five times quickly, then an prompt beep will be heard.
3. Follow the pairing steps to reconnect your device.

Charging

- Before charging, be sure the TWS earbuds are at room temperature, between 46° F (8° C) and 102° F (39° C).
- Use this product only with an agency-approved power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC) .
- Use the included charging cable to charge the TWS earbuds.
- For the first use, please fully charge the product.

1. Connect the type-C end of the included charging cable to the charging port on your case. Then plug the other end of the USB charging cable into a suitable USB port on your computer (or with a standard cell phone charger) to recharge your earbuds' internal rechargeable battery.

2. Charge the case when you hear low battery reminders and see the white indicator on the earbuds flashes slowly every 5 seconds.

The earbuds won't power on or off automatically when the case is out of battery.

3. To prolong battery life, please fully charge the case at least once every 3 months. Battery life varies based on use and settings.

Troubleshooting

Q: Earbuds don't connect to Bluetooth device.

- Charge the earbuds and the charging case.
- Power on the earbuds.
- Make sure your mobile device supports Bluetooth connections.
- Put your mobile device closer to the earbuds and away from any interference or obstructions.
- Increase the volume on the earbuds per operation, or increase volume from your mobile or other connected device.
- Try to connect another mobile or devices support Bluetooth connections.

Q: Earbuds don't power on.

Check whether the charging case has power. In case you don't hear a prompt sound from earbuds that means earbuds are out of battery. Place both earbuds in the charging case then charge the product.

Q: Two earbuds don't pair.

Place both earbuds in the charging case. Take them out from the case then they will pair automatically.

Q: Earbuds don't connect with mobile device.

Delete pairing record on the device. Power on the earbuds and re-connect with your mobile devices.


Q: Earbuds can't be charged.

- Check whether the case has power. If not, charge the case by included cable.
- Clean the charging pins of case and earbuds by dry, soft cotton swab or equivalent.

Q: No sound from earbuds.

- Make sure the volume is turned on.
- Make sure audio is playing.
- Play audio from a different app or music server.
- Play audio from download list on your device.
- Restart your mobile device.
- Place earbuds back into case, and take them out of the case and put into your ears again.

Clean the charging pins by dry, soft cotton swab.

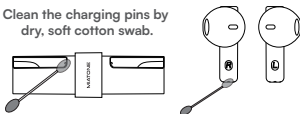

Care and Maintenance

Before using this product, carefully read these instructions and keep the user manual for future reference.



This logo means the prohibition of the naked flame sources such as a lighted candle on or near the device.



1. The electrical and electronic equipment are part of a separate collection. Do not throw electrical or electronic equipment away with unsorted municipal waste, but ensure that it is collected separately. Collection systems and locations (sorting centers, rubbish dumps) are provided for you by local councils and retailers. By entrusting your end-of-life product to the proper recycling process, you are helping to protect the environment and your health.

2. Use the product in temperate climates only.
3. This product is not a toy — never allow children to play with the appliance. Always store the product out of reach of children and pets.
4. Always unplug the device before cleaning it.
5. Clean the speaker with a soft dry cloth only. Never use solvents.

6. Attention should be drawn to the environmental aspects of battery disposal.

7. The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

8. Stop using the device immediately in case of an abnormality or failure.

9. Avoid dropping. Dropping or hitting the device may damage it.

10. The product is not waterproof. Do not submerge.

11. Do not tamper with the product. Never attempt to service, dismantle the product yourself, or push objects of any kind into the products, as this may result in fire, electric shock, or equipment damage and will also invalidate the warranty.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.

 
The device can be used in portable exposure condition without restriction.

Electromagnetic Compatibility Regulations 2016.
Electrical Equipment (Safety) Regulations 2016.



Operation of this equipment is subject to the following two conditions:

- (1) this equipment or device may not cause harmful interference, and (2) this equipment or device must accept any interference, including interference that may cause undesired operation.



FCC ID: 2AWG3-T25



MADE IN CHINA

