

10cm

14cm

SOUND SPLASH WIRELESS & SPLASH PROOF BLUETOOTH SPEAKER



ITEM NO: HDSS-54
INSTRUCTION MANUAL
PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

1

Getting started

- Remove the product from the box.
- Please retain all packaging until you have checked off all parts and contents on the package contents list.

Package Contents

- Sound Splash Bluetooth Enabled Speaker
- USB charging cable
- Instruction Manual

Features

- Works with Bluetooth enabled devices including iPhone, iPad, Android and more for listening to music and hands-free speaker phone
- Streams wireless music
- Unique water-resistant design allows you to enjoy music in the shower
- Easily mounts via suction cup onto non-porous surfaces & loops on backpack
- Speaker recharges via included USB cable

IMPORTANT SAFETY INFORMATION


- Read all instructions before using this product.
- Do not leave this product unattended while connected to a power supply.
- Do not immerse in water or any other liquids.
- Do not use if unit has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- Place the unit on a sound, even surface, free of vibrations and away from sources of heat.
- Do not use with wet hands.
- Do not place objects into openings.
- Keep free of dust, lint, hair etc.
- Do not use this unit for any other reason than its intended use.
- Keep this product out of reach from children.
- This product is not a toy.
- Do not play music at excessive levels, especially near children, as it may damage hearing.

CAUTION: SPLASH PROOF

- This unit is designed to resist mild steam and light splashes from a shower and/or bath. Speaker must never be operated under running water. Under no circumstances should it ever be fully immersed in water.
- This unit has rubber seals to minimize the risk of moisture getting inside. Do not immerse it in water or else risk permanent damage to the electrical and mechanical parts.

2

Description of Parts

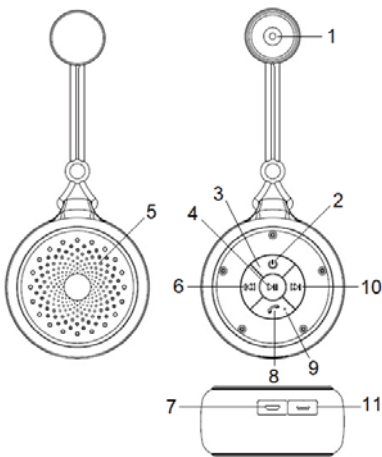

S.No.	Description	S.No.	Description
1	Suction Cup (with lanyard loop)	7	Charging Port
2	Power Button	8	Phone Button
3	LED Indicator	9	Built-In Microphone
4	Play / Pause Button	10	Next Track / Volume Increase Button
5	Speaker	11	Rubber Cover
6	Previous Track / Volume Decrease Button		

INSTRUCTIONS FOR USE

Charging the speaker

For best results, fully charge the speaker before its first use.

- Connect the USB cable (included) to the charging port of the speaker and insert the other end into a suitable USB port of your computer or a similar power source.

3

- When the LED Indicator light turns red, it indicates the speaker is charging. Once fully charged, the red LED light will turn off.
- It takes 1 to 2 hours for the speaker to fully charge.
- Once the speaker is fully recharged, disconnect the USB Cable and firmly close the USB Charging Port with the Rubber Cover.
- If the USB charging port is not securely covered, water may seep into the circuitry and may damage the speaker. This damage will NOT be covered under product warranty.

Note: When the speaker is running on low battery, please recharge it.

Never exceed the recommended charging time. Never leave product unattended whilst charging.

Turn On/Off the Speaker

Press and hold the "Power" button for 3 seconds until you hear the indication tone from the speaker and blue LED light will blink rapidly. Your speaker is now ON and is entering "pairing" mode.

Press and hold the "Power" button for 3 seconds until you hear a unique tone to indicate that the speaker has turned OFF.

Turn the speaker to Bluetooth pairing mode

Press and hold the "Power" button for 3 seconds until you hear the indication tone from the speaker and blue LED light will blink rapidly. Your speaker is now ON and is now in "pairing" mode.

(Note: The speaker will first search for previously paired devices. It will automatically pair after finding a previously paired device.)

Pairing your device with Bluetooth Speaker

Your **Wireless Shower Speaker** can wirelessly stream audio from any Bluetooth enabled device within 33 feet. Simply follow the steps below.

- Turn the speaker ON, you would hear the indication tone from the speaker and the blue LED light will blink rapidly.
- Enable the Bluetooth feature on your smartphone, tablet or computer.
- It will search for various devices
- The pairing name of the Bluetooth Speaker is "**Sound Splash**". Pair it with this device.
- You might be prompted with "Pair with **Sound Splash**?" on your mobile device, with "Cancel" and "OK" options. Please click "OK".
- If a password is required, enter '0000' to finalize pairing.
- Once paired successfully, another indication tone would be heard and the blue LED light will stay on.
- If you fail to pair it within the allotted time frame or you want to pair it with a different Bluetooth device, please follow the steps outlined above.
- Select your favorite song on the Bluetooth device to play it through the Wireless Shower Speaker.

4

Listening to Music Wirelessly

In order to stream music wirelessly, please ensure that your device (smartphone, tablet or computer) is paired with the Bluetooth speaker. Once paired, play music from your device.

Function	Operation	Button
Increase Volume	Playing music	Press & Hold the Volume Increase button to increase the volume
Decrease Volume	Playing music	Press & Hold the Volume decrease button to decrease the volume
Pause	Playing music	Press Play / Pause button once to pause music
Play	Pause	Press Play / Pause button once to play music
Previous track	Playing music	Short press the Previous Track button to the previous track
Next track	Playing music	Short press the Next Track button to the next track

(Note: An indication tone will alert you when the volume is adjusted to maximum level.)

Phone calls using the Bluetooth Speaker

Please ensure that you are paired with the Bluetooth Speaker to use the functions below. When there is an incoming phone call, the music will automatically pause and you will hear the phone ringtone on your phone.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Press the Phone button once to answer an incoming call.
Reject incoming call	Incoming Call	Press and hold the Phone button.
End Call	Incoming Call	After your phone conversation, press the Phone button.
Redial last number	Standby mode and connected to a device	Short press Phone button twice
Increase Volume	Incoming Call	Press & Hold the Volume Increase button to increase the volume
Decrease Volume	Incoming Call	Press & Hold the Volume Decrease button to decrease the volume

TIP:

Do not get too close to the microphone; this will distort your voice. Keep a distance of 1 foot to maximize speaker phone performance.

Do's and Don'ts

Do not play music at excessive levels as it may result in damage to hearing and/or equipment.

5

Specification

Bluetooth version: 5.0
Power input: DC 5V
Charging time: 1.5-2 hours
Play time: 1.5-2 hours (moderate volume)
Bluetooth Range: up to 33 feet
Built-in rechargeable lithium battery: 3.7V 300mAh
Size: 3.45" L x 3.90" W x 1.71" H
Weight: ~4.4 oz
(Note: Battery life and charging time may vary based on usage, type of devices connected & wireless distance.)

CAUTION: SPLASH PROOF LIMITATIONS

- The Bluetooth Speaker can handle a brief splash of water on its surface (IPX4 water resistant). Speaker must never be operated under running water. Under no circumstance should it ever be fully immersed under water. Before using the Bluetooth Shower Speaker in a bathroom, make sure that the splash proof Rubber Cover is tightly closed in the correct position.
- After use in the bathroom always wipe the outside of the speaker thoroughly if it becomes damp with moisture or condensation. This will help prevent the internal parts of the unit from possible moisture damage.

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (smartphone, tablet, computer, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.
No sound at all	Source (smartphone, tablet, computer, etc.) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.

Care and Maintenance

Clean the unit with a soft, dry cloth. Never use chemicals or hard abrasives.

6

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.