 


WHAT'S INCLUDED

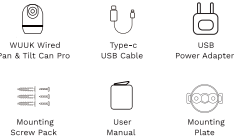

Please note: for all the WUUK Wired Cam products, no battery is included. Wires or power cords are required to power the device and need to be plugged in all time when in use.

POWER ON THE WUUK WIRED CAM

Connect the WUUK Wired Cam to a power outlet using the provided USB cable and USB power adapter. If the power cable is connected correctly, the camera will be powered on without any further operations.

 
After being powered on, the WUUK Wired Cam will automatically connect to the system if the pairing process is done in the previous steps. If not, please refer to step: SETTING UP THE SYSTEM in the manual.

When it is successfully connected, the indicator light will turn **SOLID BLUE**.

Tap the Live View feature in the WUUK app to check if the view is desired, adjust the WUUK Wired Cam if needed.

You are now all set to use your WUUK Wired Cam.

PRODUCT OVERVIEW

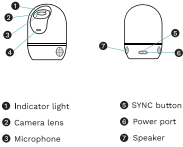

SETTING UP THE SYSTEM

 
Download the WUUK app from the AppStore (IOS devices) or GooglePlay (Android devices).

Register an account if there is no existing account.

Go to the app homepage. Tap Add Device, and add the WUUK Wired Pan & Tilt Cam Pro to your WUUK app.

Follow the on-screen instructions to complete the setup.


MOUNTING THE WIRED PAN & TILT CAM PRO

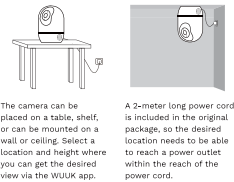


Find a Good Mounting Spot



 Understand the Network Diagnosis Result

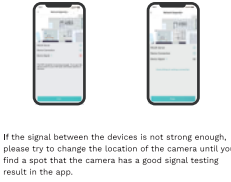

Mount the WUUK Wired Cam

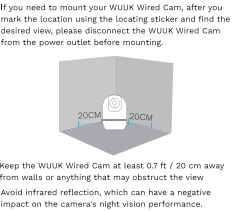 

To mount the WUUK Wired Cam on the ceiling, follow the steps below:

Place the locating sticker against the ceiling and then mark the screw position at which drilling will be required.

Drill holes with a 6mm drill bit.

Align the holes on the mounting plate with those in the ceiling. Insert the anchors into the holes; anchors are necessary for walls that are made out of hard materials such as concrete, brick, or stucco. Fix the screws to fasten the mounting plate to the ceiling.

Align the gooves with the mounting plate and rotate the camera clockwise until it clicks into place.

UNDERSTAND THE INDICATOR LIGHT

	Solid Blue: Power on and working properly
	Solid Red: System is initializing or rebooting
	Flashing Blue: Disconnected from the Internet
	Flashing Red: Pairing Mode, Ready for setup
	Flashing blue and red alternately: Firmware upgrade in progress

LOCAL STORAGE CARD REQUIREMENT

You can choose between cloud storage or leverage the local storage option by installing a SD card in the SD slot. WUUK Wired Cam product series can take micro SD card to the maximum size of 256GB, FAT32 format, and it has to be Class 10. We recommend formatting the SD card before the first time of using on the WUUK Wired Cam.

WUUK app users can access SD card formatting tool in the WUUK app after inserting a card of the right size and hearing a click sound.

SAFETY STATEMENT

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Declaration of Conformity

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult dealer or an experienced radio/TV technician for help.

Declaration of Conformity

- When charging, please place the device in an environment that has a normal room temperature and good ventilation.
- It is recommended to charge the device in an environment with a temperature that ranges from 5°C-25°C.
- Please ensure to use only the charger offered by the manufacturer. Using unauthorized charger may cause danger and violate the authorization of the device and the guarantee article.
- This charger is for indoor use only.

IC RF Statement

When using the product, maintain a distance of 20cm from the body to ensure compliance with RF exposure requirements.

WUUK Wired Pan & Tilt Cam Pro (4MP) User Guide



WUUK Y0510 说明书 风琴折页 80*80

;

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.