

iPad DSLR Photo Booth Instruction manual

(V1.1 version)



Operating Instructions for Photo Booth

Note: Before using the product, please read the instructions carefully!
Do not attempt to disassemble the product.
If the product is not working properly, please contact our seller,thank you!.

Application for: 10.2/10.5/10.9/11/12.9/13 inch ipad and camera

Product parts and quantity

Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



Two Faceplates

Head of iPad dslr photo booth

Power supply adapter



AI stand 1 AI stand 2

The base

Accessory bag



remote control

Universal wheels


ring light pack

Easy Installation Instructions


1. Remove all the accessories



2. Select the base, flip it over, and remove the foot pads on both sides

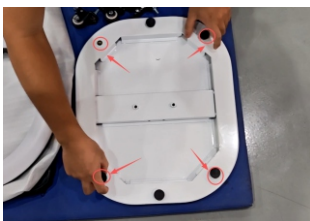


3. Take out the 4 * M8 universal wheels and align them with the 4 foot pad threads that have been removed to lock the universal wheels

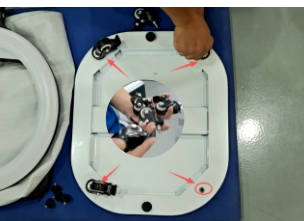

4. After installing the universal wheels, flip the base over and place it on a level ground



5. Select support rod 2, align the power switch end with the base hole and place it

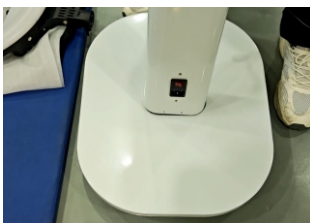

6. Take out the special wrench from the accessory bag, align it with the screw at the top of the support rod, and tighten it to lock it in place



7. Remove the power cord from the middle of support rod 2



8. Select support rod 1 and thread the power cord through the bottom of support rod 1



9. Align the top of support rod 2 and insert it. Align the switch direction with the circular hole behind support rod 1



10. Use a specialized wrench to tighten the two screws at the top



11. Mobile power cord, place it in a specific card slot to stabilize the power cord



12. Lift the iPad DSLR head, align it with the top of the support pole, and place it in, paying attention to the direction




13. Take out the M5 plum blossom hand screw from the accessory bag, align it with the screw hole behind the support rod 1, and tighten it



14. Open the back cover of the head with the key



15. Remove the 2 * M6 plum blossom hand screw from the accessory bag

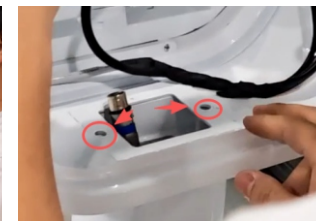

16. Align the holes and tighten them to ensure that the iPad DSLR head and support frame are stable and not shaking



17. Remove the fixed power cord and align it with the power cord interface inside the iPad DSLR head before inserting it




18. Take out the cross screwdriver from the accessory bag, remove the top protective cover screw, and expose the top port



19. Take out the connecting rod from the accessory bag, align it with the top hole, and tighten it



20. Remove the fill light power cord from the middle of the iPad DSLR head and thread it through the top hole

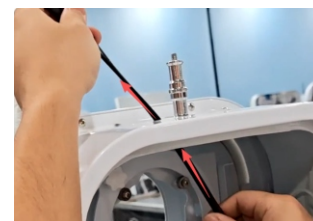


21. Take out the 18 inch fill light from the bag, align it with the connecting rod, and place it in. Tighten the fixing screw



22. Insert the power cord into the power interface of the fill light



23. Select the appropriate iPad, remove the iPad crossbar, insert it into the iPad, and then lock the iPad crossbar

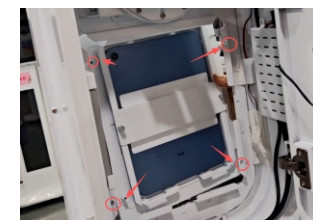

24. Choose a suitable DSLR camera, place it on the iPad DSLR head platform, and tighten the DSLR camera with screws



Safety Warnings and Precautions

Thank you for buying the high-performance iPad dslr photo booth. We have taken personal safety into account in product design and carried out rigorous tests in the factory.

However, improper installation and use can lead to electric shock and fire. In order to ensure safe use, maximize the performance of the product and prolong the service life of the product, please read and follow all instructions carefully before using the product.

And keep the instructions for future reference.

We strongly recommend using standard adapters and portable power supplies, or adapters with internal circuit breakers, to prevent bad power supplies from damaging the device.

Symbol Legends:

- ⚠ Warning: May cause personal injury or Death:
- ⊘ The operation is prohibited
- ⚡ Caution: May cause damage or property loss

If any of the following occurs:

- Voltage is unstable.
- The device has an abnormal sound or smell.
- The AC power cable is damaged.
- Equipment fall, knock, impact and other damage.
- Any liquid or foreign matter falling into the shell.

 Please immediately disconnect the power supply of the device, unplug the plug from the power socket, and contact our after-sales staff for confirmation, timely maintenance.

⊘ If coal gas or other flammable gas leaks, do not pull out the plug of the equipment or other electrical appliances; instead, turn off the gas valve immediately, and open the doors and windows quickly.

⚠ WARNING

Do not use power supplies with AC output other than 100-240V 50/60Hz.

- Disconnect the power supply before connecting or disconnecting any cable.
 - Do not place the device in an unstable position to avoid damage or fire.
 - Do not place the device in the following positions:
 1. Exposure to direct sunlight, humidity, extreme temperature or excessive dust;
 2. Flammable and explosive environment;
 3. Flammable and corrosive gas environment;
 - Do not use damaged or improper power sockets, and ensure that the plug is in normal contact with the socket.
 - Do not allow dust or metal deposits to adhere to plugs and sockets.
 - Do not damage the power cord:
 1. Do not modify the power cable.
 2. Do not place heavy objects on the power cord.
 3. Keep the power cable away from heat source.
 4. Do not unplug the power cord.
 - Do not connect multiple plugs at the same time. Otherwise, excessive power consumption may cause fire.
 - Do not use an open flame (such as a lit candle) near the device. Otherwise, electric shock or fire may occur.
 - Do not put sharp objects, metals or liquids into the contact signal terminals to avoid short circuit, product damage or electric shock.
 - The internal opening of the chassis is designed for ventilation and heat dissipation to ensure the reliable operation of the components in the chassis for a long time and prevent overheating. Do not block the opening when placing the unit.
 - Do not touch the plug with wet fingers, or you may get an electric shock.
 - Do not use equipment in stormy weather, especially when there is lightning; To avoid lightning strikes, disconnect the power supply and antenna plug.
 - Do not use the equipment outdoors on rainy days. The equipment is not waterproof. Do not remove the device without permission. Otherwise, electric shock or fire may occur.
- Please find a qualified technician to repair it.

⚠ CAUTION

- Do not let children climb on the equipment.
- Keep widgets away from children to prevent them from swallowing.
- If not used for a long time, please turn off the device and unplug the power plug.
- When adjusting the device position, disconnect all power cables and move them slowly to avoid tipping.
- It is strictly forbidden to scratch, beat, twist and squeeze with hard objects.
- When the unit is moved from a low temperature to a high temperature, do not start it immediately, otherwise condensation and failure may occur.
- Remove the power plug before cleaning the device. Wipe with a soft cloth; Do not use industrial chemicals; Prevent foreign matter from entering the machine. Improper cleaning (such as cleaning fluid, water) can damage the product, erase the printed information, or even fluid inflow can cause parts damage, leading to machine failure.
- If the same screen is displayed for a long time, or the moving screen has fixed text or icon, it may leave a shadow on the screen, which will not disappear when the machine is powered off; This is normal and not covered by the warranty.
- If the LED breaks and liquid spills onto your skin, rinse immediately with water for 15 minutes and consult your doctor.
- When carrying the device by hand, please hold the backpack or shell tightly. Do not put pressure on the panel.
- Proper use of equipment: use under proper lighting conditions; Poor light or prolonged viewing can damage your eyesight.
- Please insert the plug correctly into the socket, otherwise it may cause sparks and fire.
- Specifications on this contract and packing are subject to change without prior notice.
- This manual may be slightly different from actual operations.


Bluetooth music light features

1. Supports both app control and IR remote control;
2. Support automatic device connection and automatic re-connection when the app turns on;
3. Support multiple devices grouping control;
4. Multiple sound collection methods: phone mic , player streaming, on-board mic;
5. Support modifying the device name, calibrate the RGB channel sequence, and timer function;
6. Compatible with the common single-lin LED driver IC on the market, can drive up to 600 pixels;
7. Built-in 142 dynamic effects, effect length adjustable, with favour effects collecting function;
8. Built-in 18 music effects, effect length adjustable, sensitivity adjustable;
9. DC 5-24V wide voltage input, the power supply has anti-reverse connection function;
10. Automatic saving function for setting parameters.




Scan the QR code to download the APP

Introduction to Remote Control

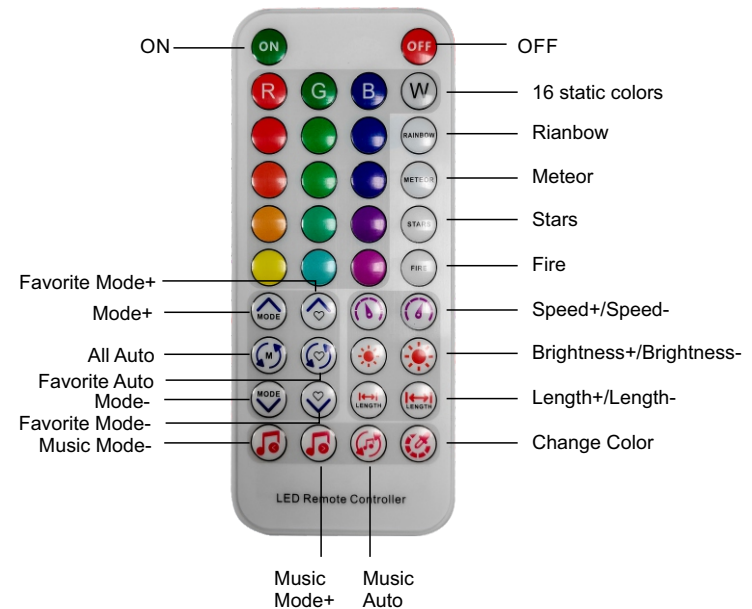

Mobile APP control

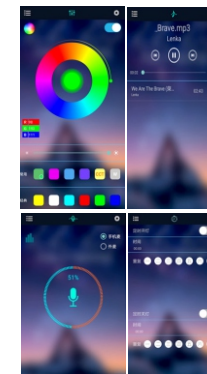

Mobile phone interface



Light color change

Camera support and fill light

DSLR camera support


Canon/Nikon D series products



Partial Sony cameras



RGB running horse light introduction

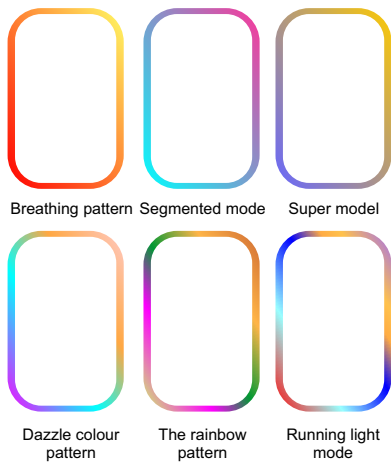

The DSLR camera is connected to the computer



Canon original data cable

DIGITAL



DSLR camera installation diagram

DSLR camera horizontal and vertical screen



Horizontal mounting

Vertical mounting

Quick installation and support models for iPad



Support for IPAD model sizes



- | | |
|------------------|--|
| 10.2 inch | iPad 7(2019)
iPad 8(2020)
iPad 9(2021) |
| 10.5 inch | iPad PRO (2017)
iPad Air 3 (2019) |
| 10.9 inch | iPad Air 4 (2020)
iPad Air 5 (2022)
iPad 10 (2024) |
| 11 inch | iPad PRO 11 (2018)
iPad PRO 11 (2020)
iPad PRO 11 (2021)
iPad PRO 11 (2022)
iPad Air(M2) (2024)
iPad PRO(M4) (2024)
iPad Air(M3) (2025)
iPad A16 (2025) |
| 12.9 inch | iPad PRO 3 (2018)
iPad PRO 4 (2020)
iPad PRO 5 (2021)
iPad PRO 6 (2022) |
| 13 inch | iPad Air(M2) (2024)
iPad Air(M3) (2025)
iPad PRO (M4) (2024) |

Printer stand and printer optional




Supports printers of all sizes

A variety of filters, color, contrast, brightness and other effects to meet the needs of various styles.

Quick removal and installation



Product Introduction

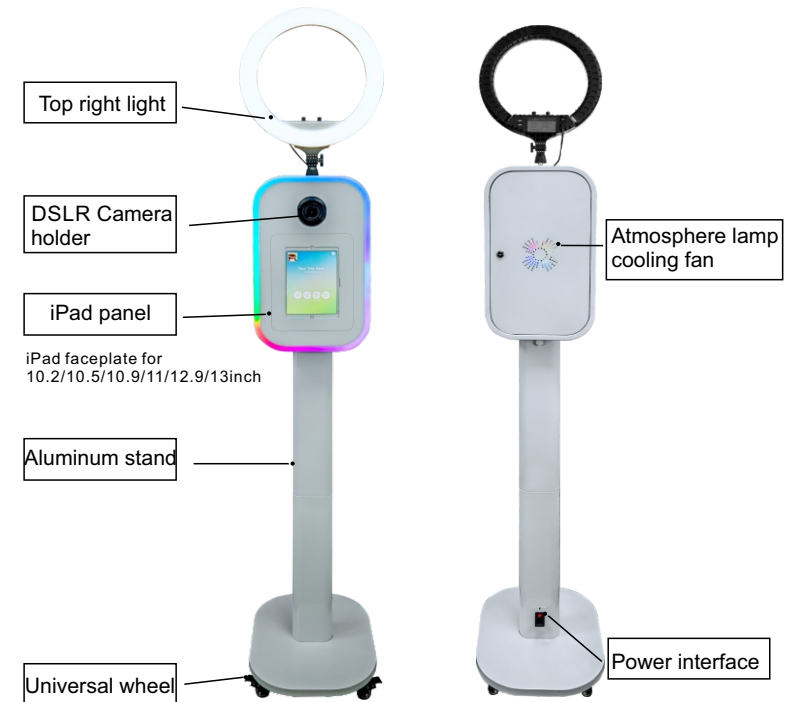

Ring light or Umbrella flash light optional



Warranty

1. This warranty card shall be properly kept by the user as a maintenance voucher.
2. This product is guaranteed for one year from the date of purchase.
3. Warranty equipment in the warranty period, in the normal use and maintenance of the case, the machine itself failure, after verification, the company will provide free maintenance and parts replacement.
4. During the warranty period, the company has the right to refuse service or charge material fees and maintenance service fees according to the following circumstances:
 - 1) The warranty card and valid purchase certificate cannot be provided.
 - 2) Product failure or damage caused by improper use by users.
 - 3) Damaged by abnormal external forces.
 - 4) Non-maintenance service provided by our company, the user disassembles and repairs by himself or herself and causes damage.
 - 5) Failure or damage caused by natural disasters or other force majeure factors.
 - 6) Others intentionally damaged.
5. The company reserves the right to modify and interpret all contents.