

1

Button Introduction

LB

Indicator Light

RB

BACK

START

Left Stick/LS (press down)

A B X Y

Di-Pad

Right Stick/RS (press down)

Left Grip Indicator

Power Switch

Right Grip Indicator

RT

Profile Key

LT

H1

H2

H3

H4

Type-C Cable

Sanatase emergency Switch

2

Connect to Switch

1. Bluetooth Connection

(1) Turn on the Switch, open up the [Controller and Sensors - Charge Grip / Order] (This step can be ignored for non-first-time pairing.)

(2) Make sure the controller power switch is OFF, press and hold the FN + LB and turn the power switch to ON until the indicator light flashes in blue and then release.

(3) Connection is successful when controller vibrates, and the blue indicator light is always on.

2. Wired Connection

Connect to the Switch

(1) Turn the controller power switch to ON.

(2) Plug the USB cable of the controller into the Switch dock connector.

(3) Connection is successful when controller vibrates, and the indicator light is always on.

3

Wireless Receiver

Connect to the Switch

(1) Turn the controller power switch to ON.

(2) Plug the OTG cable and connect one end to the Switch and the other end to the controller.

Connect to The Switch Dock

(1) Turn the controller power switch to ON.

(2) Plug the receiver of the controller into the Switch dock connector.

(3) Connection is successful when controller vibrates, and the red indicator light is always on.

4

Connect To PC

1. Bluetooth Connection (PC with Bluetooth reception is required)

(1) Make sure the controller power switch is OFF, press and hold the FN + RB and turn the power switch to ON until the indicator light flashes in blue and then release.

(2) Open the "Bluetooth and other devices" interface of PC, click "Add wireless controller" to connect.

(3) Connection is successful when controller vibrates and the yellow indicator light is always on.

2. Wired Connection

(1) Turn the controller power switch to ON.

(2) Plug the USB cable of the controller into the PC USB port.

(3) Connection is successful when controller vibrates, and the indicator light is always on.

5

Connect To Mobile

1. Connect to Android Mobile/Connection

(1) Open the Bluetooth of device.

(2) Make sure the controller power switch is OFF, press and hold the FN + B and turn the power switch to ON until the indicator light flashes in green and then release.

(3) Open the BEITONG Gaming Hall, then open Bluetooth settings interface of the device, click "BT BTBT BTBT" to connect.

(4) Connection is successful when controller vibrates, and the green indicator light is always on.

2. Connect to iPhone

(1) Open the Bluetooth of device.

(2) Make sure the controller power switch is OFF, press and hold the FN + B and turn the power switch to ON until the indicator light flashes in yellow and then release.

(3) Open the BEITONG Gaming Hall, then open Bluetooth settings interface of the device, click "BT BTBT BTBT" to connect.

(4) Connection is successful when controller vibrates, and the green indicator light is always on.

6

Wireless/Bluetooth Mode Switching

BEITONG ZEUS Pro has 4 wireless modes can be switched: 2.4G Wireless Receiver, Virtual Bluetooth, Switch Bluetooth and BT+HID.

Press and hold the FN for 3s to switch modes or press key combination to enter the corresponding mode.

Enter a mode by pressing key combination is the forced connection state for that mode.

Wireless Bluetooth Mode	Indicator Color	Key Combination	Re-connecting	Re-connecting	Connected
2.4G Wireless Receiver	Red	FN + [OFF] + [ON]	Red indicator flash slowly	Red indicator flash slowly	Red indicator is always on
Virtual Bluetooth	Yellow	FN + [HID] + [ON]	Yellow indicator flash slowly	Yellow indicator flash slowly	Yellow indicator is always on
Switch Bluetooth	Blue	FN + [BT] + [ON]	Blue indicator flash slowly	Blue indicator flash slowly	Blue indicator is always on
BT+HID Bluetooth	Green	FN + [BT] + [ON] + [ON]	Green indicator flash slowly	Green indicator flash slowly	Green indicator is always on

12

7

Replaceable Parts

Replaceable Joysticks

(Note: Joysticks of different heights need to be purchased additionally.)

Replaceable Face Shell

Replacing face shell firmly from the center of the top seam of the shell, and the shell can be removed by slightly bulging and detaching the shell.

Adjustable A B X Y Key Cap

After removing the face shell, take out the A B X Y key caps for position adjustment.

8

Other Function

Light Adjustment

(7) Level of lights effect can be switched freely.

Vibration Adjustment

Double Bumper Presses, is shape intensity adjustable.

Joystick Sensitivity

Can be switched freely depending on game type.

Trigger Setting

Trigger sticks and vibration mode adjustable.

Specific PROFILE Key

4 Sets of PC/PS configuration can be saved, switch freely.

9

Switch's Key Indicator Diagram

Switch's Key Indicator Diagram

Function Key	Press START + [X]	[HID]	Double press START + Back to Home	Long press START + Home
Function Key	Press START + [X] <th>[HID]</th> <th>Double press BACK + Start/Reset</th> <th>Long press START + Home</th>	[HID]	Double press BACK + Start/Reset	Long press START + Home

10

Charge Instructions

Battery State

Battery is less than 20%

Charging

Full Charge

Indicator State

Customize light flashes quickly

Breathing

After the light is always on for 10s, it will switch to the custom light mode and turn off.

11

FAQ

Q1: Why the controller can not be connected to the receiver, Bluetooth device?

A1: Generally, the receiver signal interference, or the controller is out of power.

1. Make sure the receiver has enough power, or charge it for 1 hour and try again.

2. Try to insert the receiver into another USB port to test again, USB port to 3.0 is better.

3. If the above methods are not effective, please contact official customer service.

Q2: What charger should be used to charge the controller?

A2: Use the standard 5V/1A 1A charger.

Q3: How do I upgrade the firmware of the controller?

A3: Insert BEITONG Gaming Hall on your phone / Damaged Assistant on your computer, activate the in-game interaction to upgrade the firmware.

11

Product Specification

Product Name

BEITONG ZEUS Pro Elite Gamepad

Product Model

BT-10204

Package Size

200*200*60mm

Product Size

160*160*60mm

Product Weight

220g

Adaptation Platform

PC and laptop (Windows 7 and above), Nintendo Switch, Android, PlayStation 3/4 and above, iOS (iOS 10 and above), Xbox One S and above, Steam, Android TV/PlayStation

12

Customer Service

Dear customer,

Thanks for using BEITONG gaming peripheral products.

We focus on providing game with a better gaming experience, please provide the information through your email for customer service.

① Purchasing Channel: Buyer ID / Order Number / Product Model

Please provide the below information for us according to the product situation.

Please provide service reason:

A function is not good / Bad experience / Can not use in my device / I can not play the game / want to replace / other reason

Please provide the service you need:

a Replacement / a Refund / a Return / other

Customer service contact: beitong-service@beitong.com

We also welcome our customer to provide suggestion so that to improve and upgrade our products. Any good idea for our products, please feel free to contact us. It's very grateful. Meanwhile we'll select the customer who in high-quality advice to experience our new products for free opportunity.

Sincerely,

BEITONG Customer Service Team

For all Class B Digital Device, a statement like the following is needed:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can receive radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirements.

白卡纸 7 折页 单张尺寸： 8*9cm 参考线为对折位置