

83446 RC Excavator Instructions

size: 297mm x 210mm

Job No.: F-311A-25

FRONT

www.cat.com / www.caterpillar.com © 2026 Caterpillar. All Rights Reserved. CAT, CATERPILLAR, LET'S DO THE WORK, their respective logos, "Caterpillar Corporate Yellow", the "Power Edge" and Cat "Modem Hex" trade dress as well as corporate and product identity used herein, are trademarks of Caterpillar and may not be used without permission. Funrise Inc., a licensee of Caterpillar Inc.

www.cat.com / www.caterpillar.com © 2026 Caterpillar. Tous droits réservés. CAT, CATERPILLAR, LET'S DO THE WORK, leurs logos respectifs, « Caterpillar Corporate Yellow », les habillages commerciaux « Power Edge » et « Cat Modem Hex » ainsi que l'identité de l'entreprise et du produit utilisés dans le présent document sont des marques commerciales de Caterpillar et ne peuvent être utilisés sans autorisation. Funrise Inc., titulaire d'une licence Caterpillar Inc.

www.cat.com / www.caterpillar.com © 2026 Caterpillar. Todos los derechos reservados. CAT, CATERPILLAR, LET'S DO THE WORK™, sus logos respectivos, las imágenes comerciales «Caterpillar Corporate Yellow», «Power Edge» y «Cat Modem Hex», así como la identidad corporativa y la identidad de los productos que se utilizan aquí, son marcas registradas de Caterpillar y no pueden ser usadas sin permiso. Funrise Inc., propiedad de Caterpillar Inc.

DO NOT RETURN TO STORE
FOR SUPPORT/CUSTOMER SERVICE PLEASE
CONTACT CUSTOMERSERVICE@FUNRISE.COM

NE PAS RAPPORTER EN MAGASIN
CONTACTEZ L'ASSISTANCE/LE SERVICE APRÈS-VENTE
SUR CUSTOMERSERVICE@FUNRISE.COM

NO HACER DEVOLUCIONES AL ESTABLECIMIENTO
ESCRIBA A CUSTOMERSERVICE@FUNRISE.COM PARA
CONTACTAR CON EL SERVICIO DE ATENCIÓN AL CLIENTE

FCC label compliance statement:
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RSS-210 Compliance Statement:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence- exempt RSS(s).
Operation is subject to the following two conditions:
(1) This device may not cause interference
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Déclaration de conformité RSS-210
L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
(1) L'appareil ne doit pas produire de brouillage;
(2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Distributed by:
Costco Wholesale Corporation
P.O. Box 34535
Seattle, WA 98124-1535
USA
1-800-774-2678
www.costco.com

Costco Wholesale Canada Ltd.*
415 W. Hunt Club Road
Ottawa, Ontario
K2E 1C5, Canada
1-800-463-3783
www.costco.ca
* faisant affaire au Québec sous le nom les Entrepôts Costco

Costco Wholesale UK Ltd / Costco Online UK Ltd
Hartspring Lane
Watford, Herts
WD25 8JS
United Kingdom
01923 213113
www.costco.co.uk

Costco Wholesale Spain S.L.U.
Polígono Empresarial Los Gavilanes
C/ Agustín de Betancourt, 17
28906 Getafe (Madrid) España
NIF: B86509460
900 111 155
www.costco.es
atencionalocio@costco.es

Costco (China) Investment Co., Ltd.
Room 01 Mezzanine
No. 5178, Kang Xin Highway
Pudong New District
Shanghai
China 201315
+86-21-6257-7065

Costco Wholesale Japan Ltd.
40, Iijiko
Gwangmyeong-si
Gyeonggi-do, 14347, Korea
1899-9900
www.costco.co.kr

Costco Wholesale Australia Pty Ltd
17-21 Parramatta Road
Lidcombe NSW 2141
Australia
www.costco.com.au

Costco Wholesale Sweden AB
Box 614
114 11 Stockholm
Sweden
www.costco.se

Costco Wholesale Korea Ltd.
40, Iijiko
Gwangmyeong-si
Gyeonggi-do, 14347, Korea
1899-9900
www.costco.co.kr

Costco Wholesale France
1 avenue de Bréhat
91140 Villebon-sur-Yvette
France
01 80 45 01 10
www.costco.fr

* All instruction sheets must be retained since it contains important information.
* Toutes les fiches d'instructions contiennent des informations importantes et doivent donc être conservées.
* Debe conservar todas las hojas de instrucciones porque contienen información importante.



MASSIVE MOVER RC™
Steel Excavator
Excavatrice En Acier
Excavadora De Acero

• 2.4 GHz
Instructions
Instructions
Instrucciones

ITM. / ART. 1851476



Excavator
Excavateur
Excavador



Controller
Télécommande
Mando




USB Charging Cable
Câble de chargement USB
Cable de carga USB



BACK

BATTERY & POWER **BATTERIE ET ALIMENTATION** **BATERÍA Y ALIMENTACIÓN**

1. Connect the charger
Charging: •Red, Charged: •Green
Connectez le chargeur
En charge: •Rouge, Complètement chargé: •Vert
Conecte el cargador
Cargando: •Rojo, Carga completada: •Verde
2. Install 2 AAA batteries (Included)
Installez 2 piles AAA (fournies)
Inserte 2 pilas AAA (incluidas)
3. Turn ON the Excavator and controller
Allumer l'excavatrice et le contrôleur
Encienda la excavadora y el controlador

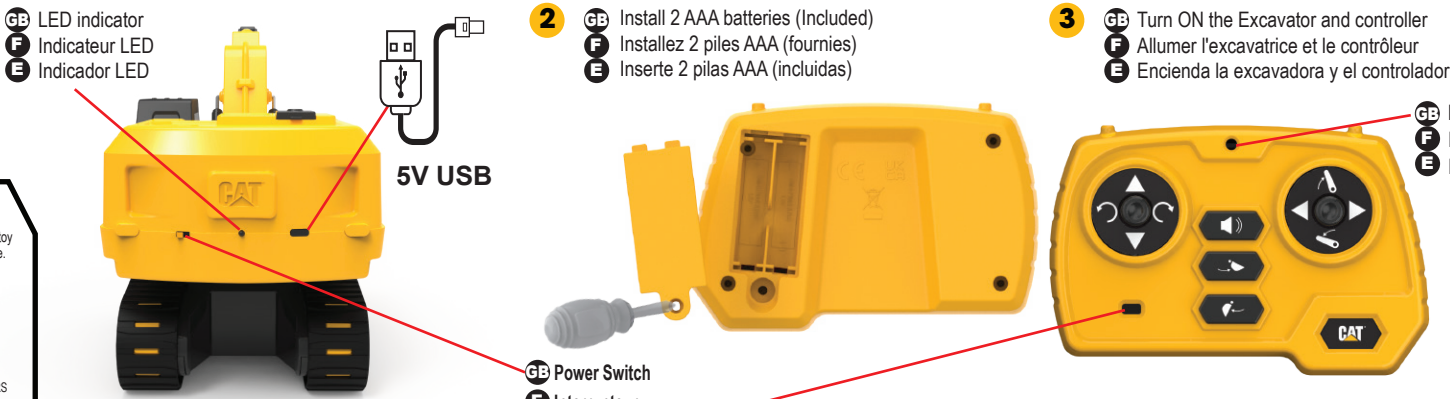

PRECAUTIONS
• Always turn OFF when not in use. AVOID CONTACT WITH MOISTURE.
• Please fully charge the toy for the first time and always keep the battery in fully charged condition even when the toy is not in use. This will help to ensure that your battery will work properly and prevent it from weakening over time.
• Keep fingers, hair, and loose clothing away from moving parts.
• WE RESERVE THE RIGHT TO IMPROVE/AMEND SPECIFICATIONS AND COLOR WITHOUT NOTICE.

PRECAUTIONS
• Éteignez toujours l'appareil lorsqu'il n'est pas utilisé. ÉVITER TOUT CONTACT AVEC L'HUMIDITÉ.
• Veuillez charger complètement le jouet lors de la première utilisation et gardez toujours la pile complètement chargée même lorsque le jouet n'est pas utilisé. Cela permet de garantir le bon.
• Garder les doigts, les cheveux et les vêtements amples à distance des pièces mobiles.
• NOUS NOUS RÉSERVONS LE DROIT D'AMÉLIORER OU DE MODIFIER LES CARACTÉRISTIQUES ET LES COULEURS SANS AVERTISSEMENT.

PRECAUCIONES
• Apagar siempre que no se esté usando. EVITAR EL CONTACTO CON LA HUMEDAD.
• Cargue completamente el juguete antes del primer uso y mantenga siempre la pila completamente cargada, incluso cuando no use el juguete. Esto ayudará a garantizar que la pila siga funcionando adecuadamente y evitará que se vaya deteriorando con el tiempo.
• Mantenga los dedos, el cabello y la ropa holgada lejos de las partes móviles.
• NOS RESERVAMOS EL DERECHO A MEJORAR/CORREGIR ESPECIFICACIONES Y COLORES SIN PREVIO AVISO.

OPERATION **FONCTIONNEMENT** **FUNCIONAMIENTO**

- Forward
Avancer
Hacia adelante
- Back
Reculer
Hacia atrás
- Left
Virer à gauche
Izquierda
- Right
Virer à droite
Derecha
- Turn
Tourner
Girar
- Up
Vers le haut
Arriba
- Down
Vers le bas
Abajo
- Dig
Fouille
Excava
- Push
Pousser
Empujar
- Sound ON/OFF
Son ALLUMÉ/ÉTEINT
Sonido ENCENDIDO/APAGADO
- Driving
Conduire
Conduciendo
- Turning
Tourner
Girar
- Digging
Creuser
Excavar