

正反面印刷尺寸10CMx10CM 风琴折叠

100 mm

100 mm



**In the Box**

 


IMW3101 ROCKBOX XL 3.0 WIRELESS SPEAKER



USB PD Charging Adaptor Quick Start Guide

**A Closer Look**

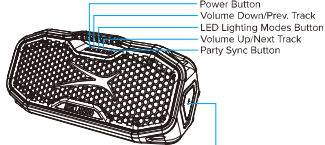

Power Button
Volume Down/Prev. Track
LED Lighting Modes Button
Volume Up/Next Track
Party Sync Button
USB-C Charge In / USB-A Memory Playback/Power Out / Aux Input Port

**Charging**

 
Note always fully charge your speaker before first use.

The speaker is charged via USB-C using the supplied 25W USB PD adaptor.

The LEDs turn off after full charge is reached.

Note: to recall the battery level double press the Power button 2 times quickly.

5-6 Hours Full Charge




**Powering On/Bluetooth Pairing**

Long press the Power button for 3 seconds to turn on, the speaker will go into pairing mode.

Go into Bluetooth settings on your phone/PC and pair to the available device 'AL RockBox XL 3.0'.

To disconnect an already paired device and pair to a new one press the Power button 3 times quickly.

 To power off the speaker long press the Power button again.




Ready to Pair
LED flashes slowly Blue

**est. FIRST**

 Overall battery performance varies dependent upon use, settings and environmental conditions. For further information, please visit www.alteclansing.com

FOLLOW US ON    #myalteclansing

**AUX/USB PLAYBACK**



Aux Input Port
USB-C Charge In
Reset
USB-A Memory Playback/Power Out

To play from Aux sources plug a 3.5mm/1/8" mini-jack to mini-jack cable (not supplied) from the headphone/line out of your device into the Aux Input of the speaker.

To play from a USB-A memory device insert a suitable memory stick containing .mp3 files.

The USB-A output also provides low power (5V/0.5A) output for phone charging.

Note: In the unlikely event of a lock up a reset can be performed using a paperclip to long press the reset button.

**Light Modes Controlling Music**



Press  To toggle between the different light modes:

1 Color Fade 2 Flash/Change Color
3 Steady Color (use App to change)
4 Color Wheel/Back & Forth
5 Bar graph 6 Fire Mode
7 Rotating Fade 8 Rotating Multi Color

Controlling Music

    
PRESS Play/Pause
+ Volume Up
- Volume Down
PRESS & HOLD
+ Next Track
- Previous Track

**Party Sync**

After connecting Bluetooth PRESS & HOLD LINK FOR 2-3 SECONDS

Any Additional Speakers PRESS LINK TWICE



 
 Primary looking for Secondary
 Connected to Secondary
 Secondary looking for Primary
 Connected to Primary

The RockBox XL 3.0 can connect to >100 other RockBox XL 3.0 speakers plus speakers from out SoundRover and Sonic Boom ranges. Choose one speaker as Primary. Connect to it as normal via Bluetooth then press and hold its LINK button. Now for each Secondary speaker double press its LINK button. It will connect to the Primary.

Press and hold LINK for 25s to end Party Sync/disconnect each speaker.

**Indicator LEDs**

Power & Bluetooth Pairing/Connected
Battery Level / Charging Status
Party Sync Status



**WELCOME** 

Thank you for purchasing an AltecLansing product. Download our App to unlock all the features our products have to offer!



FCC STATEMENT

FCC Statement

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

FCC STATEMENT

-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party. Responsible for compliance could void the user's authority to operate this equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.

Having trouble? We're here to help!

Call us 24/7 at 1-855-292-4087
Email us at alsupport@esakar.com or visit us at alteclansing.com

Keep manual and all relevant information for future reference.