 



Age 8+

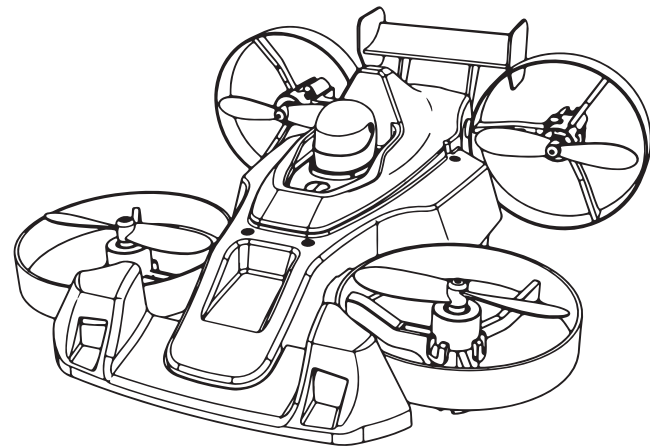

AERO RACER



 
GET TO KNOW YOUR TRANSMITTER

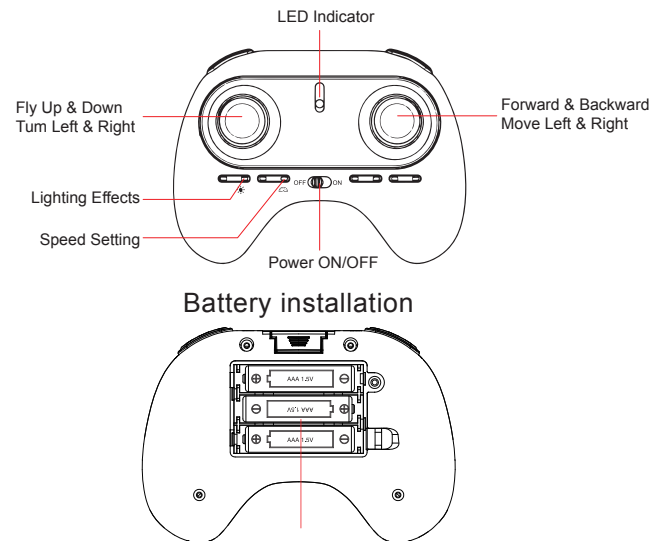


(USE 3×1.5V " AAA " SIZE BATTERIES)

1. Different types of batteries or new and used batteries cannot be mixed .
2. Batteries must be inserted with the correct polarity .
- ⚠ 3. Exhausted batteries need to be removed from the toy .
4. The supply terminals cannot be short - circuited .
5. Open the battery cover with the screwdriver .

 CAUTIONS WHEN CHARGING

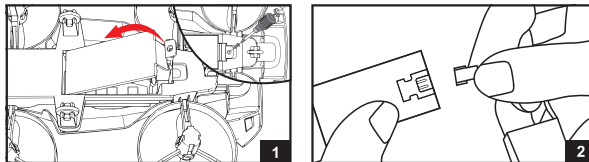

 1. As shown, unscrew the screw with a screwdriver, open the battery cover, and remove the battery.
2. Take out the USB charging cable and insert into the battery power port (Make sure the ports are connected correctly).

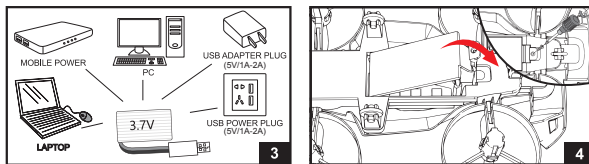

3. Connect the charging cable to a power source. The LED lights up red during charging and turns off when fully charged.
4. Reinstall the fully charged lithium battery into the drone body, and tighten the screw with a screwdriver.

Charging Time: Approx. 60-90 mins

 
 
Drive Time: Approx. 11-13 mins

Note: Use a standard charging power source. Do not use fast chargers to avoid fire hazards!

CHARGING PRECAUTIONS


1. When charging, please put this product in a dry or well ventilated area. Keep it away from any heat sources or explosive products.
2. Before charging, remove the batteries from the product. Charging process should be supervised by an adult to prevent an accident.
3. After flying , please do not charge the battery if the surface temperature is still not cool. Otherwise it may cause the battery to swell, this could be a fire hazard.
4. Please make sure that you use the original USB charging cable provided. If the battery has been used for a long time, or appears to be swollen, please replace them.
5. If you do not play with the product for a long time , please remove the battery.

CONNECTION BEFORE DRIVING

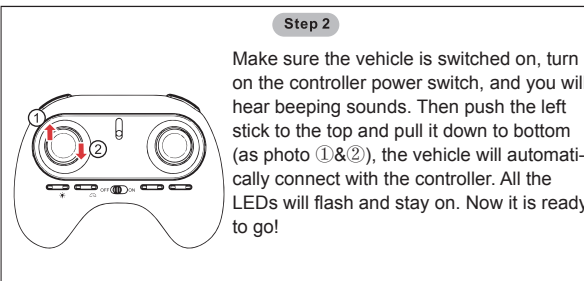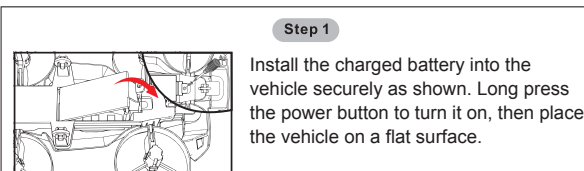


SPEED CONTROL

 The first time you turn on the vehicle, the initial speed is set to 40%. You will hear ONE beep. When you press the SPEED BUTTON, you will hear TWO beeps which will increase the speed level to 60%. Pressing the SPEED BUTTON again you will hear THREE beeps and this will increase the level to 100%. Pressing again will bring you back to 40% speed and you will hear ONE beep .


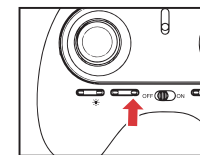


LIGHT MODE SWITCH INSTRUCTIONS

 Press the Lighting Effects button to change different effects.

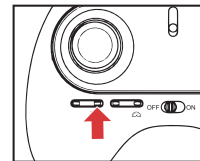

REMOTE CONTROL INSTRUCTIONS

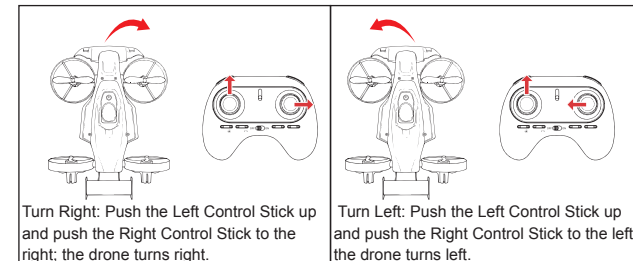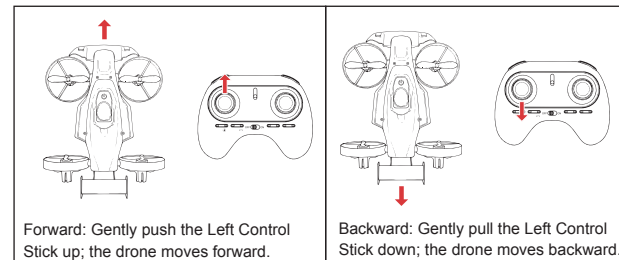  

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.