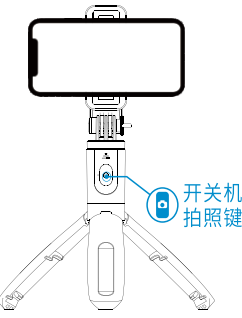 
 
 
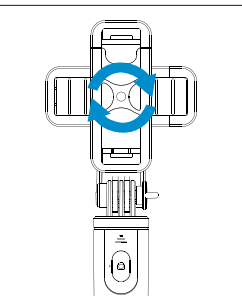 
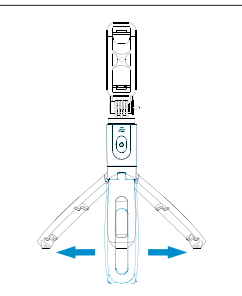 
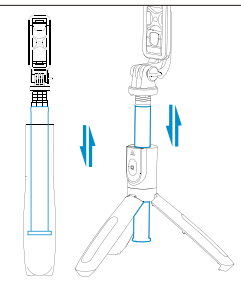 
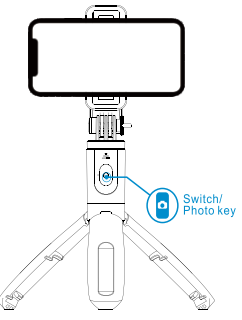 
 
 
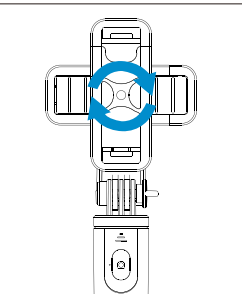 
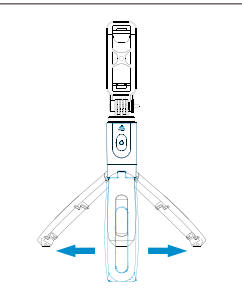 
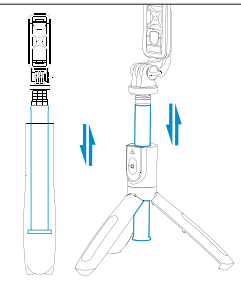 


Selfie Stick 使用说明	 兼容 ☒ ios ☒ Android	怎样使用 1.长时间的按压将在2秒内开启。 机器打开后，LED指示灯就会闪烁，使用手机搜索蓝牙"Selfie"来匹配,LED指示灯在与手机配对后将熄灭。 2.点击按钮来拍照，LED指示灯闪烁一次。 3.没有配对连接状态的180秒，自动关机。 4.在匹配连接状态中，600秒没有任何操作，自动关机。 5.长按3秒关闭;当关闭时，LED灯会闪烁3次。	取出自拍器 先拉出杆子再向上滑动即可取出自拍器。  怎样更换电池 从两侧中任何一侧的凹槽缝抠出来即可打开遥控器盖。 	夹子可360°旋转 自由翻转，横竖拍实现多角度拍照，拍照更随心。 	怎样打开三脚架 在手柄的位置向外打开，即可变成三脚架模式。 	三脚架模式 自拍杆变三脚架模式时候，注意将杆子最后一节拉出并调整至三脚架稳固。 	规格 ·材料：不锈钢 ·总长度：1000mm ·折叠长度：190mm ·总重：196g ·电池：CR1632（可更换） 💡提醒 自拍杆兼容Android 4.2.2和iphone的ios 5.0和以上（Android设备：如果你在相机选项下改变了你的“音量键功能”，一定要把它改成默认，或者“拍照”，让自拍杆正常工作）。 感谢您的支持！ FC CE RoHS
Selfie Stick User Manual	 Compatible ☒ ios ☒ Android	How to use 1.The long press will open in 2 seconds. When the machine is turned on, the LED Indicator flashes and matches with Bluetooth " Selfie " by mobile phone search. The LED indicator will go out after matching with the mobile phone. 2.Click the button to take a picture and the LED flashes once. 3.There is no pairing connection status for 180s and automatically shuts down. 4.In the matching connection state, 600s without any action, automatically shut down. 5.Press and hold for 3s to turn it off, and when off, the LED flashes 3 times.	Remove the remote control Pull out the lever and slide it up to take out the remote control.  How to replace the battery The remote control cover can be opened from the grooves on both sides. 	360° rotary clip Free to flipTake pictures from multiple angles,Take photos more freely. 	How to open a tripod Open it in the position of the handle and it will become tripod mode. 	Tripod mode When changing the selfie stick to tripod mode, pull out the last section of the stick and adjust until the tripod is stable. 	Specifications ·Material:Stanless Steel ·Total Length:1000mm ·Collapsed Length:190mm ·Total Weight:196g ·Battery:CR1632(can change) 💡REMIND Selfie stick compatible with Android 4.2.2 and iPhone ios 5.0 and above (Android devices:If you change your "Volume key function", be sure to change it into default, or "take a picture" to let the selfie stick normal lying). Thank you for your support! FC CE RoHS

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.