


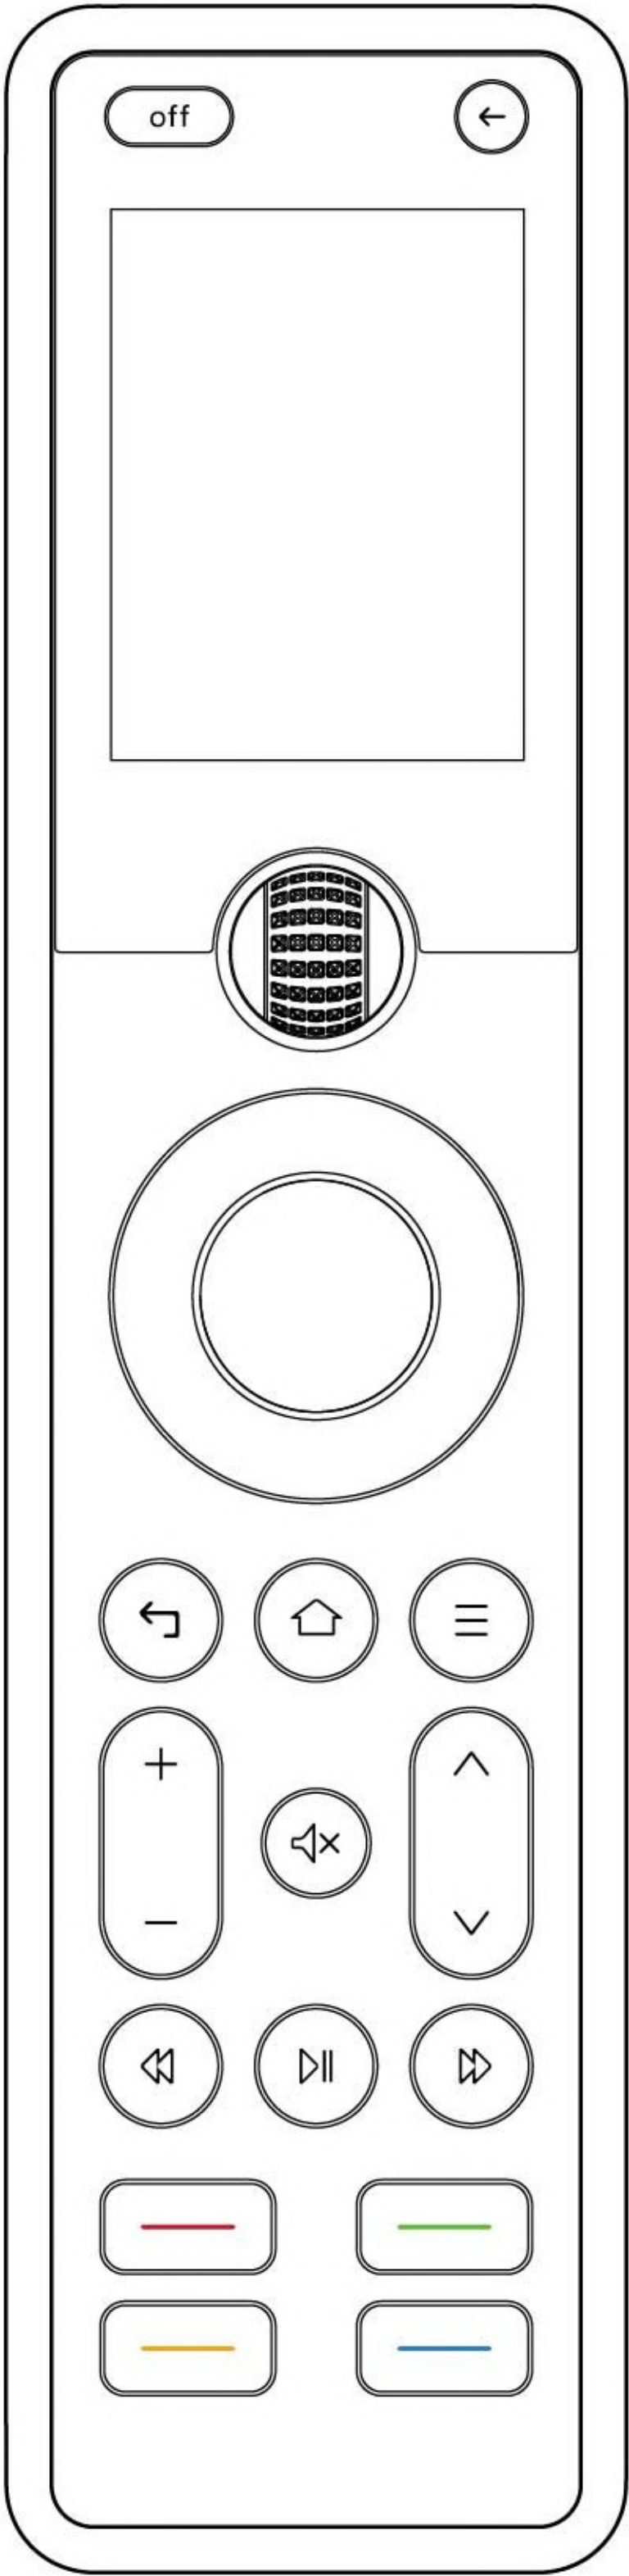

X1 Smart Remote

FCC ID:2AXDU-X1-REMOTE

CONTENS

- I Connect X1-Hub to your home Wi-Fi
- II Adding devices in the app
- III Create a New Activity
- IV Configuring the Source in an Activity
- V Using third-party voice smart speakers
- VI Using Your Remote
- VII Specifications and Performance
- VIII FAQs

Important

I Connect X1-Hub to your home Wi-Fi

1. Plug in the Hub' s power cord
2. Download the app:




Search "Sofabaton " on App store or Google Play

3. Use the app to connect to your X-Hub with the following steps:



Step1: Open the app and select X1 from the device list.




Step2: Make sure your phone's Bluetooth is on and the phone is connected to your home Wi-Fi.

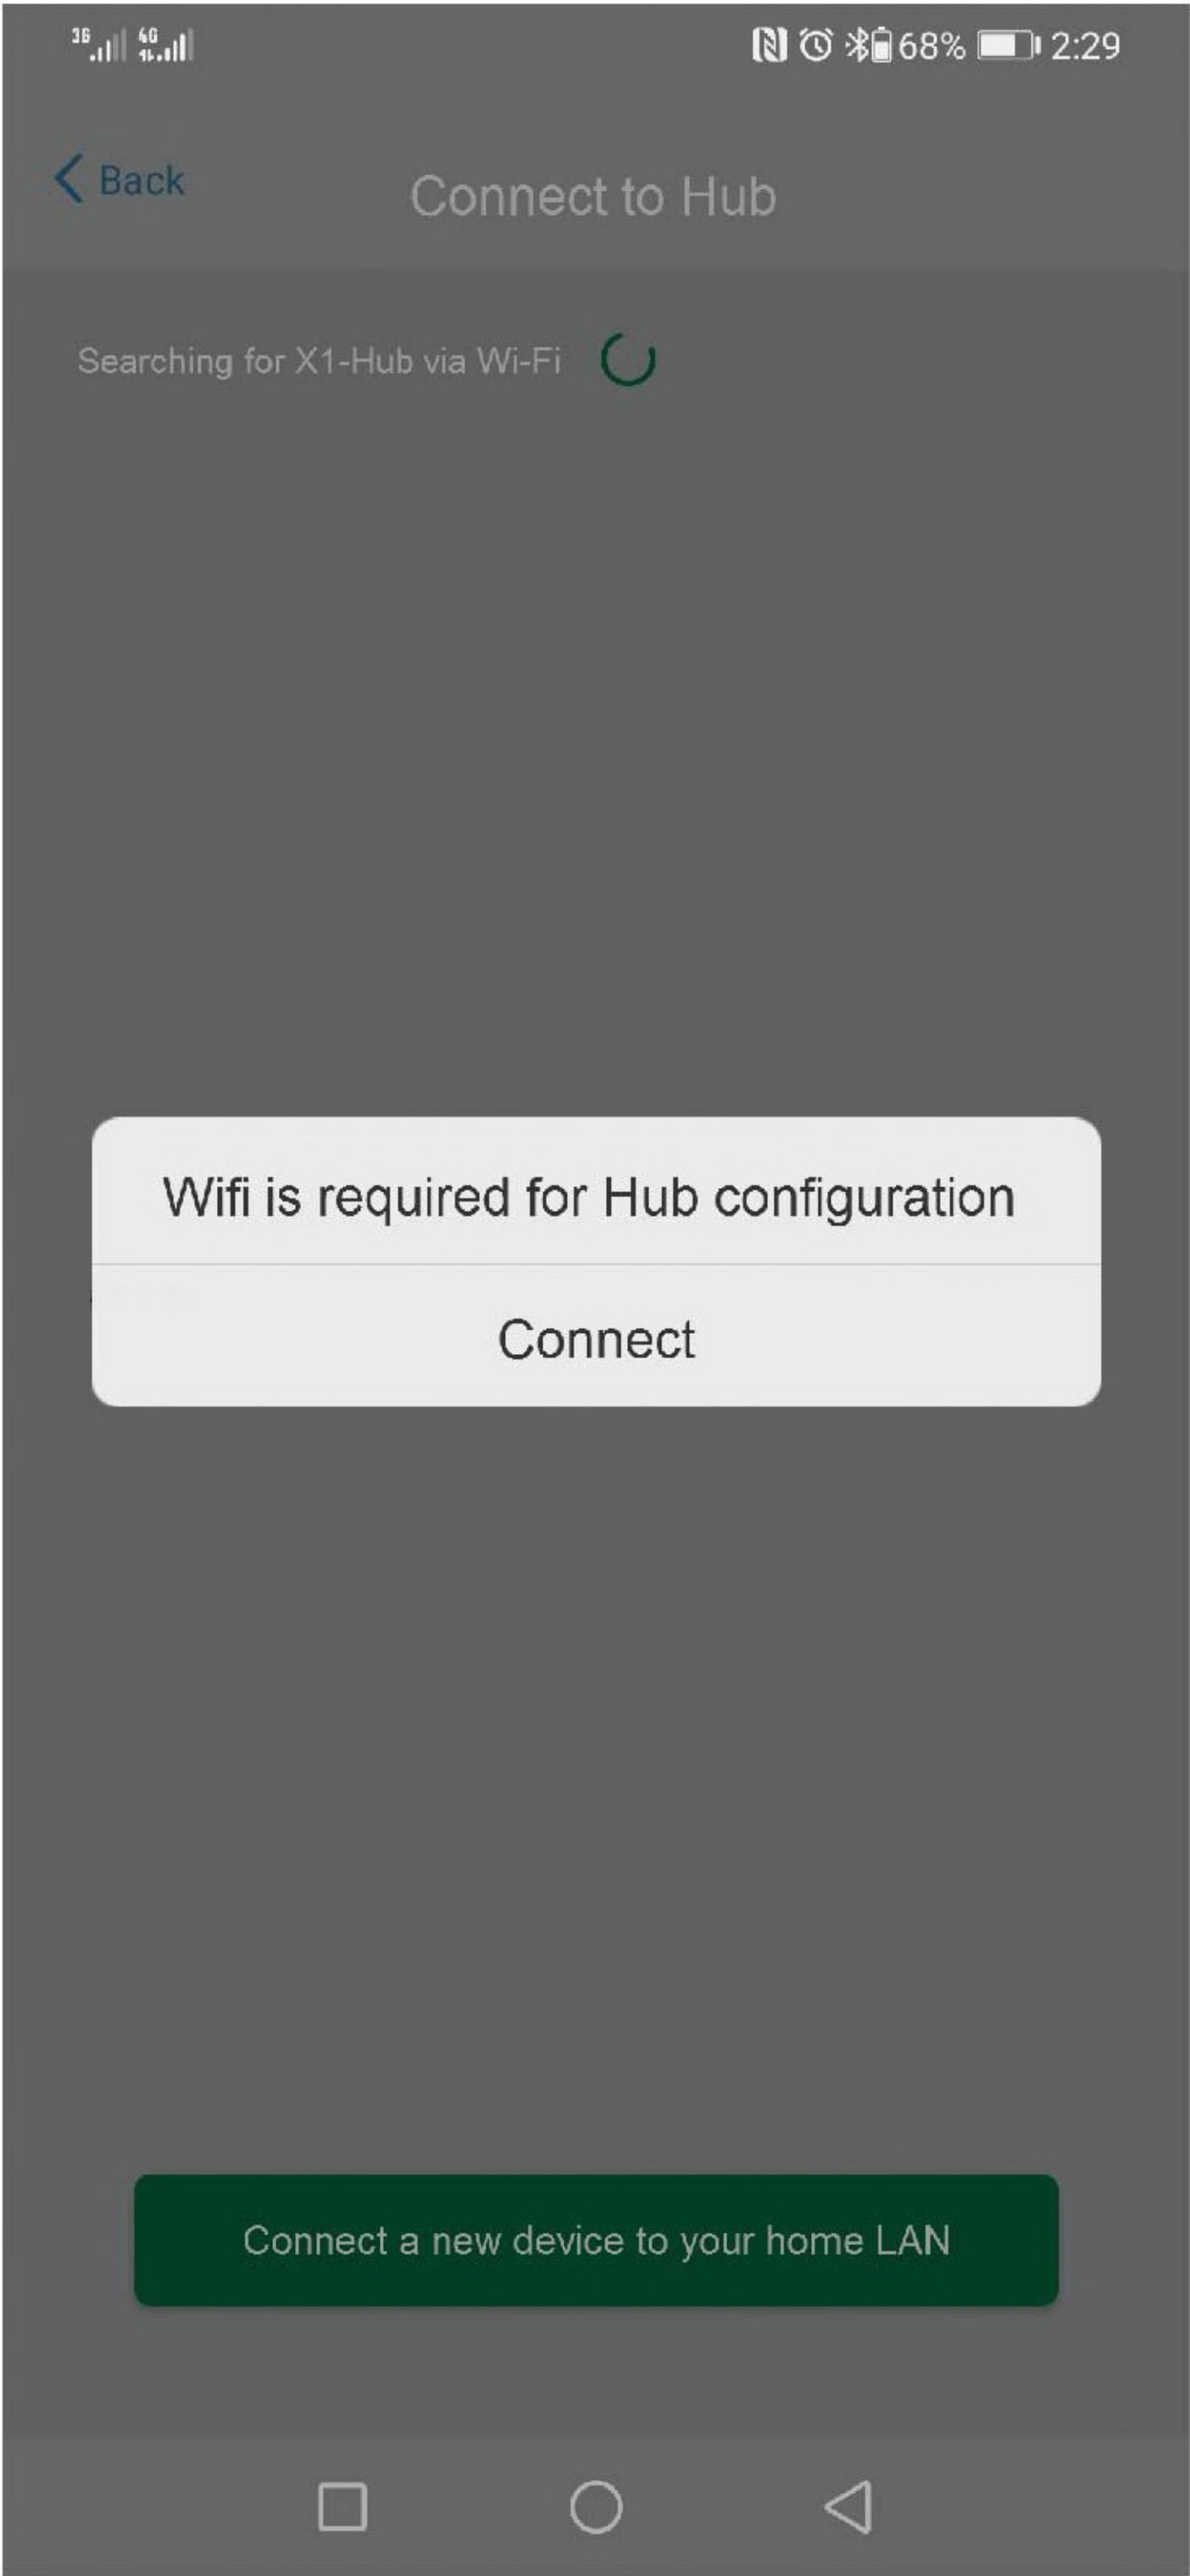

Step3: Press and hold the button on the X-Hub for 3s to allow the Bluetooth connection.

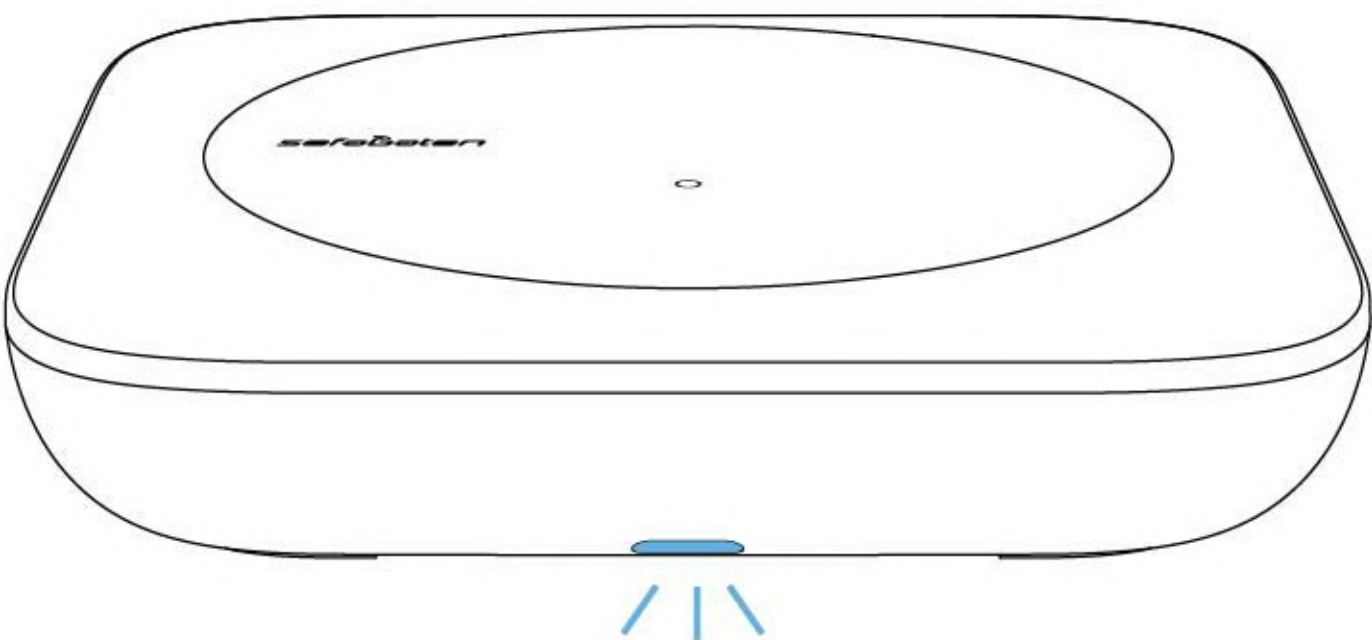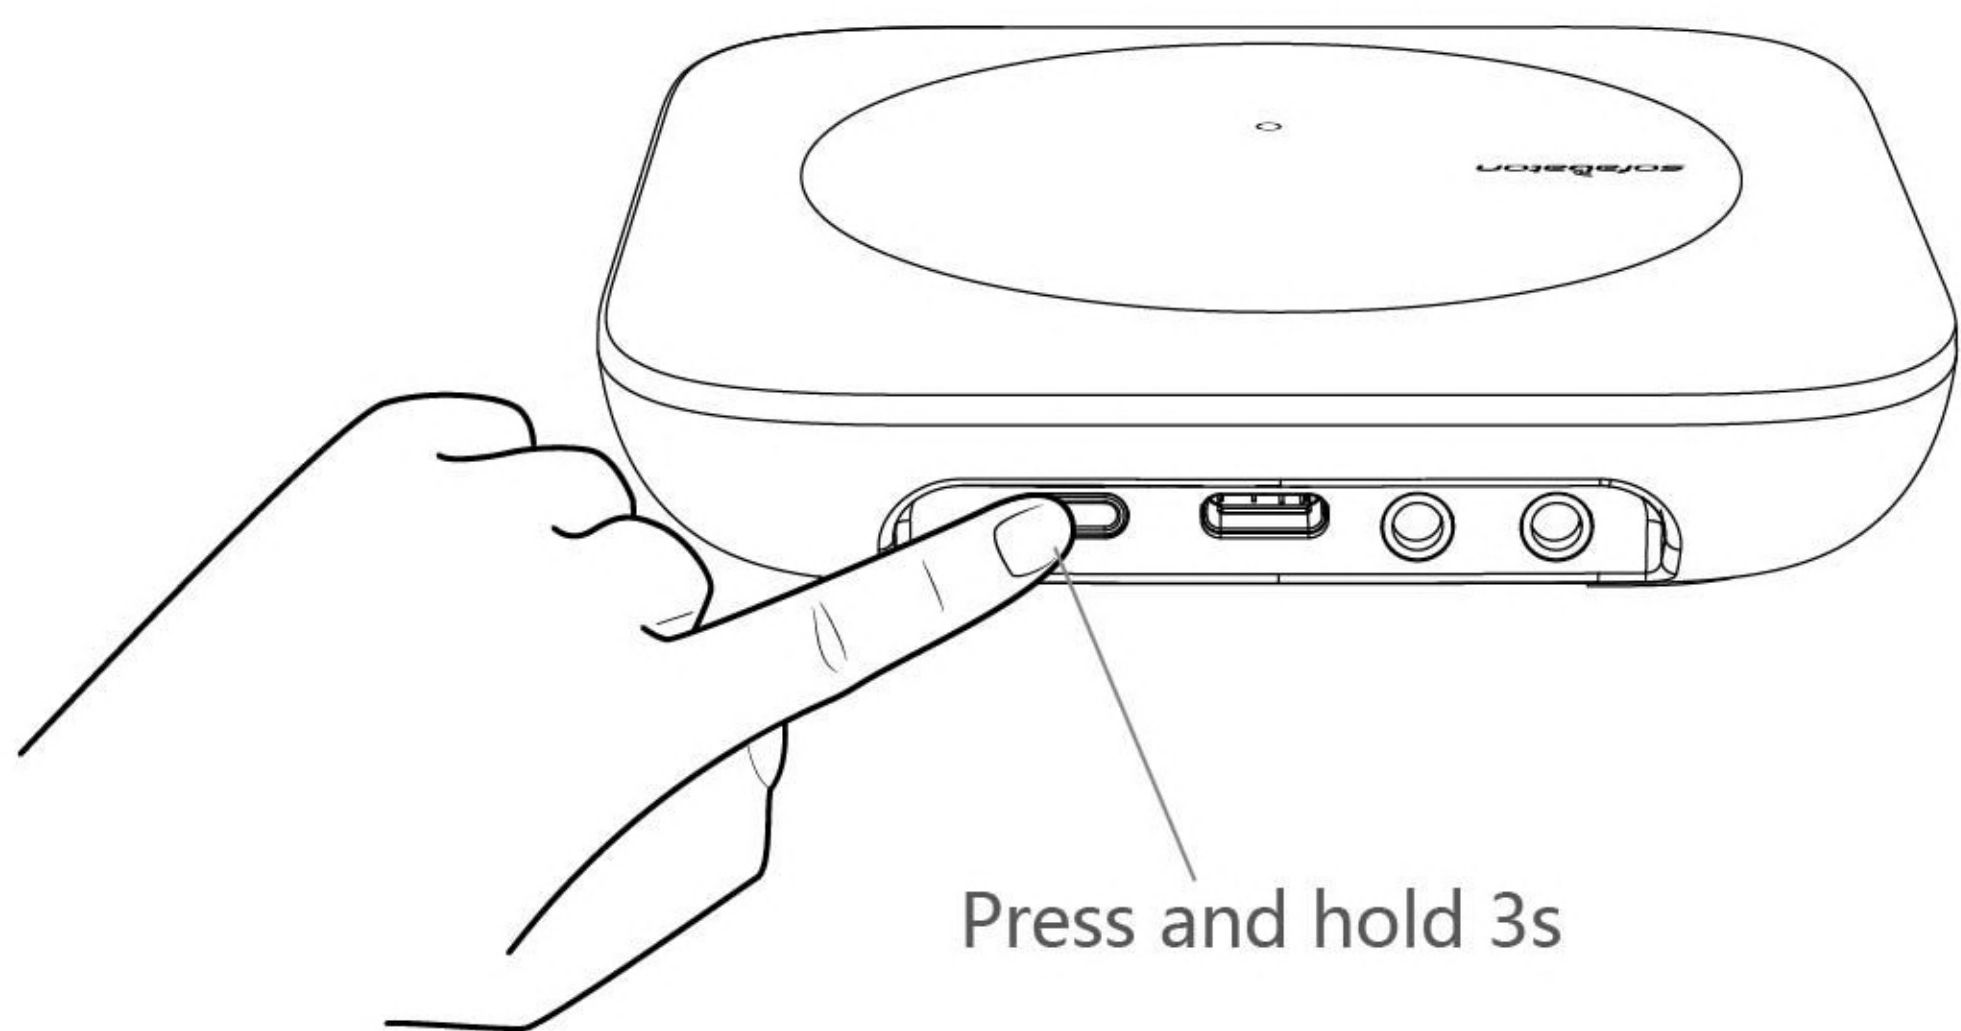

Step4: Select the device you want to connect to your home Wi-Fi.

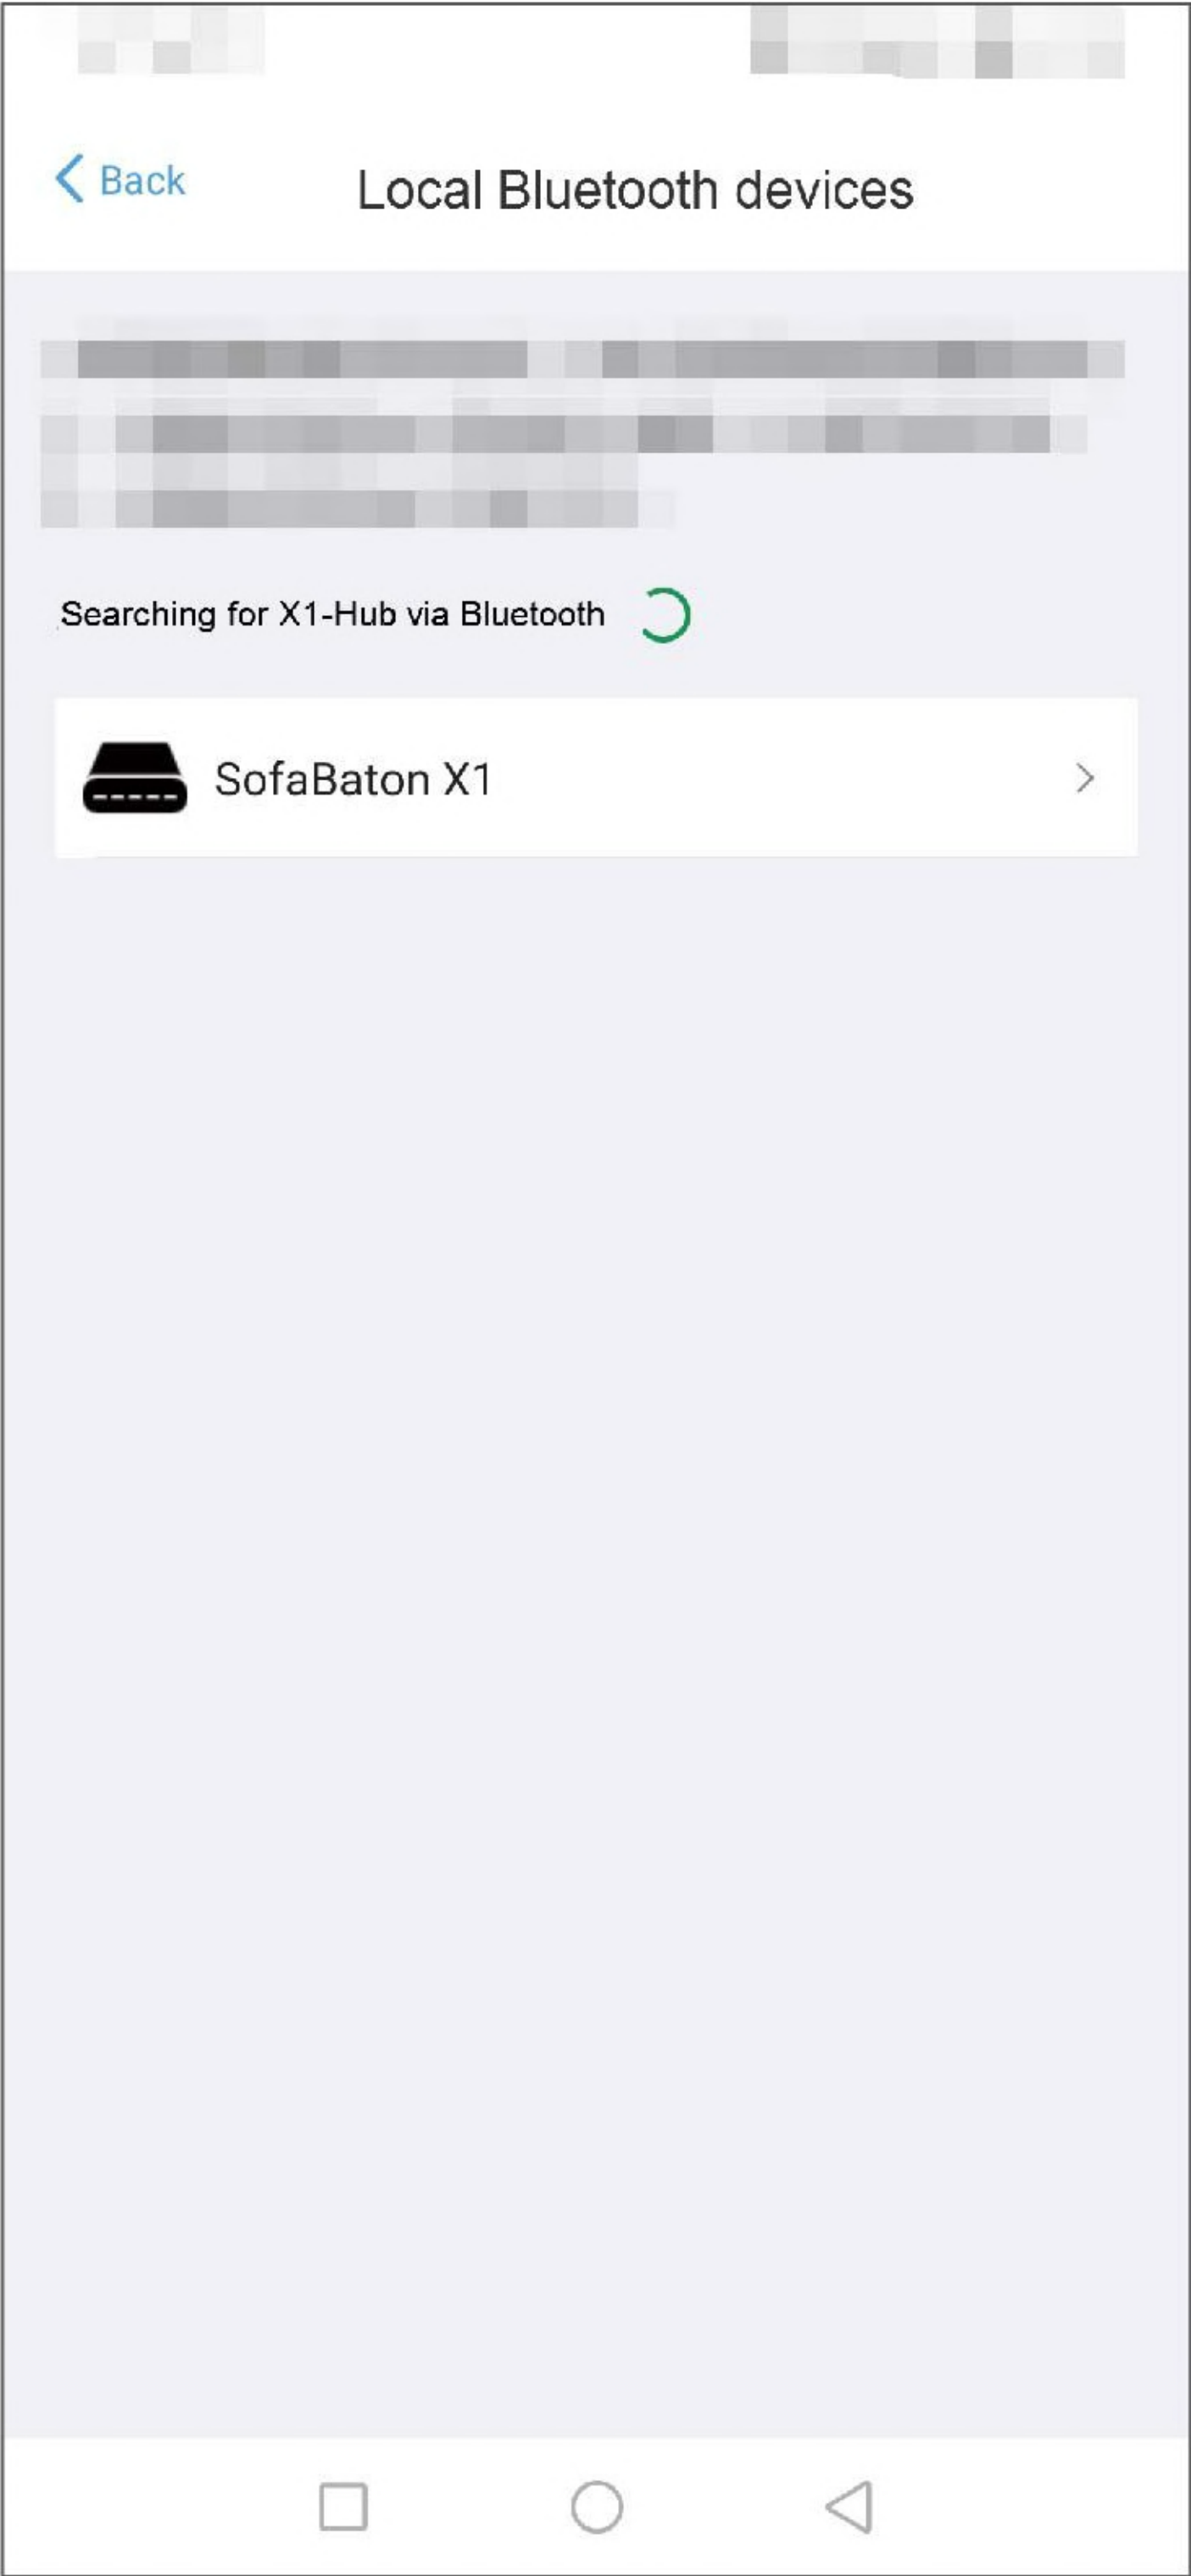

Step5: Send the WiFi password so that the Hub can access your home LAN.

< Back


Wi-Fi information

Wi-Fi ID

Wi-Fi Password

Next

Step6: The device will show a successful connection.

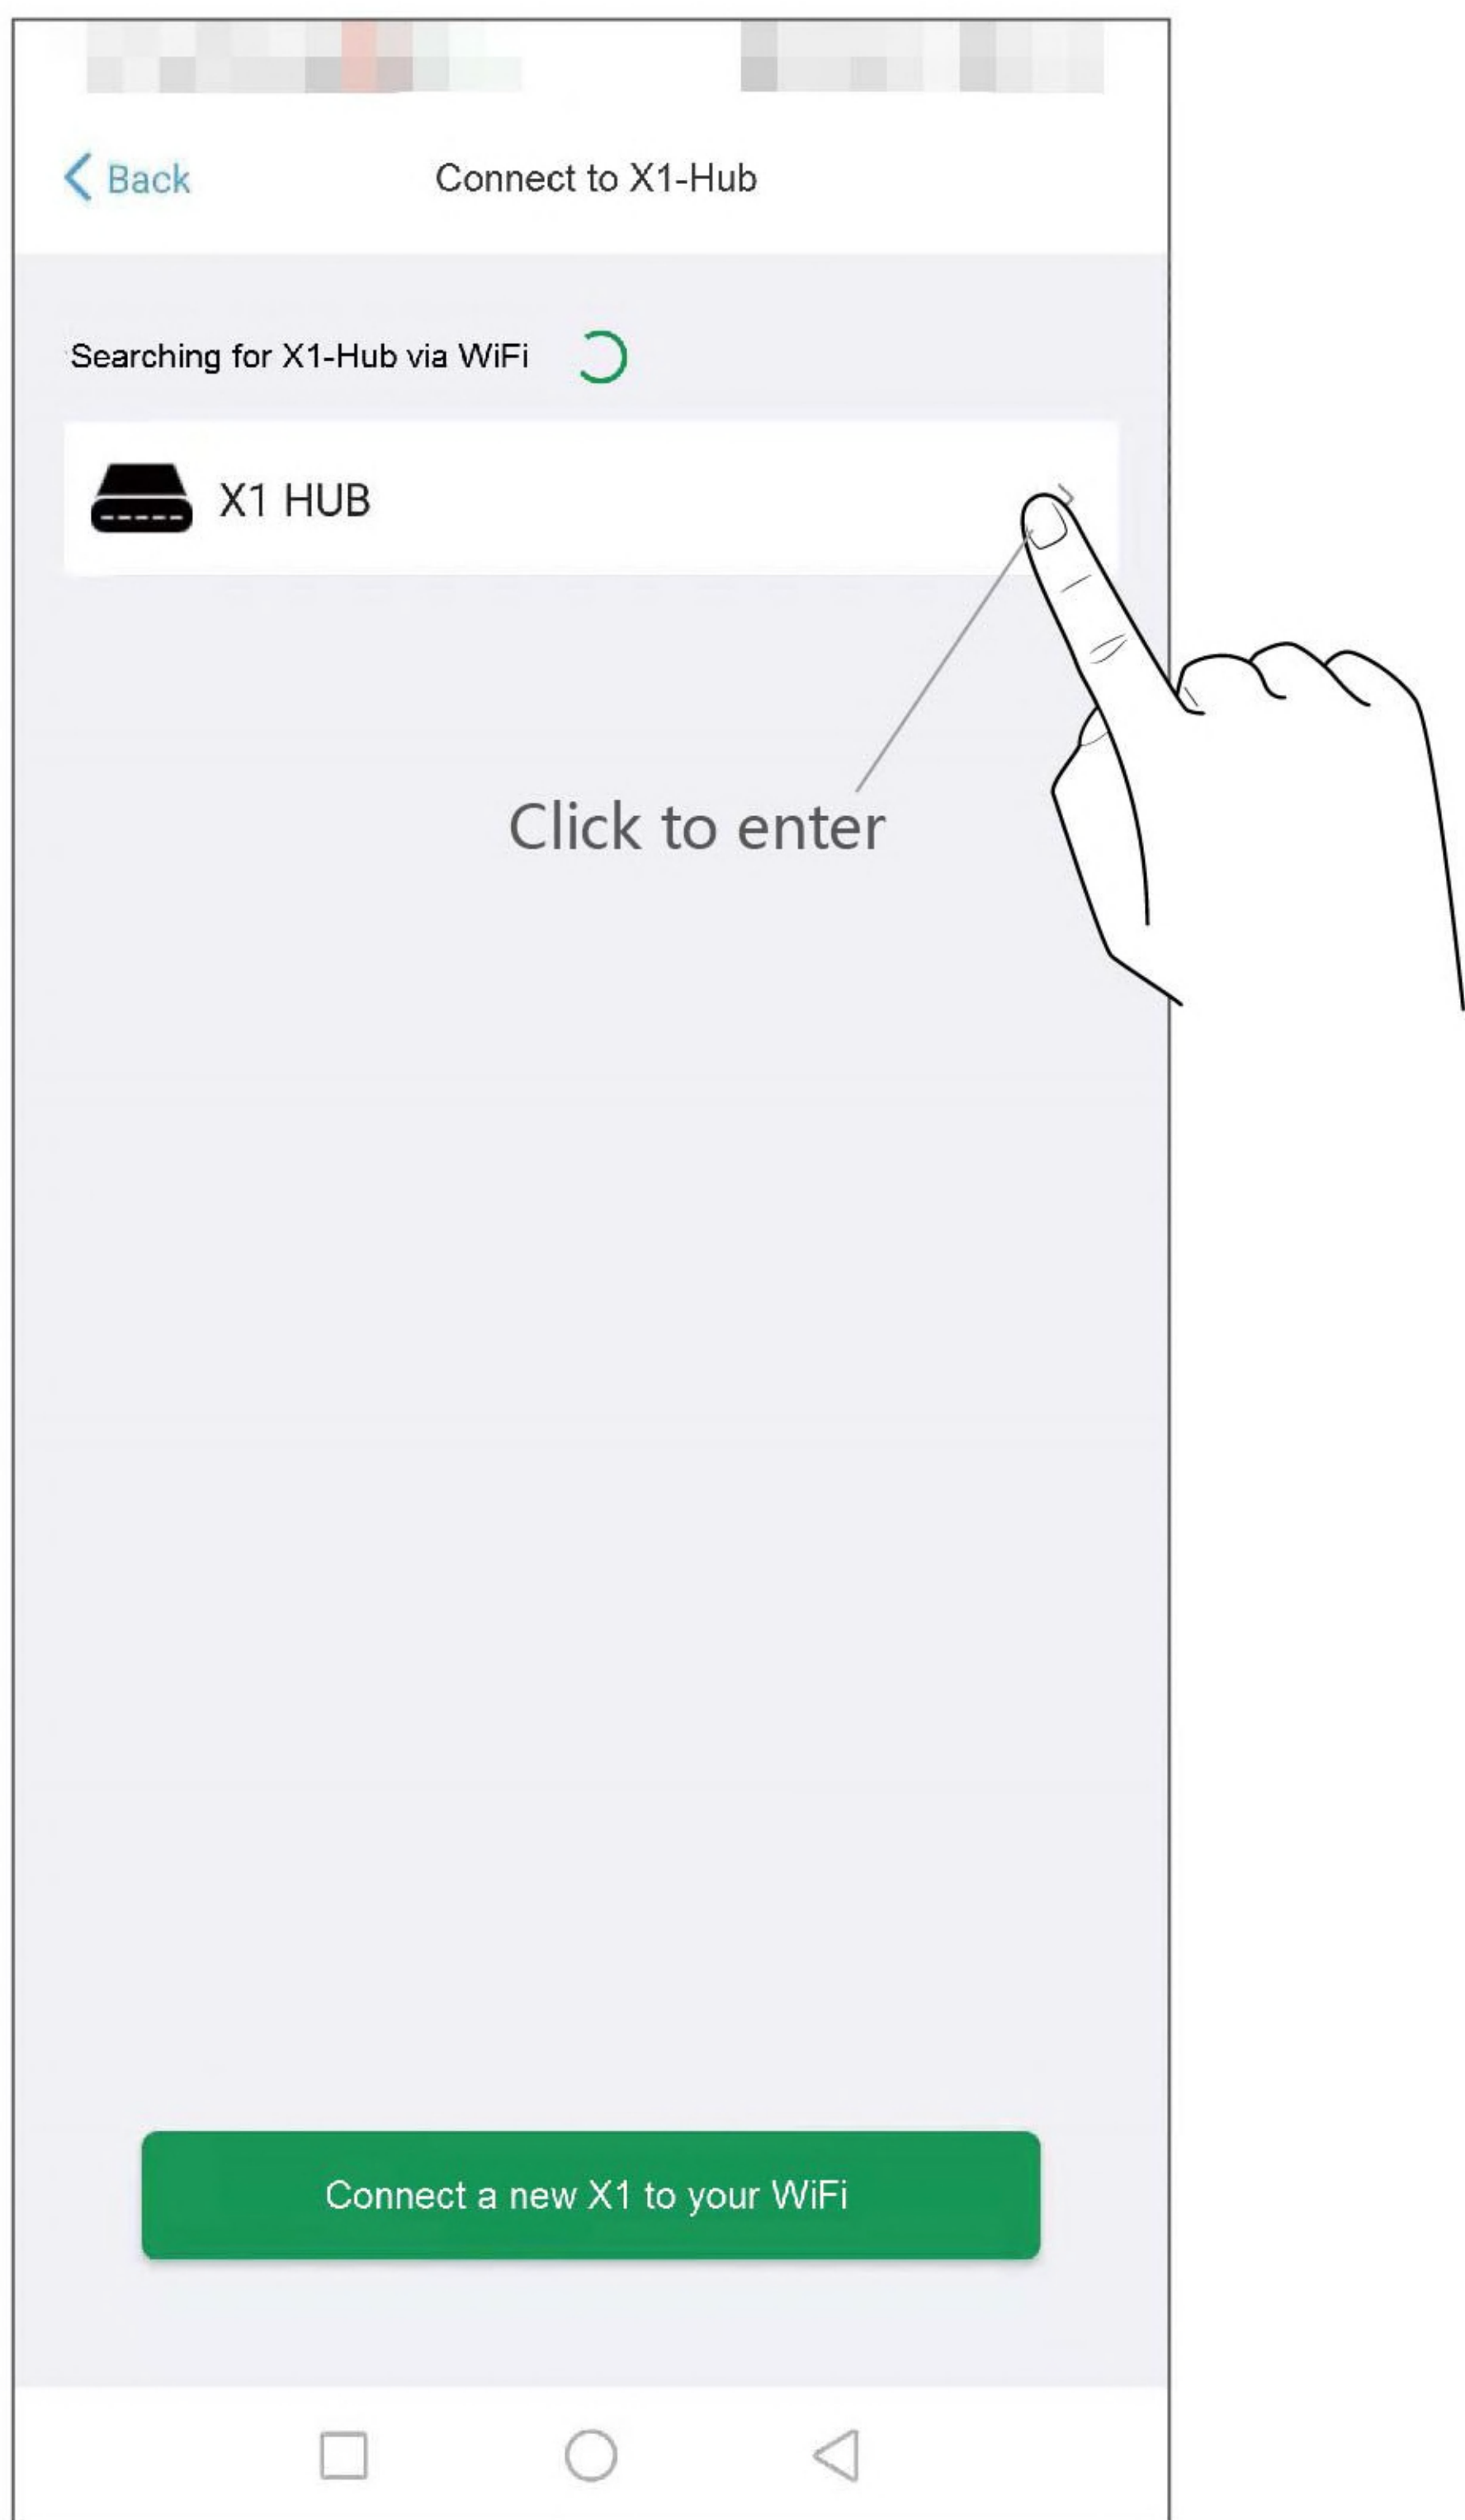


II Adding devices in the app

Quick Search (Via IR Mode)

Here are the steps to perform a quick search to add devices.

Step1: Search for the device brand and model in the app.

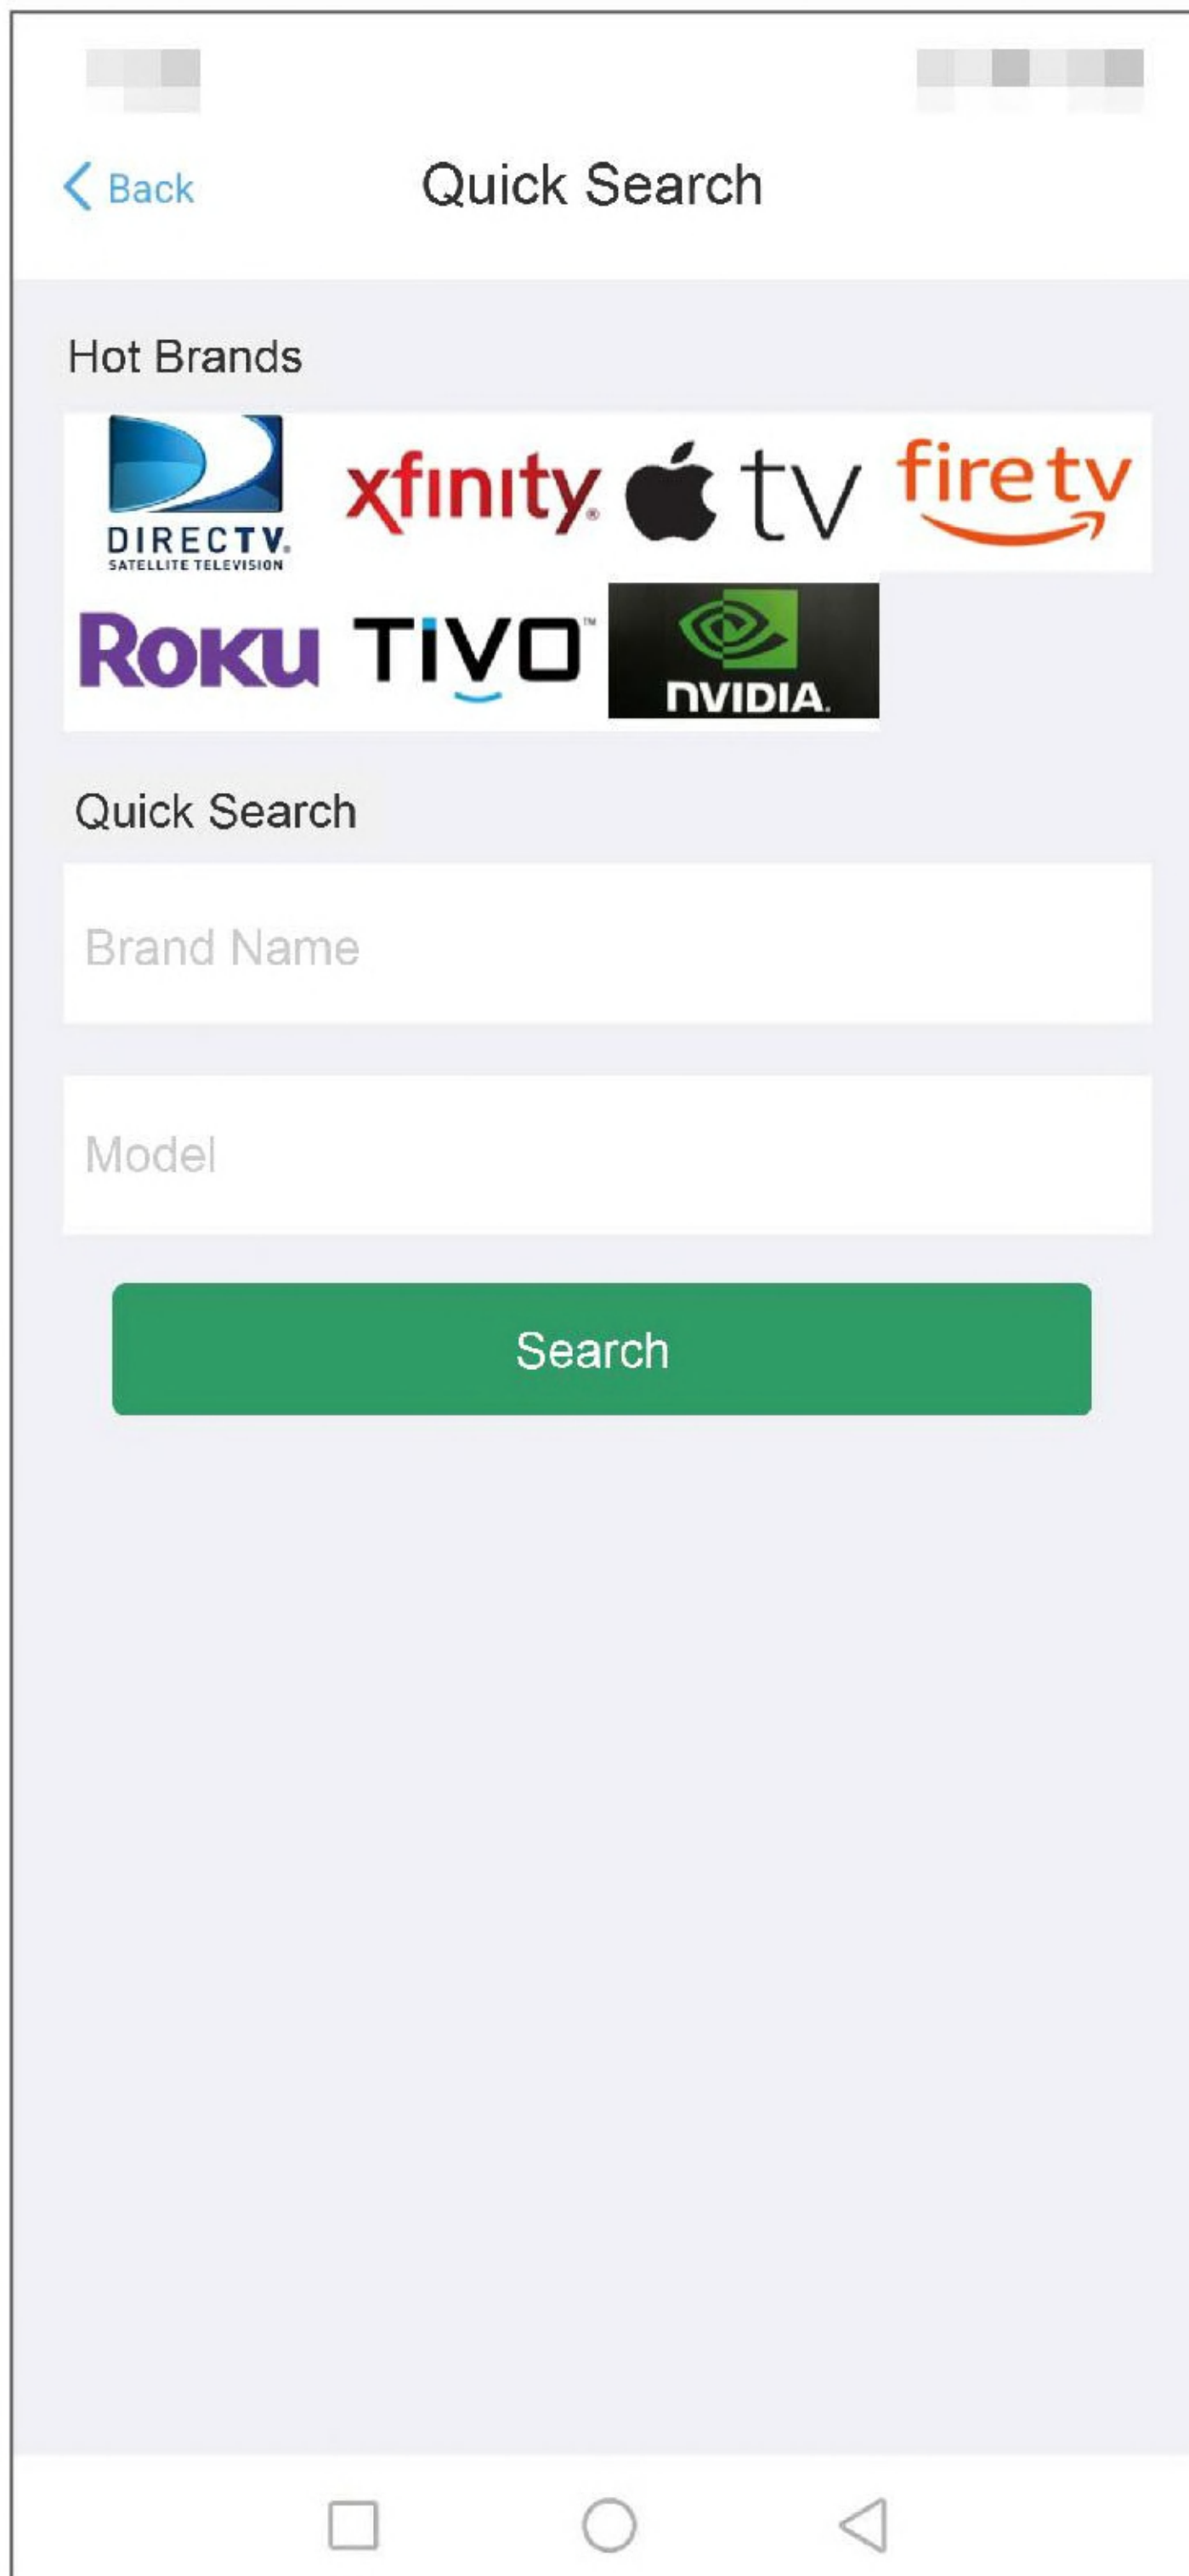

Quick Search

Hot Brands

DIRECTV. SATELLITE TELEVISION

xfinity

Apple TV

fire tv

Roku

TIVO

NVIDIA


Quick Search

Brand Name


Model

Search


Step2: For some models without a corresponding code base, you may need to select the most suitable code base through key testing. This will show up as follows:

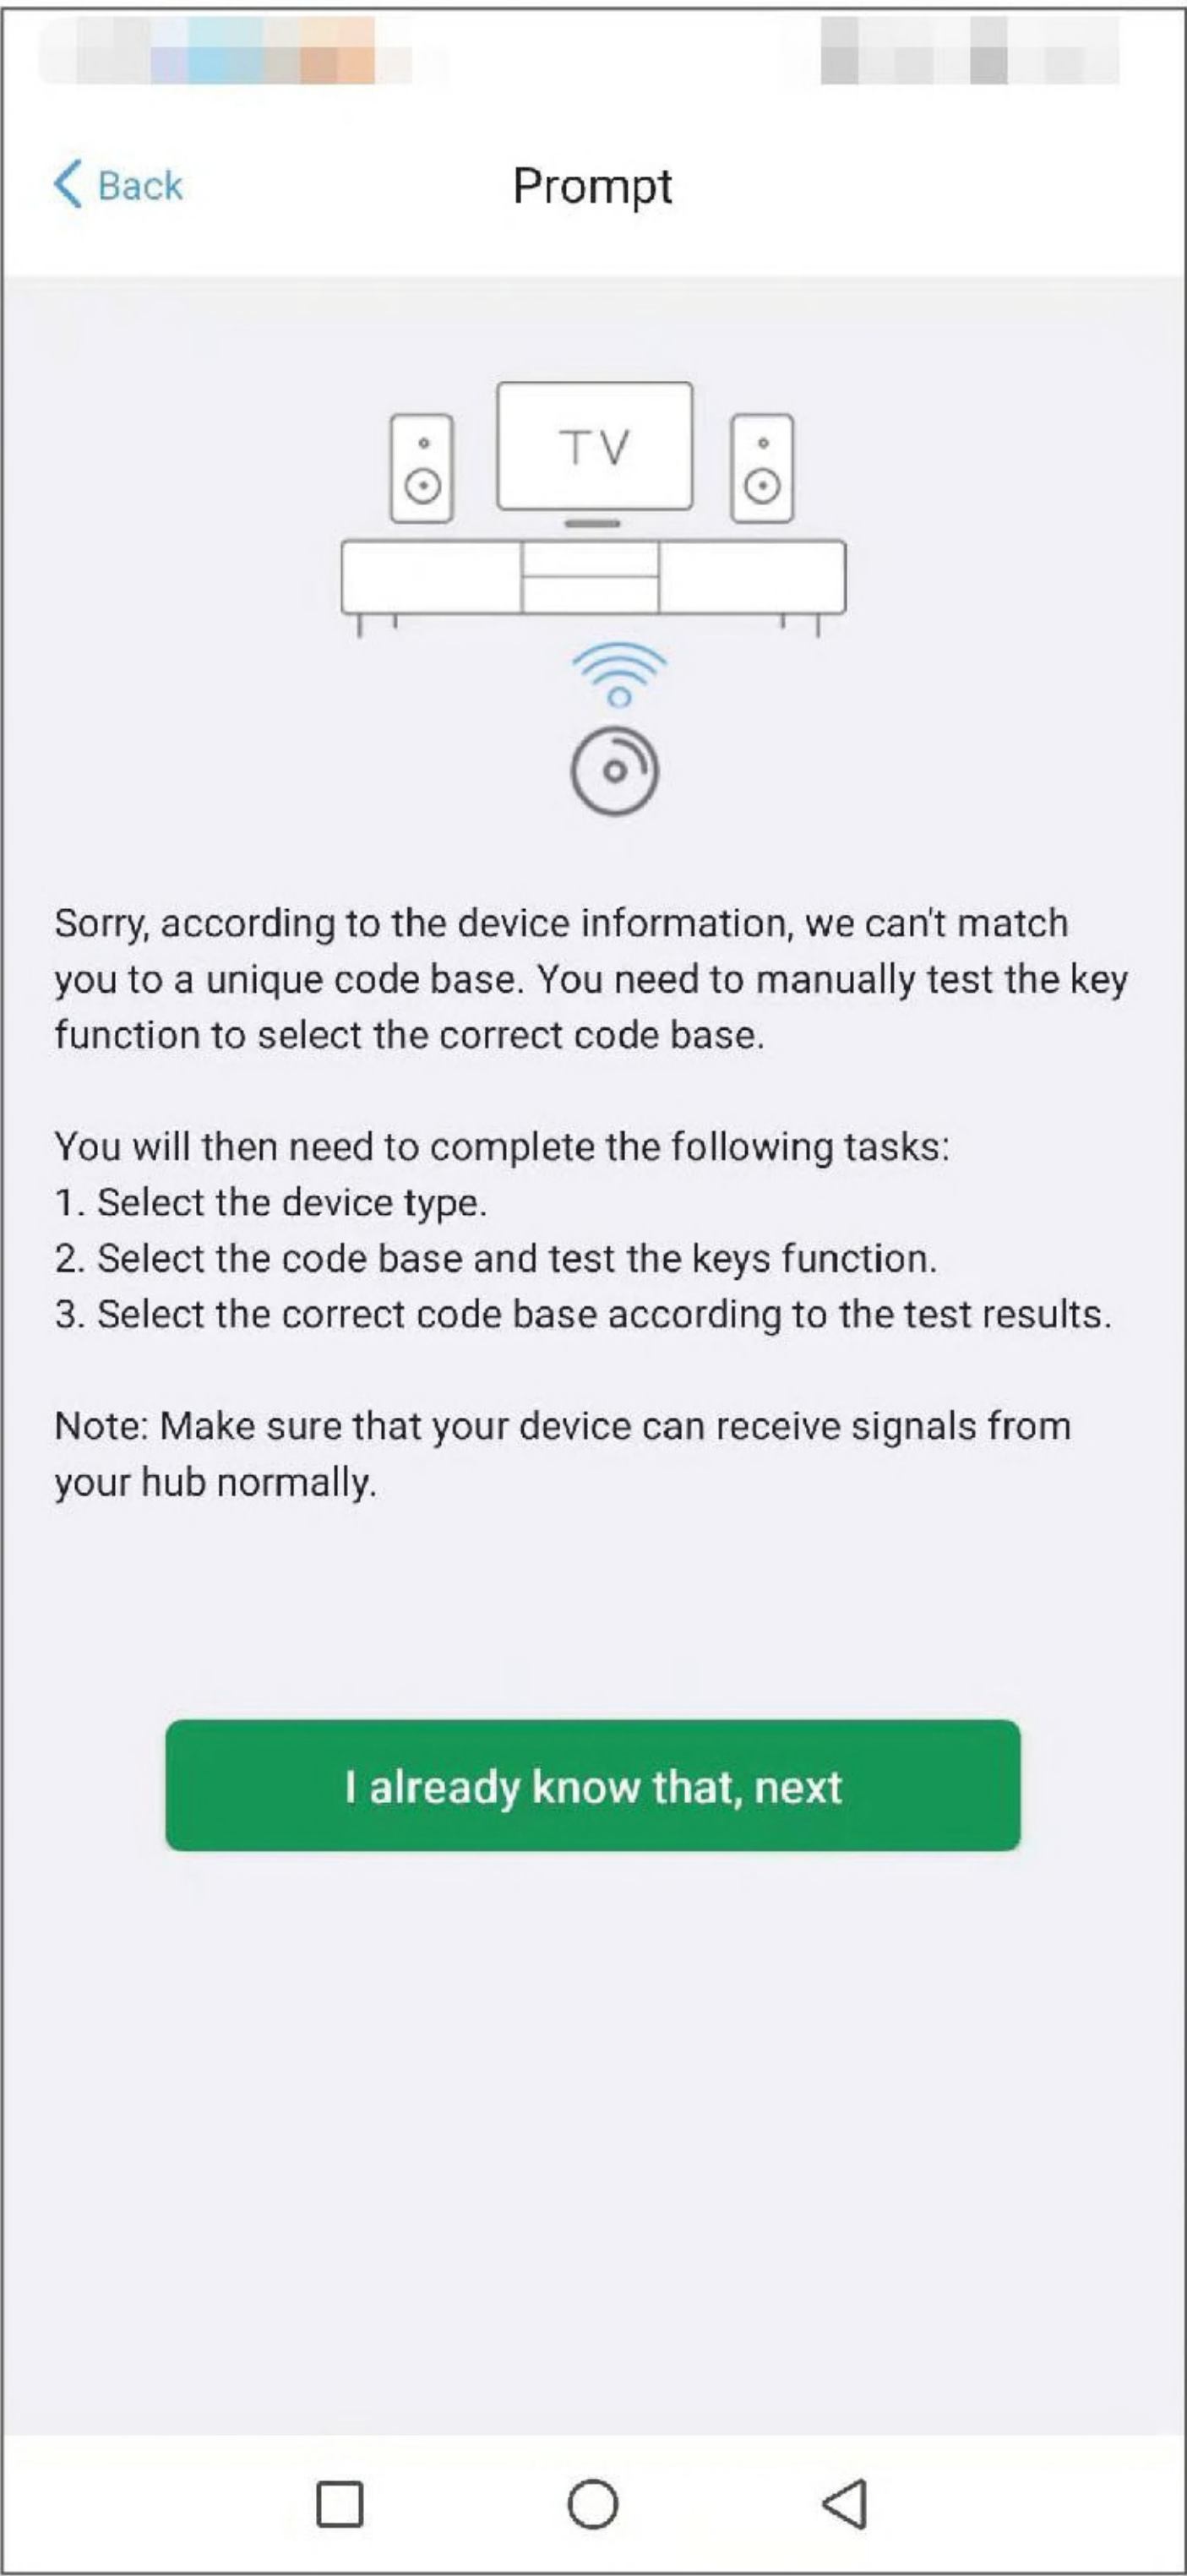

A. Select the device type.

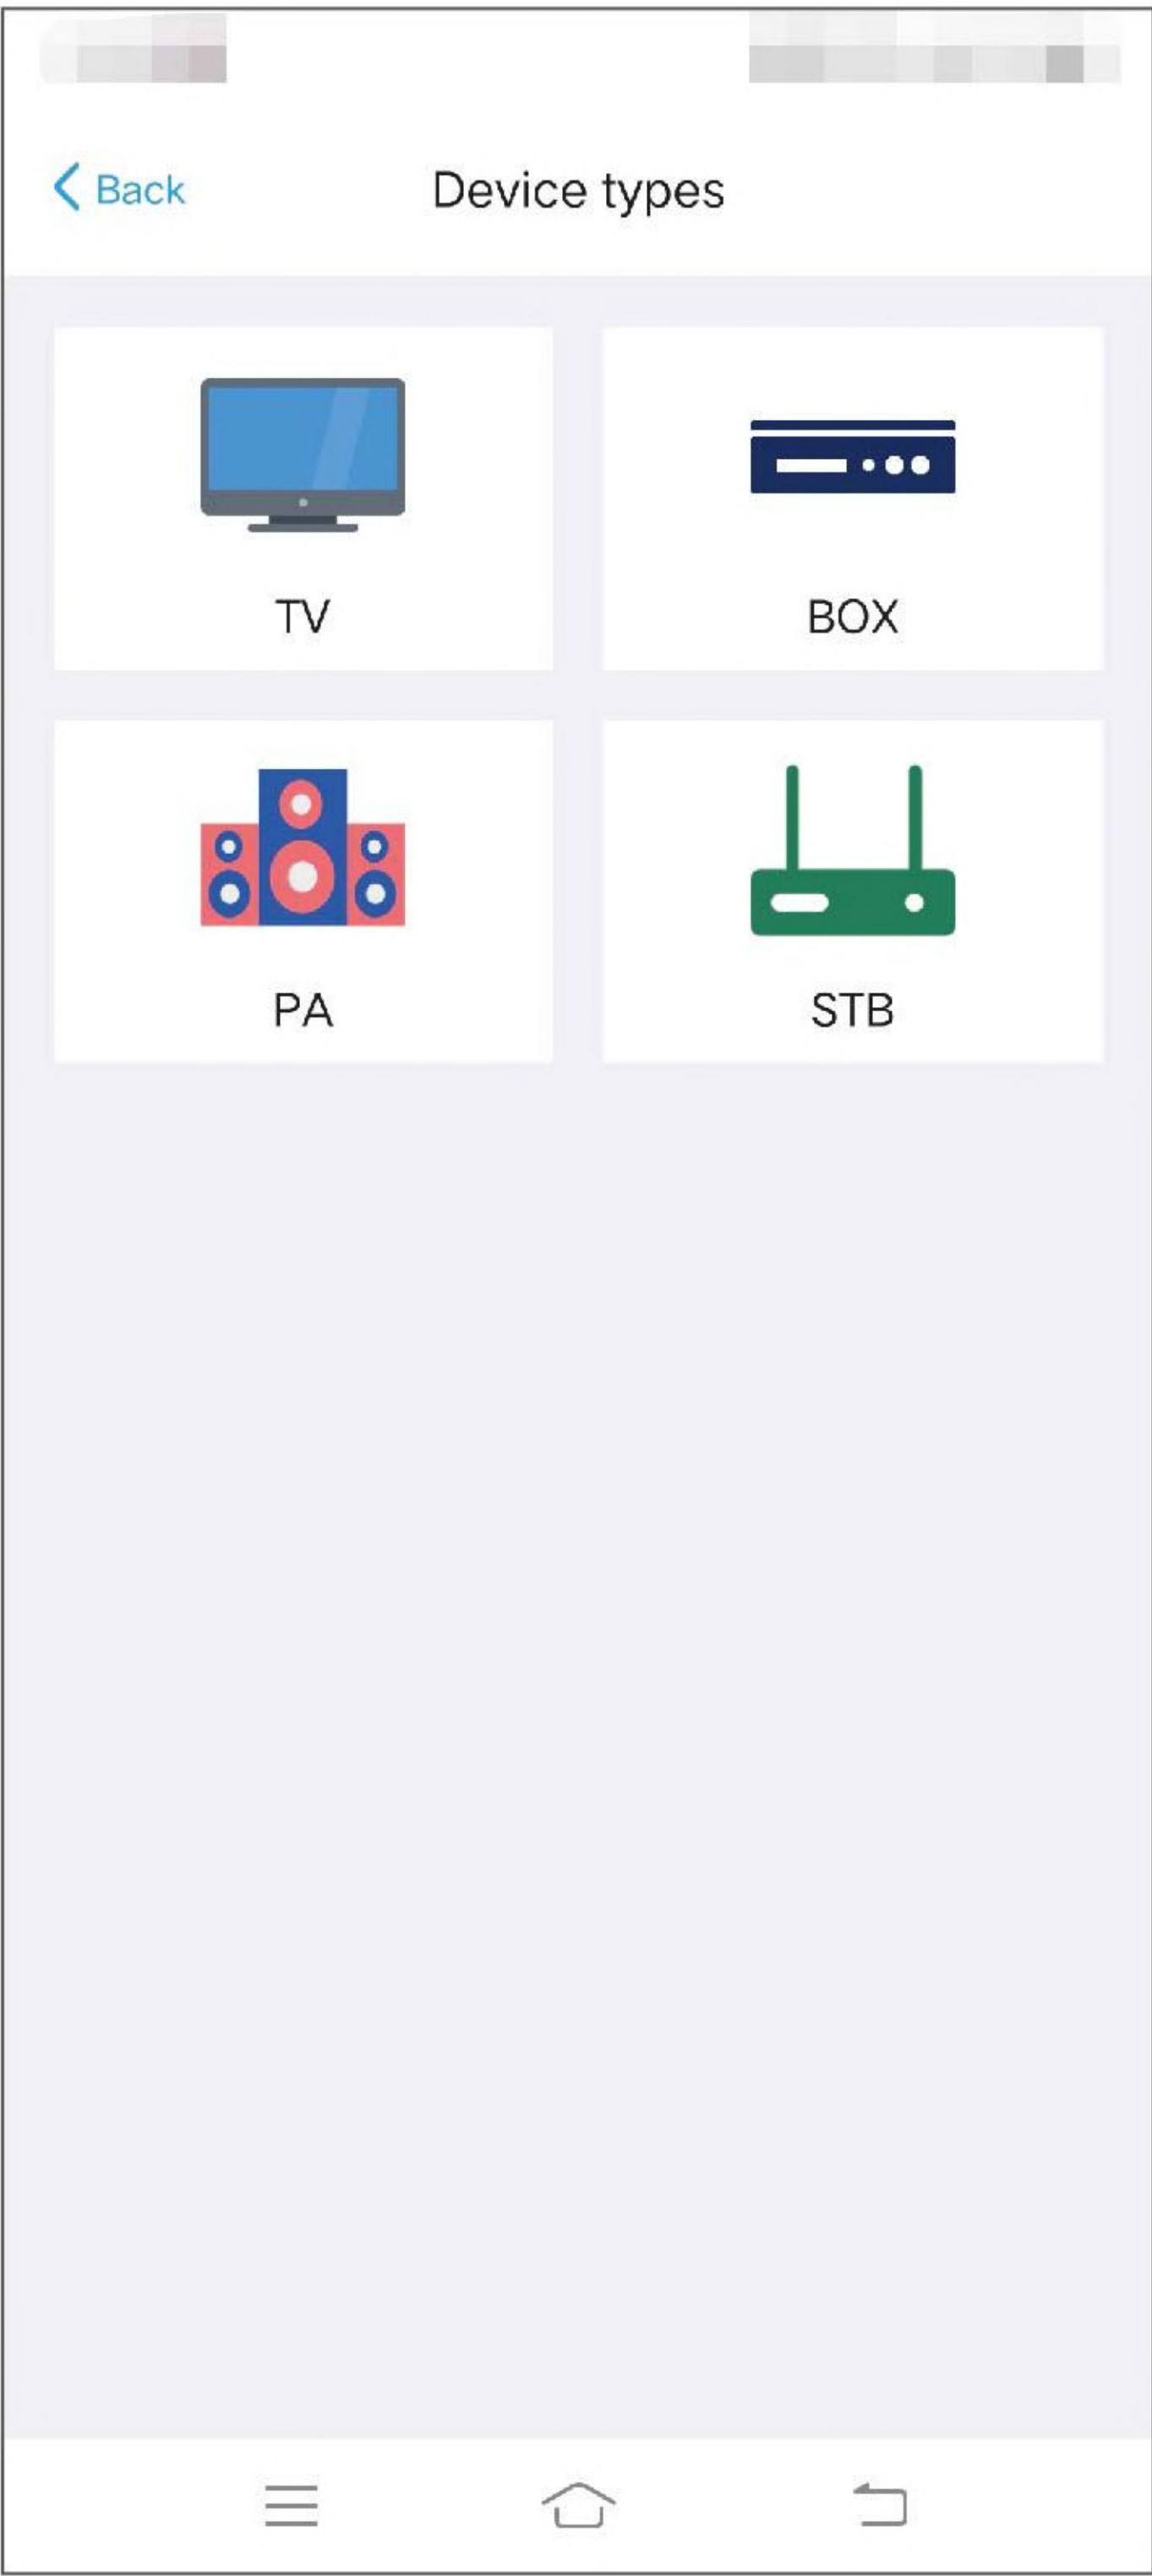

B. select the correct code base according to keys testing.

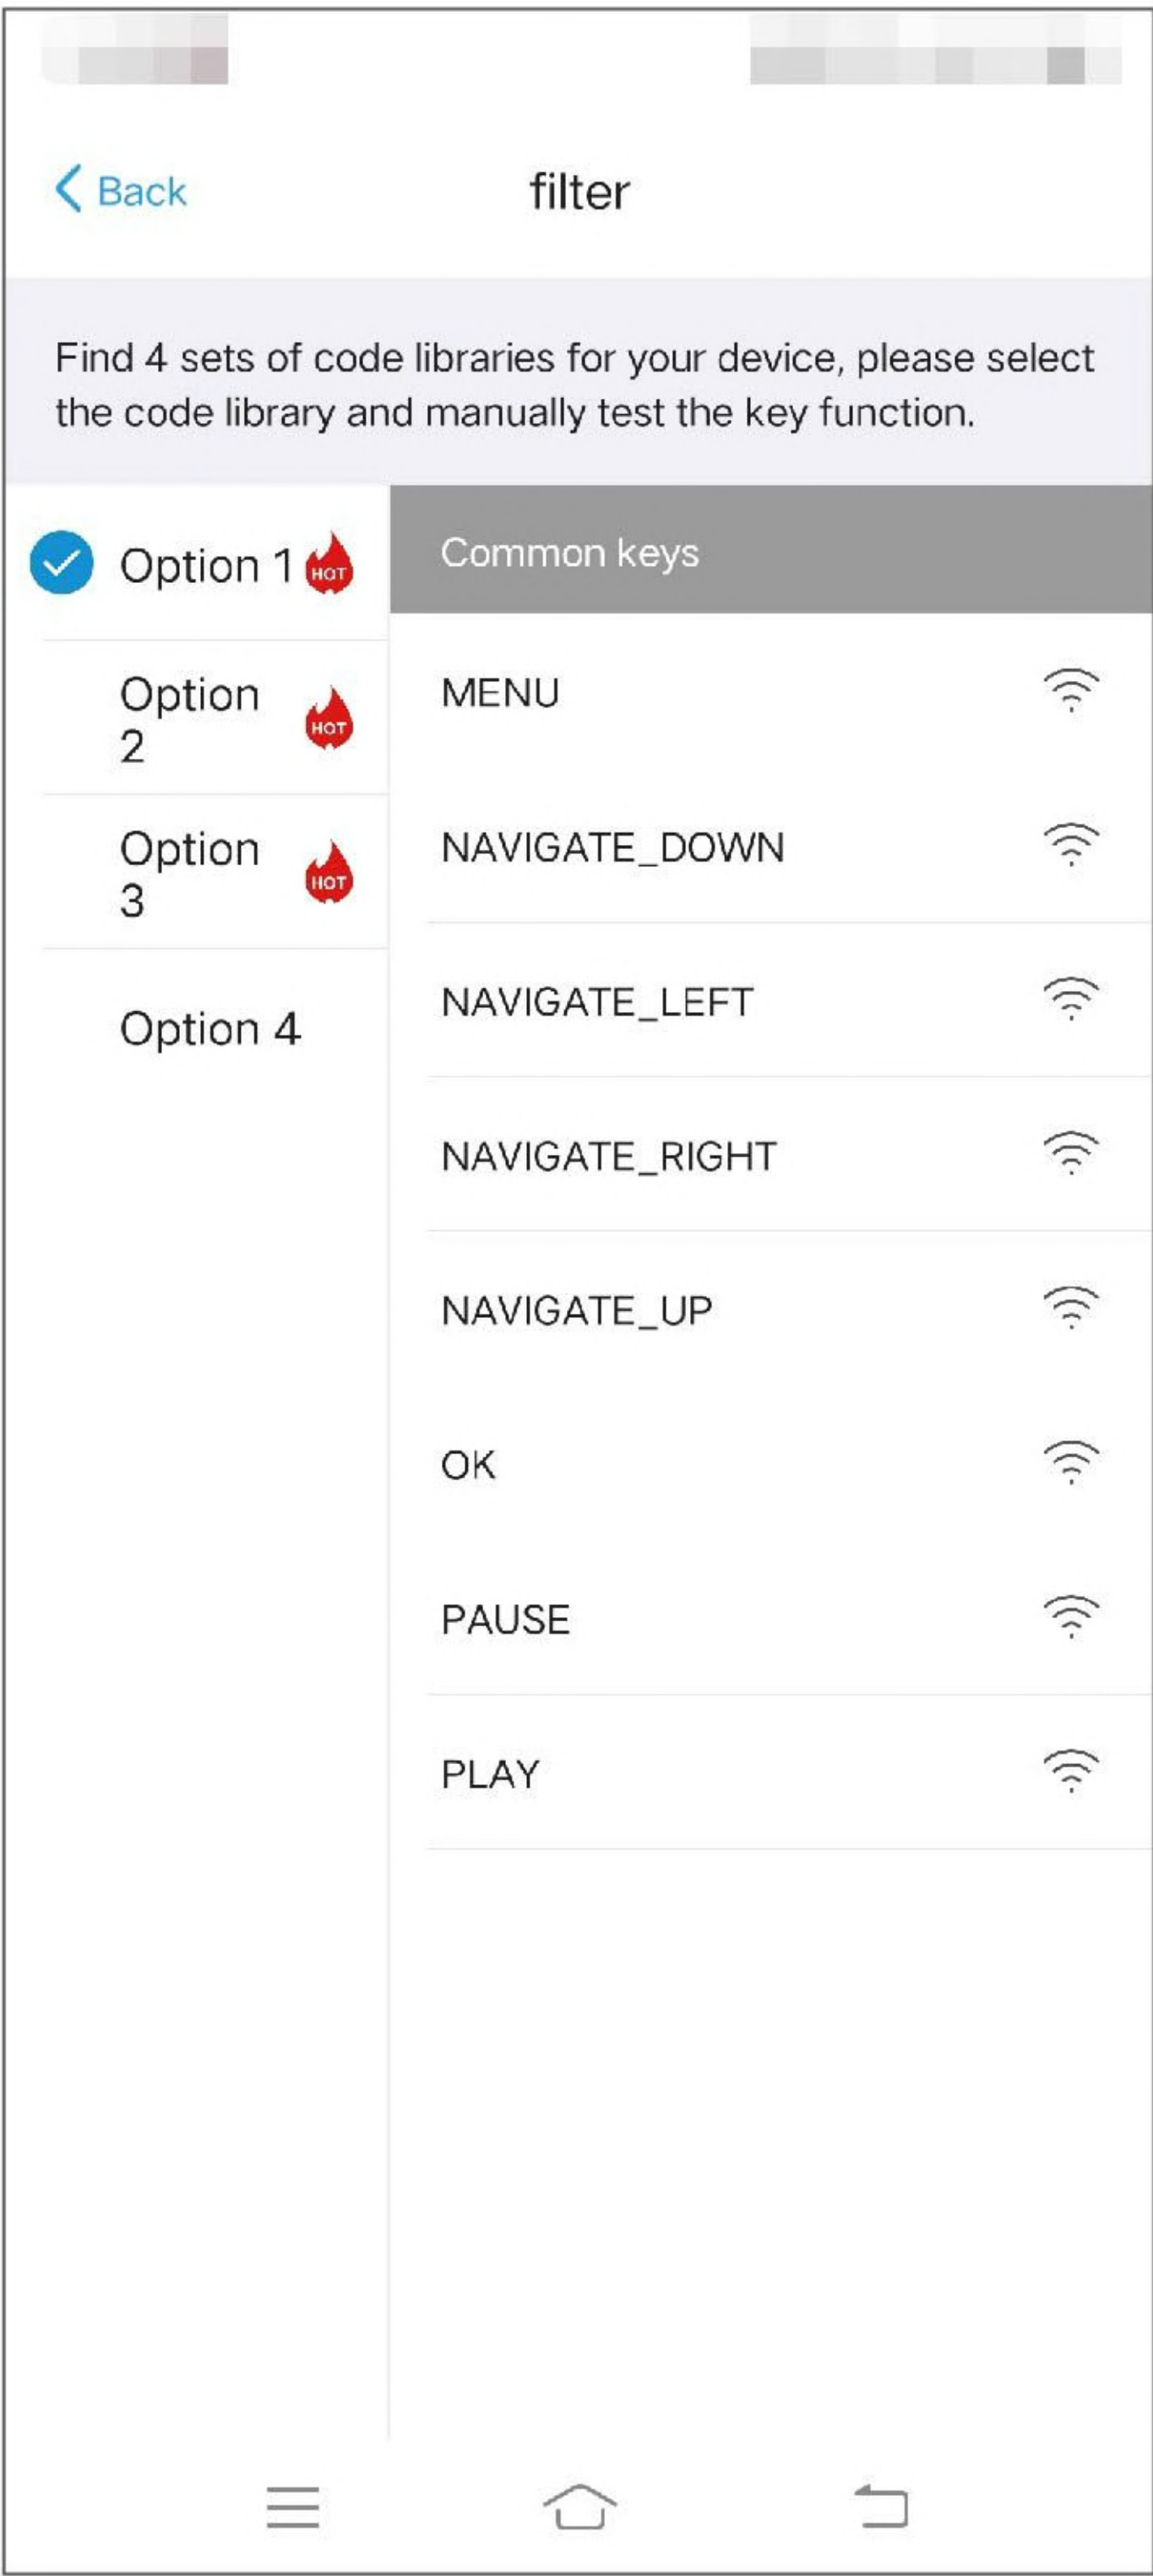

Step3: Confirm the device information and submit it so that you can download the code to the hub.

< Back

Device information


Name:

Icon:

>

Submit


Step4: Confirm the power configuration.

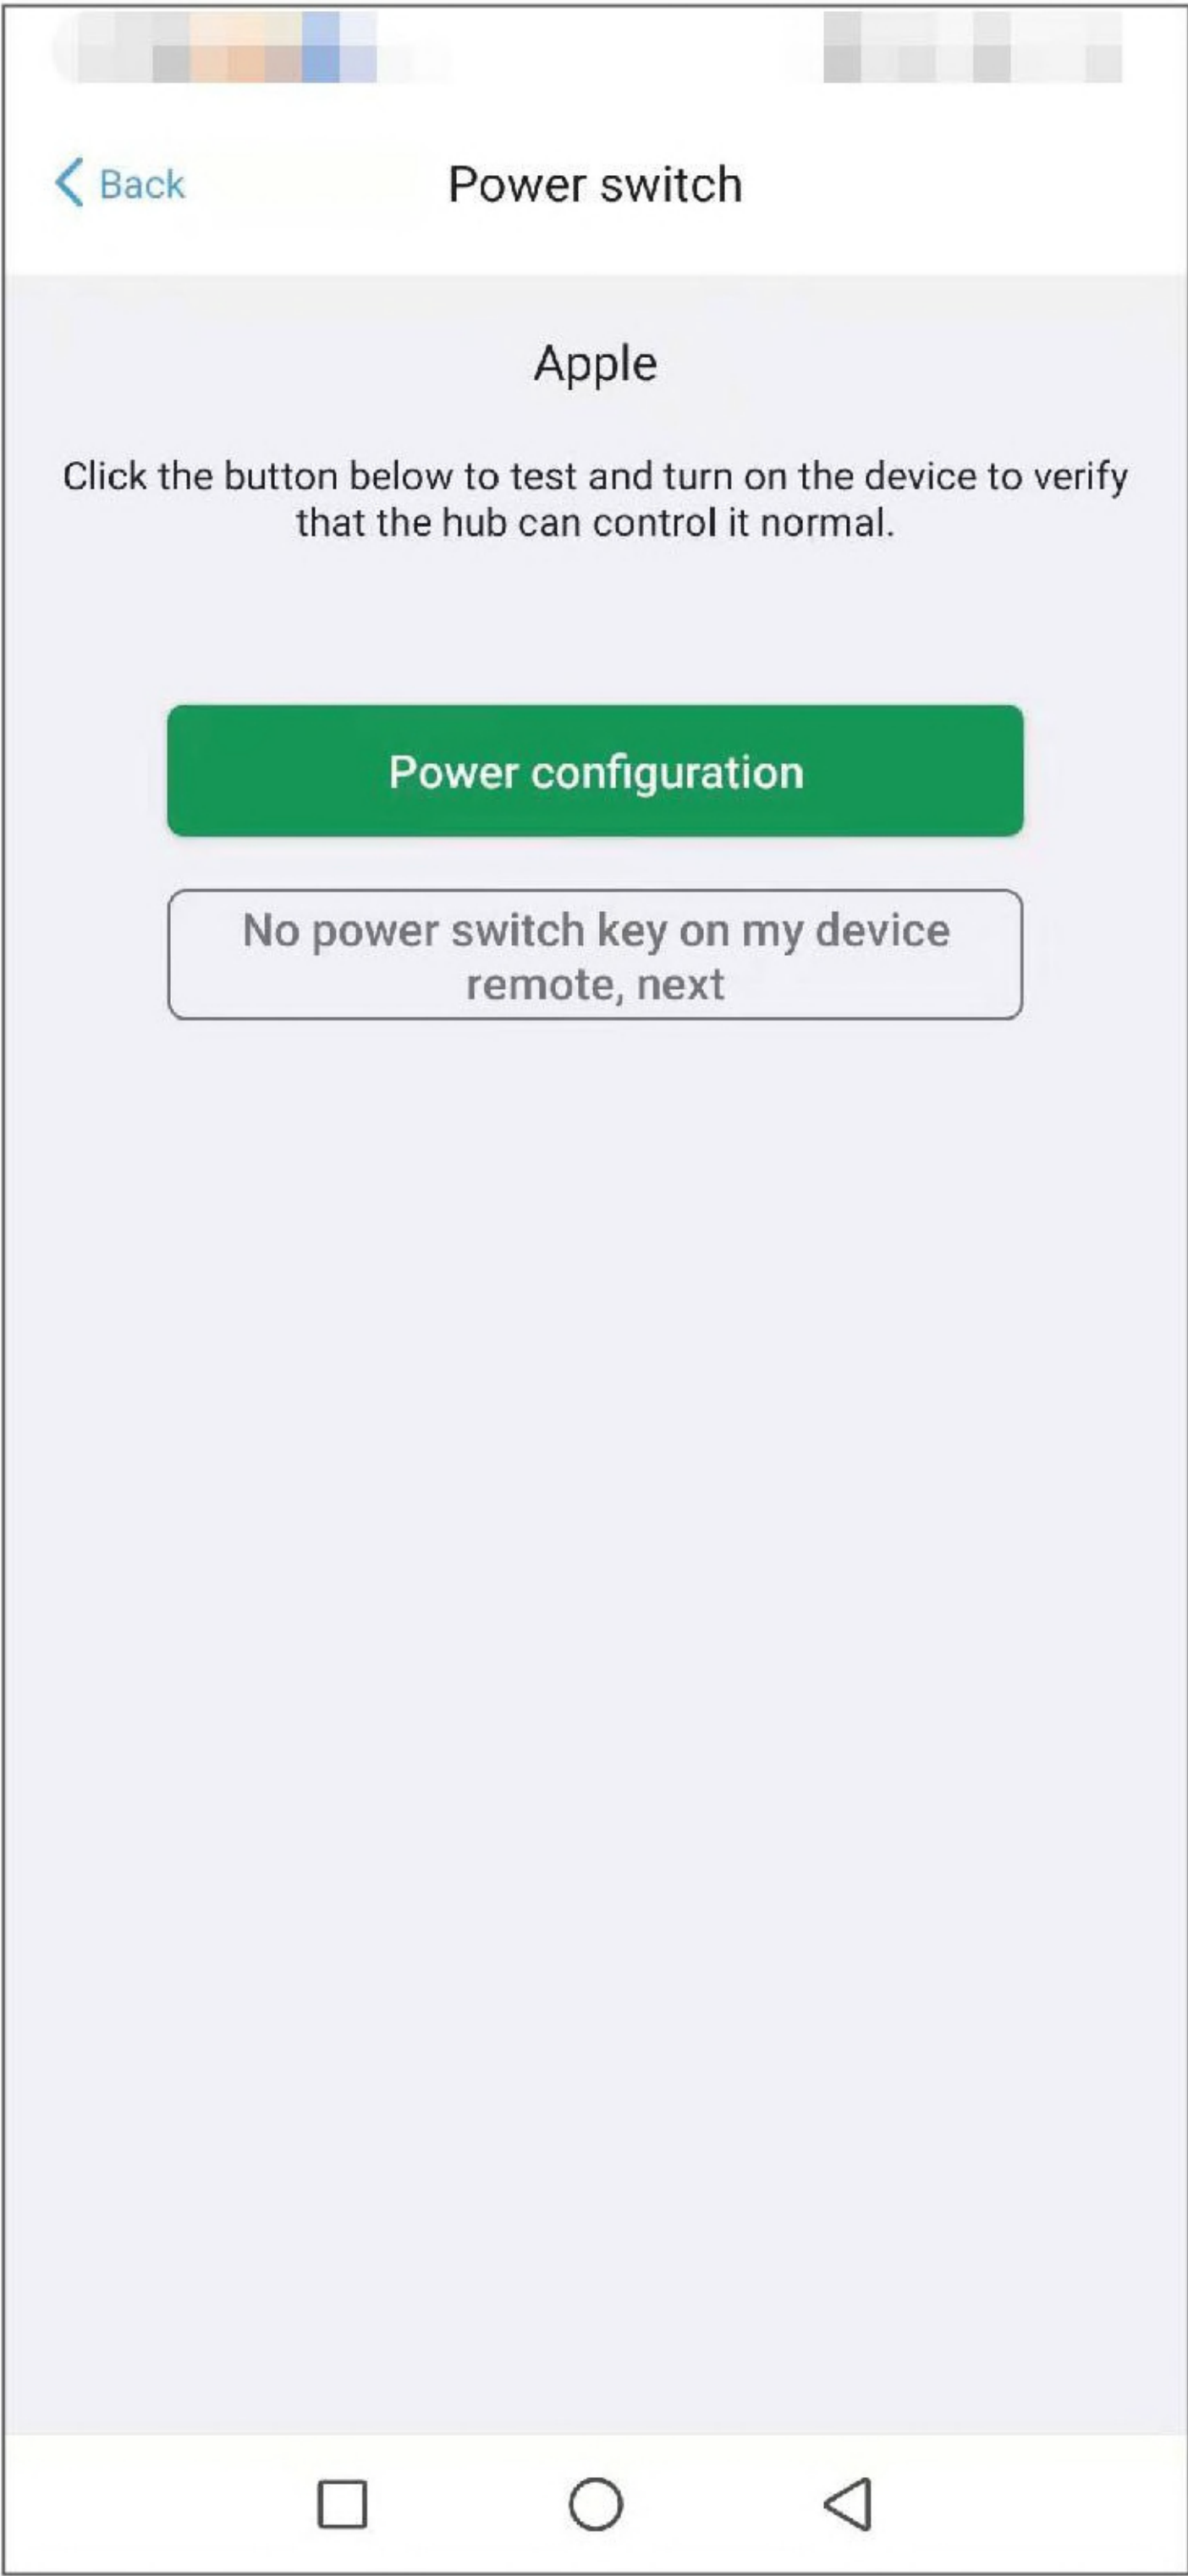

Other Methods for Adding Devices

- Via Bluetooth

Step1: Search or select your device in the list.

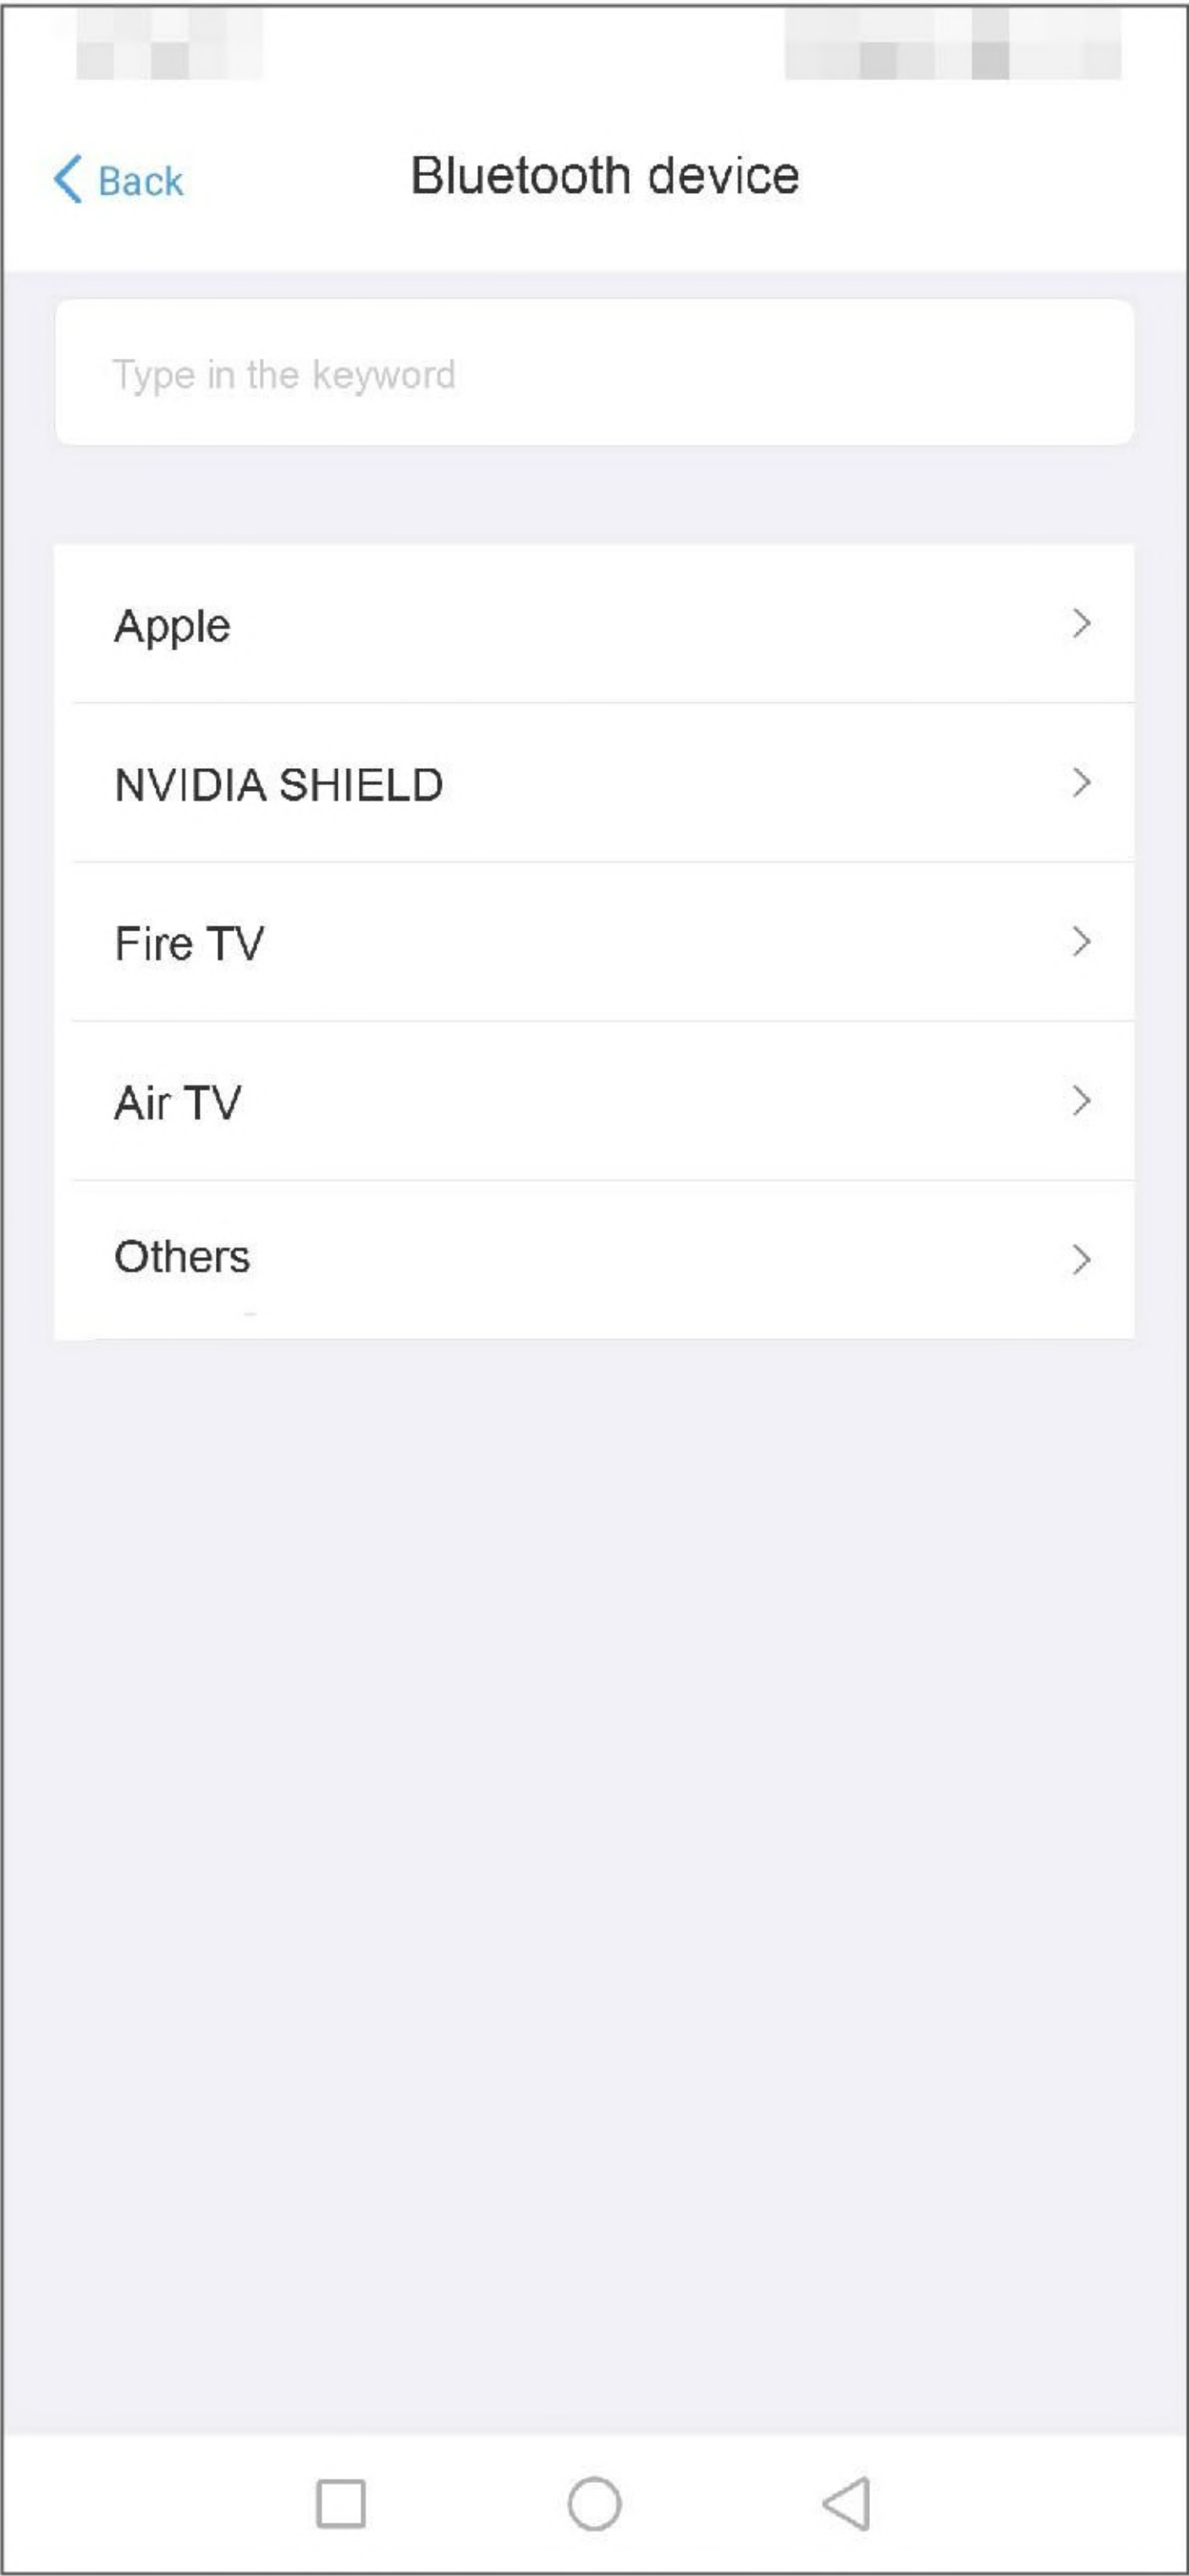

Step2: Confirm the device information and submit it so that you can download the code to the hub.

Back

Device information

Brand:

Model:

Icon:

Category:

TV


Submit

Step3: Use the original remote control to pair the device with Sofabaton X1 via Bluetooth.



- Via Wi-Fi (for smart devices)

Make sure your device is turned on and connected to Wi-Fi. The devices found after scanning can be added by clicking the list.

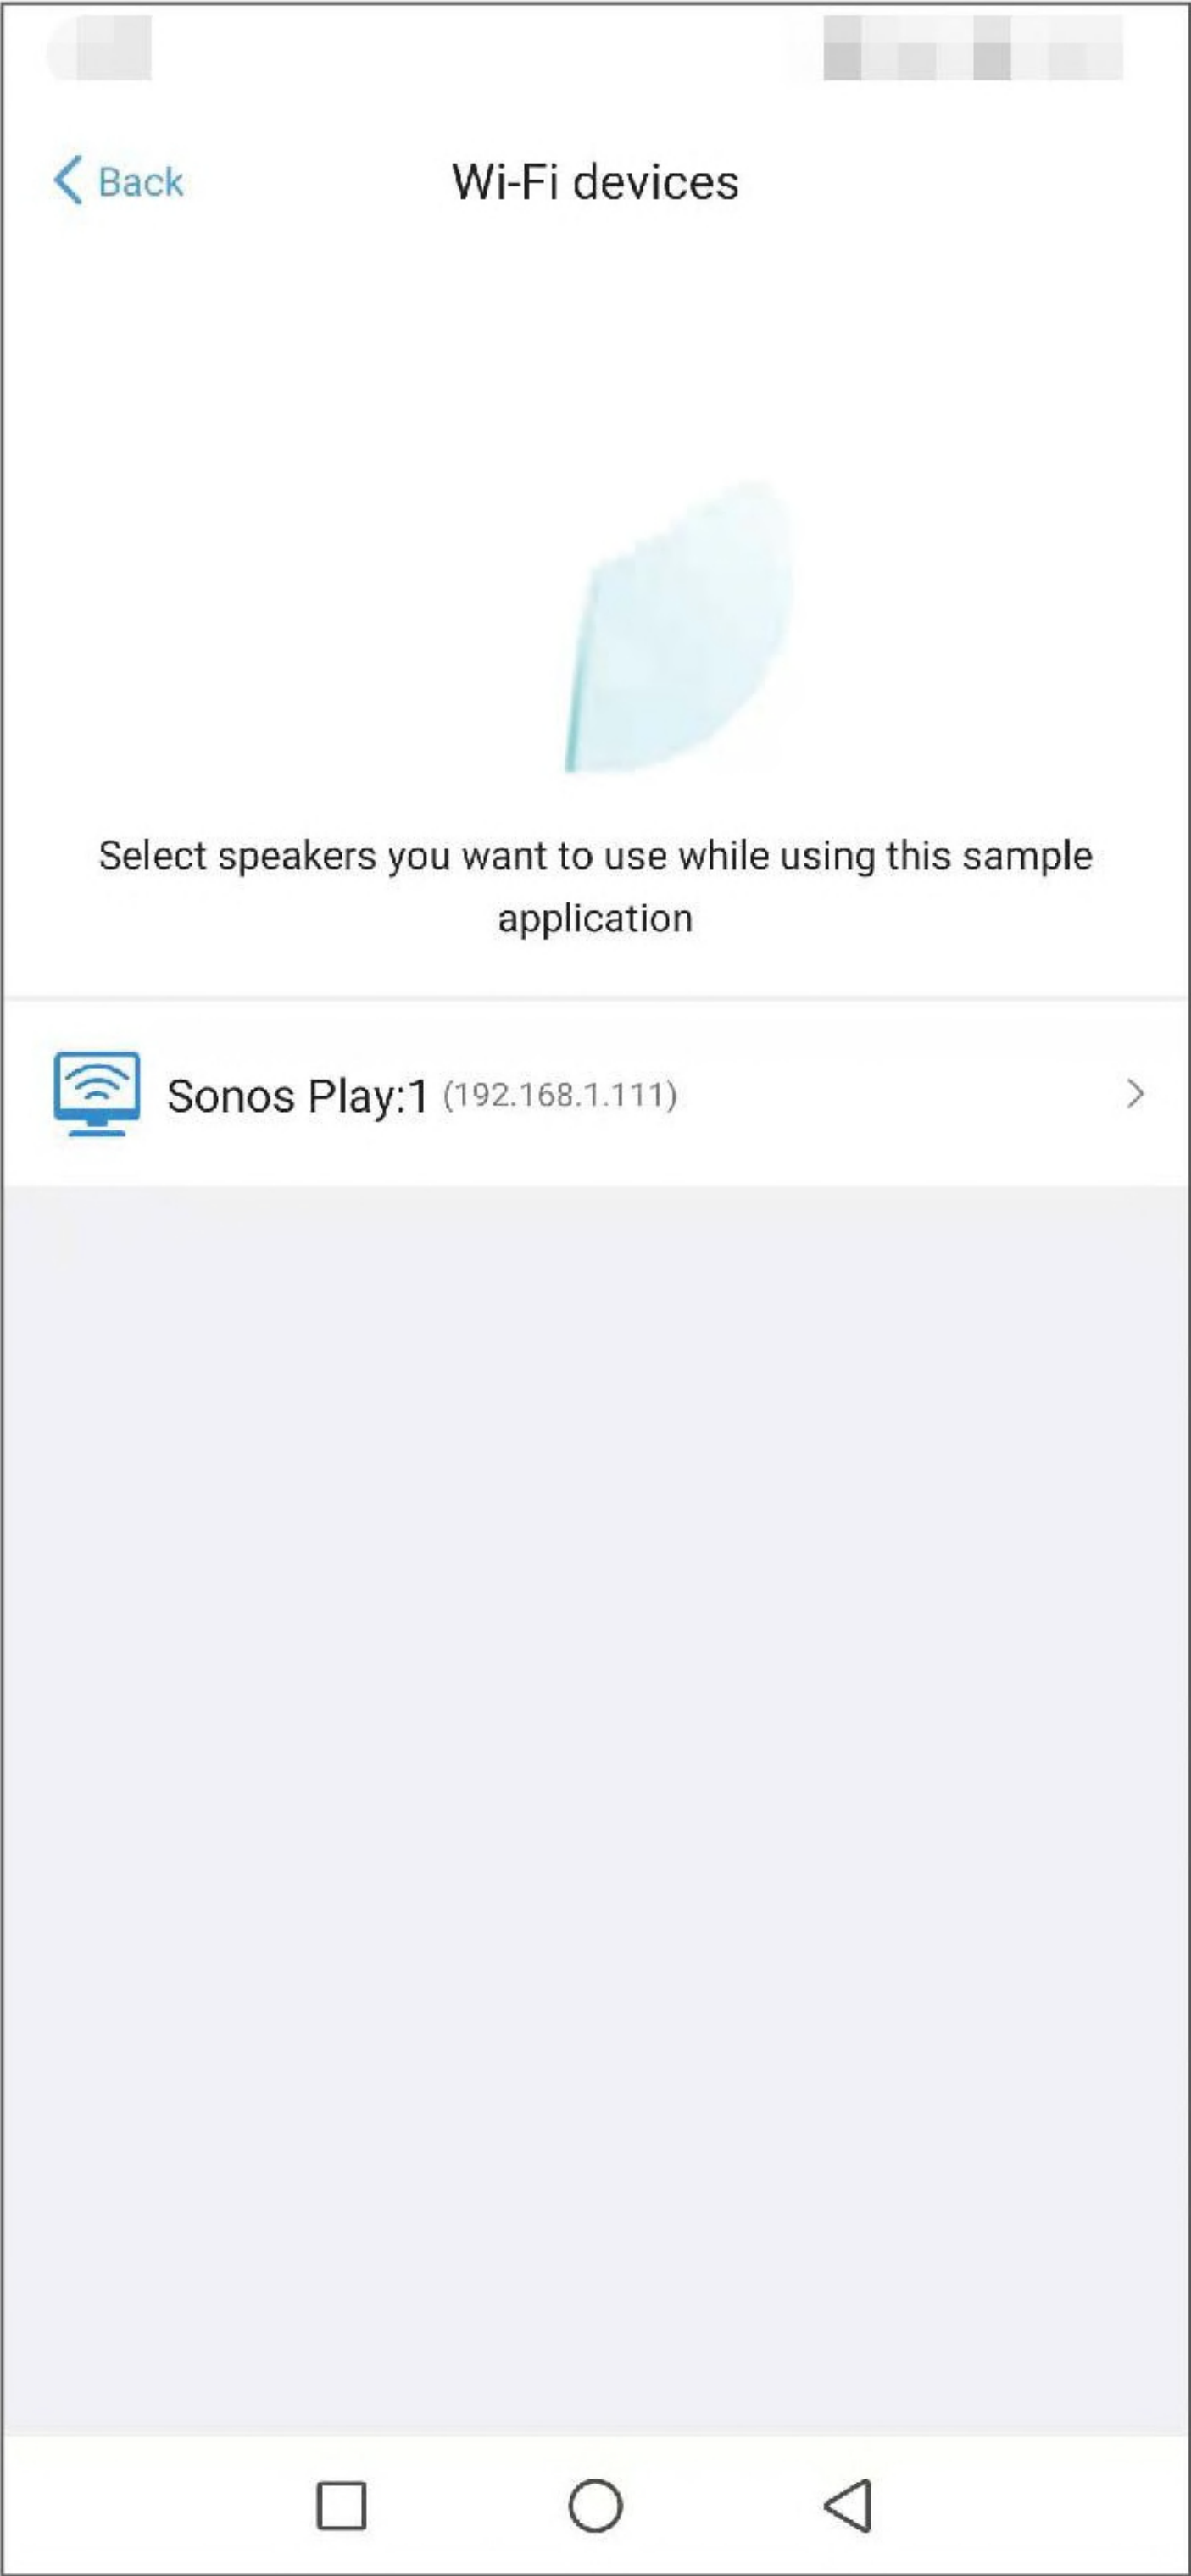

- Via Manual learning mode

Step1: Enter the information for your device.

Back

SofaBaton

Please fill in the information of the device you want to learn
(only infrared devices can be learned)

brand:ABC

model:A001

Icon

Types of:TV

Next

Step2: Enter the name of the key you want to learn.

< Back


SofaBaton

Please set the button name

Power

Next

Step3: Follow the instructions in the app to learn from the original remote.

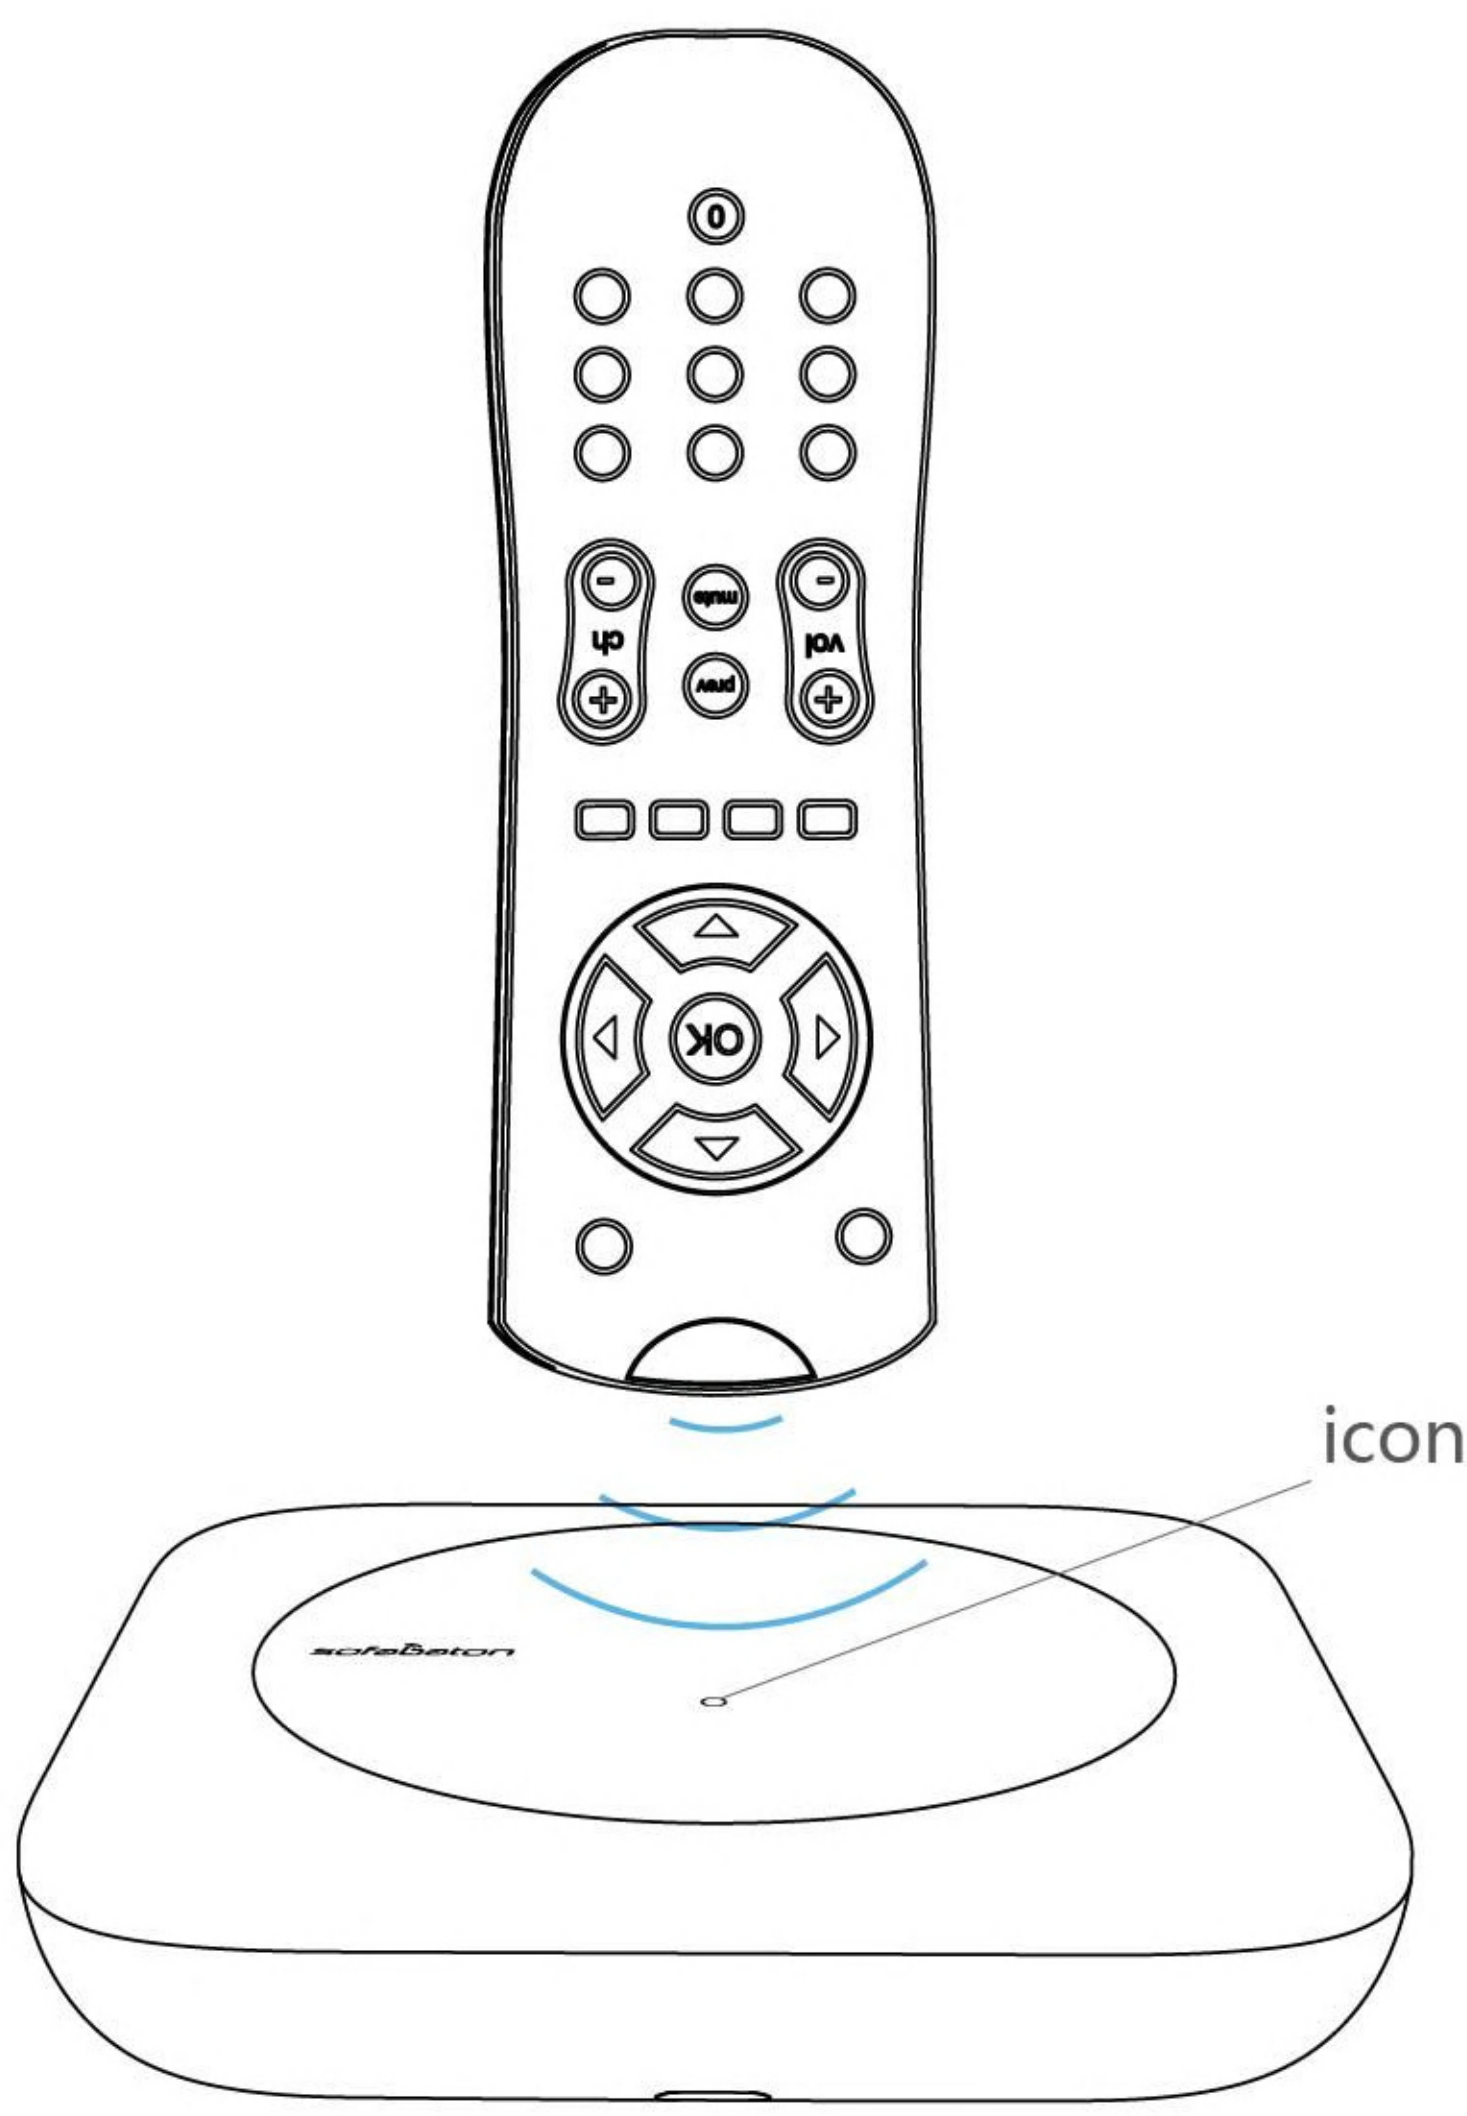

When learning, the original remote should be pointed toward the circular icon, at a distance of 3-5 inches and perpendicular to the hub surface.

III Create a New Activity

Step1: Select the devices you want to use for this Activity.

< Back

Select devices

Select the devices for this Activity.

☒

Philips (TV)

☐

Roku Streaming S (WIFI)

☐

Sonos Play:1 (WIFI)

☐

ABC (TV)

☒

Apple (BOX)


☐

DIRECTV (STB)


Next

Step2: Confirm the input source.


If you are not familiar with source configuration, please follow the instructions on “IV Configuring the source in an Activity” .

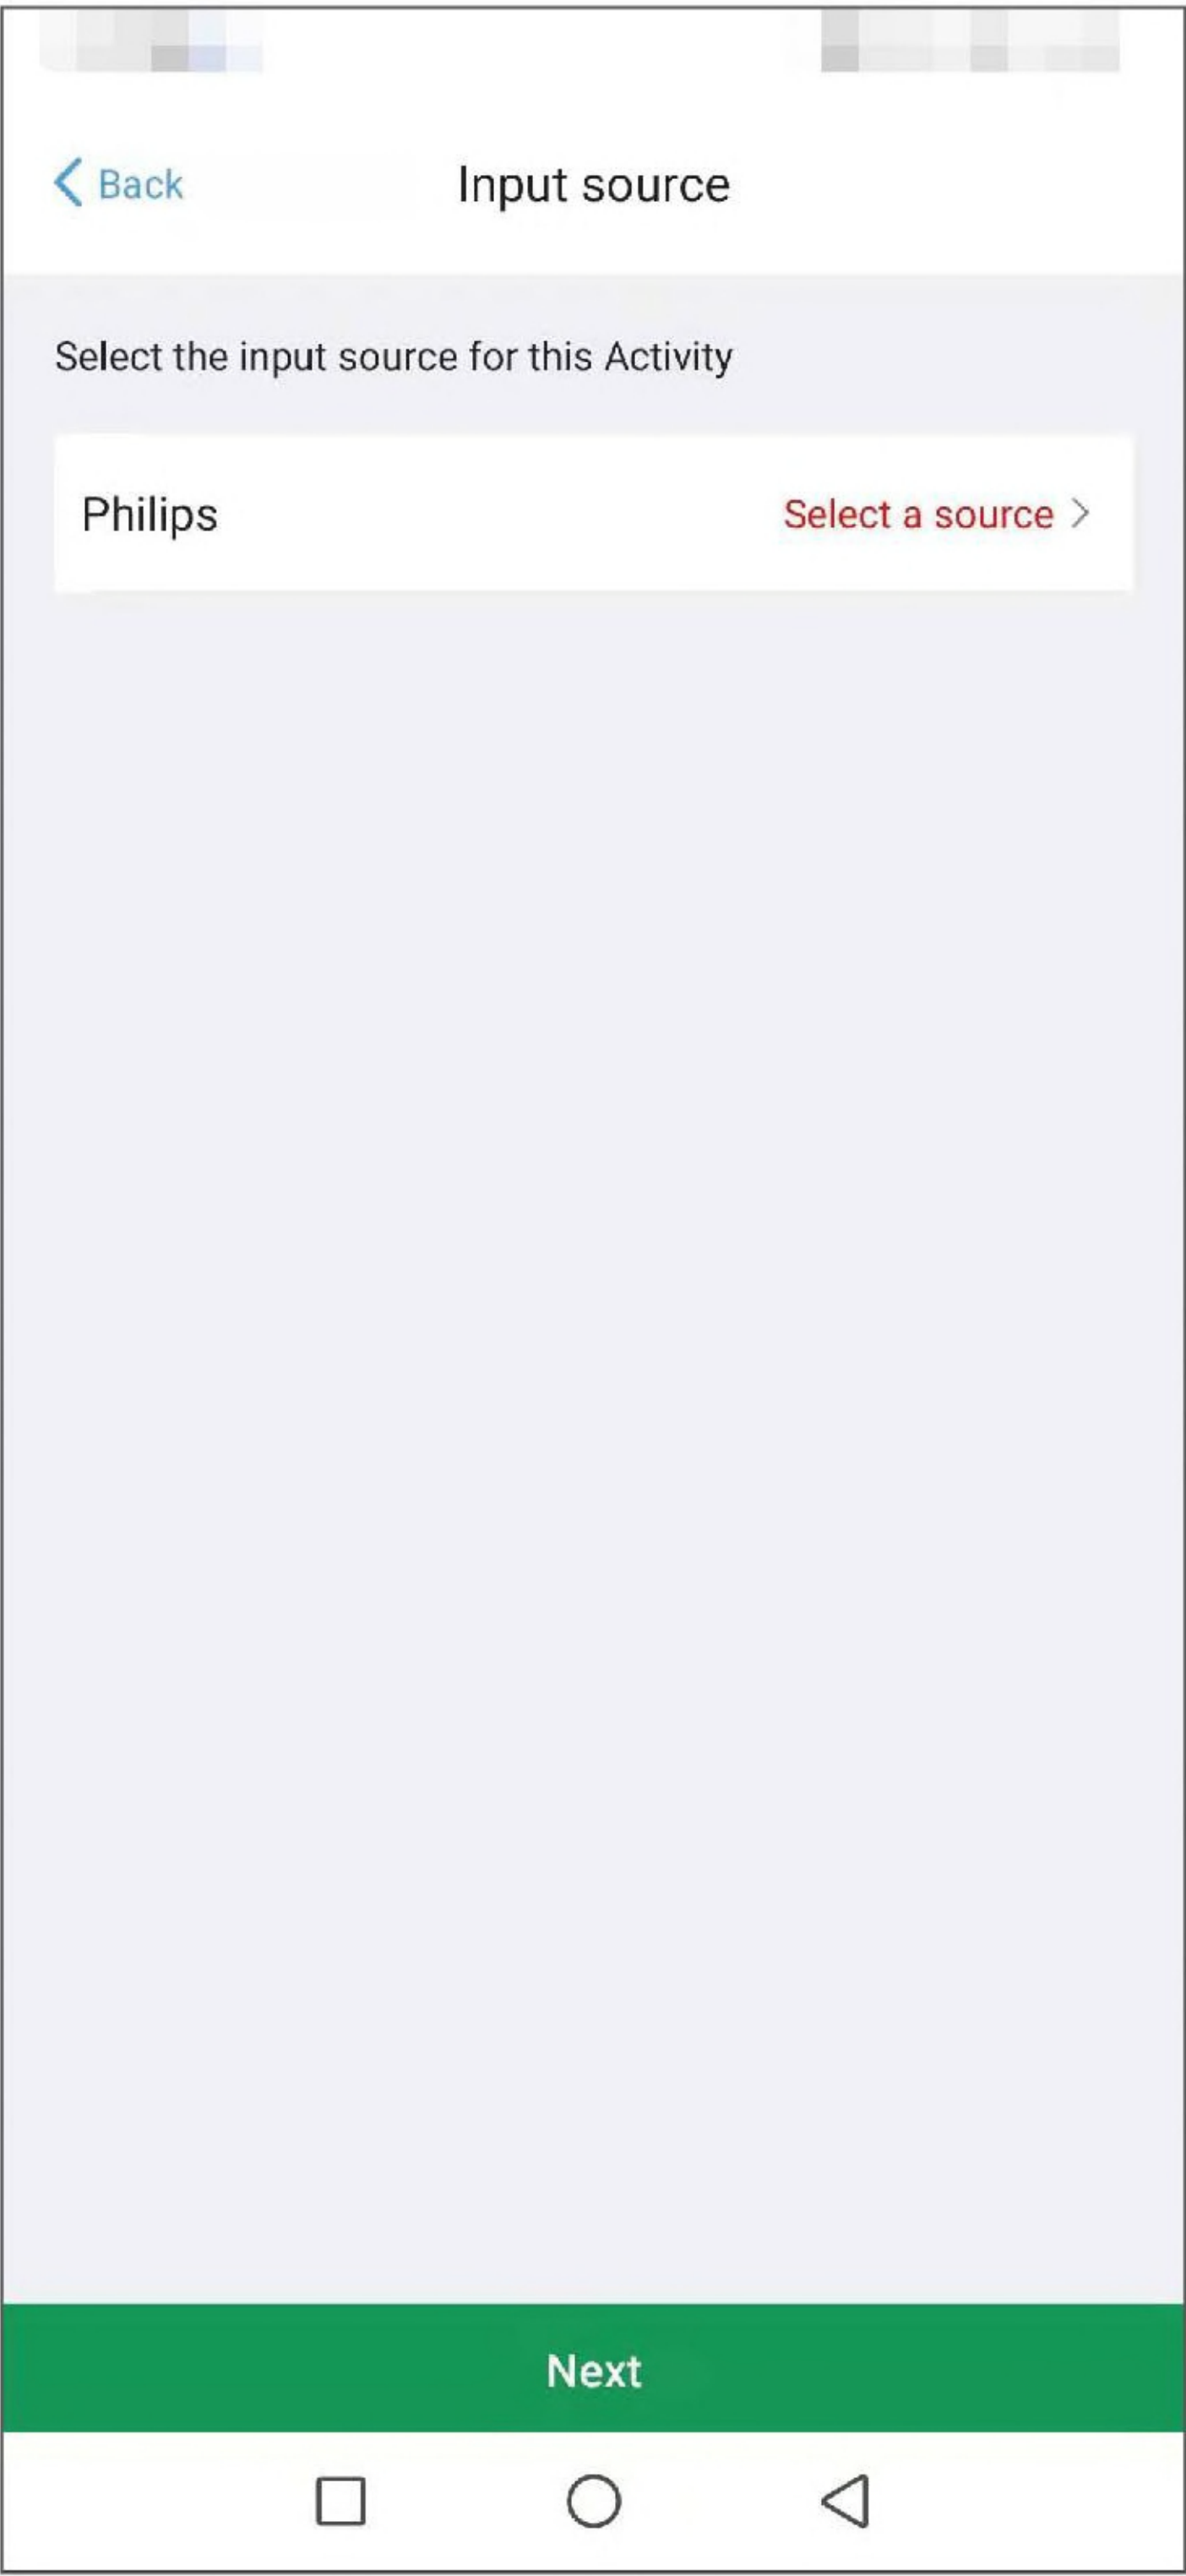

Step3: Verify that all devices are powered on.

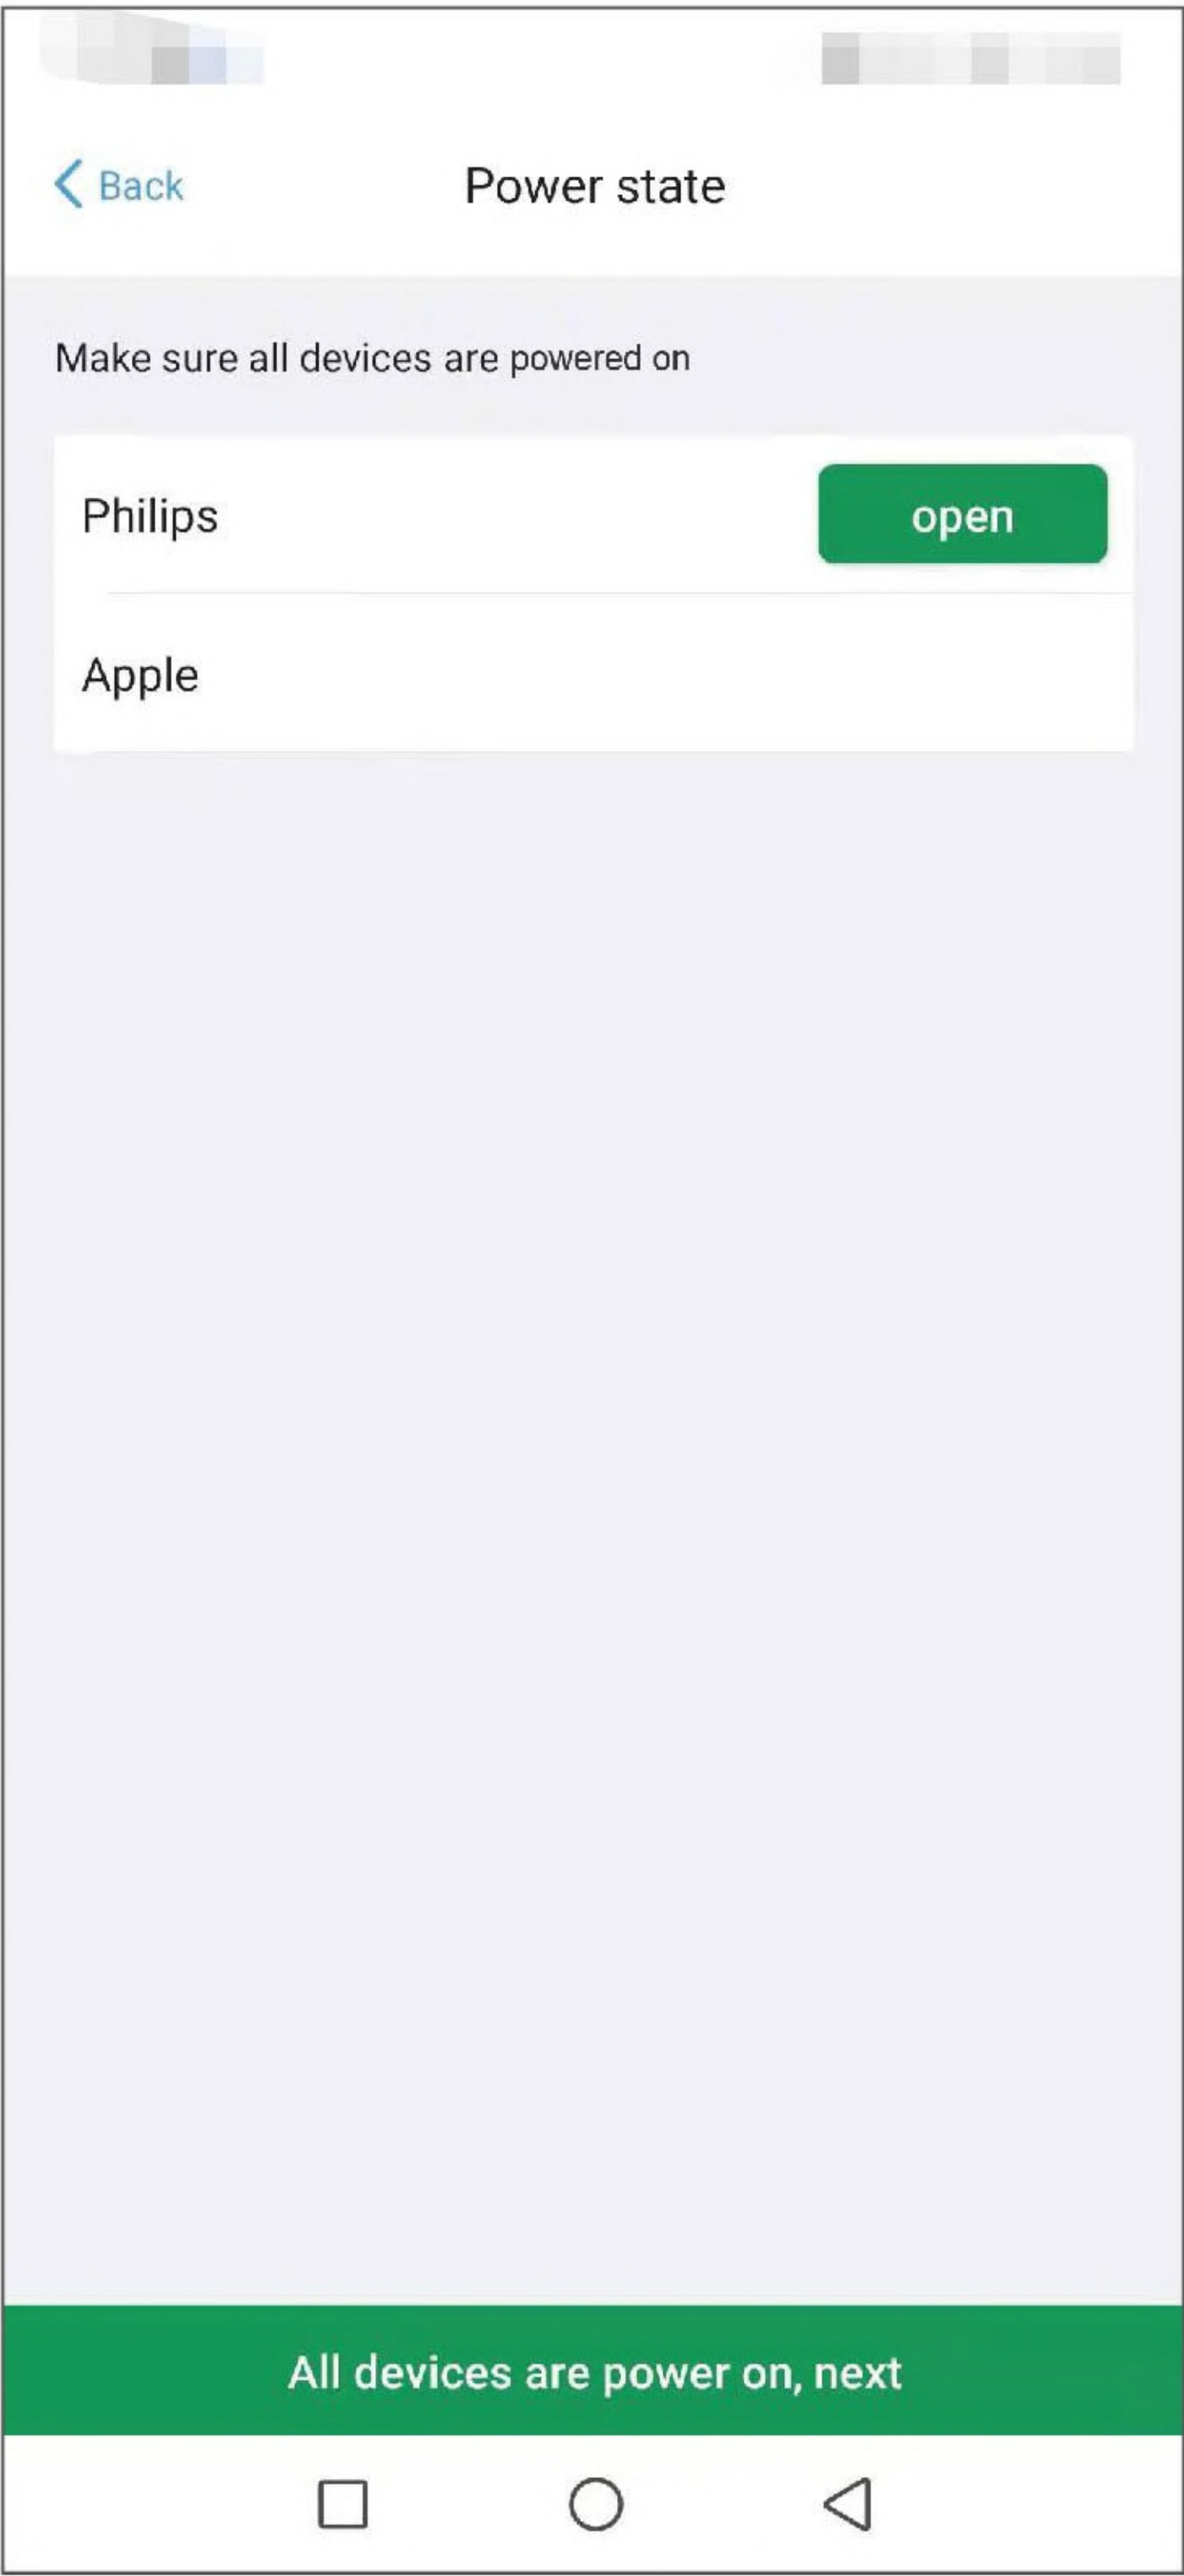

Step4: Configure the X1-Remote key for the current Activity.

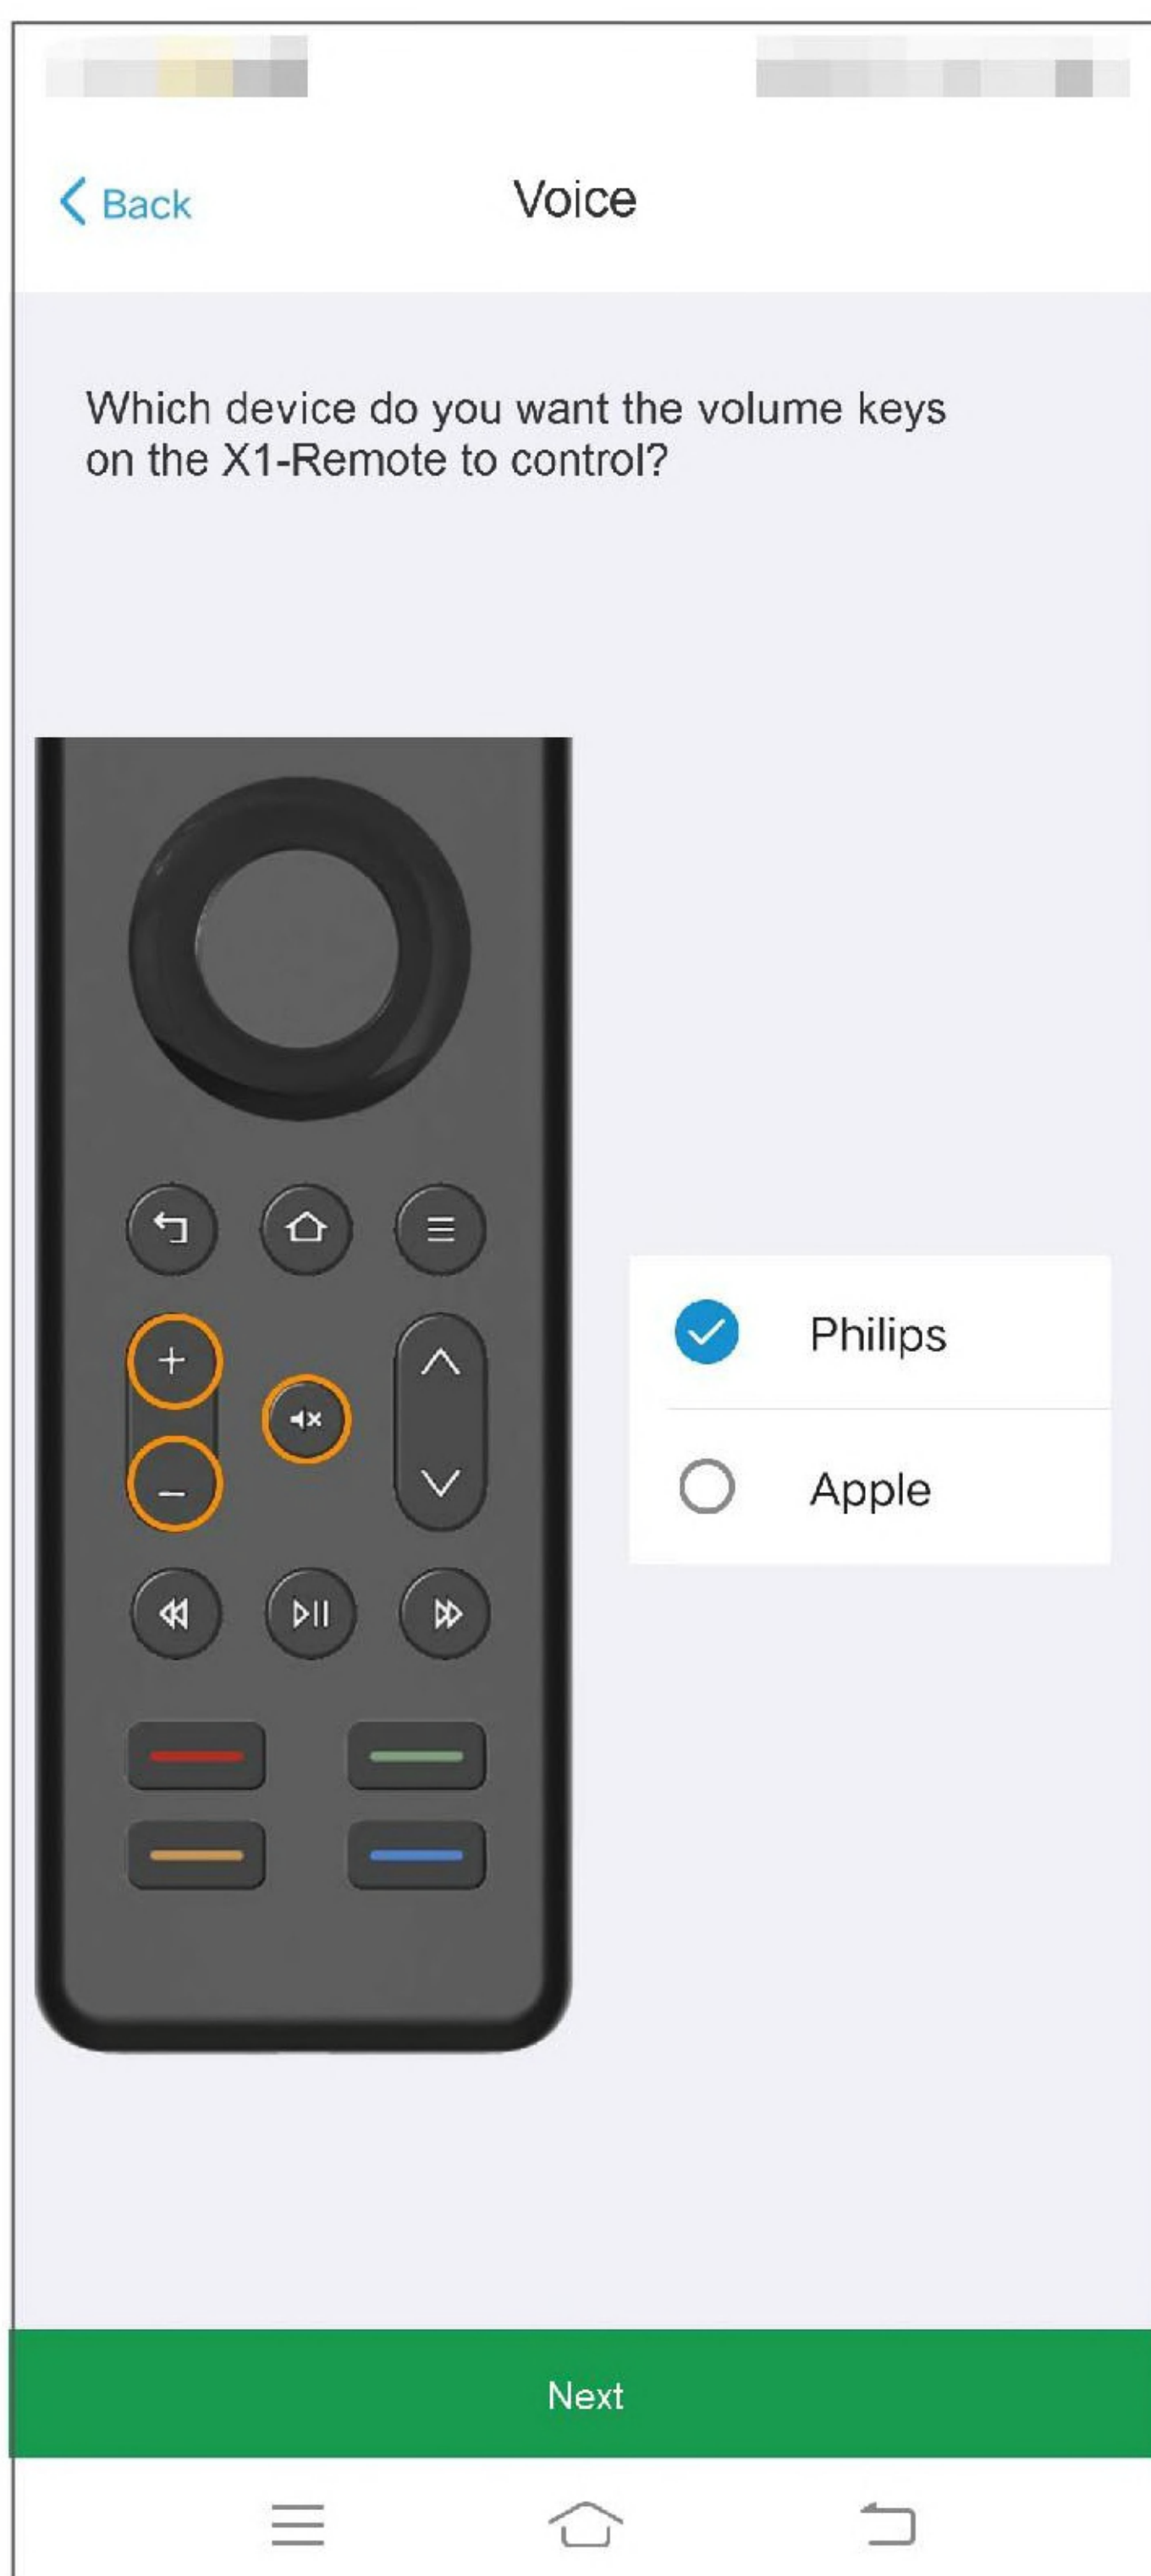

Step5: Fill in the Activity name. This will complete the activity creation process.

< Back

Activity information

Name

Please enter the device name

Icon



>

Complete

IV Configuring the Source in an Activity


For proper functioning, the system needs to obtain the following source information for the output device (TV, power amplifier, projector, etc.).

- source switching mode
- source control keys
- source list
- source location information

After obtaining the source configuration of the output device and the source location of the input device(Streaming box, Player) , the system can automatically switch to the correct source to enable all associated devices when you start an activity.

To do this, follow the steps listed below.

Step1: If the device has not configured the source in advance, you need to click to configure when creating an Activity .

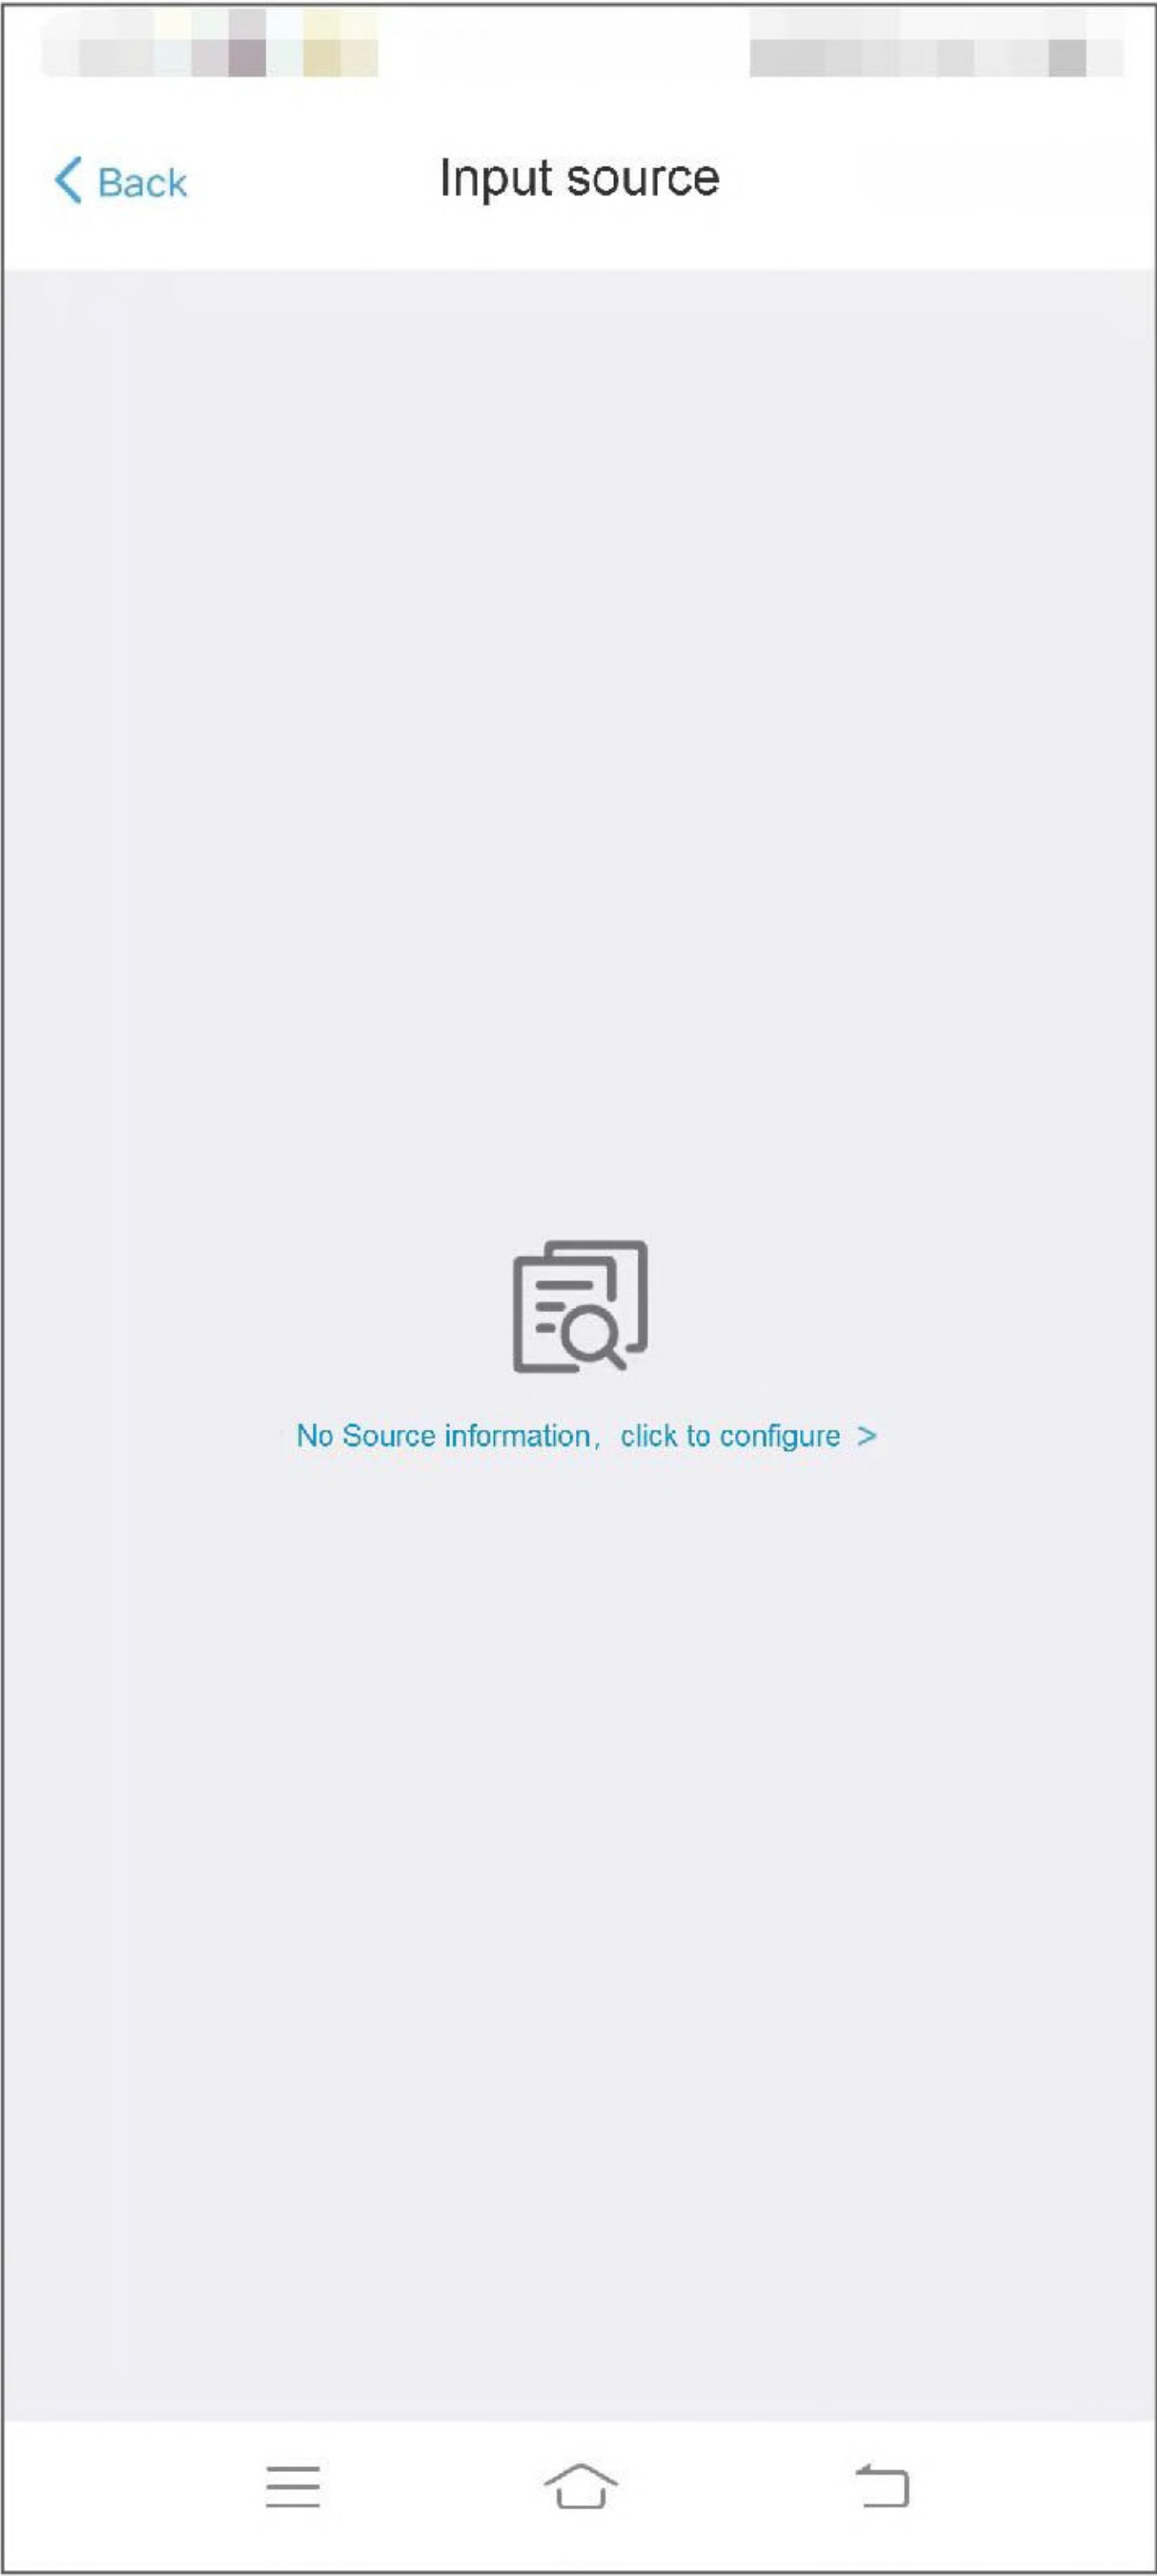

Step2: Source information: source switching mode of the output device. Select the appropriate option for your device.

Back

Source switching mode

HDMI 1

HDMI 2

AV 1

Switch sources with one-click

Source

Cyclic switch by pressing source key

2

Switch sources by Up or Down keys

Source

Switch sources by Source or Input key

2

Switch sources by Source or Input key

No input

No source switching function

Next