

 
Wireless Camera



Quick User Guide



App may be differed from this user guide due to continuous updates

1.Accessories

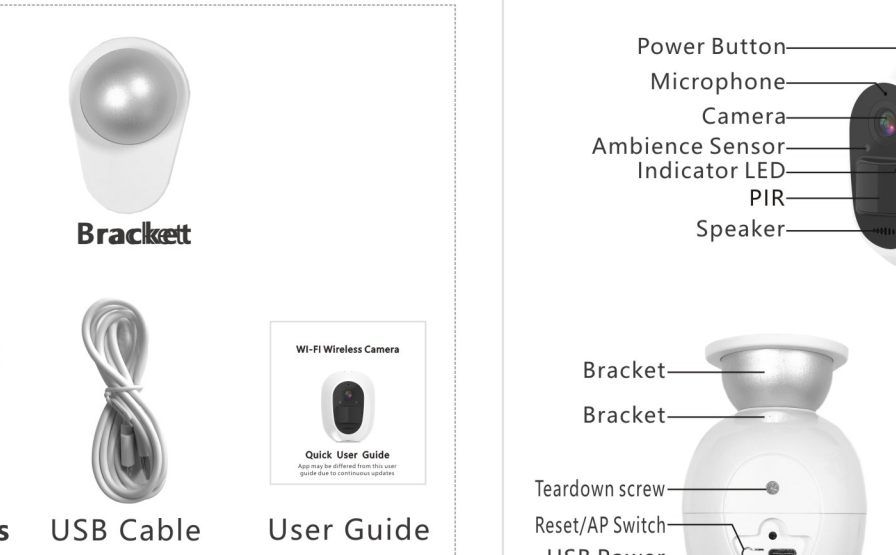

1xCamera, 1xBracket, 1xScrew Sets, 1xSticker, USB Cable, 1xUser Guide.

  2.Product Details

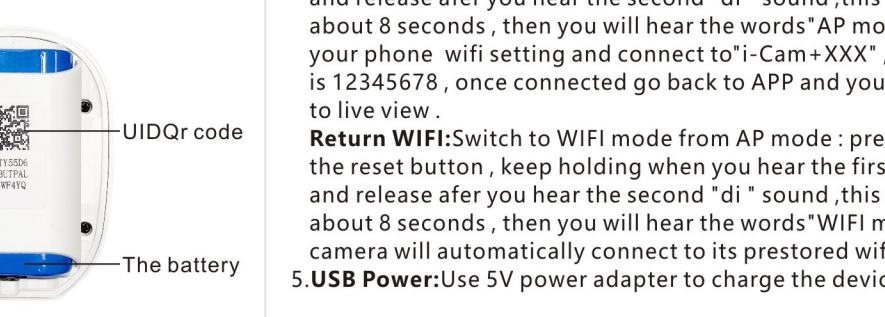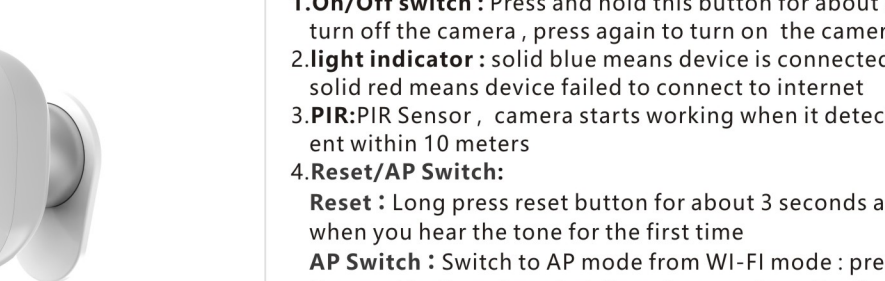

Function introduction

- On/Off switch** : Press and hold this button for about 3 seconds to turn off the camera , press again to turn on the camera .
- light indicator** : solid blue means device is connected to internet, solid red means device failed to connect to internet
- PIR**:PIR Sensor , camera starts working when it detects movement within 10 meters
- Reset/AP Switch**:
Reset : Long press reset button for about 3 seconds and release when you hear the tone for the first time
AP Switch : Switch to AP mode from WI-FI mode : press and hold the reset button , keep holding when you hear the first "di" sound , and release after you hear the second "di" sound ,this will take about 8 seconds , then you will hear the words "AP mode" . Go to your phone wifi setting and connect to "i-Cam+XXX" , password is 12345678 , once connected go back to APP and you will be able to live view .
Return WIFI:Switch to WIFI mode from AP mode : press and hold the reset button , keep holding when you hear the first "di" sound , and release after you hear the second "di" sound ,this will take about 8 seconds , then you will hear the words "WIFI mode" . The camera will automatically connect to its prestored wifi signal .
- USB Power**:Use 5V power adapter to charge the device

3.Tips before use

- Please charge the product with DC 5V, 1A/2A for minimum 3 hours before using**
- Power on the product with the power button. After the indicator LED is on, press Reset button for 3 seconds to reset**
- After reset, use downloaded app for setting up the camera**

PIR Sensor Installation Angle

When installing the camera, please install the camera angularly (the angle between the sensor and the detected object is larger than 10°) for effective motion detection. If the moving object approaches the PIR sensor vertically, the sensor may not detect the motion events.

 
Camera Ideal Viewing Distance

The ideal viewing distance is 2-10 meters (7-33ft), which enables you to recognize a human.




APP INSTALLATION

(1.) Scan the following QR codes or search for "i-Cam+" from the App Store (for iOS devices) or Google Play Store (for Android smartphones) to download and install the app.

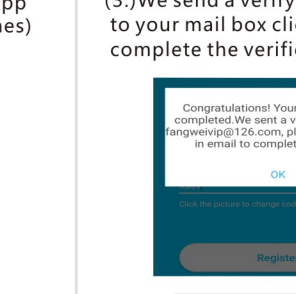


APP REGISTRATION

 (1.) Open the app then input your E-mail address then press 'Register'. Check and select to agree the agreement then your E-mail box will get an verification mail. verification mail. (For better user's experience, please allow to open all permissions to avoid missing any notifications from the app.)

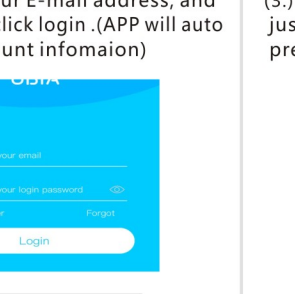


WI-FI CONNECTION

 (1.) Press 'Add Family' then set the room or position as per reminders.

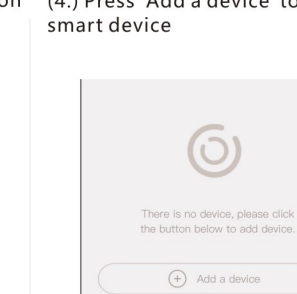


WI-FI CONNECTION

 (2.) Enter your family name and then press 'Next'.

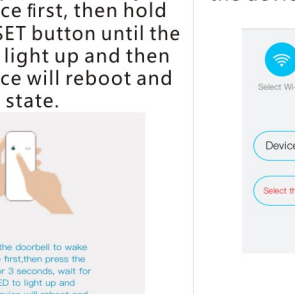


WI-FI CONNECTION

 (3.) We send a verify mail to you, go to your mail box click the link to complete the verification.

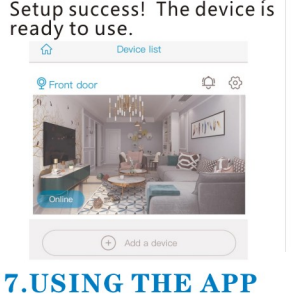


WI-FI CONNECTION

 (4.) Enter your E-mail address, and password, click login. (APP will auto fill the account information)

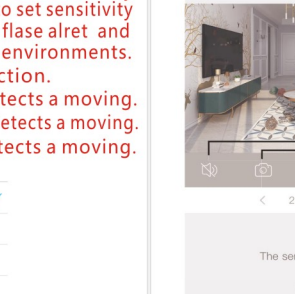


WI-FI CONNECTION

 (5.) Connect the device with power supply, and make sure your mobile phone is connected to an available Wi-Fi. Then press 'Setup device'.

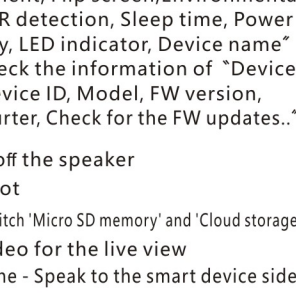


WI-FI CONNECTION

 (6.) After the power on the device, wait for the device blue LED are blinking Which means your device in pairing mode

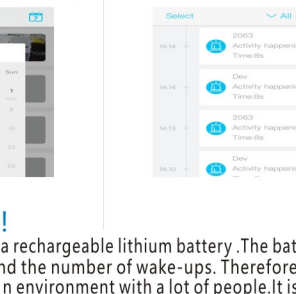


WI-FI CONNECTION

 (7.) If the device blue are not blinking, please press the power/Call key to wake up the device first, then hold and press the RESET button until the blue indicator to light up and then release. The device will reboot and enter the pairing state.

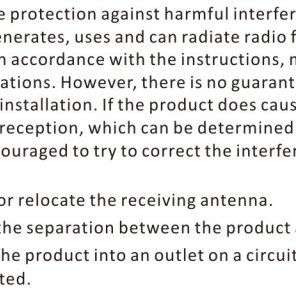

WI-FI CONNECTION

 (8.) Set the device name and select the device location before setup.



WI-FI CONNECTION

(9.) The app will input the Wi-Fi name automatically, please input the correct Wi-Fi Password. Then you can choose the 'QR code configuration' or 'Sound wave configuration'.

WI-FI CONNECTION

(10.) QR code configuration: Select the QR code configuration then the mobile phone display a QR code. Use the device to scan to the QR code 10cm away from the mobile phone.

WI-FI CONNECTION

(11.) The device will enter to the device list automatically. Setup success! The device is ready to use.

WI-FI CONNECTION

(12.) Notes about PIR detection
*User can change the PIR detection sensitivity in device settings. We recommend to set sensitivity at "Disabled" or "Low" to reduce false alarm and save the battery power in noisy environments.
*Disabled: disabled PIR detection.
*Low: delay 7 seconds PIR detects a moving.
*Medium: delay 5 seconds PIR detects a moving.
*High: delay 1 second PIR detects a moving.

WI-FI CONNECTION

(13.) Smart device basic settings could set "Storage management, Flip screen, Environmental model, PIR detection, Sleep time, Power frequency, LED indicator, Device name" Could check the information of "Device name, Device ID, Model, FW version, Manufacturer, Check for the FW updates."

WI-FI CONNECTION

(14.) Turn on/off the speaker

WI-FI CONNECTION

(15.) Screenshot

WI-FI CONNECTION

(16.) Playback switch 'Micro SD memory' and 'Cloud storage'

WI-FI CONNECTION

(17.) Take a video for the live view

WI-FI CONNECTION

(18.) Microphone - Speak to the smart device side.

WI-FI CONNECTION

(19.) Check "my account" name and change password;

WI-FI CONNECTION

(20.) Check and purchase the Cloud storage;

WI-FI CONNECTION

(21.) Check and purchase the AI Cloud Facial Recognition;

WI-FI CONNECTION

(22.) Check and add my friends list and permission;

WI-FI CONNECTION

(23.) Set the default voice and resolution for the devices;

WI-FI CONNECTION

(24.) Check the App version.

WI-FI CONNECTION

(25.) Account and value-added account management

WI-FI CONNECTION

(26.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(27.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(28.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(29.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(30.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(31.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(32.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(33.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(34.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(35.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(36.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(37.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(38.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(39.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(40.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(41.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(42.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(43.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(44.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(45.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(46.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(47.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(48.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(49.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(50.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(51.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(52.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(53.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(54.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(55.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(56.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(57.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(58.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(59.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(60.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(61.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(62.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(63.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(64.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(65.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(66.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(67.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(68.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(69.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(70.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(71.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(72.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

WI-FI CONNECTION

(73.) Choose the desired date to check all videos from the cloud.

WI-FI CONNECTION

(74.) Click the "Calendar" icon on the right top corner, then choose the date to playback the videos from cloud storage.

