 
 


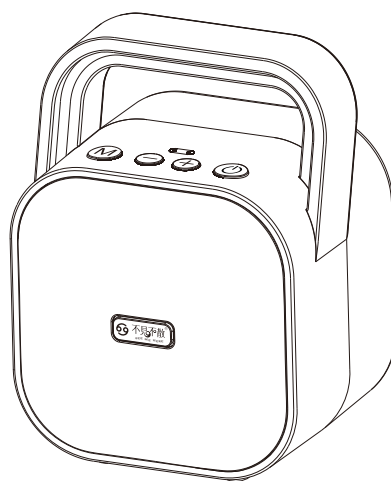

使用说明书
USER MANUAL

FCC ID: 2AXOX-SPRSPK

 
English

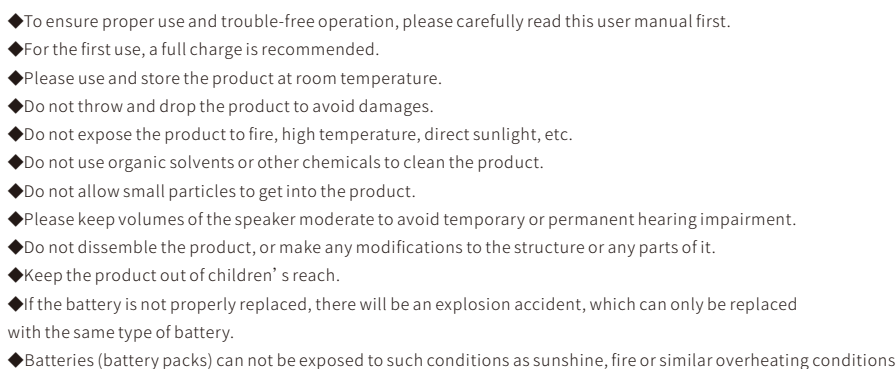


English



English

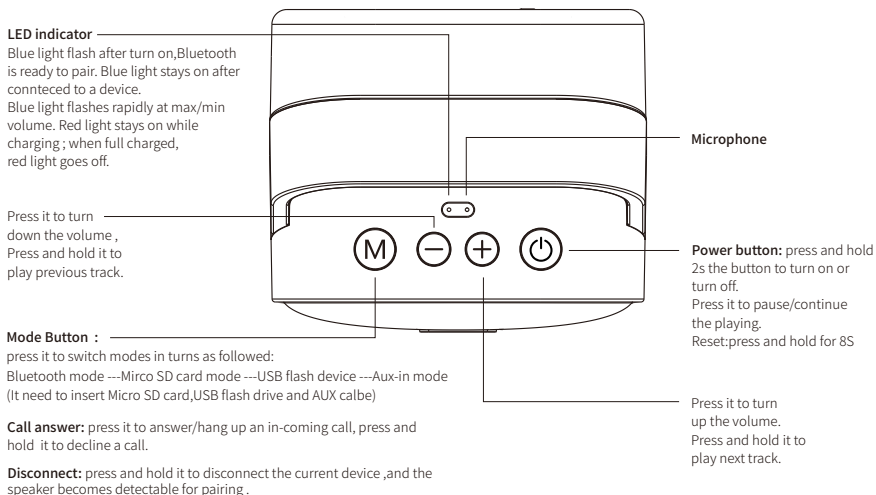

English

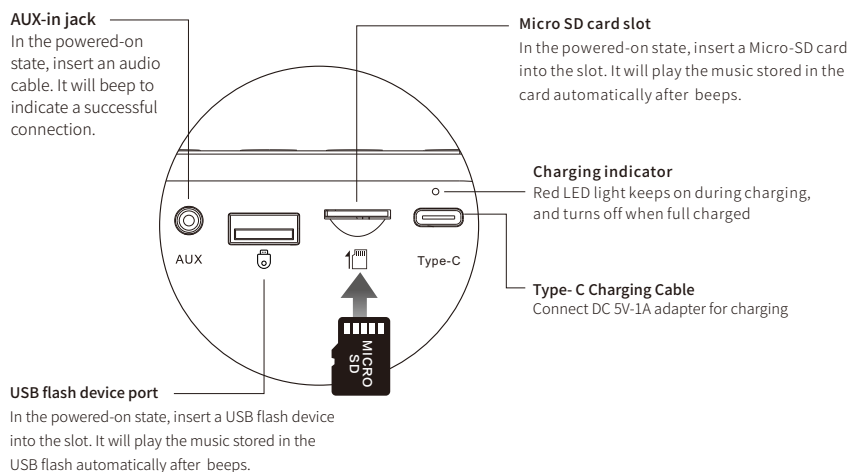 

English

If you want to pair the speaker with another device ,press and hold the Mode button to disconnect the current device and the speaker becomes detectable,press power button to reconnect.



1. When two speakers connect for the first time, press "+" to enter TWS mode. After TWS paired, master speaker indicator keeps flickering while the slave one keeps on.
2. If two speakers TWS paired successfully, they will auto reconnect next time.
3. When TWS paired successfully, blue light of the slave-speaker will keep on. You will see the status of the speakers from the master speaker.
4. When TWS paired successfully, operate either of the speakers, the other will have the same operation simultaneously.

English

[illegible]

Product size: 169.5×125×107mm
Product net weight: 850g±10g (include Built-in lithium battery)

English

FAQ	Solutions
Not able to connect your device	1. Restart the speaker and try again 2.If your device requires Pin code, please enter 0000.
Keeps cutting out when playing	Please ensure the speaker is within the operating range and there is nothing between the speaker and the device.
Not able to play the music in Micro SD card	1. Please ensure the formats of the Micro SD card is FAT32 . 2. Please ensure the formats of the music files are MP3, WMA, WAV, APE, FLAC
No sound when playing	1. Please adjust the volume of the speaker . 2. Please check if the speaker is paused.
No able to turn on	Please try to charge the speaker or mute.
No sound in AUX-In mode	1. Check if the audio cable connected 2. Check if audio port is damaged
Not play with USB flash drive	1. Check if switch to USB play mode 2. Check if USB flash drive damaged 3. Check if it is transmitting data with PC