

# **YYSWIE**

CT1001 Tablet



## **USER MANUAL**

# Content

|                                        |    |
|----------------------------------------|----|
| 1 Attention                            | 02 |
| 2 Main Function                        | 02 |
| 3 Appearance and Button                | 03 |
| 4 First Use                            | 03 |
| 4.1 Battery Management and Charging    | 03 |
| 4.2 Connection with a PC               | 04 |
| 5 Equipment Operation Interface        | 04 |
| 5.1 Main interface describe            | 04 |
| 5.2 Status Bar Description             | 05 |
| 5.3 Using the Touch Panel              | 05 |
| 6 Equipment Basic Setting              | 05 |
| 6.1 Sound Volume                       | 05 |
| 6.2 Application                        | 06 |
| 6.3 Reset Option                       | 06 |
| 6.4 Storage                            | 07 |
| 6.5 Language & Keyboard                | 08 |
| 6.6 Data & Time Settings               | 08 |
| 6.7 About Tablet                       | 08 |
| 7 File Manager                         | 09 |
| 8 Problem Solutions                    | 10 |
| 8.1 Device can't be turned on          | 10 |
| 8.2 Device shuts down after startup    | 10 |
| 8.3 Headset can't produce sound        | 10 |
| 8.4 Unable to copy files or play music | 10 |
| 8.5 Forget the password                | 10 |

# 1.Attention

- Please do not keep the device in high temperature, moisture, or very dusty places.
- Avoid dropping or violently colliding with the device, as this could cause abnormal or physical damage to the display screen.
- Please charge the device under the following conditions:
  - A. When the battery power icon shows no power.
  - B. When the system automatically shuts off and needs to be restarted soon after.
  - C. When the operation buttons are unresponsive.
  - D. When a red icon appears in the top right corner of the device.
- When the device is in the process of formatting or uploading and downloading files, please do not suddenly disconnect, as this could cause application errors.
- Do not disassemble the product, and refrain from using alcohol, thinner, or benzene to clean the device.
- Only use the pre-installed software on the machine. For additional software support, please contact us.

# 2.Main Function

- Operation Systems: Android™ 13
- Processor: A523
- CPU Processor Speed: 64-Bit Octa 4 Cortex-A73 + 4 Cortex-A53 2.0GHz
- EMMC: 64GB
- RAM: 4GB
- WI-FI Function: 802.11b/g/n/ac/ax
- Bluetooth: 5.2
- TF Card: up to 512GB
- Display Screen: 10.1inch Capacitive Multi-touch
- Resolution: 1280\*800 IPS
- Dual Camera: Front: 5.0M Pixels; Rear: 8.0M Pixels
- Battery and Capacity: Rechargeable built-in type polymer battery, 3.8 V/7000mAh
- USB: 2.0
- G-sensor 3D
- Support Speaker
- Record: Built-in microphone
- MIC Phone: Input
- Video:DIVX4/DIVX5/DIVX6/DIVXHD/XVID/MPEG-4 SP/ASP/MPEG2/HEVC/Sorenson H.263/H.263/VP9/H.264
- Audio: WAV, MP3, MP2, AAC, AMRNB, AMR-WB, MIDI, Vorbis, APE, AAC-plus v1, AAC-plus v2, FLAC, WMA, ADPCM
- Pictures: JPG, JPEG, BMP, and PNG
- Recording Function: Format supported 3ga Format
- 3G Function: Support external 3G USB-DONGLE wireless network
- E-book Function: Format Supported: TXT,EPUB,PDF,WORD,EXCEL,PPT
- Working Temperature: -5~40°C
- Languages:Chinese, English, Japanese , French , German , Spanish , Russian, etc.

The company reserves the right to make improvements to the product. Product specifications and design are subject to change, and the information is subject to updates without prior notice.

### 3.Appearance and Button:



- |                  |                  |
|------------------|------------------|
| 1 Power Button   | 5 Rear Camera    |
| 2 TYPE-C         | 6 Reset Button   |
| 3 Volume Buttons | 7 Headphone Jack |
| 4 TF Card        | 8 Speakers       |

### 4.First Use

#### 4.1 Battery Management and Charging

 
Before the first use, please ensure to charge the device's battery to 100%. For the first two charging cycles, it is recommended to keep the device charging for approximately 6 hours. After that, you can charge it for around 4 hours or until it is fully charged.

Note: This tablet utilizes a built-in polymer battery. When charging, please use a standard adapter (Power Supply Adaptor- DC 5V 3A; Adaptor Technical Data - Input: AC100-240V, 50/60Hz, DC5V 3A).

## 4.2 Connection with a PC

To connect the device to a PC, please follow these steps:

- Turn on the device.
- Use a USB cable to connect it to the PC.
- On the notification bar, click on the USB connection window.
- Lastly, enable "Transfer Files" to establish a connection with the PC.
- In the loading mode, you can copy and delete files both on the device and on the memory card.

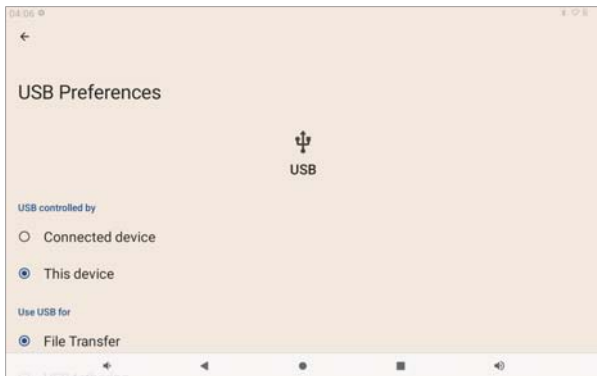

# 5. Equipment Operation Interface

## 5.1 Main Interface Description

Upon startup, you will enter the main interface. In the main interface, you have the ability to manage software icons by performing the following actions:

- To rearrange icons: Long-press an icon for 3 seconds. Once the icon enlarges, you can drag it to any desired location on the interface.
- To delete icons: Long-press an icon for 3 seconds, then drag it to the Recycle Bin icon. When the Recycle Bin icon turns red, release the icon, and the respective app will be deleted.
- To change the wallpaper: Go to "Settings" > "Display" > "Wallpapers" and select the desired wallpaper from the available options.



### 5.2 Status Bar Description

The top right of the screen displays various information on the status bar, including battery status, battery charge icons, current time, and access to the Settings Menu.

### 5.3 Using the Touch Panel

 
Regardless of the interface you are in, you can navigate back to the main screen by pressing the soft key  located in the bottom middle corner of the main screen.

In different applications, tapping the back soft key  in the bottom middle corner of the touch screen allows you to return to the previous interface within that specific application.

## 6.Equipment Basic Setting

Click the setting icons  to enter the setting Interfaces.

### 6.1 Sound Volume

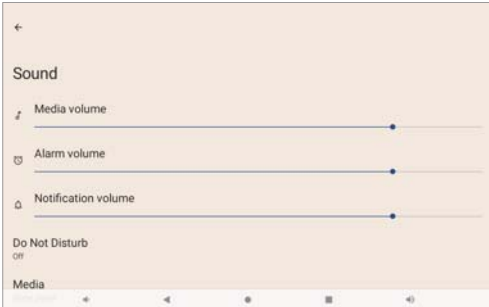

## 6.2 Application

Manage Applications:

 
- A. Enter "Settings" > "Apps & Notifications," and you will see a list of apps.
- B. Select the app you want to uninstall, and it will take you to the following interface.
- C. Click on "Uninstall," and you will be able to delete the application.



## 6.3 Reset Options

Please navigate to the following path: "Settings" > "System" > "Reset Options" > "Erase all data (factory reset)" > "Erase all data".



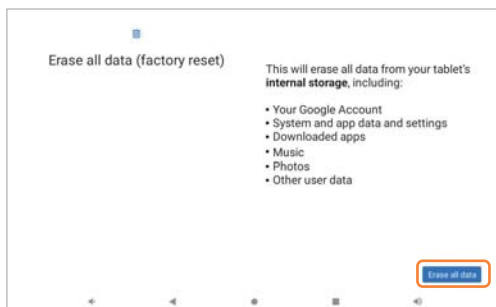

#### 6.4 Storage

Remove the TF card to view the available storage space.

**Note:** Please tap on the "Delete TF card" option to safely remove the TF card.



## 6.5 Language & Keyboard

 
Set preferred language and keyboards in this section.

Select Language: 54 kinds of national languages are available.



## 6.6 Date & Time Settings

Set the date, time, time zone, and date format in this section.

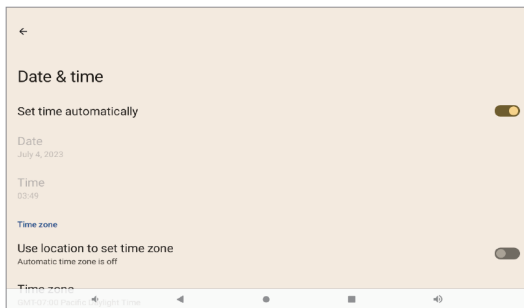

## 6.7 About Tablet

 
To access information about the tablet, go to "Settings" > "System" > "About Tablet".



## 7.File Manager

This tablet supports Android apps from third-party sources. Most apps can be installed from the internet and can be copied to the NAND FLASH or TF card.

Open the "Files Go" app to check and manage apps, images, videos, audio, and documents.

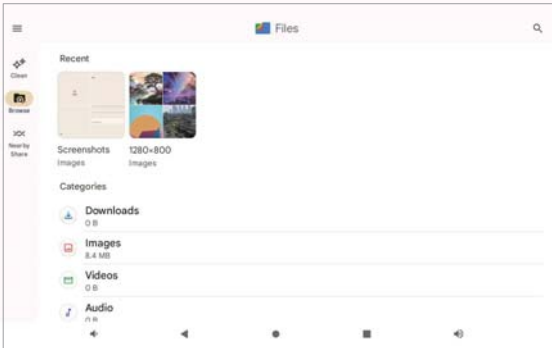

## 8. Problem Solutions

### 8.1 Device can't be turned on

- A. Check the battery power.
- B. Connect the adaptor first, then check again.
- C. Press the "reset" key first, then press the "power" key.
- D. If the device still can't be turned on after charging, please contact the supplier.

### 8.2 Device shuts down after startup

If the device shuts down after the screen or the Power On Image appears, it indicates low power. Please charge the device.

### 8.3 Headset can't produce sound

- A. Please check if the volume is set to 0.
- B. Check if the music file is damaged. Try playing another audio file.
- C. Damaged files may result in serious noise or popping sounds.

### 8.4 Unable to copy files or play music

- A. Please check if the computer and device are correctly connected.
- B. Check if the memory storage space is full.
- C. Check if the USB cable is in good condition.
- D. Ensure that the USB connection is not disconnected.

### 8.5 Forgot the password

- A. Hold down the POWER and Volume "-" keys simultaneously for 5-8 seconds.
- B. Release the volume key when the device enters factory mode, then continue using the volume reduction key to select "Clear eMMC," and confirm with the power key.
- C. Wait for approximately one minute for the welcome screen to appear, and then re-enter the Android system.

## Warning

Any changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- a. This device must not cause interference.
- b. This device must accept any interference, including interference that may cause undesired operation of the device.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, as outlined in Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can emit radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correcting the interference using one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the distance between the equipment and the receiver.
  - Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
  - Seek assistance from the dealer or an experienced radio/TV technician.
- The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

#### Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model device is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this model has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory.

WARRANTY CARD

Model Name \_\_\_\_\_

Product Serial No. \_\_\_\_\_

Date of Purchase

dd

mm

yy

Customer's Details

Name \_\_\_\_\_

Address in Full \_\_\_\_\_

Telephone No. \_\_\_\_\_

Dealer Name & Address \_\_\_\_\_

Customer's Signature & Date

Dealer's signature with rubber stamp



Designed by yyswie,Assembled in PRC

CONTACT INFORMATION

✉ [reenex803@outlook.com](mailto:reenex803@outlook.com)

🌐 [www.yyswie.com](http://www.yyswie.com)

The emissions are maintained within the band of operation under all conditions of normal operation