 



1:18 RC VEHICLE INSTRUCTIONS

Driving Tips & transmitter

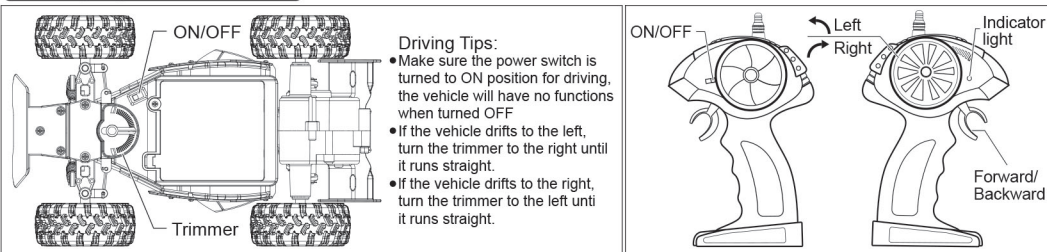


Battery Installation

 1. Open the vehicle's battery cover. A: install the battery pack and connect to the vehicle.
2. B: install 4X1.5V "AA" batteries with correct polarity as shown inside the battery compartment (NOT INCLUDED).
3. Open the transmitter's battery cover, install 2X1.5V "AA" batteries with correct polarity as shown inside the battery compartment (NOT INCLUDED).
4. Replace the battery cover and tighten screw with a screwdriver.

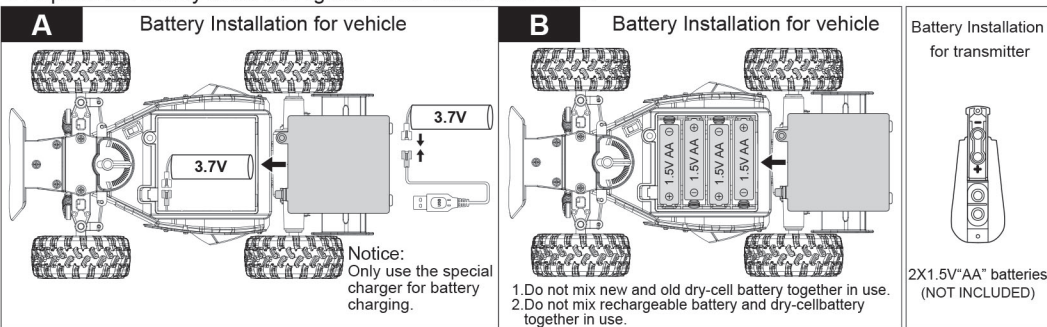

Operation manual of remote control

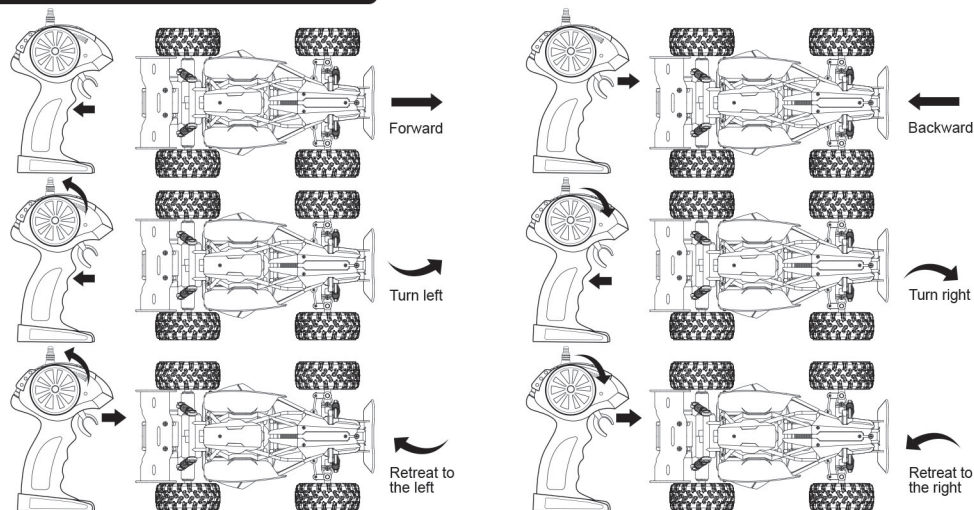 

bind the transmitter to the receiver:
First turn on the switch of the car, and then turn on the remote control switch, the remote control indicator light flashes, start the frequency alignment, When the light stops flickering, complete the frequency alignment. It can be manipulated.
Switch the power OFF on the transmitter and vehicle after use, prevent power consumption.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.