

Charging the Battery


⚠ WARNING

ONLY AN ADULT CAN CHARGE
AND RECHARGE THE BATTERY!

⚠ WARNING

This product comes with Charging Protection: when charging, all functions will be cut off! Only an adult can charge and recharge the battery!

- The POWER SWITCH must be turned in OFF position when charging.
- Before the first use, you should charge the battery for 4-6 hours. Do not recharge the battery for more than 10 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.
- After each use or once a month minimum recharge time as 8 to 12 hours, less than 20 hours at most.
- Use the only rechargeable battery and charger supplied with your vehicle. NEVER substitute the battery or the charger with another brand. Using another battery or charger may cause a fire or explosion.
- Do not use the battery or charger for any other product.

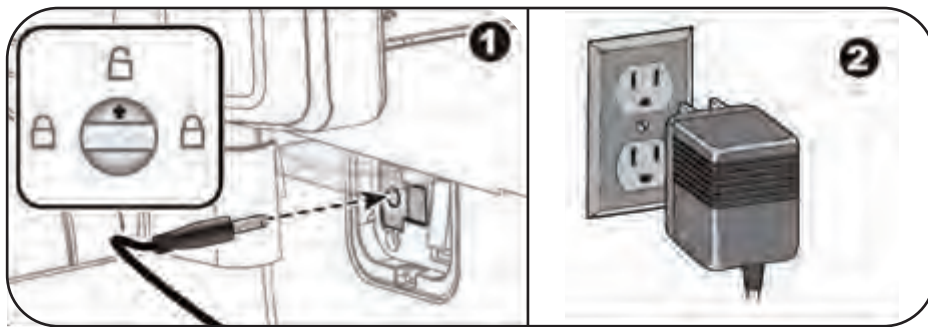

The input socket is located below the seat, turn the lock to unlock position to open the cover.

1. Plug the charger port into the input socket.
2. Plug the charger plug into a wall outlet. The battery will begin charging.

⚠ Battery Information

- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

Inspect wires and connections of the vehicle periodically.

Troubleshooting

PROBLEM	POSSIBLE REASON	SOLUTION
Vehicle does not run	Battery low on power	Recharge battery.
	Thermal fuse has tripped	Reset fuse, see <Fuse>.
	Battery connector or wires are loose	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, contact customer service.
	Battery is dead	Replace battery, contact customer service.
	Electrical system is damaged	Contact customer service.
	Motor is damaged	Contact customer service.
Vehicle does not run very long	Battery is under charged	Check that the battery connectors are firmly plugged into each other when recharging.
	Battery is old	Replace battery, contact customer service.
Vehicle runs sluggishly	Battery low on power	Recharge battery, contact customer service.
	Battery is old	Replace battery, contact customer service.
	Vehicle is overload	Reduce weight on vehicle.
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions, see <Warning>.
Vehicle needs a push to go forward	Poor contact of wires or Connectors	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, contact customer service.
	“Dead Spot” on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. Contact customer service.
Difficult shifting from forward to reverse or vice-versa	Attempting to shift while the vehicle is in motion	Completely stop the vehicle and shift, see <Function & Operation>.
Loud grinding or clicking noises coming from motor or gear box	Motor or gears are damaged	Contact customer service.

Troubleshooting

PROBLEM	POSSIBLE REASON	SOLUTION
Battery will not recharge	Battery connector or adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	Check that the battery charger is plugged into a working wall outlet.
	Charger is not working	Contact customer service.
Charger feels warm when recharging	This is normal and not a cause for concern	

Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem, contact customer service.

Battery Fuse

The battery features a thermal fuse with a reset fuse that will automatically trip and cut all power to the vehicle if the motor, electric system or battery is overloaded. The fuse will reset and power will be restored after the unit is turned OFF for 20 seconds and then turned ON again. If the thermal fuse trips repeatedly during normal use, the vehicle may need repair. Contact your distributor please.

To avoid losing power, follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquids to come in contact with the battery or other electric components.
- Do not tamper with the electric system. Doing so may create a short, causing the fuse to trip.

Our products are suitable for ASTM F963; GB6675; EN71 and EN62115 standard.

Battery Disposal

- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.
- Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.



WARNING

WARNING

- It should be used under adult guidance.
- Parents should ensure that children have taken the safety measures before use.
- The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third party.
- Products should be assembled by an adult.
- Protective equipment should be worn.
- Not to be used in traffic.
- This toy has no brake.
- Not suitable for children under 3 years. Choking hazard- small parts. In unassembled state, contains potentially hazardous small parts. Please keep out of the reach of small children.
- Pay attention to the potential hazards of using the toy in areas other than private grounds.

WARNING

Prevent Injuries and Deaths

- Direct adult supervision required
- Never ride at night
- Keep children within safe riding areas.

These areas must be:

- Away from swimming pools and other bodies of water to prevent drownings
- Generally level to prevent tip overs
- Away from steps, steep inclines, cars, roads and alleys

Riding rules:

Make sure children know and follow these rules for safe driving and riding.

- Always sit on the seat
- Always wear shoes
- Only 1 (one) rider at a time

The battery is not replaceable

 **WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than 1 rider.

WARNING!

The toy is to be assembled by an adult.

WARNING

General safety:

- Where products need assembly they must always be assembled by an adult. As a parent/carer, it is also your responsibility to check the tightness of screws, nuts and bolts before each use and if necessary, adjust and re-tighten.
- This product may contain small parts and it is your responsibility as a parent/carer to exclude children from the area during assembly due to small parts.
- Remove protective material and poly bags and dispose of them responsibly before giving the assembled product to your child.
- Remember to retain these instructions for future reference.

Positioning:

- Do not allow your child to ride at night or in poor light conditions.
- Do not let your child play near steps, swimming pools/ spas or other sources of water, on slopes, on streets or around cars, even if parked on your own property.
- It is prohibited to drive/use this product on the public roads.
- This product is designed to be used on smooth surfaces and should not be used on soft ground or in the rain or snow. May not be suitable for carpet driving.

Before Use:

- **Very Important! You Must Charge The Battery Fully Before The First Use.**
- Dispose of all packaging material responsibly before giving this product to your child.
- Check tightness of all components before giving this product to your child.

During Use:

- This product is only suitable for children 3 years and older.
- The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- The maximum rider weight capacity for this product is 30kg/66lbs. Overload may damage this product.
- Adult supervision is highly recommended when children play with wheeled toys. Please take care of your child.
- Do not allow the child to ride with bare feet or without suitable footwear.
- Ensure the child keeps clothing, hands, hair, fingers and feet away from moving parts.
- The use of protective gear including approved helmets, gloves and pad is recommended.
- Do not let any child touch the wheels or be near them when the car is moving .
- Store this product at room temperature; do not leave it outside or uncared for.
- Never let any child play with the battery or charger at any time, or let them charge the product.
- Do not use if product is faulty or damaged.
- Do not tamper with the battery or electrical parts inside the product.
- When the vehicle's driving load exceeds 30kg/66lbs, PU wheels may cause scratches and damage to hardwood floors.

WARNING

- **PREVENT FIRE AND ELECTRIC SHOCK:**

- Use the only rechargeable battery and charger supplied with your vehicle. NEVER substitute the battery or the charger with another brand. Using another battery or charger may cause a fire or explosion.
- Do not use the battery or charger for any other product. Overheating, fire explosion or explosion could occur.
- NEVER modify the electric circuit system. Tampering with the electric system may cause a shock, fire or explosion or may permanently damage the system.
- Do not allow direct contact between battery terminals. Fire or explosion can occur.
- Do not allow any type of liquid on the battery or its components.
- Do not charge near heat or flammable materials. Charge the battery in a well-ventilated area ONLY.
- Charge the battery in a dry area ONLY.
- Do not open the battery. Battery contains lead acid and other materials that are toxic and corrosive.
- Do not open the charger. Exposed wiring and circuitry inside case may cause electric shock. Only adults may handle or charge the battery. NEVER allow child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).
- Do not drop the battery. Permanent damage to the battery could occur or cause serious injury.
- Before charging the battery, check for wear or damage to the battery, charger, its supply cord and the connectors. DO NOT charge the battery if any damage to parts has occurred.
- Do not allow the battery to drain completely. Recharge the battery after each use or once a month if not used regularly.
- Do not charge battery upside down.
- Always secure the battery with the bracket. Battery can fall out and injure a child if vehicle tips over.
- A recommendation for adult supervision of young children.
- The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- It is prohibited to change the circuit or add other electric parts
- All circuit connections in the toy must be connected properly. Any wrong circuit connections could cause possible dangerous malfunctions, short-circuit, sudden equipment failure and other possible failures

Care & Maintenance

- Check your ride-on regularly and make sure there are no missing or loose parts.
- Check for any broken or cracked plastic parts.
- When not using for an extended period of time, cover the product and keep away from heat and/or any damp or wet weather. If product is not used for a long period of time you should disconnect the battery terminals, reconnect it, then fully charge the vehicle. Please make sure the battery is charged every three months to ensure normal use.
- Disconnect the battery wires if the toy will not be used for a long period of time.
- Clean the ride-on with a cloth and non-wax furniture polish to restore the plastic to a shine. Do not use abrasive cleaners.
- Do not wash the toy with a hose or immerse any parts in water.

Service

Do not return this product to the place of purchase. If your ride-on toy needs service, repairs or replacement parts, call:

Flybar, Inc. Customer Service

Phone: 1-800-764-6784

Email: info@flybar.com

For a complete list of replacement parts, please contact Flybar, Inc. Customer Service. To order parts, please have the model and serial number available.

FCC Information

⚠ WARNING

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

Warranty Limitations

Limitation of warranties and other warranty terms:

Any implied warranties, including implied warranties of the merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written warranty. Some states do not allow limitations as the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Neither Flybar, Inc. nor the dealer selling this product authorized any person to create for it any other warranty, obligation or liability in connection with this product.

Limited Warranty Terms

Six-Month Limited Warranty on 12-Volt Ride-On Product

Six-Month Limited Warranty on Battery

Flybar, Inc. warrants this product to the original retail purchaser as follows: The ride-on product (except for the battery) is warranted against defective materials or workmanship for six months from the date of original purchase. The battery is warranted against defective materials or workmanship for six months from the date of original purchase. An original receipt is required to validate your warranty. Flybar, Inc. will, at its option, provide replacement parts or replace this product. Flybar, Inc. reserves the right to substitute if the part or model has been discontinued. To make a claim under this warranty you must contact us directly. Proof of purchase is required, and shipping/transportation charges are the responsibility of the consumer.

What does this Limited Warranty cover?

This Warranty covers all parts of the electric ride-on toy to be free from defects in workmanship and materials. This Warranty is only effective if:

- The ride-on toy is used under normal conditions for its intended purposes, by a person that properly fits and is capable of controlling the vehicle.
- The ride-on toy receives all necessary maintenance and adjustments.

What is not covered by this Limited Warranty?

This Warranty does not include labor and transportation charges. You, the original purchaser, will be responsible for labor or transportation charges associated with the repair or replacement of any parts found to be ineligible for warranty coverage. This Warranty does not cover any damage caused by crash, collision, misuse, abuse, neglect, improper assembly, improper maintenance, lack of maintenance, alteration, or any similar damage to the ride-on toy. For personal use only. Not for commercial use.

When is this Warranty void?

This Warranty will be void if the ride-on product is ever:

- Installed with a motor or modified in any other way.
- Used in a manner contrary to the instructions in the manual included with this product.
- Flybar, Inc. will not be liable for incidental or consequential loss or damage, due directly or indirectly from use of this product.

How do you make a claim under this Limited Warranty?

Warranty claims should be submitted via Flybar's online portal at www.flybar.com/pages/contact-us or via email at info@flybar.com. Please have your proof of purchase available before calling to validate your claim.

Limitation of Damages

The warranty and remedies as set forth are exclusive and in lieu of all others, oral or written, expressed or implied. In no event will Flybar, Inc. or the dealer selling this product be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product. Some states do not allow limitations as the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

**FOR ANY QUESTIONS, REPLACEMENT PARTS, OR ISSUES,
PLEASE CONTACT:**

FLYBAR CUSTOMER SUPPORT

Email: info@flybar.com **Phone:** 1-800-764-6784
Flybar, Inc. • 220 Centennial Ave, Piscataway, NJ 08854
www.flybar.com

© 2026 Flybar, Inc. | Made in China

LET'S CONNECT!



INSTAGRAM: @FLYBARINC
FACEBOOK: @FLYBAR
PINTEREST: @FLYBAR,INC
TIKTOK: @FLYBARINC

SHOP: FLYBAR.COM

