

# User Manual

Wireless charging of mobile phone 15W Max

20W Max Input/Output

Press once(ON)

Press twice(OFF)

LED power display

Smart Phones with MagSafe or Magnetic Case

With metal bracket

Non-Magnetic cases

Magnets

Credit Cards

Metal Cases

If the phone itself does not support the magnetic user, please use the magnetic case or wear a magnetic ring applicable (please note that the magnetic case and magnetic ring must be aligned with the charging receiver of the phone, other wise it will not be able to charge the phone and the phone will be hot.)

Qi2 C E FCC RoHS    
Made in China

- Battery Capacity: 10000mAh(3.85V/38.5Wh)
- Input: 5V=3A 9V=2.22A 12V=1.67A(20W)
- Output Wireless: 15W Max
- Type C: 5V=3A 9V=2.22A 12V=1.67A(20W)

- For Mobile Phone  
iPhone 17 Series/iPhone 16 Series/iPhone 15 Series  
iPhone 14 Series/iPhone 13 Series/iPhone 12 Series

**Please use a magnetic case to charge your phone**

●AirPods Pro 2nd Generation/AirPods 4/AirPods 3/  
AirPods Pro MagSafe/AirPods Pro/AirPods 2nd Generation

**and all devices that support C port charging**

- Make sure to disconnect the device from power when cleaning.
- It is normal and safe to hear a humming noise when very close to the charger. It means that this wireless charger is adjusting it's temperature to achieve a more efficient charging speed.
- If your device can not be fully charged, this may due to high environmental temperature, please recharge after the temperature is lowered. Our charger has temperature control to safeguard your device when charging.

- Do not store device in high-temperature environment, including heat caused by intense sunlight or other forms of heat.
- Do not place device in fire or other excessively hot environments. Exposure to fire or temperature above 212°F(100C) may cause explosion.
- Do not use the wireless charger in excess of its output rating. Over loading outputs above rating may result in a risk of fire or injury to persons.
- Do not expose the wireless charger to rain or snow.
- Do not modify, repair or disassemble the unity, if so, please contact the manufacturer. Switch off the wireless charger when not in use. The wireless charger will automatically switch off when disconnected from its wall charger.