 


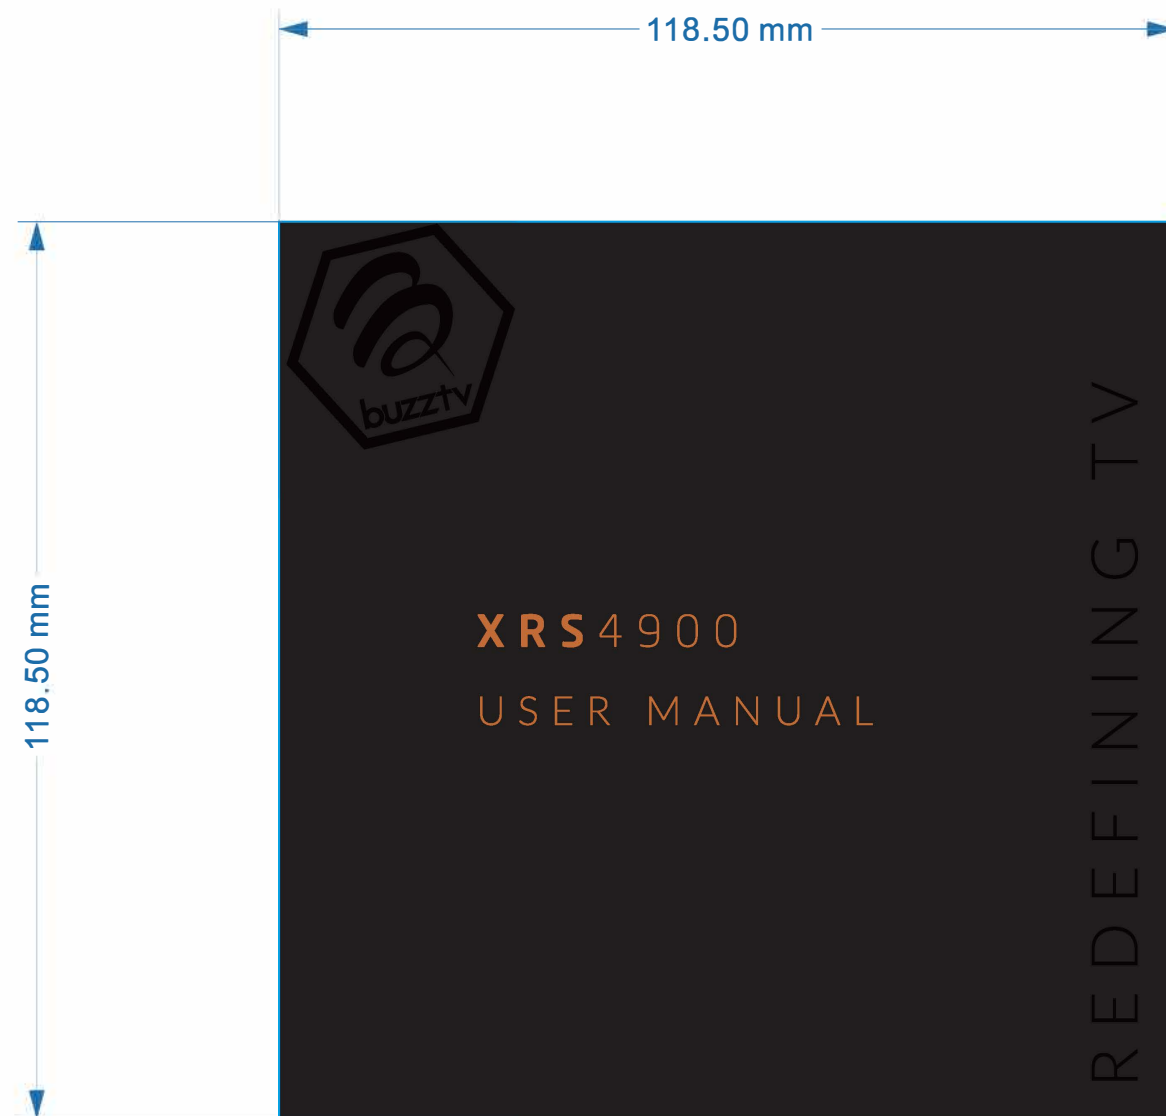

1 PACKAGE CONTENTS

 


2 CONNECTION

AV Connection

a. Connect the AV cable of the 3 color (red/ white/yellow) to the XRS4900's AV output interface, and the other end to the TV's AV input interface. Connection can be made by colour.

b. Power on the XRS4900. Set the TV video mode to AV input.

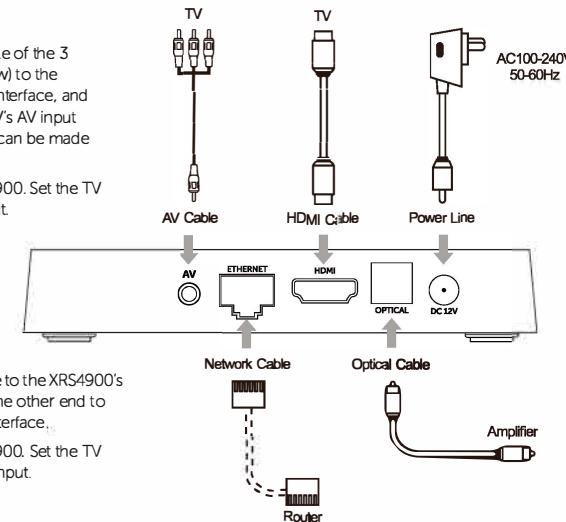

HDTV Connection

a. Connect HDMI cable to the XRS4900's output interface, and the other end to the TV's HDMI input interface.

b. Power on the XRS4900. Set the TV video mode to HDTV input.

HDMI The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

3 INSTALLATION STEPS


1. Connect XRS4900 TV Box to the power supply.
2. Connect XRS4900 to your TV with an HDMI Cable or AV Cable.
3. For a wired connection, plug-in an Ethernet cable from the TV Box to your modem or router. For wireless, choose your Wi-Fi network and input your Wi-Fi password.

4 TROUBLESHOOTING

Warning: Under no circumstances should you try to repair the XRS4900 by yourself, as this will invalidate the warranty. Do not open it as there is a risk electrical shock. If any fault occurs, please first check with this troubleshooting checklist. If you are unable to remedy a problem by following this guide, contact your dealer for help.

Problem	Solution
No Power	• Check if the power adaptor is properly connected to the power and the TV box • Press the power on the remote controller to turn on the power
No Picture	• Re-Connect the HDTV cable or AV cable • Check if the TV is powered on
No sound or distorted sound	• Adjust the volume • Check that the speakers are connected correctly
The TV box does not respond to the remote control	• Aim the remote control directly at the sensor on the front of the TV box • Reduce the distance to the TV box • Replace batteries in the remote control • Possibility of system crash, disconnect and reconnect the power supply
No sound during playback	• The audio codec may not be supported by the TV box • Check the volume
The contents of the USB or flash drive cannot be read	• The USB or flash drive format is not compatible with the box • If one of the USB can not be read, please turn off the TV box for 30 seconds and restart the TV box
Slow operation of the USB flash drive	• Large file size or high resolution USB flash drive takes longer time to read and display on the TV screen
The TV screen is blank and the player LED is blinking	• Turn off the TV box, wait 30 seconds and turn on again • Check if HDTV connection is correct or try changing the HDTV cable

 5 REMOTE + BUTTON LIST

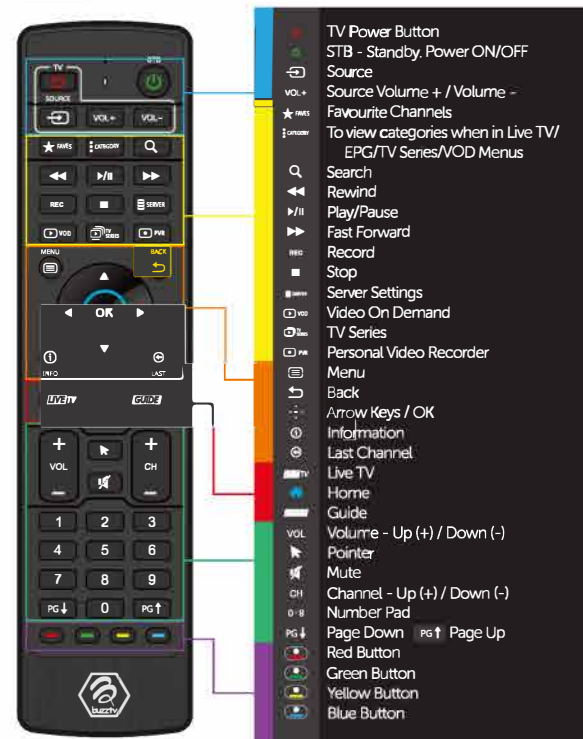

Learning Remote Feature

 
Learning methods please see as below:

1. Long Press the "TV Power" + "Source" keys on the RCU at the same time for 3 seconds until the Blue LED turns solid Blue. The RCU has now entered learning mode.
2. Press the key on the RCU to be programmed, for example "TV Power" Key, the Blue LED will start blinking.
3. Aim the TV RCU that you want to learn from towards the front of the RCU (Distance less than 3cm). Press the button on the TV RCU that you want the BT-100 RCU remote to learn from. If the BT-100 RCU is programmed correctly the Blue LED on the BT-100 RCU will blink 3 times then turn solid Blue. This will indicate that you have programmed it properly.
4. Repeat Steps 2-3 for the "Source" button.
5. Short press "TV Power" key + "Source" key at the same time on the BT-100 RCU to exit learning remote.

7 SATA DRIVE (Optional)


Installing Sata Drive:

1. Remove bottom plate (A)
2. Orientate the 2.5 Sata connectors (B) to the corresponding connector on the XRS4900 and attach
3. Replace bottom plate

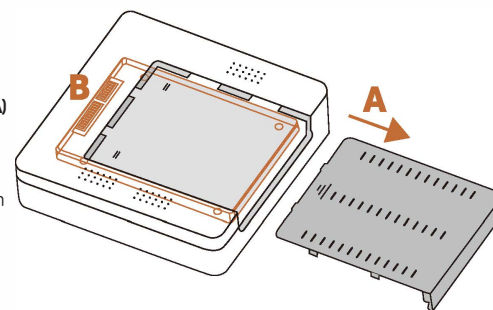

7 LIGHTS & INDICATORS

 Lighting on Front of XRS4900 indicates the following:



8 PAIRING RCU (REMOTE) AND XRS4900

How to put RCU into Pairing Mode for BT

Press "OK" + "VOL -" for 3 seconds until Red LED "breathing on". RCU enters pairing mode. Device name is BuzzTV BT-100. You will need to have the STB searching for BT in order to fully pair the remote.

How to turn the Back lit Feature On/Off

Long press the blue button on the bottom right of the remote for 5+ seconds. This will turn the back lit feature on/off (Illuminates for approximately 5 seconds when on).

9 WARRANTY INFORMATION

For warranty information and registration, please visit:
www.buzztv.com/register

www.buzztv.com/support
cs@buzztv.com

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.