

THEGARDEN 万華鏡.

All-in-one HIFI-grade true wireless noise-canceling headphones

 
— User Manual —

MOONDROP The Garden

Package list

01


(The pictures are for reference only, please refer to the actual products.)



Charging case*1



 Earbuds*1pair



Protective Case *1



Charging cable *1



Manual*1



Service card*1



Eartips*3 pair



 
 
 
 
Quick guidance*1

 
General introduction

02

Precautions:

- To prolong the life of this product, it's advisable to minimize the frequency of opening and closing the charging lid during regular use. Before you use the earphones, please make sure that the Bluetooth on your mobile phone is enabled before taking them out of the charging case.
- Regularly clean the charging contacts on the earphones and inside the charging case. This will help prevent issues with disconnection or charging due to blockages or surface oxidation.





Turn on:

The earphones wake up automatically when removed from the charging case.

* To turn on the earphones manually when they are outside the charging case, press and hold both touch panels for 2 seconds.

Turn Off:

The earphones will begin charging when placed back in the charging case, and will turn off once fully charged. When the earphones are charging, the orange indicator on the charging case will light up. It will turn off after 5 seconds. Once the earphones are fully charged, the white indicator will turn on and then disappear after 5 seconds.

* The earphones will automatically turn off if there is no connected device for more than 3 minutes or if the battery voltage drops below 3.0V.

Pairing instructions:

The earphones automatically enter pairing mode when turned on for the first time.

To connect, select "MOONDROP the Garden" from the Bluetooth settings of your device while it is in search mode. Or long press the charging case button for 3s to enter the pairing mode, The white indicator will flash slowly, and if the pairing is successful, the orange indicator will flash once. Please follow the prompts

 
Connect a new device:

 
 
This product supports dual-device connection. To enable this function, please turn it on in the Function Settings of APP.

Once activated, it will automatically turn off after 5 minutes if the second device remains disconnected. (You can adjust this timeout setting in the app, with options to disable it or set it to 5, 10, 30, or 60 minutes.)

When two devices are connected, you can manually disconnect all connected devices by long-pressing the earphone touch panel for 3 seconds. Alternatively, you can disconnect a specific device through the app or by adjusting the Bluetooth settings on your device.

Note that dual-device connectivity cannot be used in LDAC/LHDC modes. This feature will be automatically disabled when LDAC/LHDC is enabled. Once you disable LDAC/LHDC, please remember to manually turn on dual-device connectivity.





Turn on:

The earphones wake up automatically when removed from the charging case.

* To turn on the earphones manually when they are outside the charging case, press and hold both touch panels for 2 seconds.

Turn Off:

The earphones will begin charging when placed back in the charging case, and will turn off once fully charged. When the earphones are charging, the orange indicator on the charging case will light up. It will turn off after 5 seconds. Once the earphones are fully charged, the white indicator will turn on and then disappear after 5 seconds.

* The earphones will automatically turn off if there is no connected device for more than 3 minutes or if the battery voltage drops below 3.0V.

Pairing instructions:

The earphones automatically enter pairing mode when turned on for the first time.

To connect, select "MOONDROP the Garden" from the Bluetooth settings of your device while it is in search mode. Or long press the charging case button for 3s to enter the pairing mode, The white indicator will flash slowly, and if the pairing is successful, the orange indicator will flash once. Please follow the prompts

Connect a new device:

This product supports dual-device connection. To enable this function, please turn it on in the Function Settings of APP.

Once activated, it will automatically turn off after 5 minutes if the second device remains disconnected. (You can adjust this timeout setting in the app, with options to disable it or set it to 5, 10, 30, or 60 minutes.)

When two devices are connected, you can manually disconnect all connected devices by long-pressing the earphone touch panel for 3 seconds. Alternatively, you can disconnect a specific device through the app or by adjusting the Bluetooth settings on your device.

Note that dual-device connectivity cannot be used in LDAC/LHDC modes. This feature will be automatically disabled when LDAC/LHDC is enabled. Once you disable LDAC/LHDC, please remember to manually turn on dual-device connectivity.

Automatic Reconnection

- The earbuds will automatically reconnect the last paired device when taken it out from the charging case.
- The earbuds will be automatically reconnected when it steps in the effective working distance within 3 minutes.
- When two devices are connected, and device A is taken out of the connection range with device B, you will need to click the connection record to reconnect when you re-enter the working range of device B after more than 3 minutes

Restore factory settings

If the charging case lid is open and the earphones are placed inside, you can restore the earphone to factory settings by long-pressing the charging case button for 8 seconds. Three indicators will flash to confirm the reset; while long-press the left and right earphone touch areas simultaneously for 8 seconds to clear the pairing information and restore the earphones to factory settings, you'll hear the prompt of "Ding".

 
Noise-canceling switch :

Long-press left/right for 1s to switch this mode

Music operation

Play/pause: click the left/right earbud

Previous: Double-click the left earbud, Next: Double-click the right earbud

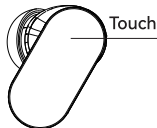

Game Mode:

Click the left/right earbud for 4 times to switch this mode

Call operation

Answer: single-press the left/right earbud

Decline: Press and hold left/right earbud for 1.5s

End: single-press the left/right earbud

Call transfer: single-press the left/right earbud, hold the current call and answer the new call

Call switching: Double-press the left/right earbud

Voice assistant: Triple-press the left/right earbud to activate, single-press to exit

* The assistant might not be compatible with some smartphones.

This product has the default prompt sound effect. For MOONDROP Yuki prompt, please switch through the MOONDROP APP. The prompt and functions are as follows:

开机	Power on	游戏模式	Game mode
关机	Power off	音乐模式	Music mode
进入连接状态	Dew-dew-dew	降噪模式	Sh
连接成功	Connected	通透模式	Heh!
断开连接	Disconnected	普通模式	Eh?

Battery indication

This product supports both TYPE-C charging and wireless charging

Charging case indicator

0%-20%: red

20%-60%: orange

≥ 60%: white

Earphone indicator

≤ 20%: red

20%-90%: orange

≥ 90%: white

When the earbuds have low battery (voltage below 3.3V), prompt: battery low

The charging case's indicator will remain on while it is charging. The white indicator will turn on when fully charged but will turn off after 10 minutes of inactivity. If the charger is removed, the light will turn off after 5 seconds. When both the earphones and the charging case are being charged at the same time, the charging case indicator takes priority.

Abnormal charging indication

Abnormal charging of earphone: red indicator flashes slowly and continuously.

Abnormal temperature: red indicator flashes rapidly and continuously.

product Specifications

11

Product Name: MOONDROP The Graden

Product Model:MD-TWS-042

Bluetooth Version: Bluetooth 6.0

Distribution Profile: A2DP/AVRCP/HFP

Codec: SBC/ AAC/ LDAC™/ LHDC/LC3

Input: 5V $\rightarrow$ 1A

Output: 5V $\rightarrow$ 0.25A

Charging port: USB-C

Working distance:10m (Unobstructed Open Environment)

Earphone charging time: Approximately 1.7 hours

Charging time of charging case:Approximately 1.5 hours

Battery Capactiy Of Earphone: 60mAh

Battery Capacity Of Charging Case: 500mAh 1.85wh

Battery Life Of Earphone: Approximately 9 Hours (AAC)

Battery Life Of Charging Case: Approximately 22.5 Hours(AAC)



Please use the proper output charger that fits device input which indicated in the manual(5V $\rightarrow$ 1A)

Security Instructions

Please read this important security instructions before using the equipment. This information contains general safety information applicable to this device and may include content not applicable to this device. Please follow the warnings and cautions to avoid injury to yourself or others or damage to your equipment.

Warning

*Failure to comply with safety warnings and regulations would result in serious injury or death

*Do not use damaged power cord or plug or loose power socket

- Unsafe connections can cause electric leakage or fire.

*Do not use wet hands or other wet body parts to touch

- Touch the device, power cord, plug or power socket, otherwise it may cause electric shock.

- When unplugging the power cord, do not use too much force, otherwise it may cause electric shock or fire.

*Do not bend or damage the power cord, otherwise it may cause electric leakage or fire

*Do not operate the device with wet hands while it is charging, otherwise it may cause electric shock.

- When unplugging the power cord, do not use too much force, otherwise it may cause electric shock or fire.

*Do not bend or damage the power cord, otherwise it may cause electric leakage or fire

*Do not operate the device with wet hands while it is charging, otherwise it may cause electric shock

*Do not directly connect the positive and negative terminals of the charger together, otherwise it may cause a fire or cause serious injury

*Do not use the device outdoors during a thunderstorm, otherwise it may cause electric shock or equipment failure

*Use batteries, chargers, accessories and supplies approved by the manufacturer

•Using universal batteries or chargers may shorten the life of the battery or cause the device to malfunction. They may also cause a fire or cause the battery to explode.

•Only use chargers and data cables specially designed for equipment and approved by MOONDROP. Incompatible chargers and data cables may cause danger or damage the device.

•When customers use accessories or supplies not approved by MOONDROP, MOONDROP is not responsible for the customers' safety.

*Do not put the device in the back pocket or hang it on the waist

•Excessive force may damage the device, might cause explode or fire.

•If you hit or fall, you may be injured.

*Do not drop the device or subject it to strong impact

•Otherwise, it may damage the device or battery, cause the device to fail to work normally, or shorten the device life.

•It may also cause overheating, burning or other dangers.

*Handle and dispose of equipment and chargers carefully

*Do not throw battery or device into fire

*Do not place batteries or devices in or on heating devices (such as microwave ovens, ovens, or radiators). The device may explode if overheated

Security Instructions

- *When disposing of used battery or device, please comply with local regulations
- *Do not squeeze or pierce the device
- *Do not subject the device to external high voltage, otherwise it may cause internal short circuit and overheating
- *Protect equipment, batteries and chargers from damage
 - Avoid exposing the device and battery to extremely cold or extremely hot temperatures.
 - Extreme temperature can damage the device, reduce the charging capacity of the device, and shorten the service life of the device and battery.
 - Do not use the data cable with the skin peeled off or damaged, and the charger with damaged or not working properly.
- *Do not store device near or in water heaters, microwave ovens, hot cooking equipment, or high-pressure containers
- The battery may leak.
- The equipment may overheat and cause a fire.
- *Do not use or store the device in areas where dust or aeolian materials are concentrated
- Dust or foreign objects may cause device damaged, fire or electric shock.
- Prevent the charger socket and the smaller end of the charger from contacting conductive materials such as liquid, dust, metal powder, or pencil lead.
- *Do not touch with sharp tools.Charger socket; do not bump the charger socket
- Conductive materials may short-circuit or corrode the contacts, which may cause explosion or fire.

- When using a wireless charger, do not place metal objects, magnets, and magnetic stripe cards between the device and the wireless charger. The device may not charge properly or may overheat.

- *Do not bite or suck the device or battery

- Otherwise, it may damage the equipment or cause an explosion or fire.

- Children or animals can suffocate by swallowing small parts.

- When children use this device, please make sure they use it correctly.

- *Do not poke the device or its accessories into your eyes, ears or mouth, otherwise it may cause suffocation or serious injury

- *Do not use damaged or leaking batteries. For safe disposal of batteries, please contact the nearest authorized service center

- The device and some accessories (sold separately) contain magnets. The American Heart Association and the British Medicines and Health Products Administration also warned that magnets will affect implantable pacemakers, heart rhythm converters, defibrillators, insulin pumps or other electronic medical devices (collectively referred to as "medical devices") within 15 cm. operating. If you are a user of any of these medical devices, please do not use this device and some accessories (sold separately) before consulting a doctor.

Note

- *Failure to comply with safety precautions and regulations can lead to personal injury or property damage
- *Do not use the device near other electronic devices
- Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.
- Equipment with speakers is particularly susceptible to interference.
- *Do not use your device in places that may be interfered by radio frequency such as hospitals, airplanes or cars
- If possible, use the device beyond 37cm of the pacemaker to avoid interference with the pacemaker.
- In order to minimize the interference of the device to the pacemaker, please use the device on the side of opposite to the pacemaker.
- If you use medical equipment, please contact the medical equipment manufacturer before using this device to determine whether it will be affected by the radio frequency emitted by this device.
- During air flight, the use of electronic equipment will interfere with the airplane's electronic navigator. Follow the airline's regulations and the instructions of the "aircraft crew. If the equipment is allowed, please always use the flight mode."
- The electronic equipment of the car may malfunction due to radio interference from the equipment. For details, please contact the manufacturer.
- *Do not place the device in a place with dense smoke or fog
- Otherwise, the surface of the device may be damaged or the device may malfunction.
- If you use hearing aids and cochlear implants, please contact the manufacturer for information about radio interference.

Security Instructions

- The radio frequencies emitted by this device may interfere with certain hearing aids and cochlear implants. Before using this equipment, please contact the manufacturer to determine whether the equipment will be affected by the radio frequencies emitted by this equipment.
- * Do not use the device near radio frequency devices or instruments (such as audio systems or radio antenna towers)
- * Radio frequency may cause device malfunction
- * Turn off the device in a potentially explosive environment
- Always operate in accordance with regulations, instructions and signs in an explosive environment.
- Do not use the equipment in gas stations or near flammable materials, chemical agents and explosive areas.
- Do not store or carry flammable liquids, gases or explosive materials in boxes containing device or accessories.
- * If any part of the device is damaged, smokes, or smells of burning things, please stop using the device immediately. The equipment can not be reused until being repaired by the MOONDROP Service Center
- Broken glass may hurt your hands and face.
- If the device emits smoke or the smell of burning things, it may cause the battery to explode or burn.
- * Please observe all safety warnings and regulations regarding the use of equipment while driving
- * Driving safely is your primary responsibility while driving. If prohibited by law, please do not use the device while driving. For the safety of you and others, please follow the safety warnings and relevant regulations and remember the following tips:
 - Place the equipment in an easy-to-access location. No need to look away from the road to get the wireless device.

- Do not record voice memos. Recording a language memo while driving prevents you from focusing on the primary responsibility of driving safely.
- According to the traffic situation, decide whether to answer the call reasonably. Answer calls when not moving forward or in traffic jams. Try to call after parking.
- Do not engage in nervous or excited conversations to avoid distraction. Please let the caller know that you are driving.
- * Properly maintain and use equipment
- Keep the equipment dry.
- Moisture and liquid can damage equipment parts or circuits.
- Do not turn on the device when it is wet. If the device is turned on, turn it off (if the device cannot be turned off, please maintain the status quo). Then dry the equipment with a towel and contact the local MOONDROP service center.
- This equipment is equipped with a built-in liquid indicator. Water damage to the equipment will invalidate the manufacturer's warranty.
- * The device should be stored on a flat ground
- * If the device falls, it will be damaged
- The device can be used where the atmosphere temperature is between 0°C and 35°C. You can store the device where the ambient temperature is between -20 °C and 50 °C. Using or storing the device outside the recommended temperature range may cause damage to the device or shorten battery life.

- Do not store the device in extremely hot areas, such as in a car in summer, otherwise, the equipment may be damaged or the battery may explode.
- Do not expose the device to direct sunlight for a long time, such as on the dashboard of a car. Do not store the device with metal objects such as coins, keys and necklaces.
- The device may be scratched or malfunction.
- If the battery contacts come in contact with metal objects, it may cause a fire.
- * Do not store the device near magnetic fields
- When exposed to a magnetic field, the device may malfunction or the battery may discharge.
- Magnetic stripe cards (including credit cards, phone cards, bank books and boarding cards) may be damaged by magnetic fields. Avoid contact with the device when it is overheated.
- * Otherwise it may cause low temperature burns, redness and skin pigmentation
- After using the device for a long time, pay attention to the heating of the device and avoid contact with the skin for too long.
- Do not sit on the device, or keep in direct contact with your skin for a long time while the device is charging or connected to the power source.
- High temperature resistance varies from person to person. Please pay special attention when using it by children, the elderly.
- * Protect hearing and ears when using earplugs
- Excessive exposure to strong sounds can cause hearing loss.
- Contact with strong sounds while walking may distract you and cause accidents.

- Always turn down the volume before using earplugs, and use only the lowest volume required to listen to conversations or music.
- If there are foreign objects on the earplugs, and you wear the earplugs for a long time, it may cause ear infections. Please keep the earplugs dry and clean.
- In a dry environment, static electricity may accumulate in the earplugs. Avoid using this earplug in a dry environment, or touch metal objects to discharge static electricity before using the earplug.
- Do not use headphones while driving or riding a horse. Otherwise, it may distract you and cause accidents. Depending on your area, this may also be illegal.
- *Precautions for using the device during walking or moving
- Always pay attention to your surroundings to avoid harming yourself or others.
- *Do not paint or paste paper on the equipment
- If you are allergic to the paint or metal parts of the device, it may cause itching, eczema or swelling of the skin. When the above situation occurs, please stop using the device and consult a doctor.
- *Install the device cautiously
- Do not place equipment and accessories in or near the airbag deployment area. If the equipment is improperly placed, the airbag inflates rapidly, which can cause serious injury.
- *Do not drop the device or cause collision
- The device may be damaged or malfunction.

- If the device is bent or deformed, it may damage the equipment or cause parts malfunction.
- * Ensure the longest service life of the battery and charger
- If the battery is not used for a long time, the battery may malfunction.
- The equipment will discharge if left unused for a long time, and must be recharged before use.
- When the equipment is not in use, disconnect the power supply.
- The battery can only be used for the designated purpose.
- Follow all the instructions in this manual to ensure the longest service life of the device and battery. The manufacturer will not provide warranty for damage or poor performance caused by failure to follow the warnings and instructions.
- The equipment may wear out over time. Although some parts and repairs are guaranteed during the validity period, damage or deformation caused by the use of unapproved accessories is not covered by the warranty.
- * Do not disassemble, modify or repair the equipment
- * Any changes or modifications to the equipment will cause the manufacturer to not guarantee the equipment. For repairing, please contact your local MOONDROP authorized dealer.
- Do not disassemble or pierce the equipment, as this may cause an explosion or fire.
- Do not disassemble or reuse the battery.
- * When cleaning the equipment, please follow the following advices
- Use a soft and dry cloth to wipe the device, use a brush or other tools to remove the earwax or dirt on the earpiece.
- Clean the battery contacts with a dry cloth.

- Do not use chemicals or cleaning agents. Otherwise, the surface of the equipment may be discolored or corroded, and it may also cause electric shock or fire.
- Prevent the equipment from contact with dust, sweat, ink, oil, and chemical products (such as cosmetics, antibacterial sprays, hand sanitizers, detergents and insecticides.) Otherwise, the internal and external parts of the device may be damaged, or the performance may deteriorate. If the device comes into contact with any of the above-mentioned substances, please wipe it with a soft, lint-free cloth.
- * Do not use the device for any purpose other than the designated purpose
- The device may malfunction.
- Avoid disturbing others when using the device in public places.
- * Only qualified personnel are allowed to repair the device
- If the equipment is repaired by unqualified personnel, the equipment may be damaged and the warranty will not be provided.
- * Do not distribute copyrighted content
- Do not distribute copyrighted material without the permission of the content owner. This behavior violated copyright law. The manufacturer is not responsible for any legal problems caused by any illegal actions by users against copyrighted content.

Disclaimer

All content and services available through this device belong to third parties and are protected by copyright, patents, trademarks and other intellectual property laws. Such content and services are only for personal non-commercial use. Without the permission of the content owner or service provider, you may not be able to use any content or service.

In addition to the above restrictions, unless you have the explicit permission of the application content or service provider, you may not be able to modify, copy, republish, upload, post, transmit, translate, or repost, any content or service displayed through this device. sell, create new derivative works, develop or distribute in any way.

"Third-party content and services are provided. For any purpose, MOONDROP Company does not provide any express or implied guarantees for the content or services provided. MOONDROP Co. expressly declares that it does not assume any implicit guarantees, Or through regulations, common law, or other means [including but not limited to marketability or applicability for specific purposes] recognized terms or conditions. In any case (including negligence), any content or service provided through this device, Even if it has been notified in advance that there is a possibility of such damage, whether it is in contract or tort, any direct, indirect, accidental, special or corresponding loss or damage compensation costs, attorney fees, various expenses or any resulting For other losses or damages, or connecting any information contained, or the results caused by you or any third party using any content or service, MOONDROP Co. does not guarantees for its accuracy, validity, timeliness, legality or completeness."

Third-party services may be stopped or interrupted at any time, and MOONDROP Co. is not responsible or guarantees for any content or the time period during which the service is available. The content and services are transmitted by third parties through networks and transmission equipment outside the control of MOONDROP. In addition to the generality of the exemption clause, MOONDROP also expressly stated that it does not assume any responsibility or obligation for any interruption or delay of any content or service applicable to this device.

MOONDROP Co has neither responsibility nor obligation for customer service involving content and services. Any service requirements related to content or services should be directly borne by the content and service providers.

ISED Warning statements in User Manual

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

1.This device may not cause interference.

2.This device must accept any interference, including interference that may cause undesired operation of the device.

L' émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d' Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L' exploitation est autorisée aux deux conditions suivantes : (1)L' appareil ne doit pas produire de brouillage;(2)L' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.

FCC Warning statements in User Manual

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Content of hazardous substances in products

Name	Hazardous substances and elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium(crOD)	Polybrominated biphenyls (BB)	Poly Australian Diphenyl Ether (PBDE)
Circuit components	X	O	O	O	O	O
Metal parts	O	O	O	O	O	O
Plastic parts	O	O	O	O	O	O
speaker	O	O	O	O	O	O
battery	X	O	O	O	O	O
annex	X	O	O	O	O	O

This form is compiled in accordance with SJ/T 11364.

O: Indicates that the amount of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in GB/T 26572-2011. X: Indicates that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limit requirement specified in GB/T 26572 2011, and there is currently no mature alternative in the industry. Please handle such parts or substances properly to avoid impact on the environment and human.



Bluetooth 6.0



R-R-SyY-MD-TWS-042



007-AQ0103

CMIIT ID: 26J51A52N191

IC: 30336-MDTWS042

FCC ID: 2AY45-MD-TWS-042-L, 2AY45-MD-TWS-042-R