


HiFi True Wireless Ear-hook DAC & AMP


User Manual

Overview

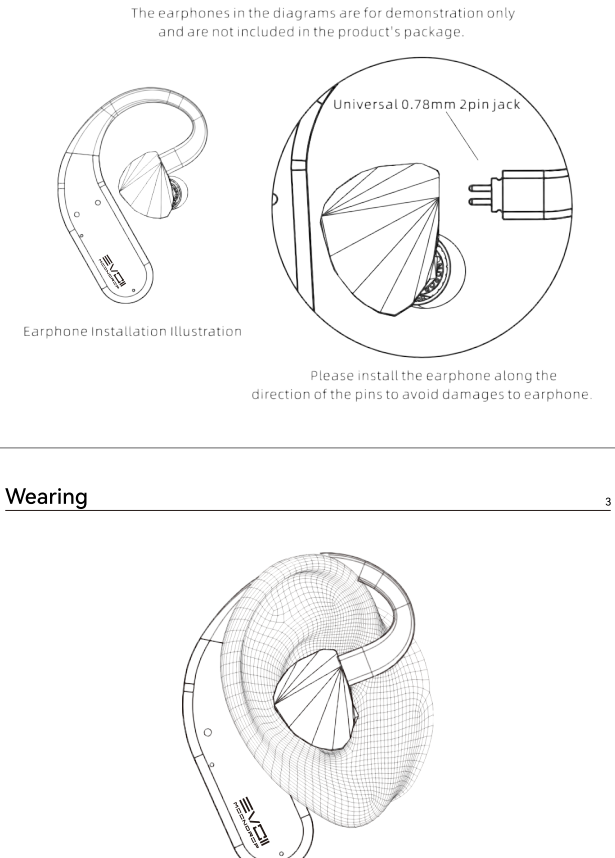

Installation

The earphones in the diagrams are for demonstration only and are not included in the product's package.

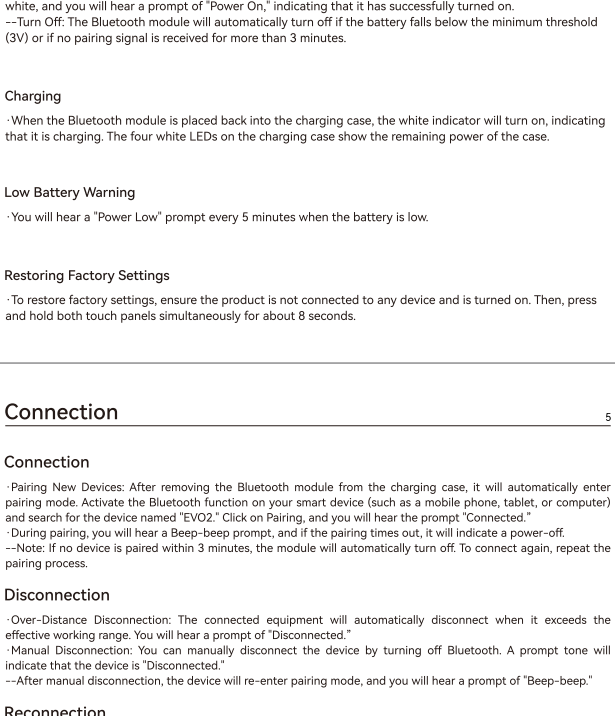

Wearing



Operation

Power On

- The Bluetooth module enters a sleep state when placed in the charging case and can be woken up simply by removing it, without any manual activation.
- To turn on the module, press and hold either the left or right unit for 3 seconds. The indicator light will flash white, and you will hear a prompt of "Power On," indicating that it has successfully turned on.
- Turn Off: The Bluetooth module will automatically turn off if the battery falls below the minimum threshold (3V) or if no pairing signal is received for more than 3 minutes.

Charging

- When the Bluetooth module is placed back into the charging case, the white indicator will turn on, indicating that it is charging. Three red/white LEDs on the charging case show the remaining power of the case.

Low Battery Warning

- You will hear a "Power Low" prompt every 5 minutes when the battery is low.

Restoring Factory Settings

- To restore factory settings, ensure the product is not connected to any device and is turned on. Then, press and hold both touch panels simultaneously for about 6 seconds.

Connection

Connection

- Pairing New Devices: After removing the Bluetooth module from the charging case, it will automatically enter pairing mode. Activate the Bluetooth function on your smart device (such as a mobile phone, tablet, or computer) and search for the device named "EVOD." Click on Pairing, and you will hear the prompt "Connected."
- During pairing, you will hear a Beep-beep prompt, and if the pairing times out, it will indicate a power-off.
- Note: If no device is paired within 3 minutes, the module will automatically turn off. To connect again, repeat the pairing process.

Disconnection

- Over-Distance Disconnection: The connected equipment will automatically disconnect when it exceeds the effective working range. You will hear a prompt of "Disconnected."
- Manual Disconnection: You can manually disconnect the device by turning off Bluetooth. A prompt tone will indicate that the device is "Disconnected."
- After manual disconnection, the device will re-enter pairing mode, and you will hear a prompt of "Beep-beep."

Reconnection

- When this device is turned off (or in sleep mode) and there is a connection record on your phone, it will automatically reconnect to the last paired device within 10 seconds after being turned on (or waking up) and entering pairing mode.
- Materials that Cause Reconnection: After the device is connected, it will disconnect if it leaves the effective working range. It will automatically reconnect when it re-enters the communication range within 3 minutes. If the device does not reconnect automatically, please connect it manually.
- If the pairing signal is not received for more than 3 minutes, the Bluetooth module will automatically turn off. Please re-pair and connect the device.

Connection

Note: Due to the characteristics of Bluetooth signals, intermittent disconnection or silence may occur in areas with dense electromagnetic interference at 2.4GHz.

Function

Voice Assistant

- To wake up the voice assistant on your mobile phone, tap the left or right unit three times.

Music

- Play/Pause Music: Tap the left or right unit.
- Switch Tracks: Double-tap the left unit to play the previous song, or double-tap the right unit to play the next song.

Calls

- To answer an incoming call, tap the left or right unit; To decline the call, press and hold the left or right unit for 1.5 seconds.
- During a call, tap the left or right unit to hang up.

Specifications

- Product Name: EVOD
- Model: MD-TWS-047
- Version: Bluetooth 6.0
- Protocol: A2DP/AVRCP/HFP/HSP
- Codecs: SBC/AAC/LDAC/LC3
- Input: 5V=1A
- Output: 5V=0.25A
- Charging port: USB-C
- Bluetooth Range: ≥10m (Barrier Free Environment)
- Supported systems: IOS/Android Earphone
- charging time: 2h
- charging time: 2h
- Battery capacity of earbud: 140mAh
- Battery capacity of charging case: 1000mAh
- Service time: 15h (AAC)
- Available recharges: 2.5 times

Security Instructions

Please read this important security instructions before using the equipment. This information contains general safety information applicable to this device and may include content not applicable to this device. Please follow the warnings and cautions to avoid injury to yourself or others or damage to your equipment.

Warning

- Failure to comply with safety warnings and regulations would result in serious injury or death.
- Do not use damaged power cord or plug or loose power socket
- Unsafe connections can cause electric leakage or fire.
- Do not use wet hands or other wet body parts to touch.
- Touch the device, power cord, plug or power socket, otherwise it may cause electric shock.
- Do not subject the device or subject it to strong impact.
- Do not tug/pull the power cord, do not use too much force, otherwise it may cause electric shock or fire.
- Do not bend or damage the power cord, otherwise it may cause electric leakage or fire.
- Do not operate the device with wet hands while it is charging, otherwise it may cause electric shock.
- Do not directly connect the positive and negative terminals of the charger together, otherwise it may cause a fire or cause serious injury.
- Do not use the device outdoors during a thunderstorm, otherwise it may cause electric shock or equipment failure.
- Use batteries, chargers, accessories and supplies approved by the manufacturer.
- Using universal batteries or chargers may shorten the life of the battery or cause the device to malfunction. They may also cause a fire or cause the battery to explode.

Security Instructions

- Only use chargers and data cables specially designed for equipment and approved by MOONDROP. Incompatible chargers and data cables may cause danger or damage the device.
- When the chargers and data cables are not approved by MOONDROP, MOONDROP is not responsible for the customers' safety.
- Do not put the device in the back pocket or hang it on the waist
- Excessive force may damage the device, might cause explode or fire.
- If you hurt or fall, you may be injured.
- Do not drop the device or subject it to strong impact
- Otherwise, it may damage the device or battery, cause the device to fail to work normally, or shorten the device's life.
- It may also cause overheating, burning or other dangers.
- Handle and dispose of equipment and chargers carefully
- High temperatures or modifications may cause device into fire.
- Do not place batteries or devices in or on heating devices (such as microwave ovens, ovens, or radiators). The device may explode if overheated.
- When disposing of used battery or device, please comply with local regulations.
- Do not short-circuit or pierce the device.
- Do not subject the device to external high voltage, otherwise it may cause internal short circuit and overheating.
- Protect equipment, batteries and chargers from damage.
- Avoid exposing the device and battery to extremely cold or extremely hot temperatures.
- Extreme temperature can damage the device, reduce the charging capacity of the device, and shorten the service life of the device and battery.
- Do not use the data cable with the skin peeled off or damaged, and the charger with damaged

Security Instructions

- or not working properly.
- Do not store device near or in water heaters, microwave ovens, hot cooking equipment, or high-pressure containers
- Indicators: The device may be at risk.
- The equipment may overheat and cause a fire.
- Do not use or store the device in areas where dust or aeolian materials are concentrated
- Dust or foreign objects may cause device damaged, fire or electric shock.
- Prevent the charger socket and the smaller end of the charger from contacting conductive materials, such as liquid, dust, acid, dust, metal powder, or pencil lead.
- Do not touch with sharp tools.Charger socket; Do not bump the charger socket
- Conductive materials may short-circuit or corrode the contacts, which may cause explosion or fire.
- When using a wireless charger, do not place metal objects, magnets, and magnetic stripe cards between the device and the wireless charger.
- When the device is bent or deformed, it may overheat.
- Do not bite or suck the device or battery
- Otherwise, it may damage the equipment or cause an explosion or fire.
- Children or animals can suffocate by swallowing small parts.
- Driving safely is your primary responsibility while driving. If prohibited by law, please do not use the device while driving. This device, please make sure they use it correctly.
- Do not poke the device or its accessories into your eyes, ears or mouth, otherwise it may cause suffocation or serious injury.
- Do not use damaged or leaking batteries. For safe disposal of batteries, please contact the nearest authorized service center.

Security Instructions

- The device and some accessories (sold separately) contain magnets. The American Heart Association and the British Medicines and Health Products Administration also warned that magnets will affect implantable pacemakers, heart rhythm converters, defibrillators, insulin pumps or other electronic medical devices (collectively referred to as "medical devices") within 15 cm. operating. If you are a user of any of these medical devices, please do not use this device and some accessories (sold separately) before consulting a doctor.

Note

- Failure to comply with safety precautions and regulations can lead to personal injury or property damage
- Do not use the device near other electronic devices
- Indicators: The device may be at risk.
- Do not use the device near radio frequency signals. Your device may interfere with other electronic devices.
- Equipment with speakers is particularly susceptible to interference.
- Do not use your device in places that may be interfered by radio frequency such as hospitals, airplanes or cars
- If possible, use the device beyond 37cm of the pacemaker to avoid interference with the pacemaker
- In order to minimize the interference of the device to the pacemaker, please use the device on the side of opposite to the pacemaker.
- If you use medical equipment, please contact the medical equipment manufacturer before using this device to determine whether it will be affected by the radio frequency emitted by the device.

Security Instructions

- During air flight, the use of electronic equipment will interfere with the airplane's electronic navigation. Follow the airline's regulations and the instructions of the "aircraft crew. If the equipment is allowed, please always use the flight mode."
- The electronic equipment of the car may malfunction due to radio interference from the equipment. For details, please contact the manufacturer.
- Do not place the device in a place with dense smoke or fog
- High temperature resistance varies from person to person. Please pay special attention when using it by children, the elderly,Protect hearing and ears when using earplugs
- If you use hearing aids and cochlear implants, please contact the manufacturer for information about radio interference.
- The radio frequencies emitted by this device may interfere with certain hearing aids and cochlear implants. Before using this equipment, please contact the manufacturer to determine whether the equipment will be affected by the radio frequencies emitted by this equipment.
- Do not use the device near radio frequency devices or instruments (such as audio systems or radio antenna towers)
- Radio frequency may cause device malfunction.
- Turn off the device in a potentially explosive environment
- Always operate in accordance with regulations, instructions and signs in an explosive
- Do not use the equipment in gas stations or near flammable materials, chemical agents and explosive areas.
- Do not store or carry flammable liquids, gases or explosive materials in boxes containing device or accessories.

Security Instructions

- Moisture and liquid can damage equipment parts or circuits.
- Do not turn on the device when it is wet. If the device is turned on, turn it off (if the device caused due to improper use, paid repair service will be provided depending on the condition.
- When the device is bent or deformed, it may damage the equipment or cause parts malfunction.
- Do not use the device near fire or heat.
- This equipment is equipped with a built-in liquid indicator. Water damage to the equipment will invalidate the manufacturer's warranty.
- The device should be stored on a flat ground. If the device falls, it will be damaged.
- The device can be used where the atmosphere temperature is between 0°C and 35°C. You can store the device where the ambient temperature is between -20°C and 50°C. Using or storing the device outside the recommended temperature range may cause damage to the device or shorten battery life.
- Do not store the device in extremely hot areas, such as in a car in summer, otherwise, the equipment may be damaged or the battery may explode.
- Do not expose the device to direct sunlight for a long time, such as on the dashboard of a car.
- Do not store the device with metal objects such as coins, keys and necklaces.
- Do not use the device near fire or heat.
- If the battery contacts come in contact with metal objects, it may cause a fire.
- Do not store the device near magnetic fields
- When exposed to a magnetic field, the device may malfunction or the battery may discharge.
- High temperature resistance varies from person to person. Please pay special attention when using it by children, the elderly,Protect hearing and ears when using earplugs
- Always turn down the volume before using earplugs, and use only the lowest volume required for specific purposes
- If there are foreign objects on the earplugs, and you wear the earplugs for a long time, it may cause ear infections. Please keep the earplugs dry and clean.
- In a dry environment, static electricity may accumulate in the earplugs. Avoid using this earplug in a dry environment, or touch metal objects to discharge static electricity before using the earplug.
- Do not use headphones while driving or riding a horse. Otherwise, it may distract you and cause accidents. Depending on your area, this may also be illegal.
- Precautions for using the device during walking or moving.
- Always pay attention to your surroundings to avoid harming yourself or others.
- Do not paint or paste paper on the equipment
- If the product has expired the warranty period, it may cause itching, eczema or swelling of the skin. When the above situation occurs, please stop using the device and consult a doctor.

Security Instructions

- When cleaning the equipment, please follow the following advices
- Use a soft and dry cloth to wipe the device, use a brush or other tools to remove the earwax or dirt on the earpiece.
- Clean the battery contacts with a dry cloth.
- Do not use chemicals or cleaning agents. Otherwise, the surface of the equipment may be discolored or corroded, and it may also cause electric shock or fire.
- Prevent the equipment from contact with dust, sweat, ink, oil, and chemical products (such as cosmetics, antibacterial sprays, hand sanitizers, detergents and insecticides).Otherwise, the internal and external parts of the device may be damaged, or the performance may deteriorate. If the equipment comes into contact with any of the above-mentioned substances, please wipe it with a soft, lint-free cloth.
- Do not use the device for any purpose other than the designated purpose
- The device may malfunction.
- Avoid disturbing others when using the device in public places
- Only qualified personnel are allowed to repair the device
- If the equipment is repaired by unqualified personnel, the equipment may be damaged and the warranty will not be provided
- Do not distribute copyrighted content
- Do not distribute copyrighted material without the permission of the content owner. This behavior violates copyright law. The manufacturer is not responsible for any legal problems caused by any illegal actions by users against copyrighted content.

Security Instructions

- After using the device for a long time, pay attention to the heating of the device and avoid contact with the skin for too long.
- Do not sit on the device, or keep in direct contact with your skin for a long time while the device is charging or connected to the power source
- High temperature resistance varies from person to person. Please pay special attention when using it by children, the elderly,Protect hearing and ears when using earplugs
- Excessive exposure to strong sounds can cause hearing loss.
- Always turn down the volume before using earplugs, and use only the lowest volume required for specific purposes
- If there are foreign objects on the earplugs, and you wear the earplugs for a long time, it may cause ear infections. Please keep the earplugs dry and clean.
- In a dry environment, static electricity may accumulate in the earplugs. Avoid using this earplug in a dry environment, or touch metal objects to discharge static electricity before using the earplug.
- Do not use headphones while driving or riding a horse. Otherwise, it may distract you and cause accidents. Depending on your area, this may also be illegal.
- Precautions for using the device during walking or moving.
- Always pay attention to your surroundings to avoid harming yourself or others.
- Do not paint or paste paper on the equipment
- If the product has expired the warranty period, it may cause itching, eczema or swelling of the skin. When the above situation occurs, please stop using the device and consult a doctor.

Security Instructions

- Third-party services may be stopped or interrupted at any time, and MOONDROP Co. is not responsible or guarantees for any content or the time period during which the service is available. The content and services are transmitted by third parties through networks and transmission equipment outside the control of MOONDROP. In addition to the generality of the exemption clause, MOONDROP also expressly stated that it does not assume any responsibility or obligation for any interruption or delay of any content or service applicable to this device.
- MOONDROP Co. has no responsibility or obligation for the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limit requirement specified in GB/T 26572 2011, and there is currently no mature alternative in the industry. Please handle such parts or substances properly to avoid impact on the environment and human.

Security Instructions

- Third-party services may be stopped or interrupted at any time, and MOONDROP Co. is not responsible or guarantees for any content or the time period during which the service is available. The content and services are transmitted by third parties through networks and transmission equipment outside the control of MOONDROP. In addition to the generality of the exemption clause, MOONDROP also expressly stated that it does not assume any responsibility or obligation for any interruption or delay of any content or service applicable to this device.
- MOONDROP Co. has no responsibility or obligation for the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limit requirement specified in GB/T 26572 2011, and there is currently no mature alternative in the industry. Please handle such parts or substances properly to avoid impact on the environment and human.

ISED Warning statements

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
1.This device must not cause interference.
2.This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) L'appareil ne doit pas produire de brouillage; (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC Warning statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device must not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

Security Instructions

- Content of hazardous substances in products

Name	Hazardous substances and elements						
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Poly Aromatic Hydrocarbons (PAHs)	Ether (DIBDE)
Circuit components	X	O	O	O	O	O	O
Metal parts	O	O	O	O	O	O	O
Plastic parts	O	O	O	O	O	O	O
Speaker	O	O	O	O	O	O	O
Battery	X	O	O	O	O	O	O
Annex	X	O	O	O	O	O	O

This form is compiled in accordance with SJ/T 11364.

Note: The content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in GB/T 26572-2011. X: Indicates that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limit requirement specified in GB/T 26572 2011, and there is currently no mature alternative in the industry. Please handle such parts or substances properly to avoid impact on the environment and human.

After-sales terms

If the product has a non-man caused failure from the date of shipment, it can be returned within 7 days, replaced within 15 days and repaired free of charge within 12 months. If the damage is caused due to improper use, paid repair service will be provided depending on the condition. If this device is damaged and meets the warranty conditions, please contact the seller to return it under the guidance of the seller by completing the device after-sales list, and attaching it to this device. Package is a precise electronic product, please avoid putting it in damp, dust and high/low temperature as well as avoid pulling, collision, and squeezing, to prevent unnecessary damage, which will invalidate the warranty.

After-sales service shall apply:
—Cable breakage, shell deformation, water damage, dust, corrosion or pins broke, tuning material, and unit damage are out of warranty.
—If warranty service cannot be provided due to product iteration and upgrades, the following after-sales procedures shall apply:
1. Customers with products still under warranty will qualify for a free replacement with an equivalent or lower-priced product.
2. For products beyond the warranty period, customers may exchange for an equivalent or lower-priced product upon payment of applicable service fees.
3. The specific warranty period will be determined based on the original purchase date.
—If the product has expired the warranty period, and due to product replacement, our company may not be able to provide repair service.
—We will not be able to provide repair service if the device shell or core parts are seriously deformed due to external force.

After-sales terms

- The after-sales service period is generally 7-20 days (excluding transportation time), depending on the repair department.
- About warranty period after repair/confirmation:
—If the date of the product issue is confirmed as poor build quality by MOONDROP after-service center, the warranty period will be prolonged to 60 days from the completion date of repair/replace if it was less or equal to 60 days; otherwise, it will stay as the original warranty period.

Warranty Card

☆ For after-sales service, please refer to [After-sales Terms].

Fault description: _____

Purchase date: _____

Receiving Address: _____

Customer Name: _____

Contact phone: _____



Chengdu Shuiyue Technology Co., Ltd.
Website: moondropiab.com
Address: Haixia Technology Industry Park, Wenjiang District, Chengdu.