

MMP3-Mouse+Mouse Pad Combo
User Manual-Black and White Printing

4.65 in

©TROUBLESHOOTING

If the cursor doesn't move when you move the mouse..
-Make sure the Wireless USB Fob(5)receiver is properly connected.Try inserting it into another USB port on your computer or device.
-Take the battery out and reinstall it.Ensure the positive and negative sides are in the correct direction based on the makings in the battery compartment(4).Replace the battery with one that has a full charge.

Δ WARNING

This product is for indoor use only.This device is not a toy and should be kept away from children. The product must not be dropped or subjected to intentional impact.Do not use the device in humid environments or in extremely hot/cold temperatures.Do not use chemicals or abrasive detergents to clean the product.Please return for repairs if the product is defective.The warranty is invalid if the product has metal rust,water damage,or other natural oxidation.

≡ WARRANTY

This product has a 1 year warranty against defects in manufacturing under regular consumer use.For instructions about how to obtain warranty service for your product,please contact Customer Service: info@primebrandsgroup.com.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

This device complies with part 15 o the FCC Rules.Operation is subject to the following two conditions:(1)This device may not cause harmfu interference,and(2)this device must accept any interference received,including interference that may cause undesired operation.

NOTE:This equipment has been tested and found to comply with the limits for a ClassB digital device,pursuant to part 15 of the FCC Rules.These limits are designed to provide reasonable protection against harmful interference in a residential installation.This equipment generates,uses,and can radiate radio frequency energy and,if not installed and used in accordance with the instructions,may cause harmful interference to radio communications.However,there is no guarantee that interference will not occur in a particular installation.If this equipmen does cause harmful interference to radio or television reception,which can be determined by turning the equipmentoff nd on,the user is encouraged to tryto corect the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipmen into an outlet on a circuit different from that to which the receiver is connected.
- Consultthe dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ΔWARNING:Cancer and Reproductive Harm-www.P65Warnings.ca.gov



@2025 Prime Brands Group.All rights reserved.
Alltrade names are registered trademarks of the respective manufactures listed.Made in China.
Prime Brands Group-Brooklyn,NY 11232-SHOPSOAR.COM

4.65 in


SOAR WIRELESS MOUSE
USER MANUAL

Thank you for purchasing the SOAR Wireless Mouse.This manual willfamiliarize you with the product and its use.Please retain for warranty information and reference.

Includes:Wireless Mouse,USB Fob,&User Manual

🔑 PRODUCT KEY

- 1.Left Click
- 2.Right Click
- 3.Scroll Wheel
- 4.Battery Compartment (1 AA Battery)
- 5.Wireless USB Fob
- 6.Optical Lens

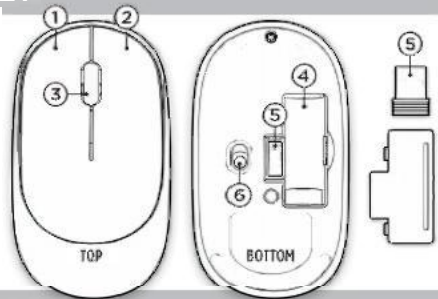

⚙️ SPECIFICATIONS

IC version:8650,Material:ABS
Product size:4.21"x 2.32"x 1.02"(107*59*26MM)
DPI:800-1200-1600
Connection:2.4 GHz

🔧 INSTALLATION

- 1.Open the Battery Compartment(4)and remove the Wireless USB Fob(5).
- 2.Place a single AA battery into the Battery Compartment(4).AA battery not included.Replace the battery compartment cover.
- 3.Plug the Wireless USB Fob(5)into your computer or device.
- 4.Click or move the mouse to begin pairing.
- 5.The wireless mouse should begin to work automatically.If it does not,open the Bluetooth*menu in your device and select it from the list of pairable devices to connect.Once paired successfully it will utomatically connect for future use.Just move the mouse to wake up your computer.

0 OPERATION

Once paired with your device place your mouse on the mouse pad or a clean flat surface for best results.Use the left click to select,right click for options,and the scroll wheel to navigate web pages and programs.Adjust the cursor speed in your devices mouse settings menu.

Back

Front