 




USER GUIDE

Wireless Gooseneck FM Transmitter

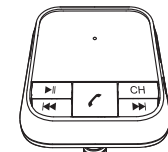

Model #VM-208S_EN_03/11/2026

Contents & Information

CONTENTS & INFORMATION

Features

OVERVIEW

CONTROLS

OPERATION

Setup

Select Source (Bluetooth, Aux Input, Flash Drive, MicroSD)

Hands-Free Calls

SPECIFICATIONS

LEGAL

Statement

WARRANTY

SAFETY PRECAUTIONS

TROUBLESHOOTING

FEATURES

- Hands-free calling with built-in microphone

- Display

• FM frequency

• Vehicle battery voltage Level

- Bluetooth / MicroSD Card / Flash Drive / Aux Input

- 30W charging (USB-C and USB-A)

Overview

LED Display

Previous

Answer

Next

Aux In

Flash Drive

USB-C

USB-A

Car Charging Adapter

Microphone

FM Station

Pause/Play

MicroSD Slot

Gooseneck

Audio cable

Controls

Buttons

Action

Behaviors

“CH”

Press

Press for 2 seconds

“▶▶”

Press

“◀◀”

Press

Press

Press

Press

Press

Press

Press

Press

Operation

SETUP

1. Plug device into 12/24V DC port. Display shows vehicle battery voltage, FM station, Bluetooth Connection.

2. Turn on vehicle radio. Select unused FM station (FM 88.1 to 107.9).

(Note: If sound quality is poor try another unused FM station.)

3. Turn on the device. The display shows the vehicle battery voltage, FM station, and Bluetooth connection.

4. Press the “CH” button to switch the audio input source.

5. Press the “▶▶” button to pause/play the audio.

6. Press the “◀◀” button to go to the previous track.

7. Press the “▶▶” button to go to the next track.

8. Press the “CH” button to switch the audio input source.

9. Press the “▶▶” button to pause/play the audio.

10. Press the “◀◀” button to go to the previous track.

11. Press the “▶▶” button to go to the next track.

12. Press the “CH” button to switch the audio input source.

13. Press the “▶▶” button to pause/play the audio.

14. Press the “◀◀” button to go to the previous track.

15. Press the “▶▶” button to go to the next track.



HAVING TROUBLE? WE CAN HELP

1-888-516-2630

7 DAYS/WEEK 7:00am- 9:00pm CST

 
SAVE THIS USER GUIDE

Read entire user guide

before installation and use

Made in Vietnam

Press “CH” 2 seconds to enter FM station setting.
Press “◀▶” “-/+” by 0.1MHz, long press “◀▶” to clear Bluetooth connection.

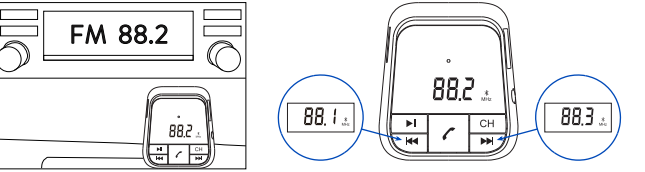


SELECT SOURCE (BLUETOOTH, AUX INPUT, FLASH DRIVE, MICRO SD)

PAIR DEVICE

First-time setup:

 - Power On
- Bluetooth indicator flashes in “Pairing Mode”
- Connect to “VM-208S” on smartphone
- Voice confirmation of successful connection

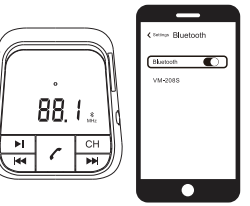

CONTROLS

“◀▶”/“◀▶” “Go back/ Skip song

“▶▶” “Pause / Play

“CH”=Change source (Long press to switch AUX input/Flash drive/Micro SD)

MP3/WMA/WAV/FLAC Supported

Note: It will automatically enter AUX, Flash drive or Micro SD card mode when connecting, and automatically return to Bluetooth mode after it is removed.

Important: Use source device for AUX input track controls.

HANDS-FREE CALLS

Press

- “☎” to answer call
- “☎” to end the call
- “☎” 3 seconds to reject call
- “☎” 2x to redial last number



Incoming Call

 


Talking



End the Call

Note: May also use the Bluetooth connected device to disconnect the call.

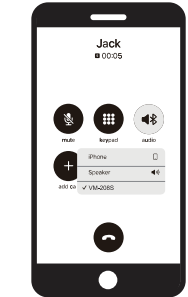

Example

Specifications

DC Input:
12V-24V DC 5A

Bluetooth Version:
V6.0

Bluetooth Working Frequency:
2.402~2.480Ghz

Sensitivity:
-89dBm

USB-A Output:
5V/2.1A

Audio Frequency:
20Hz~20kHz

Bluetooth Effective Distance:
32ft

FM Frequency:
88.1MHz-107.9MHz

USB-C Output:
5V/3A 9V/2.22A

Working Current:
70mA(Max)

FM Emission Effective Distance:
6ft

Legal

STATEMENT FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Bluetooth Trademark Statement

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Artsun Enterprise Company Limited is under license. Other trademarks and trade names are those of their respective owners.

Warranty

1 YEAR LIMITED WARRANTY COVERING DEFECTIVE PARTS

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

This limited warranty applies only to hardware components of the Device that are not subject to accident, misuse, neglect, fire or damage from other external causes, alteration, repair, or commercial use.

Safety Precautions

CAUTION



Do not disassemble



Warning Spray
No harsh cleaning chemicals. Clean with dry soft cloth.



Keep Dry



Warning Flammable

WARNING

⚠ WARNING: Cancer and Reproductive Harm -
www.P65Warnings.ca.gov

Troubleshooting

Issue	Problem	Prevention/Solution
Poor sound quality	The selected FM station is the same as a broadcast FM station	Change to another FM station
No audio transmitted	Incorrect FM station selected	Adjust the device FM station to match the vehicle FM station
The car stereo is very noisy in radio mode	High volume level selected on the car stereo	Turn up the volume of Bluetooth connected device and turn down the volume of the car stereo to reduce noise
Can't recognize the MicroSD card or flash drive	The slot only support up to 128 GB	Replace the memory card with a capacity less than 128 GB

★ Please note product features may be upgraded without any notice.

Walmart, Inc., Bentonville, AR72716
<https://www.walmart.com>
Customer Service: support@meiditech.com



型号：VM-208S

材质：120g 双铜纸

印刷：四色双面印刷+
专色pantone 2728 C

成品尺寸：114.3*114.3mm

展开尺寸：114.3*914.4mm

折页方法：风琴折