 


说明书：105克双铜单面单黑印刷，风琴折

 
55mm

Wireless Car Charger Mount
User Manual

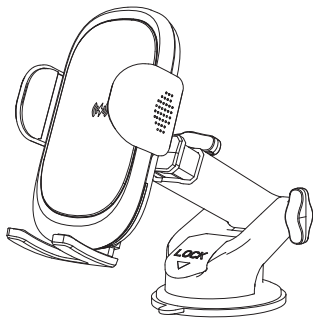

Note: For best performance and safety, please read this manual carefully before using the product.

Product Diagram

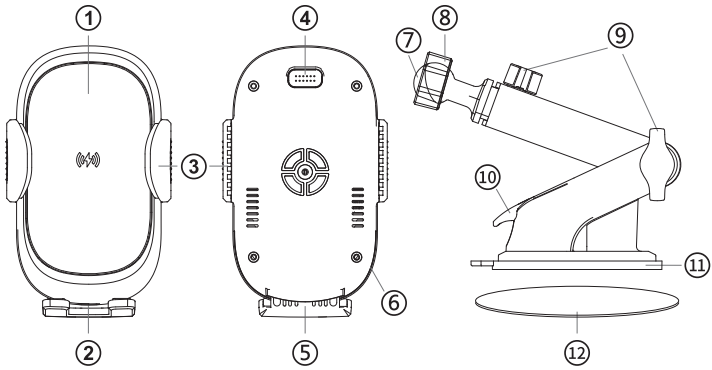


1. Wireless Charging Area	2. Type-c Interface	3. Clamping Arm	4. Mechanical Key
5. Cradle Foot	6. Power Indicator	7. Ball Joint	8. Nut
9. Adjustable Knob	10. Lock Button	11. Suction Cup	12. Sticky Pad

— 1 —

User Instruction

 1. Connect the suction cup to the device

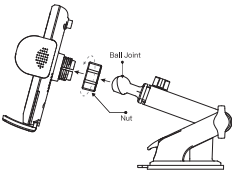


1. Unscrew the pivot locking nut from the back of the mount.
2. Place the nut around the ball joint, and push into the back of the mount.
3. Tighten the nut clockwise.

2. Secure the suction cup to the cab dashboard

1. Keep your dashboard clean and dry, no dust.
2. Tear off the protective film from the suction cup.
3. Lift the lock button at the bottom, attach the

— 2 —

 
suction cup mount firmly against the dashboard (or windshield).
4. Then press the lock button lever to fix it.

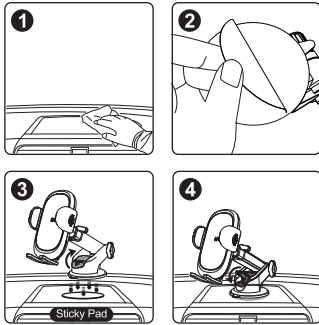

Note:
★ After a few times of use, wash the bottom of the suction cup to remove dust. Air dry in well-ventilated places. (To remove the suction cup mount, please lift the bottom lock button first, then remove the suction cup mount gently.)
★ For even dashboard, in order to protect your dashboard from damage or remove easier, it is recommended to use included sticky pad during installation.
★ For uneven dashboard, it is recommended not to use the sticky pad, otherwise it will easily slip off.

— 3 —

 3. Connect power to car charger

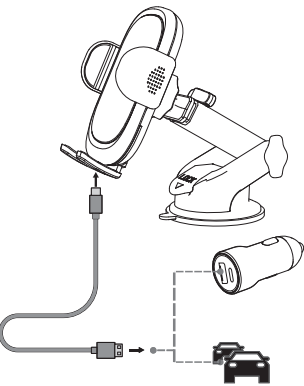

Use the Type-C cable packed in the box to connect the device and the car charger.

 
Tips:
To achieve fast charging, QC2.0/3.0 car charger and 2A cable are required.

— 4 —

90mm

4. Charging your cellphone

1. Connect the product to car charger with included Type-C cable, and the red indicator will light up.
2. Adjust the position of the cradle foot to the corresponding scale according to the size of the mobile phone.
3. Press the key to open the clamping arm, put the mobile phone on the holder, then push the clamping arms back to lock your phone for charging, the green indicator will light up.

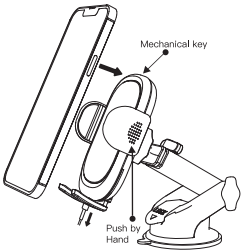

Note:
★ Under normal charging conditions, the charger and mobile phone could be slightly hot; the temperature may rise if the mobile phone is working while charging (such as playing video).
★ Please stop charging your phone when the charger is over-heating. Our product will automatically stop charging when over-heating, please try it again when it's cooling down.

— 5 —

Each gear corresponds to the mobile phone model

First gear:

iPhone 12 mini, iPhone 8, Samsung SM-G9298, Google NEXUS5, and other 4.7–5.7 inch mobile phones.

Second gear:

iPhone X, iPhone XS, Samsung S10e, Google Pixel 3, and other 5.8–6.0 inch mobile phones.

Third gear:

iPhone 12 Pro, iPhone XR, Samsung Galaxy S21 5G, and other 6.1–6.3 inch mobile phones.

Fourth gear:

iPhone 11 Pro Max, iPhone XS Max, iPhone 8 Plus, Samsung Note7, and other 6.4–6.6 inch mobile phones.

Fifth gear:

iPhone 12 Pro Max, Samsung Note10, Google Pixel 4XL, and other 6.7 inch mobile phones.

— 6 —

⚠ Precautions

- Do not use external force to move the left and right clamping arms.
- Keep out of reach of children.
- Please keep the equipment dry. Rain, moisture and various liquid may contain minerals that will corrode the circuit. If the equipment is wet, please dry the product as soon as possible or use a soft cloth to wipe it clean.
- Please use the QC2.0/QC3.0 car charger to charge the product.
- The device charge the phone which support wireless charging. It is recommended that the thickness of your phone case is within 6mm.
- Please do not store the equipment in a cold place. Otherwise, if temperature rises to normal temperature, moisture will pent up inside it and damage the electric appliance.
- Please do not attempt to open the equipment, unauthorized disassemble or modification will damage equipment or related wireless charging functions.
- Please do not throw, tap or shake the equipment; rough handling of the equipment will damage the internal circuit board and the mechanical structure.
- Please use clean and moist soft cloth to clean the surface of the equipment. Do not use or store the equipment in dusty or dirty places.


— 7 —

- Some components of this product are magnetic and metal materials may be adsorbed onto this product. Please do not use bank cards, credit cards or any other items with magnetic near the product so as to avoid losing the data stored due to demagnetization.

Specifications

Model	W6
Input	5V/9V/12V 2A(MAX)
Output power	5W/7.5W/10W/15W
Receiving distance	<6mm
Size	118*72*60mm
Weight	222g

 In the box:



IC: 28703-111



— 8 —

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

— 9 —

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

— 10 —

正面

反面