

DOG TRAINING COLLAR

USER MANUAL

Model: RS9



I. Important Safety Information:

WARNING

Not for use with aggressive dogs. Do not use this product if your dog is aggressive or prone to aggressive behavior. Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or a certified trainer.

- For use with dogs over 6 months of age and over 8 lbs.
- **DO NOT** use when the dog or the collar is wet.
- **DO NOT** press and hold the shock or vibrate for more than 10 seconds to avoid physical or psychological damage to your dog.
- Your dog **SHOULD NOT WHINE OR PANIC** when receiving stimulation. If this happens, the stimulation level is too high, and you need to go back to the previous level and repeat the process.
- **DO NOT** charge the device near any flammable substances.
- For dog use **ONLY**. Not for use on children.
- This is not a toy, and should only be operated by a responsible adult.

CAUTION

Before your first training, please carefully read and follow the instructions in this manual. The cautions below will help keep your dog safe and comfortable. Millions of dogs are comfortable wearing collars, while some are sensitive to the pressure from the contacts.

- It is vitally important that you and your dog remain safe while learning during on-leash training. Your dog should be on a strong leash (do not attach the leash to the receiver). The leash should be long enough for your dog to attempt to chase an object but short enough to prevent reaching roads or other hazards. You must also be physically strong enough to restrain your dog when he tries to chase.
- Risk of skin damage. Proper Receiver fitment is important. A Receiver worn for too long or made too tight on the dog's neck may cause skin damage. Ranging from redness to pressure ulcers, this condition is commonly known as bed sores.
- **DO NOT** leave the Receiver on the dog for more than 12 hours per day.
- When possible, re-position the Receiver on the dog's neck every 1 to 2 hours.
- Check the fit to prevent excessive pressure; follow the instructions in this manual.
- Never connect an extra leash to the Receiver; it will cause excessive pressure on the contacts.
- Clean the dog's neck area and the Metal Prongs of the Receiver weekly with a damp cloth.
- Examine the contact area daily for signs of a rash or a sore.
- If a rash or sore is found, discontinue the use of the Receiver until the skin has healed. If the condition persists beyond 48 hours, see your veterinarian.
- The Receiver Collar meets IP67 waterproof rating. It can be submerged in water up to 1 meter for up to 30 minutes. If submerged and wet, please do not use it.

II. Package Content

放各种包装内物件的线框图，对应英文描述：

遥控器 Remote Transmitter

接收器 Receiver Collar

Type-C 充电线 USB Type-C Cable

说明书 User Manual

测试灯 Test Bulb


金属螺母 Metal Prongs

硅胶螺母 Conductive Silicone Caps

挂绳 Wrist Strap

III. Product Overview

Receiver

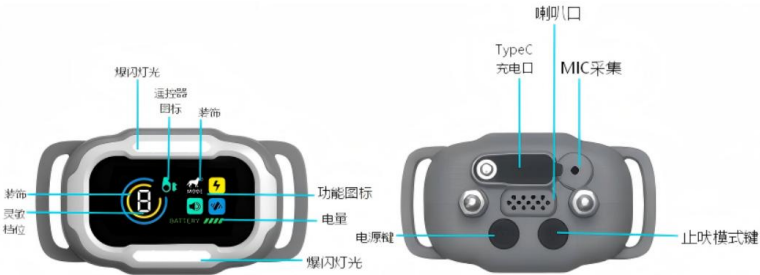

Flash Light/Indicator 上下灯/指示灯

Sensitivity Level 灵敏度

Mode Icon 训狗/止吠模式图标

Static Shock Mode 电击

Warning Tone Mode 声音

Vibration Mode 震动

Battery Status 电池容量

Charging Jack 充电口

Sensor Mic 麦克风

Metal Prongs 螺母

Speaker 喇叭

Power/Set Button 电源键

Mode Setting (Pairing) Button 止吠器模式键

Indicator & Display

Mode Icons



Battery Icon



Protection Mode




Test Mode



Sensitivity Level



Indicators

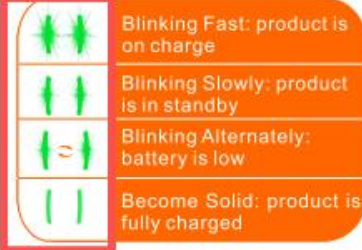

屏幕显示和指示灯这部分参考 S1，指示灯按实际 RS9 接收指示灯画

Remote Transmitter



Warning Tone Button 声音
 Vibration Button 震动
 Level Up/Down Button +/-键
 Shock Button 电击
 Indicator Light 指示灯
 Mode Button 模式切换
 Light Button 爆闪灯
 LCD Display 屏幕
 ON/OFF Switch 电源键
 Channel Switch 频道键
 Charging Port 充电口

[需要显示的文本以此为基准]

Display



Remote Transmitter Battery 遥控电量
 Channel 1/2 Icon 频道
 Dog Training Mode 训狗模式
 Light Mode 爆闪灯模式
 Bark Control Mode 止吠模式
 Warning Tone/Vibration/Shock/Light Levels 等级
 Warning Tone Mode 声音
 Vibration Mode 震动
 Shock Mode 电击

Note:

The Remote Transmitter will go into sleep mode if no operation is made for one minute.


Remote Transmitter Indicator Light:

Charging	The Green Indicator light blinks regularly.
Fully Charged	The Green Indicator light turns solid.
Press 【声音图标】	The Green Indicator light turns on.
Press 【震动图标】	The Green Indicator light turns on.
Press 【灯光图标】	The Green Indicator light turns on.
Press 【电击图标】	The Red Indicator light turns on.

IV. Quick Start Guide

Dog Training Mode: Please refer to steps 5-9; **Bark Control Mode:** Please refer to steps 10-12;

Dog Training & Bark Control Mode: Please refer to steps 13-15;

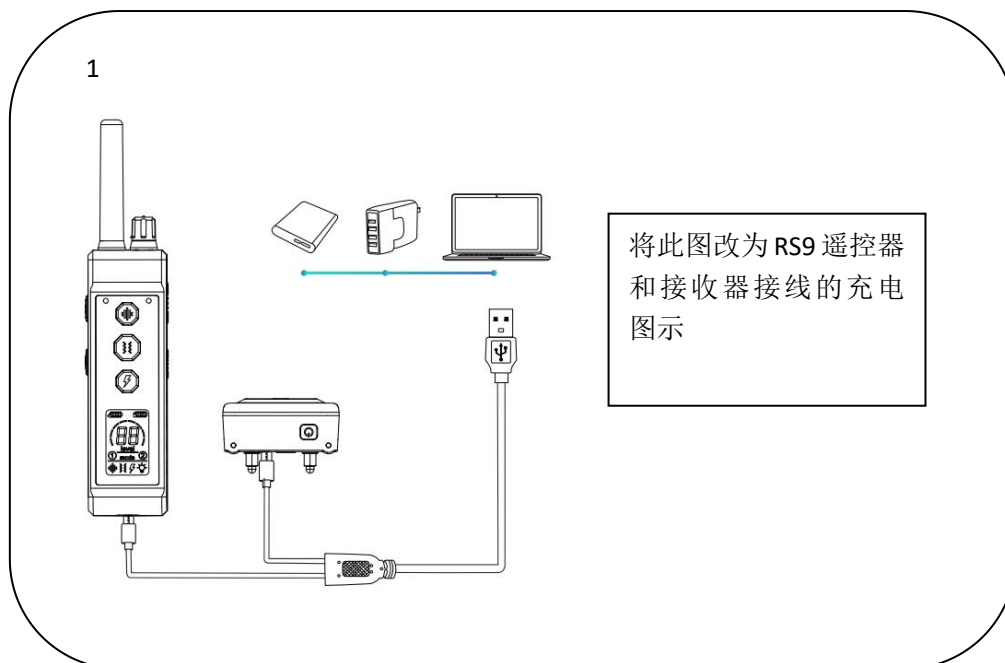


Charge the Receiver and the Remote Transmitter for 2-3 hours with the double-headed Type-C Cable from the package box.

Note: The charger, power bank, and other charging devices shown in the above picture are not included in the box.



Make your dog sit down and fit the Receiver to your dog by leaving one finger space between the collar and your dog's neck. Center the Metal prongs underneath your dog's neck, touching the skin.

3

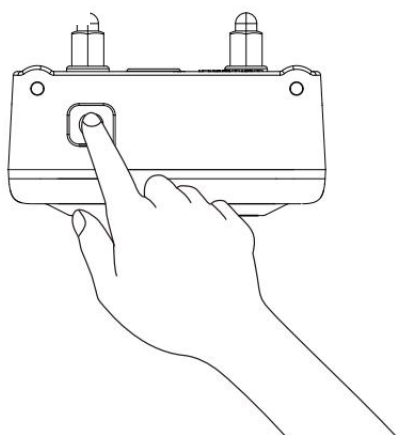

此图改为RS9接收器，指引客人如何打开接收器开关


To turn on the Receiver, press and hold the Power Button for 2 seconds. A vibration and a beep will indicate that the Receiver is on. The green indicator light will then continue to blink regularly.

4




此图为引导客人打开遥控器的开关,改成RS9遥控

To turn on the Remote Transmitter, slide the ON/OFF Switch (located on the back of the Remote Transmitter) to '🔌', and the Display will light up.

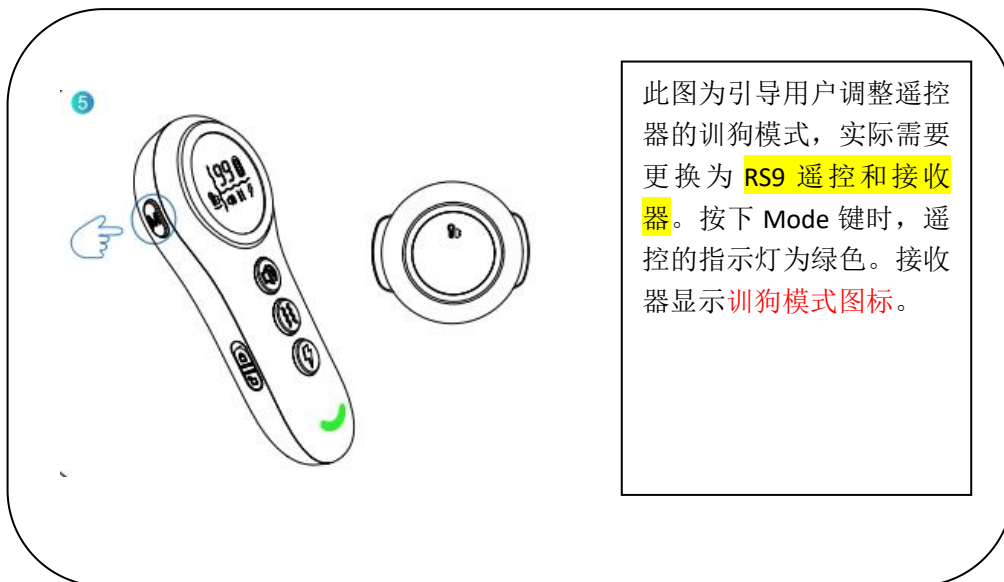

To enter **Dog Training Mode**, press the **Mode Button** on the Remote Transmitter. The green indicator light on the Remote Transmitter will light up, and both Dog Training Mode icons will light up on the Remote Transmitter and Receiver displays simultaneously. Next, press the Warning Tone, Vibration, or Shock Button on the Remote Transmitter, and the Receiver will respond correspondingly.

Note: Do not press and hold the Warning Tone/Vibration/Shock Button for 10 seconds; it will automatically cut off to prevent any physical or psychological harm to your dog.

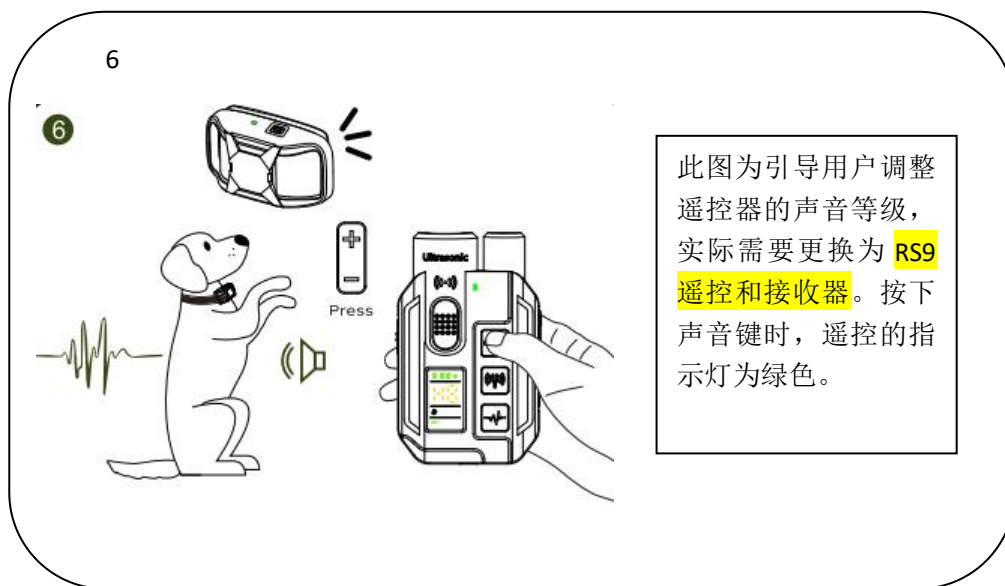

Warning Tone Command: Press the Warning Tone Button, and the green indicator light on the Remote Transmitter rapidly lights up. The Receiver will emit a warning tone, and the green indicator light on the Receiver will light up simultaneously.

The Warning Tone level can be adjusted from 1 to 8. Adjust the Warning Tone Level by pressing the Level Up/Down Button to raise/lower it to the desired level.

7




此图为引导用户调整遥控器的震动等级，实际需要更换为 RS9 遥控和接收器。按下震动键时，遥控上的指示灯为绿色。

Vibration Command: Press the Vibration Button, and the green Indicator Light on the Remote Transmitter rapidly lights up. The Receiver will vibrate, and the green Indicator light on the Receiver will light up simultaneously.

The Vibration level can be adjusted from 1 to 16. Adjust the Vibration Level by pressing the Level Up/Down Button to raise/lower it to the desired level.

8

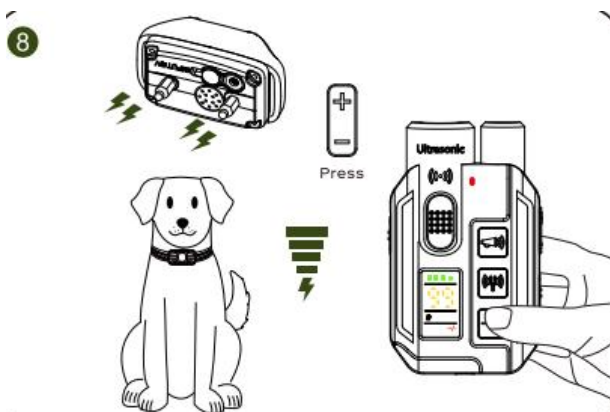


此图为引导用户调整遥控器的电击等级，实际需要更换为 RS9 遥控和接收器。按下电击键时，遥控上的指示灯为红色。

Shock Command: Press the Shock Button, and the red indicator Light on the Remote Transmitter

rapidly lights up. The Receiver will emit a static shock, and the green Indicator light on the Receiver will light up simultaneously.
The Static Shock level can be adjusted from 1 to 99. Adjust the Static Shock Level by pressing the Level Up/Down Button to raise/lower it to the desired level.




Light Mode: Press the Light Button, the Receiver's light will stay on, and the 'E1' icon will show on the Remote Transmitter; Press and hold the Light Button, the Receiver will keep flashing, and the 'E2' icon will show on the Remote Transmitter.
Press the Light Button again to turn it off. Once the Light is on, it will cut off automatically after 5 minutes if there is no operation on the Remote Transmitter.

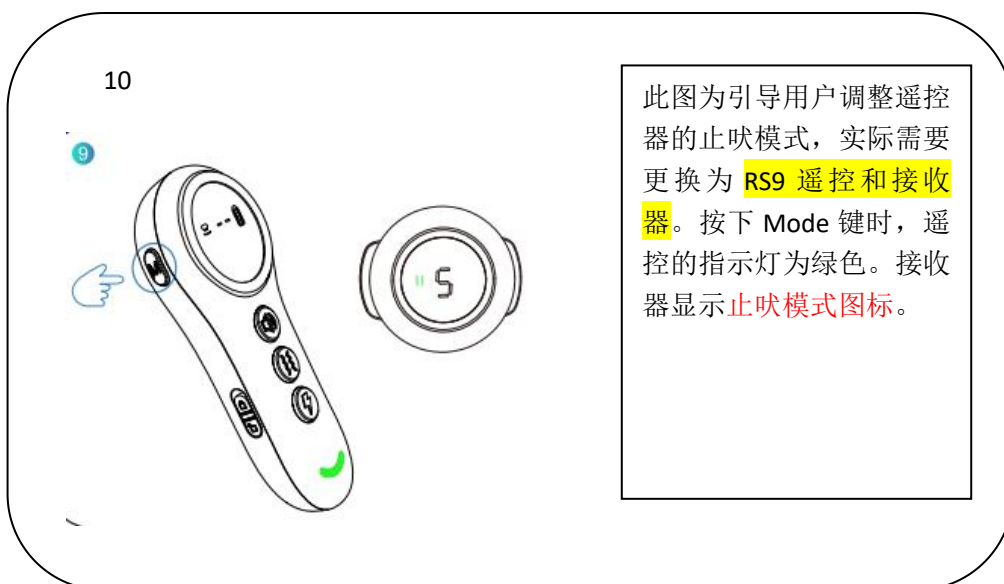

The Receiver can work independently as a **Bark Control Collar**. To enter **Bark Control Mode**, press the **Mode Button** on the Remote Transmitter. The green indicator light on the Remote


Transmitter will light up, and both Bark Control Mode icons will light up on the Remote Transmitter and Receiver displays simultaneously.

Note: In this mode, pressing any button on the Remote Transmitter will not trigger any operation.

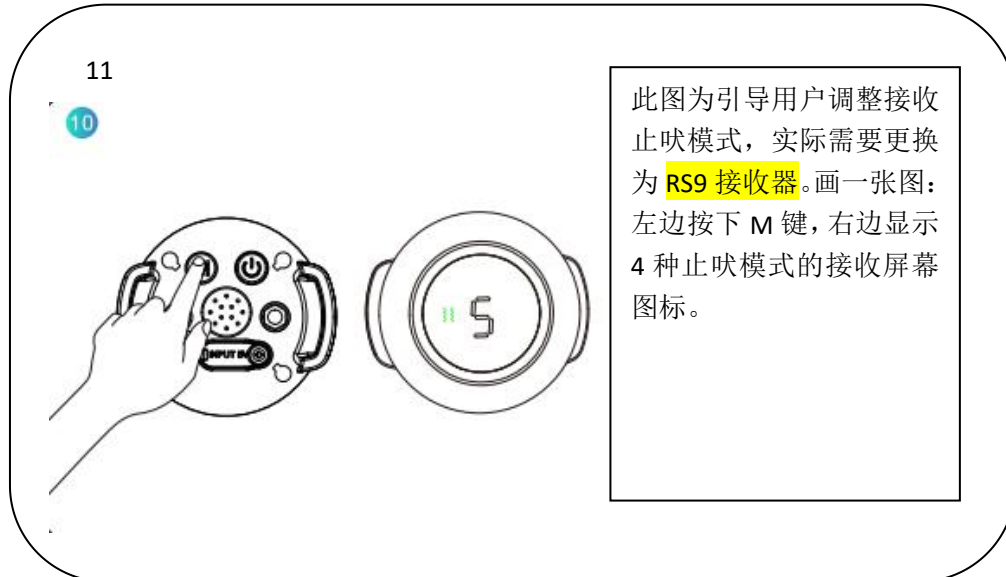

Switch Bark Control Modes: Press the Mode Setting (Pairing) Button on the back of the Receiver, and the mode icons on the display will change accordingly.

4 modes can be switched: Warning Tone, Vibration, Warning Tone + Vibration, and Warning Tone + Vibration + Static Shock. Please refer to "VI. Training Mode" on page 14 for more details.

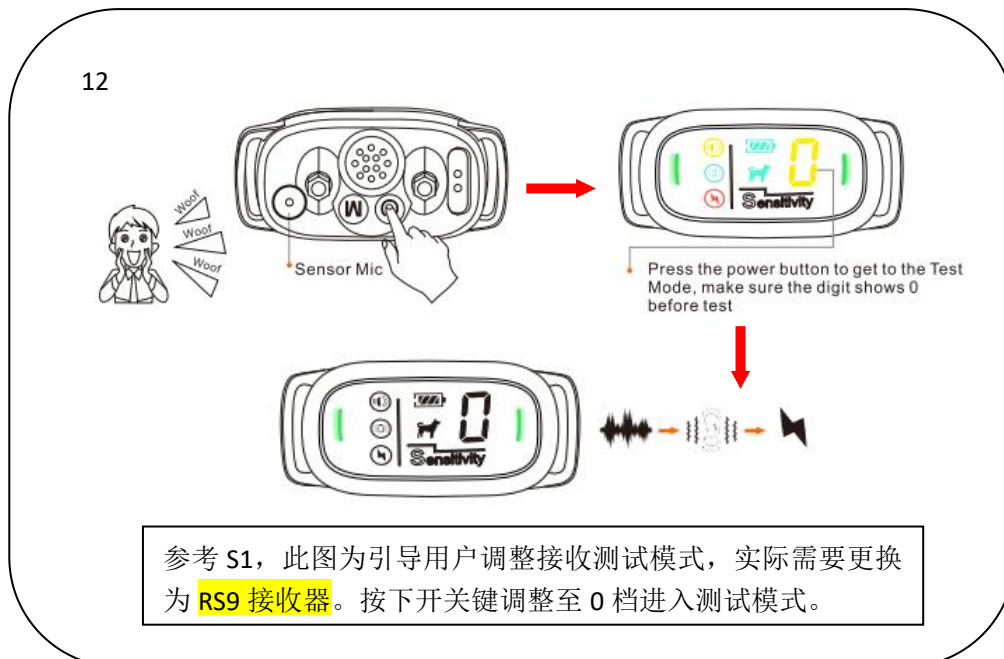


Set the Receiver to Test Mode: Press the Power/Set Button, when the display shows digit 0, the product enters the **TEST MODE**. Now, imitate a dog bark towards the sensor Mic located at the


back of the product, the Receiver delivers Tone, Vibration, and Static Shock immediately.

Note: In Test Mode, the product will always deliver Tone, Vibration, and Static Shock, regardless of the previously selected modes.

Sensitivity Level: Press the Power/Set Button again to adjust the Sensitivity Level from 1-5 (Level 5 is the most sensitive, while Level 1 is the least sensitive).

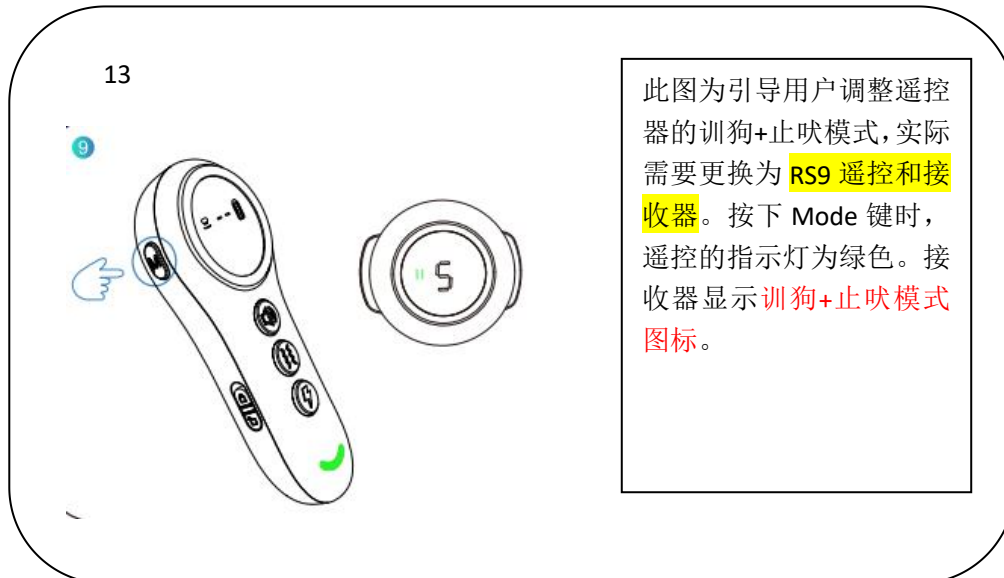


To enter **Dog Training & Bark Control Mode**, press the **Mode Button** on the Remote Transmitter. The green indicator light on the Remote Transmitter will light up, and both Dog Training & Bark Control Mode icons will light up on the Remote Transmitter and Receiver displays simultaneously. Both modes mentioned above can now be activated and controlled at the same time without any conflict.

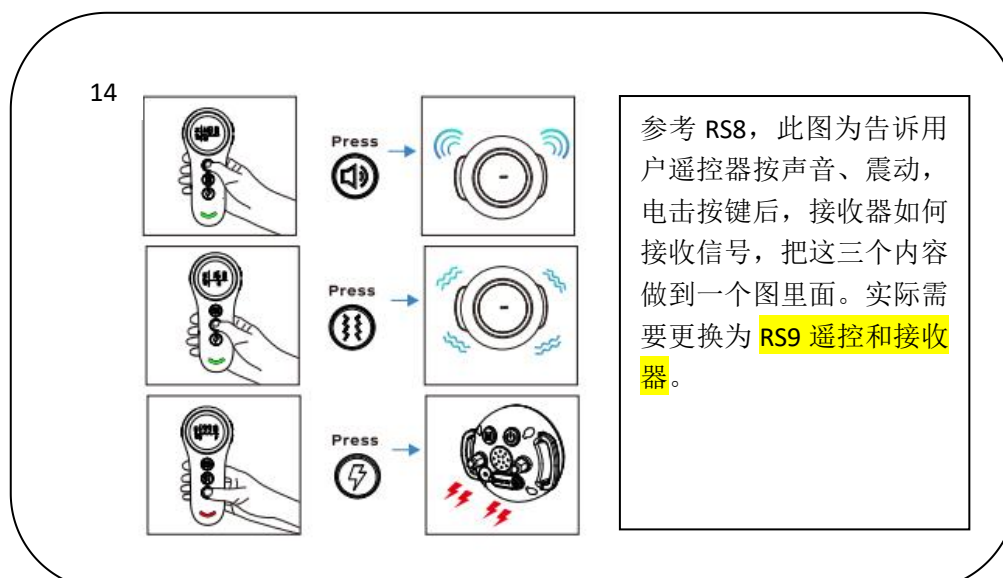

Dog Training Mode: Press the Warning Tone Button, Vibration Button, or Shock Button on the Remote Transmitter, and the Receiver will respond correspondingly.

15

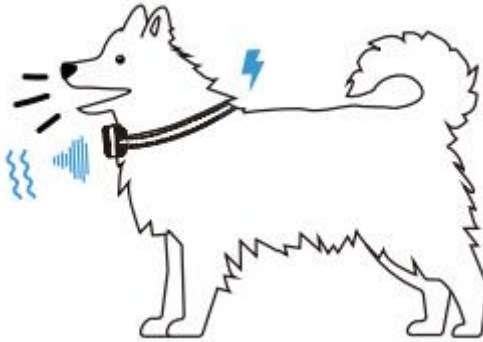


此图表示止吠模式。狗在吠叫的正面图，狗戴着接收器，屏幕上显示声+震+电图标模式图标+5级灵敏度；狗脖子旁边有声、震、电图形。

Bark Control Mode: The Receiver can work independently as a **Bark Control Collar**. Press the Mode Setting (Pairing) Button on the back of the Receiver to switch modes, and the mode icons will change accordingly on the display.

Press the Power/Set Button to adjust the Sensitivity Level from 1-5 (Level 5 is the most sensitive, while Level 1 is the least sensitive).

16

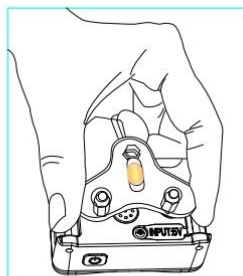

此图演示用测试灯测试电击，实际需要更换为RS9 遥控和接收器。


Test the Receiver with the Test Bulb:

1. Turn the Receiver on.

2. Hold the Test Bulb to the Metal Prongs on the Receiver. Make sure the metal wire in the Test Bulb has direct contact with both of the tops of the Metal Prongs.
3. Press the Shock Button on the Remote Transmitter.
4. The Red Test Light will flash if the Receiver works normally. At higher shock levels, the Test Bulb will flash brighter.

Note:

- (1) **While you test the Receiver with your fingers, please put your two fingers on the top of the Metal Prongs separately to form a closed loop circle.**
- (2) **Please always start from the lowest Shock level to avoid accidental injury.**

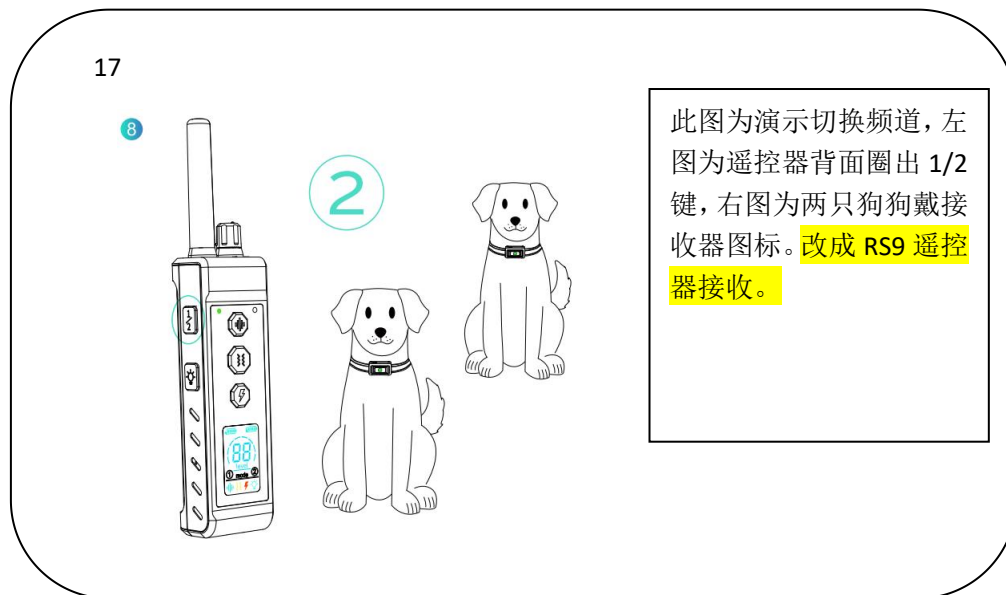

To switch the channel, slide the Channel Switch located on the back of the Remote Transmitter. This product can be used to train up to two dogs.



In case the Receiver is not responding to the Remote Transmitter, follow these Steps to pair the Remote Transmitter to the Receiver:

1. Press and hold the Power Button on the Receiver for 2 seconds to turn it on. Turn on the Remote Transmitter by sliding the ON/OFF Switch to , on the Remote Transmitter;
2. Press and hold the Mode Setting (Pairing) Button on the Receiver for 3 seconds to enter the Pairing Mode. You will hear a beeping tone, and the Remote icon will turn solid green on the Receiver's display. You then have 15 seconds to complete the pairing process;
3. Press the Warning Tone Button, Vibration Button, or Shock Button on the Remote Transmitter, and the Receiver will respond correspondingly, indicating that the pairing process is completed. Please refer to “VIII. Paring Up” on page 16 for more details.

页码根据实际页数修改

How the System Works

The Dog Training Collar is easy to use with an advanced digital display that tells you the exact stimulation level you are using.

The Dog Training Collar assists you in controlling your dog without a leash. At the push of a button, your Remote Transmitter sends a signal activating your dog's Receiver. He receives a safe but annoying stimulation.


He'll quickly learn the association between his behavior and your correction, and soon you'll have a better-behaved dog. The Dog Training Collar has been proven safe, comfortable, and effective for both small and large dog breeds.

If using the Dog Training Collar consistently and correctly, any basic obedience commands can be taught and will help correct any misbehavior that your dog exhibits.

V. Setting Up

1. Charge the Product

Charge both the Receiver and Remote Transmitter with the USB Type-C Charging Cable in the package box until their Indicators become solid green, which will take around 2-3 hours.

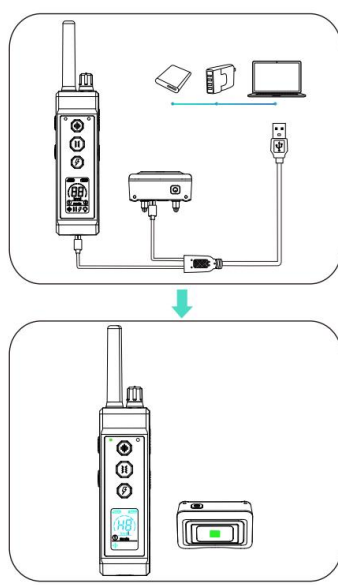

参考此图，改为 RS9 遥控和接收。

Note:

- (1) The charger, power bank, and other charging devices shown in the above picture are not included in the box.
- (2) Use the charging cable in the package when charging. Other charging cables may not be suitable for this Dog Training Collar, which may cause electrical damage.
- (3) The Dog Training Collar ONLY supports a 5V-rated power source. If charged with an improper charger:

Receiver Collar—delivers a rapid warning tone and stops charging automatically.

Remote Transmitter—stop charging automatically with the Indicator rapidly blinking in red.

2. Turn On/Off the Product

Turn on the Remote Transmitter by sliding the ON/OFF Switch to '  ' on the Remote Transmitter, and the Display will light up.

展示打开遥控器开关机按键图片+屏幕全彩亮起图片

Turn off the Remote Transmitter by sliding the ON/OFF Switch to '  ' on the Remote Transmitter, and the Display will shut down.

展示打开遥控器开关机按键图片+屏幕灰暗图片

Turn on the Receiver by pressing and holding the Power Button for 3 seconds with a beep and a short vibration to indicate that the Receiver turns on, as the green Indicator light blinks regularly.

展示按压接收器电源键的图片+呼吸灯闪烁图片

Turn off the Receiver by pressing and holding the Power Button for 3 seconds with a long beeping to indicate that the Receiver turns off, as the green Indicator light stops blinking.

展示按压接收器电源键的图片+呼吸灯灰暗图片

VI. Training Modes

1. Dog Training Mode

Press the **Mode Button** on the Remote Transmitter, the green indicator light on the Remote Transmitter will light up, and both Dog Training Mode icons will light up on the Remote Transmitter and Receiver displays simultaneously. The product will enter the **DOG TRAINING MODE**.

操作遥控模式键的图片+ 按下 **Mode** 键，遥控和接收屏幕上显示训狗模式的图标

Note: Do not press and hold the Warning Tone/Vibration/Shock Button for 10 seconds; it will automatically cut off to prevent any physical or psychological harm to your dog.

1A. Warning Tone Command

Press the Warning Tone Button and the Receiver will deliver a warning tone. There is a total of 8 levels of Warning Tone for training.

To adjust the Warning Tone level, press the Level Up/Down Button to raise/lower it to the desired level.

操作声音按键的图片+接收器发出声音的图片

1B. Vibration Command


Press the Vibration Button and the Receiver will deliver a vibration. There is a total of 16 levels of Vibration. To adjust the Vibration level, press the Level Up/Down Button to raise/lower it to the desired level.

操作震动按键的图片+接收器发出震动的图片

1C. Shock Command

Press the Shock Button and the Receiver will deliver a static shock. There is a total of 99 levels of Shock. To adjust the Shock level, press the Level Up/Down Button to raise/lower it to the desired level.

操作电击按键的图片+接收器发出电击的图片

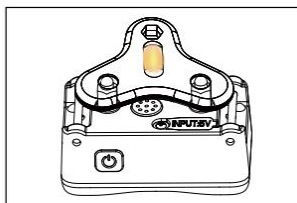

将此图改为 RS9 接收器放上测试灯的图片。

When testing the Shock function for the first time, place the Test Bulb on the Metal Prongs. The Test Bulb lights up to indicate that the Shock function is working, and it will become brighter at higher shock levels.

1D. Light Mode

Press the Light Button, the Receiver's light will stay on, and the 'E1' icon will show on the Remote Transmitter.

操作灯光按键的图片（屏幕显示 E1）+接收器亮灯的图片

Press and hold the Light Button, the Receiver will keep flashing, and the 'E2' icon will show on the Remote Transmitter.

操作灯光按键的图片（屏幕显示 E2）+接收器爆闪的图片

Press the Light Button again to turn it off. Once the Light is on, it will cut off automatically after 5 minutes if there is no operation on the Remote Transmitter.

操作灯光按键关灯的图片+接收器恢复正常状态

2. Bark Control Mode

The Receiver can work independently as a **Bark Control Collar**. Press the **Mode Button** on the Remote Transmitter, the green indicator light on the Remote Transmitter will light up, and both Bark Control Mode icons will light up on the Remote Transmitter and Receiver displays simultaneously. The product will enter the **BARK CONTROL MODE**.

Press the **Mode Setting (Pairing) Button** on the back of the Receiver to switch modes, and the mode icons will change accordingly on the display.

Press the **Power/Set Button** to adjust the Sensitivity Level from 1-5 (Level 5 is the most sensitive, while Level 1 is the least sensitive).

操作遥控模式键的图片+ 按下 Mode 键，遥控和接收屏幕上显示止吠模式的图标

2A. Set the Receiver to Test Mode


Press the **Power/Set Button**, when the display shows digit 0, the product enters the **TEST MODE**.

Now, imitate a dog bark towards the sensor Mic located at the back of the product, the Receiver delivers Tone, Vibration, and Static Shock immediately.



参考 S1，画止吠器测试模式

Note: In Test Mode, the product will always deliver Tone, Vibration, and Static Shock, regardless of the previously selected modes.

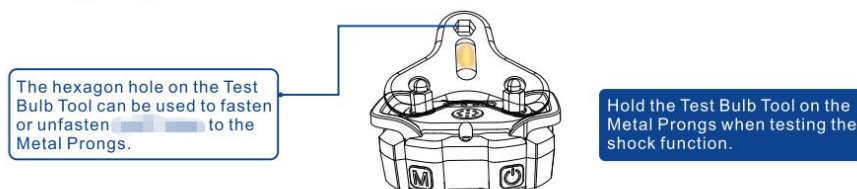

If the Bark Collar responds as described above, you've succeeded in setting up the Bark Collar properly.

参考 S10，画用测试灯测电击

左边的话改为：The hexagon hole on the Test Bulb Tool can be used to fasten or unfasten the Metal Prongs.

2B. Warning Tone Mode

Press the **Mode Setting (Pairing) Button** to select the Warning Tone mode. There are 6 variable warning tones of different frequencies in 6 steps.

参考 RS8，画按 M 键，接收屏幕显示声音模式

2C. Vibration Mode

Press the **Mode Setting (Pairing) Button** to select the Vibration mode. There are 3 levels of vibration intensity in 3 steps.

参考 RS8，画按 M 键，接收屏幕显示震动模式

2D. Warning Tone + Vibration Mode

Press the **Mode Setting (Pairing) Button** to select the Warning Tone + Vibration mode. There are 6 variable warning tones combined with 3 levels of vibration in 3 steps.

参考 RS8，画按 M 键，接收屏幕显示声音+震动模式


2E. Warning Tone + Vibration + Shock Mode

Press the **Mode Setting (Pairing) Button** to select the Warning Tone + Vibration + Shock mode. There are 6 variable warning tones + 3 levels of vibration + 6 levels of shock working together in 6 steps.

Note: In this mode, if your dog continues to bark and activates Step 6, the product will enter a 60-second **Protection Mode**. During this time, the receiver display will show "8," and the function will no longer be activated. To exit the protection mode, press any button on the receiver or wait 60 seconds to reset back to Step 1.

参考 RS8，画按 M 键，接收屏幕显示声音+震动+电击模式

2F. How does it works?

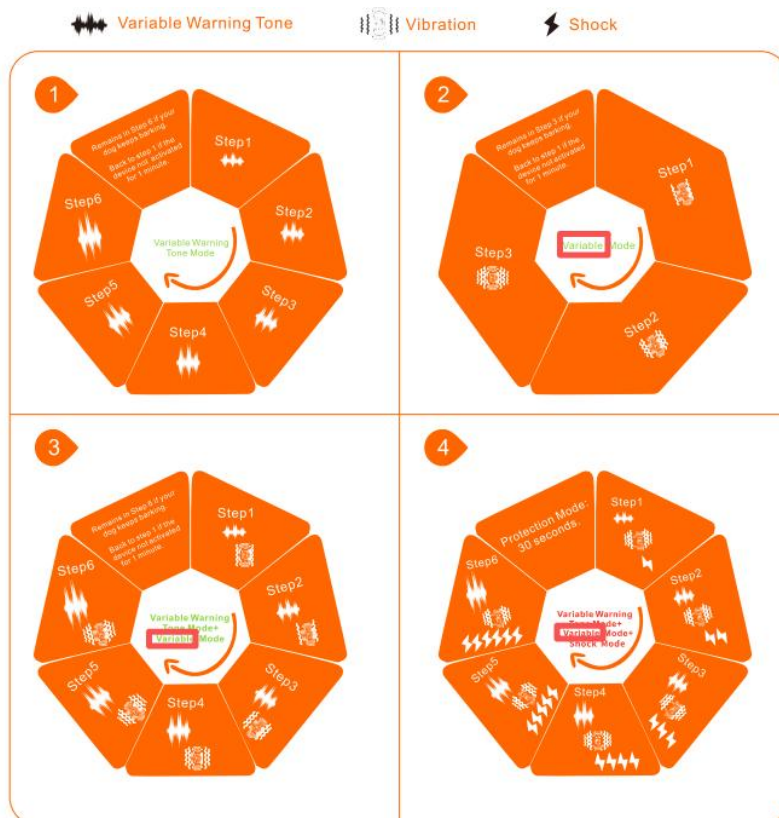

参考 S1 画扇形图, 注意图中间的震动单词不要写错

NOTES:

- (1) The product will go to the next step if your dog keeps barking within 1 minute.
- (2) The product will automatically go back to Step 1 if it is not activated within 1 minute.

3. Dog Training & Bark Control Mode

This device has two main modes: Manual Dog Training and Automatic Bark Control. This allows you to correct unwanted behaviors instantly while also controlling barking automatically. With this simple solution, you can effectively train and manage your dog's behavior easily.

Press the **Mode Button** on the Remote Transmitter, the green indicator light on the Remote Transmitter will light up, and both Dog Training & Bark Control Mode icons will light up on the Remote Transmitter and Receiver displays simultaneously. The product will enter the **DOG TRAINING & BARK CONTROL MODE**. You can now use both of the modes mentioned above at the same time without any conflicts.

操作遥控模式键的图片+ 按下 Mode 键, 遥控和接收屏幕上显示训狗+止吠模式的图标

4. Switching Channels

Slide the Channel Switch located on the back of the Remote Transmitter to select the Receiver you wish to control if you have paired two Receivers.

+按频道键切换频道的图片

Note:

The Remote Transmitter will go into sleep mode if no operation is made for one minute to save battery power.

VII. Fitting the Receiver


IMPORTANT:

The proper fit and placement of your Receiver are important for effective training. The Metal Prongs with Conductive Silicone Caps must have direct contact with your dog's skin on the underside of his neck. To ensure a proper fit, please follow these steps:


1. Make sure that the Receiver is turned off.
2. Let your dog stand on four feet or lie down fully (A).
3. Place the Receiver on your dog's neck close to the ears. Center the Metal Prongs underneath your dog's neck, touching the skin (B).

Note: It is sometimes necessary to trim the hair around the Metal Prongs to make sure that contact is consistent.

4. The Receiver should fit snugly, yet loose enough to allow one finger to fit between the strap and your dog's neck (C).
5. Allow your dog to wear the Receiver for several minutes then recheck the fit. Check the fit again as your dog becomes more comfortable with the Receiver.

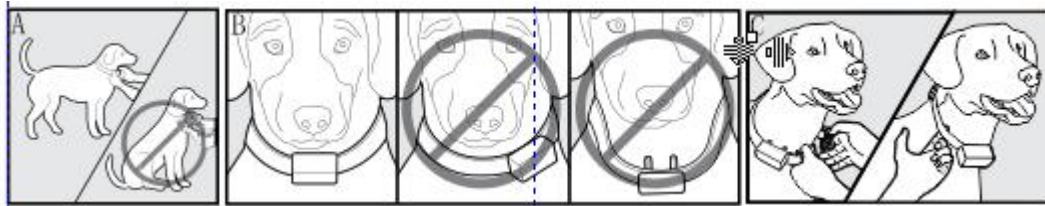

6. To attach the collar to the Receiver, please follow the following steps as instructed to thread the strap.

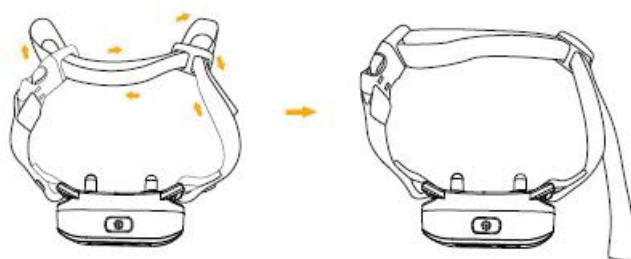

上图仅为参考,要把上图改为 RS9 的接收器


CAUTION:

- **DO NOT** leave the Receiver on your dog's neck for a continuous 12 hours.
- **Never** attach a leash to the collar.
- **Never** fit the Receiver too tightly to your dog's neck.
- **DO NOT** shave the dog's neck as this may increase the risk of skin irritation.
- **Check the fit regularly** to make your dog more comfortable with the Receiver.


VIII. Pairing Up

In case the Receiver is not responding to the Remote Transmitter, follow these steps to pair them up:

1. Press and hold the Mode Setting (Pairing) Button on the Receiver for 3 seconds to enter the Pairing Mode. You will hear a beeping tone, and the Remote icon will turn solid green on the Receiver's display. You now have 15 seconds to complete the pairing process.

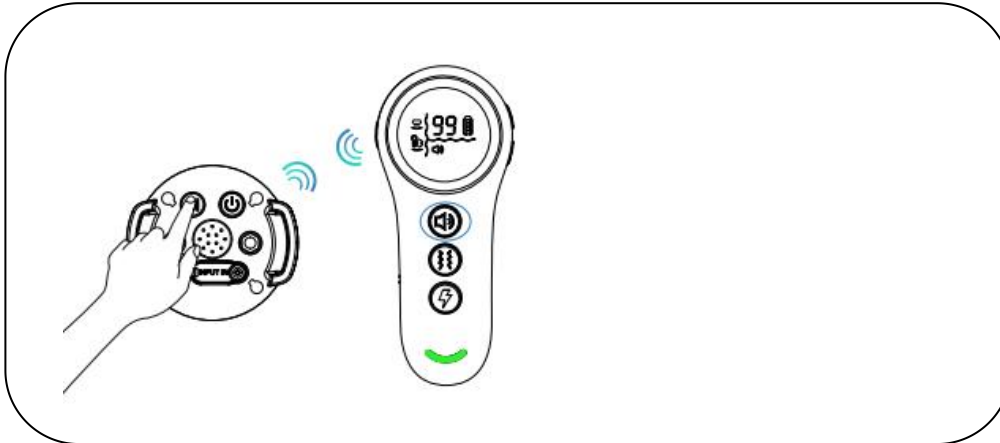

2. Press the Warning Tone Button, Vibration Button, or Shock Button on the Remote Transmitter, and the Receiver will respond correspondingly, indicating that the pairing process is completed.

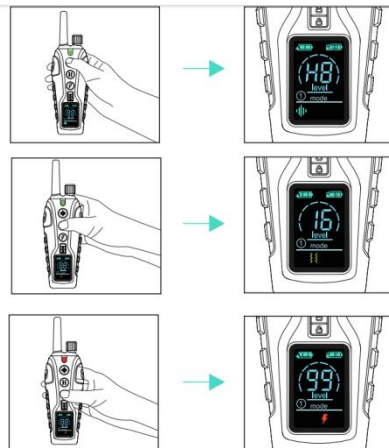

Tips:

The Receiver is paired up to the Remote Transmitter in Channel 1 by the factory default setting. If you buy a new Receiver, you can follow the above instructions to pair it up to Channel 2. The system can pair up to 2 Receivers in 2 different channels. If you can not pair your device successfully, it may be due to signal interference. Please try pairing again in a different location or contact our service center.

IX. Training Tip

How to find the best stimulation for your dog?

Important: Always start at the lowest level and work your way up. The Dog Training Collar has 8

types of Warning Tones, 16 levels of Vibration, and 99 levels of Shock. For Warning Tones, there are 8 types of Tones, with only frequency differences between the different types. For Vibration and Shock, level 1 is the lowest; the highest level for Vibration is level 16, and level 99 for Shock. This allows you to choose the Stimulation Level that is best for your dog. Once you have placed the Receiver on your dog, it is time to find the Stimulation Level that is best for him. This is called the Recognition Level.

A slight change in your dog's behavior, such as looking around in curiosity, scratching at his collar, or flicking his ears, indicates the Recognition Level that is best for your dog.

Follow the steps below to find your dog's Recognition Level:

1. Starting at Level 1, press the Warning Tone/Vibration/Shock Button continuously for 1 to 2 seconds.

Note: When the Warning Tone/Vibration/Shock Button is held down for 10 consecutive seconds, the Remote Transmitter will "time out", and you must release and press the button again before additional stimulation can be delivered.

2. If your dog shows no reaction, repeat the Stimulation Level several times before moving up to the next level.

3. YOUR DOG SHOULD NOT WHINE OR PANIC WHEN RECEIVING STIMULATION. IF THIS HAPPENS, THE STIMULATION LEVEL IS TOO HIGH AND YOU NEED TO GO BACK TO THE PREVIOUS LEVEL AND REPEAT THE PROCESS.

4. Move up through the Stimulation Levels until your dog reliably responds to the stimulation.


5. If your dog continues to show no response at the highest level of Vibration or Static Shock, check the fit of the Receiver. If your dog has long or thick hair, you can change to a longer set of Metal Prongs included in the package. Then go back to #1 and repeat the process. If this still does not yield any results, your dog's hair will need to be trimmed around the Metal Prongs.

If after completing all of these steps, your dog still does not indicate he is feeling the stimulation, please contact our customer service.

How to maximize the distance ?

Terrain, weather, vegetation, transmission from other radio devices, and other factors will affect the maximum range.

Hold the Remote Transmitter in a horizontal position away from your body to achieve optimum range. For maximum signal strength, keep the device properly charged.

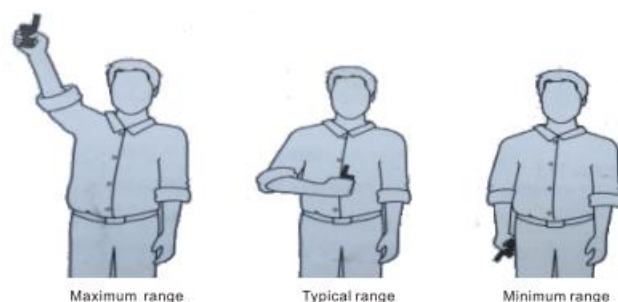

*Avoid touching the antenna or the range may decrease substantially.

X. Frequently Asked Questions

Q: Is the Stimulation safe for my dog?

A: While the Stimulation is unpleasant, it is harmless to your dog. Electronic training devices require interaction and training from the owner to achieve desired results.

Q: How old does my dog have to be before using the Dog Training Collar?

A: Your dog should be able to recognize basic obedience commands such as "Sit" or "Stay". Dogs should be at least 6 months old before using this product.

Q: Once my dog is trained and has been obeying my commands, will he have to continue to wear the Receiver?

A: Probably not. You may need to reinforce training with the Receiver from time to time.

Q: Is the Receiver waterproof?

A: Yes. The Receiver meets the IP67 waterproof rating, but make sure to keep the area dry when charging.

Note: The Remote Transmitter is not waterproof.

Q: Will I get a maximum range with the Remote Training Collar?

A: The range of the Dog Training Collar Mode will vary according to terrain, weather, vegetation, and transmission from other radio devices. See "How to Maximize the Distance" on page 17 for tips on maximizing your range.

Q: How long can I continuously deliver stimulation to my dog?

A: The maximum amount of time you can press the Warning Tone/Vibration/Shock button and deliver stimulation to your dog continuously is 10 seconds. After this, the Remote Transmitter will time out, and these stimulation buttons must be released and pressed again.

Q: How do I know if I can use this product for my dog?

A: The product is designed for healthy dogs over 6 months old. Most importantly, this product cannot be used on unhealthy or aggressive dogs, and if you are unsure whether this product is appropriate for your pet, please consult your veterinarian or a certified trainer.

Q: Why doesn't the product work when the dog barks?

A: Please first ensure to fit the product snugly, yet loose enough to allow one finger to fit between the strap and your pet's neck. Some dogs have weak barking, and in this case, you will need to level up the sensitivity level. A thick coat on the neck area may also have a small chance to decrease the sensing from the barking. Please trim the coat near the area where you place the product.

Q: Why is the product triggered sometimes in a noisy environment though the dog isn't barking?

A: Though we have optimized the barking detection to the best, some environmental noises may have a similar frequency to barking, which may have a small chance of activating the product. Please lower the sensitivity level.

Q: Can I use the product when other dogs are playing around?

A: Dogs will bark when playing and get excited. For the comfort and safety of your pet, we don't suggest using this product in such an environment.

Q: Will my dog stop barking completely?

A: The product effectively and humanely stops all barking when it is worn. It should only be worn during periods of unwanted barking.

Q: Is this product safe and humane?

A: Yes. The product is designed to get your dog's attention, not to punish him. However, the initial correction may startle your dog.

Q: Can I charge this product with any type of charger?

A: No, you are suggested to charge this product with a charger of 5V output voltage, because a charger with an output voltage over 5V may cause damage to the product. The product will stop charging automatically if the input voltage becomes too high and deliver a warning tone.

XI. Trouble Shooting

1. My dog does not respond when I press a button.

- Make sure the Receiver has been turned on.
- If your range has reduced from the first time you used the Dog Training Collar, the battery(-ies) may be low in either the Remote Transmitter or Receiver.
- Many factors can impact the amount of range. For a list of these factors, see "How to Maximize the Distance" on page 17.
- Test the Receiver with the Test Bulb.

NOTE: If the Test Bulb does not flash, recharge the Receiver and re-test. If the Test Bulb Tool still does not flash, please contact our customer service.

- Increase the Stimulation Level. Refer to "How to find the best stimulation for your dog" on page 16 for more information.
- Make sure the Receiver's Metal Prongs are placed snugly against your dog's skin. Refer to "Fitting the Receiver" on page 13 for more information.

2. The Receiver will not turn on.

- Make sure the Receiver has been charged. For the initial charge, be sure to charge it for 4 hours. Subsequent charges only take 2-3 hours.

3. The Receiver is not responding to the Remote Transmitter.

- Verify the Receiver is on.
- If the indicator is blinking rapidly, fully charge the Receiver.
- If the first two solutions did not resolve your problems, please check the "Pairing Up" on page 14 to re-pair the Receiver to the Remote Transmitter.

XII. FCC Statement

USA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment, per FCC PART 15.105

RF Exposure Statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a specific installation. If interference does occur to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult customer care, the dealer, or an experienced radio/TV technician for help.

Model: RS9

Made in China

Version: V1.0

303.RS9NN-9201